



2 Enjoy your new headboard.

Model: _____
Lot No: _____
Date of Purchase: _____

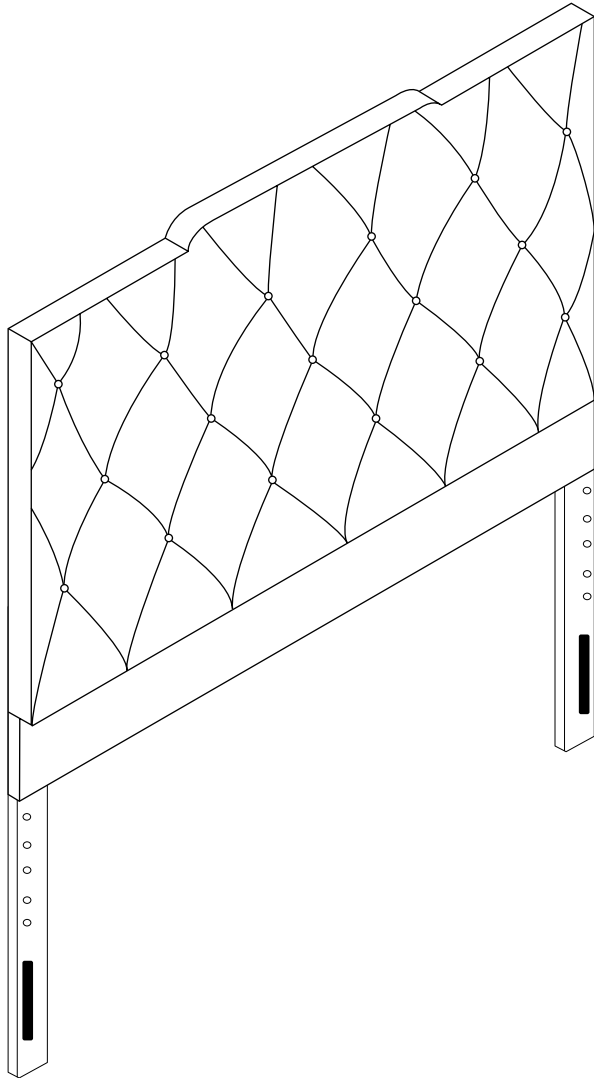

UPHOLSTERED TUFTED SQUARED HEADBOARD FULL/QUEEN

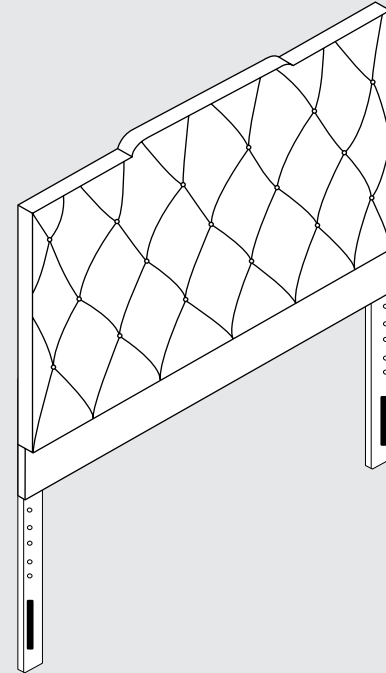

ADULT ASSEMBLY REQUIRED


If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free, customer service number and have this assembly manual open to the parts list ready to provide the model name, number and part name or number.




WARNING: This product may contain small components, please ensure they are kept away from small children.

PARTS AND HARDWARE


Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.

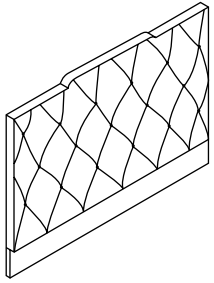

A. Headboard
1x




B. Leg
2x

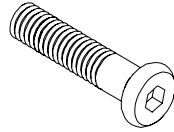


C. Bolt
4x



D. Spring Washer
8x




E. Washer
12x

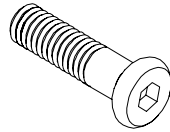


F. Bolt
4x



G. Nut
4x



H. Allen Key
1x



I. Box Wrench
1x

ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

- 1 Align Legs (B) fixing holes over Headboard (A) fixing holes according to your desired height. Secure Legs (B) to Headboard (A) using Washer (E), Spring Washer (D), Bolt (C) to attach Legs (B) to Headboard (A). Tighten using provided Allen Key (H). Then attached Assembled Headboard to your Bed Frame using Washer (E), Spring Washer (D), Bolts (F), Washer (E) and Nut (G). Tighten using provided Allen Key (H) and Box Wrench (G).

NOTE: Attach Legs (B) to Headboard (A) on outside bolts for a Queen Bed or on the inside bolts for an Full Bed. Make sure the Slats on the legs are facing out before you attach the legs to the headboard.

