


ASSEMBLY INSTRUCTIONS

WF 317101

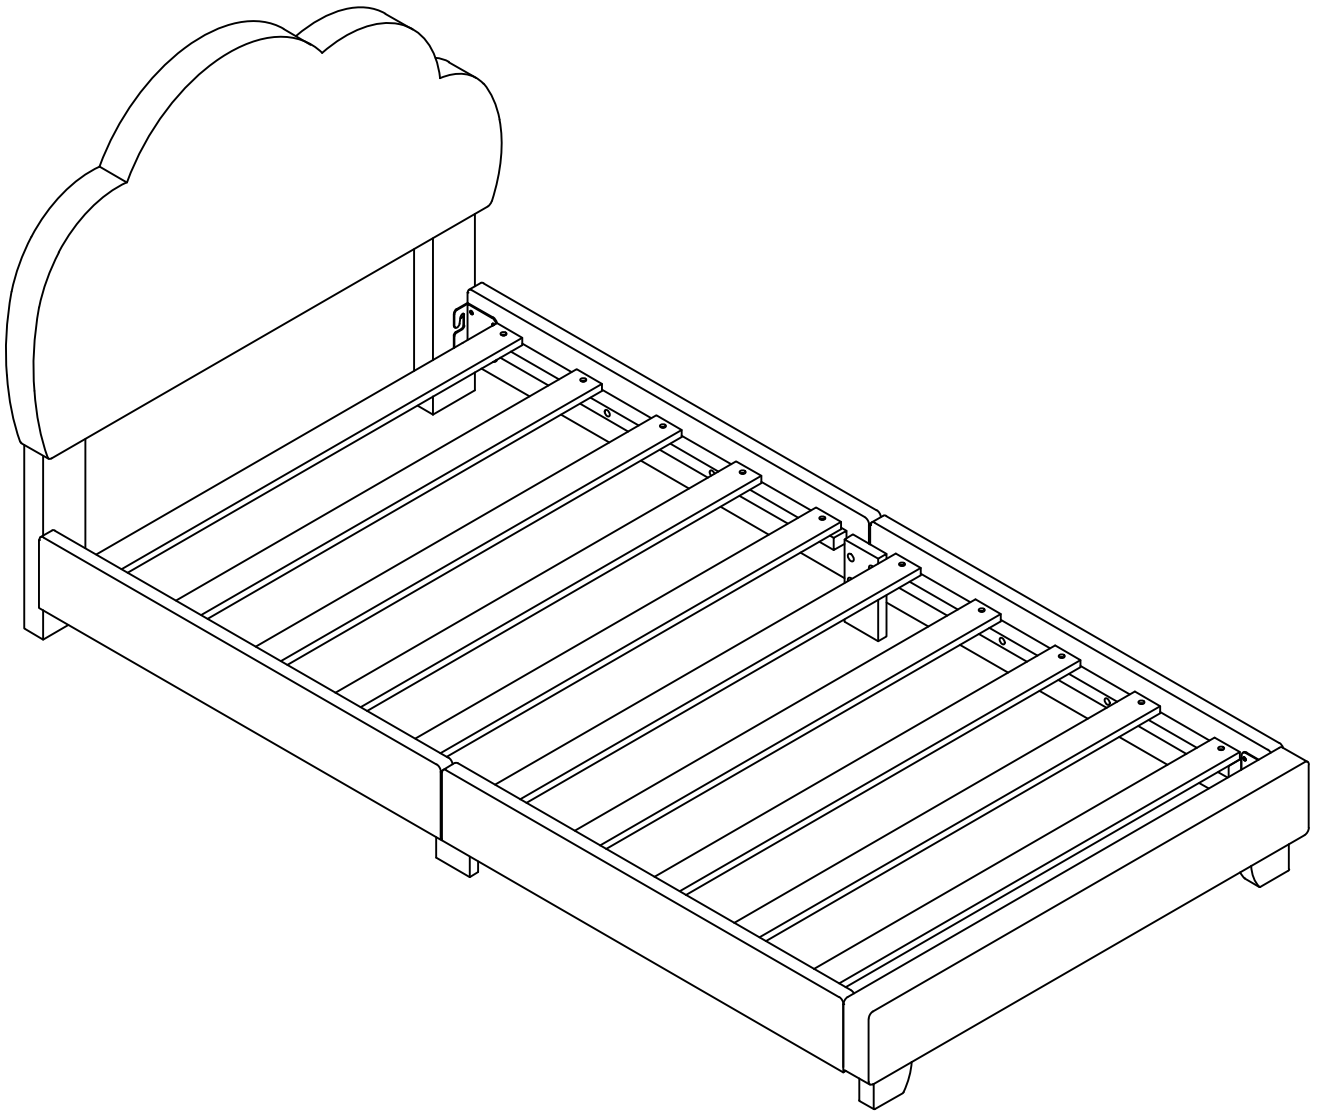

IMPORTANT NOTE


****PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO
AVOID THE PARTS FROM BEING SCRATCHED**

**** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**

****DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**

ASSEMBLY INSTRUCTIONS






WF 317101

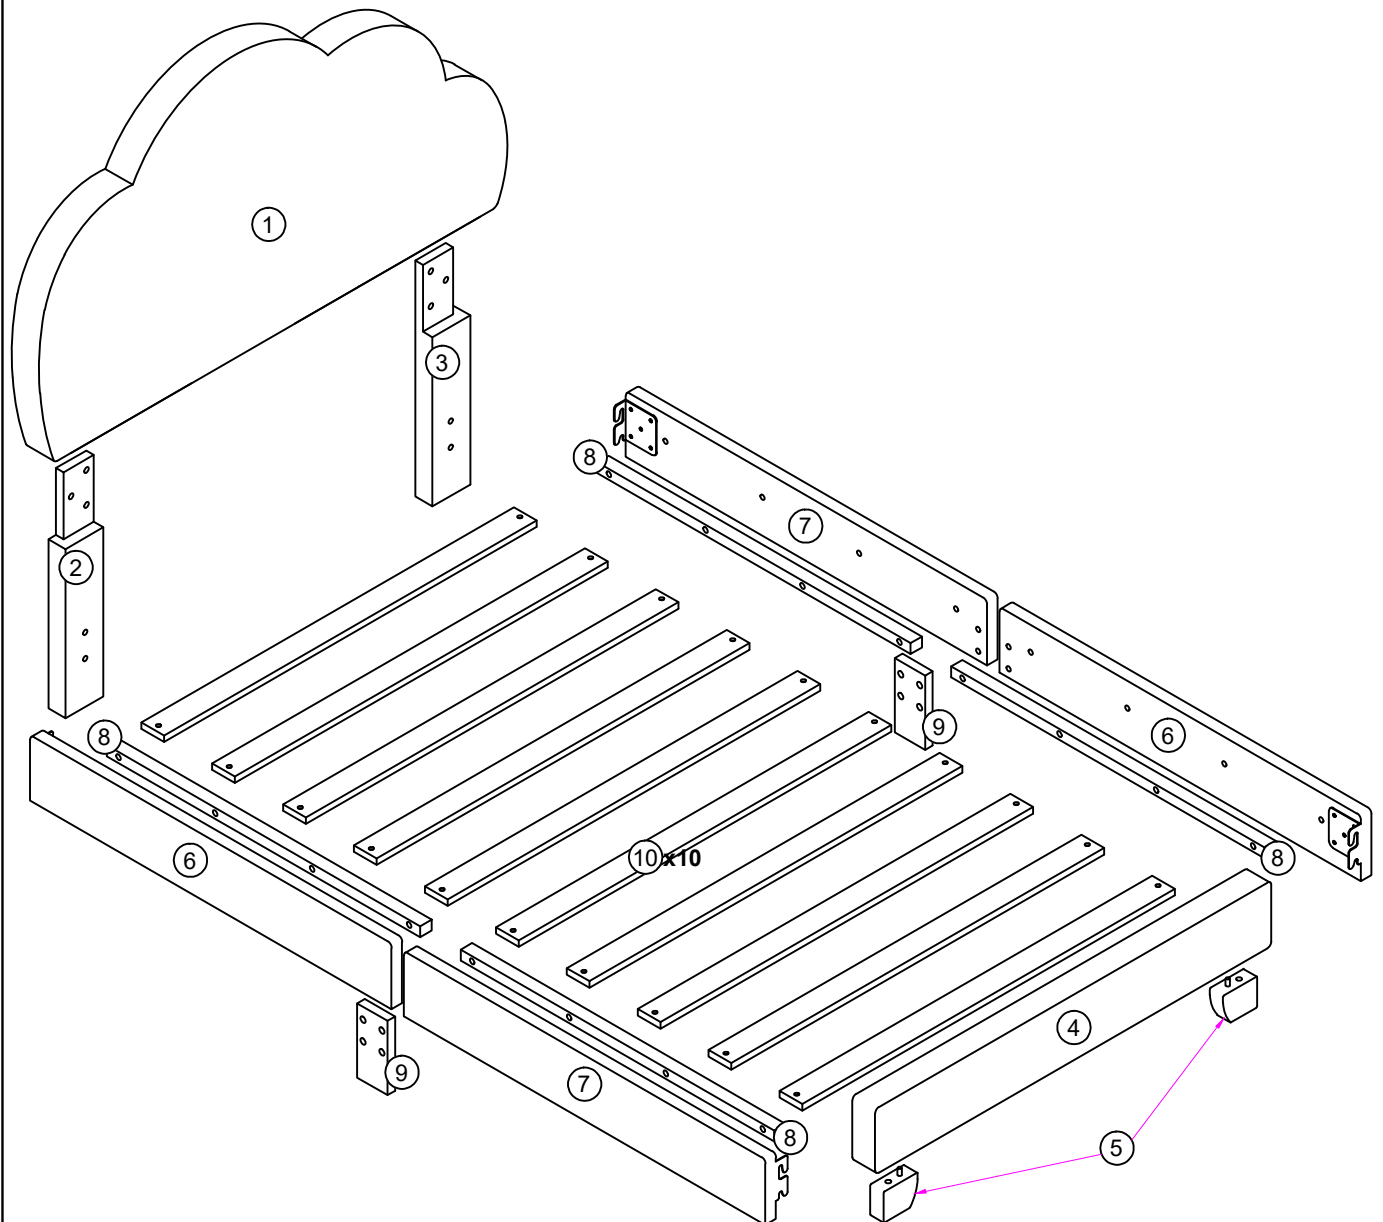



ASSEMBLY INSTRUCTION

WF 317101

PART LIST IN: WF 317101

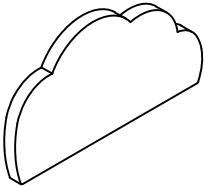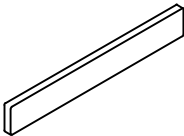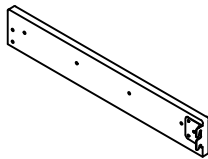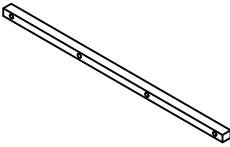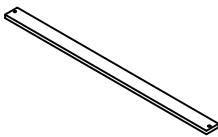
1		2		3	
	Headboard Panel (1 pc)		Left Headboard Leg(1 pc)		Right Headboard Leg(1 pc)
4		5		6	
	Footboard Panel (1 pc)		Legs (2 pcs)		Side Rail (2pcs)
7		8		9	
	Side Rail (2 pcs)		Bed Support Bar (4 pcs)		Rail support legs (2pcs)
10					
	Roll Slat (10 pcs) 985*60*15				

HARDWARE LIST IN WF 317101

A		B		C	
	Short Bolt (8pcs) (5/16" X25mm)		Long Bolt (14pcs) (5/16" X38mm)		Long Bolt (18pcs) (5/16" X50mm)
D		E		F	
	Flat Washer (40pcs)		Spring Washer (40pcs)		Allen Wrench (1pc) (M4x75mmx32mm)
G					
	Flat Head Screw (20pcs) (m4x30mm)				


ASSEMBLY INSTRUCTIONS

STEP 1

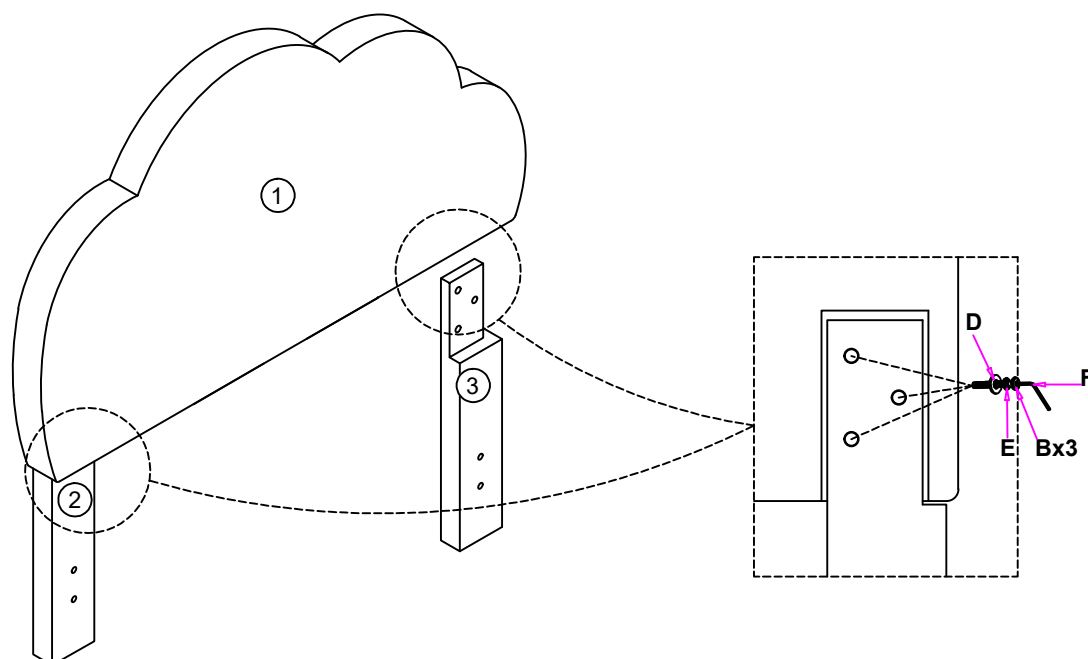

B	Bolt (5/16" X 38mm)		6pcs	E	Spring Washer		6pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	D	Flat Washer		6pcs


STEP 2

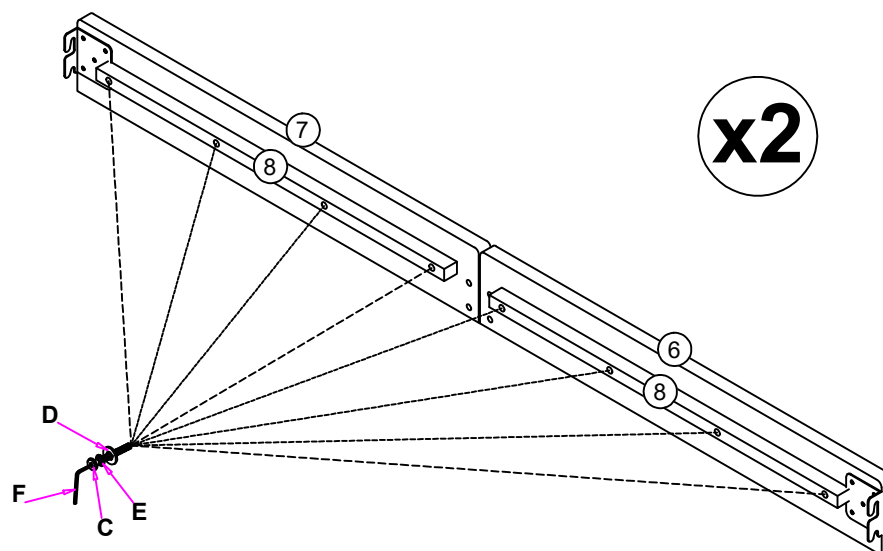

C	Bolt (5/16" X 50mm)		16pcs	E	Spring Washer		16pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	D	Flat Washer		16pcs


ASSEMBLY INSTRUCTIONS

STEP 3

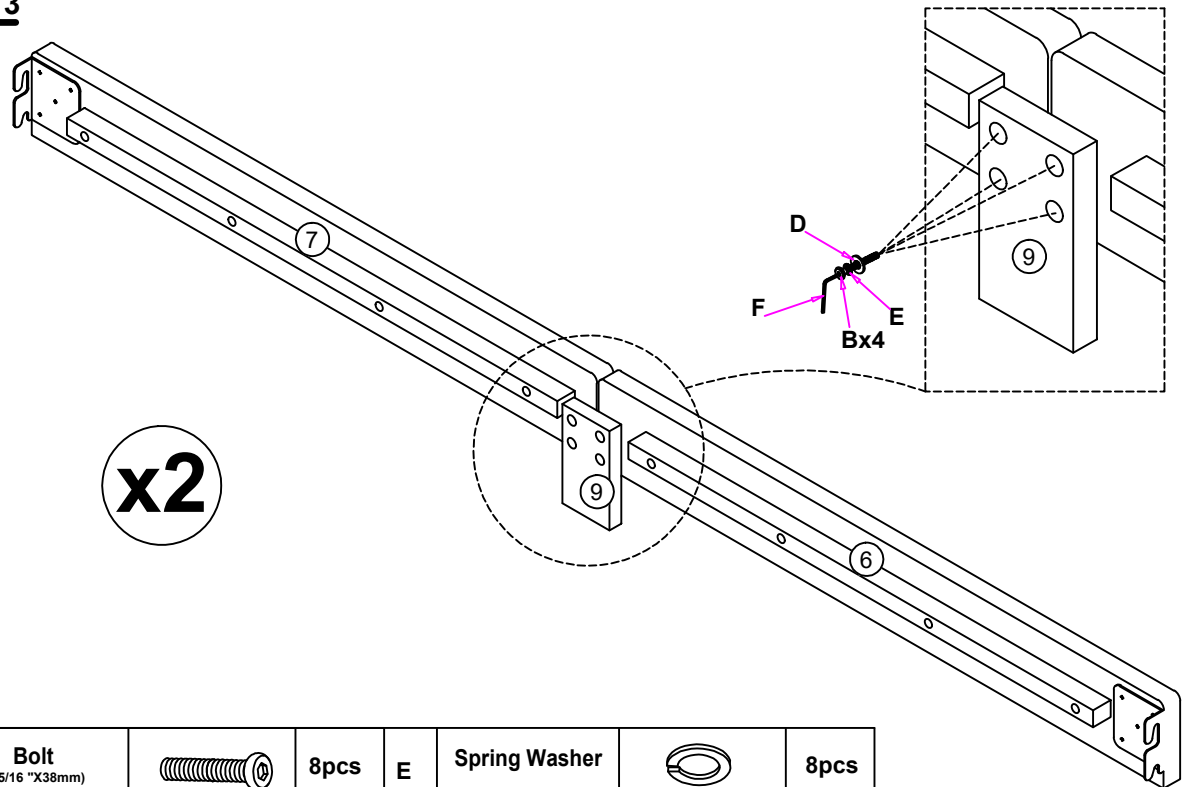

B	Bolt (5/16" X38mm)		8pcs	E	Spring Washer		8pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	D	Flat Washer		8pcs


STEP 4

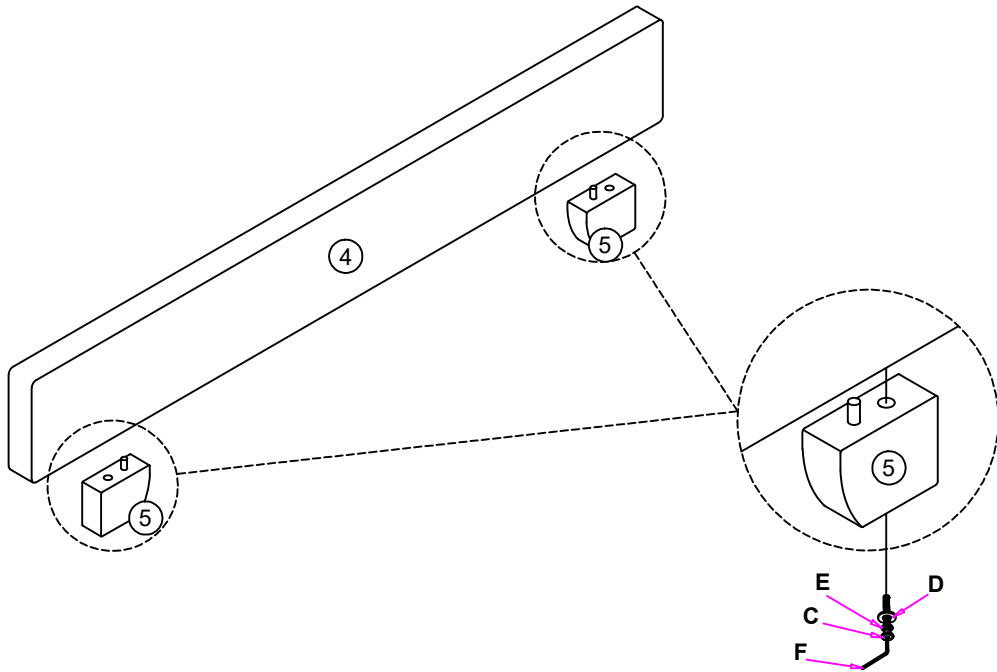

C	Bolt (5/16" X50mm)		2pcs	D	Flat Washer		2pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	E	Spring Washer		2pcs


ASSEMBLY INSTRUCTIONS

STEP 5

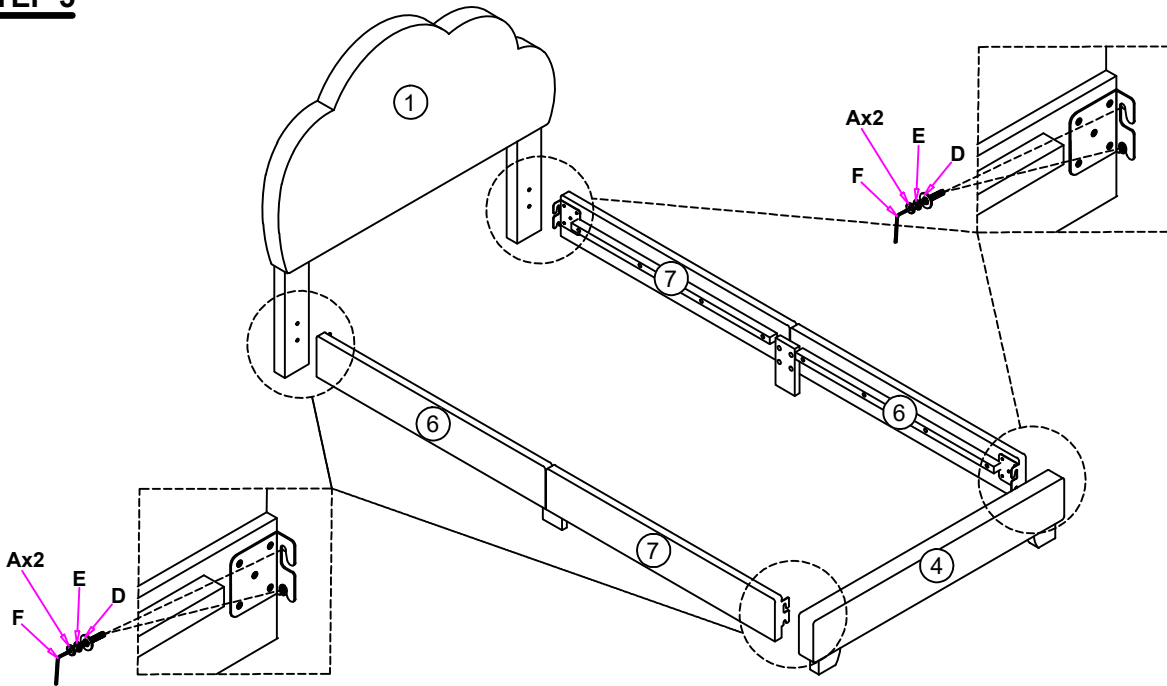

A	Bolt (5/16 "X25mm)		8pcs	D	Flat Washer		8pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	E	Spring Washer		8pcs

STEP 6

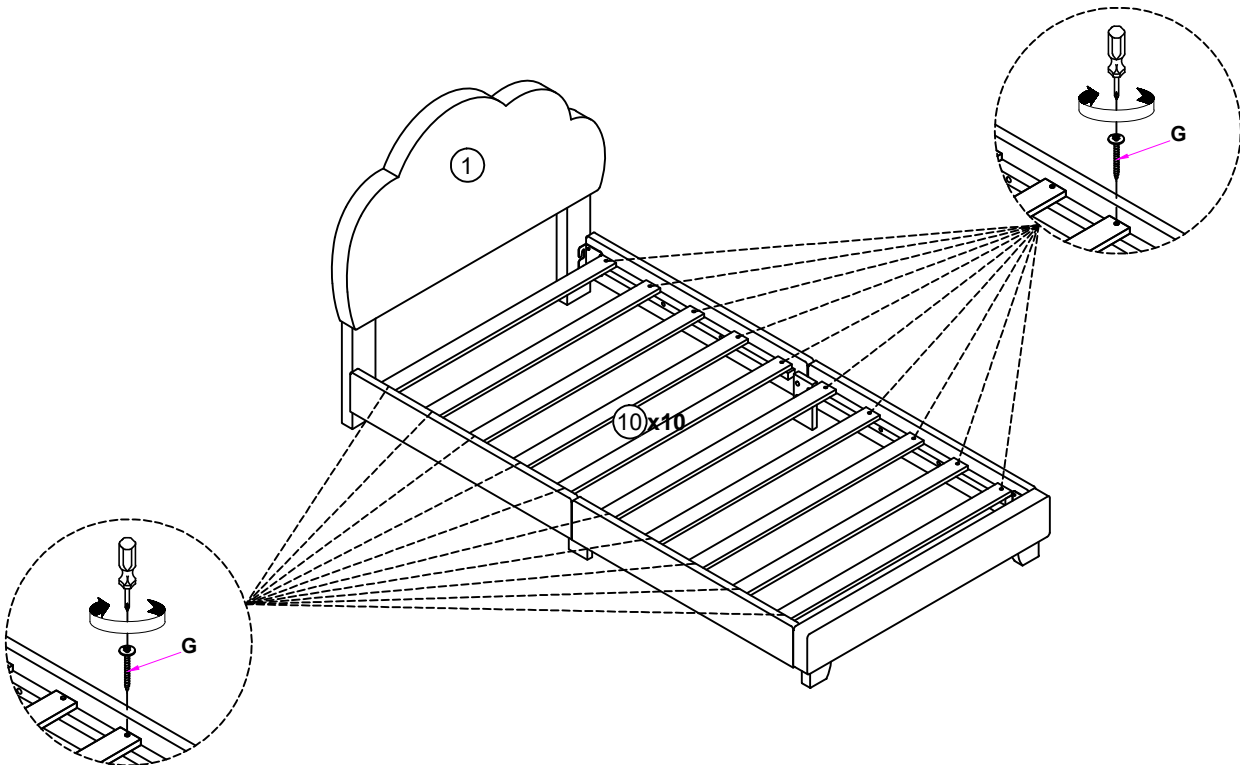

G	Flat Head Screw (m4x30mm)		20pcs
----------	-------------------------------------	---	--------------

ASSEMBLY INSTRUCTIONS

STEP 7
COMPLETE

