


Assembly Instructions

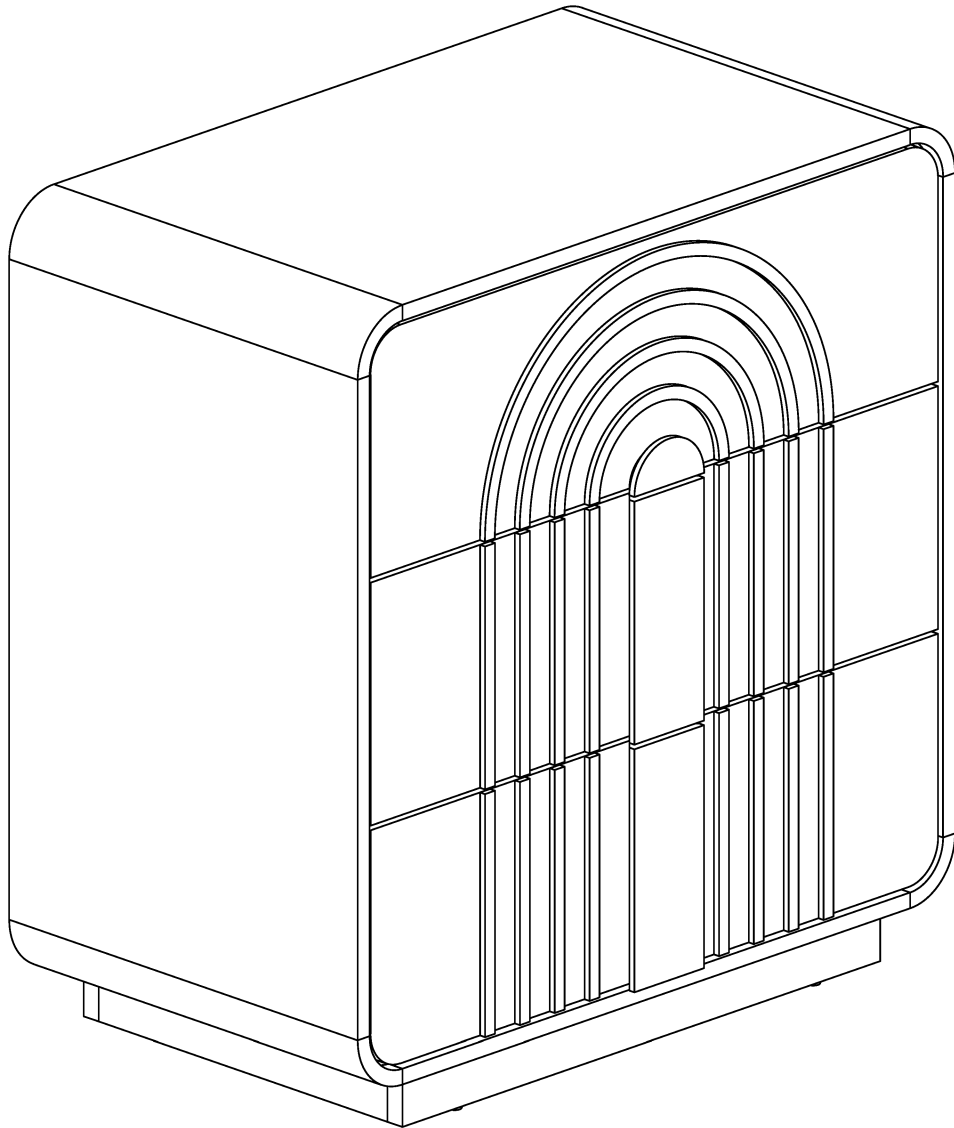


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

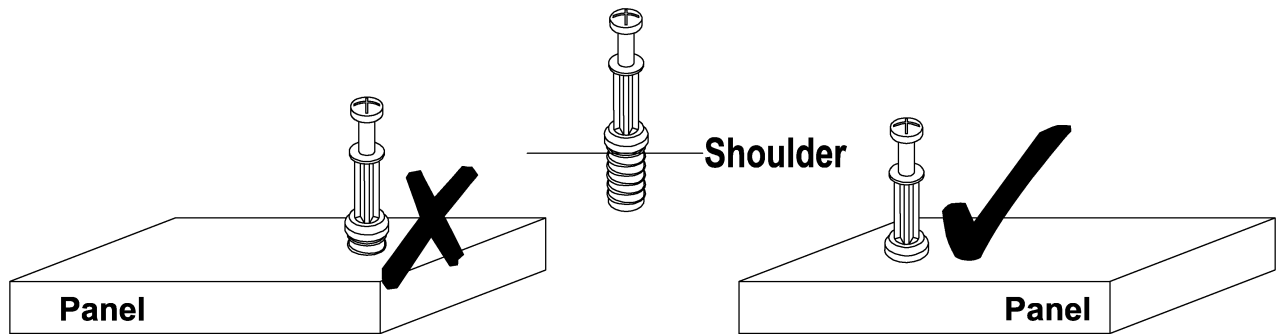

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

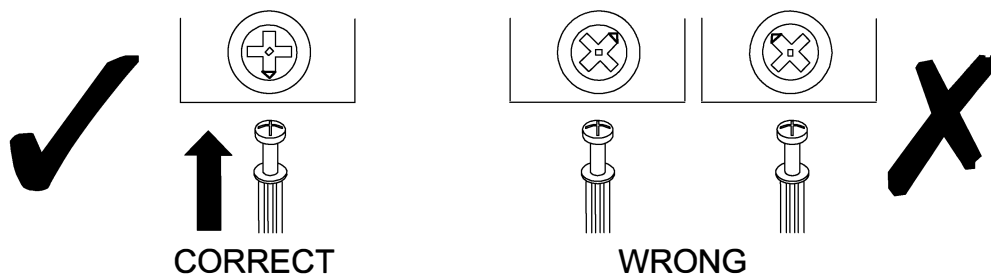

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUICKFIT












Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

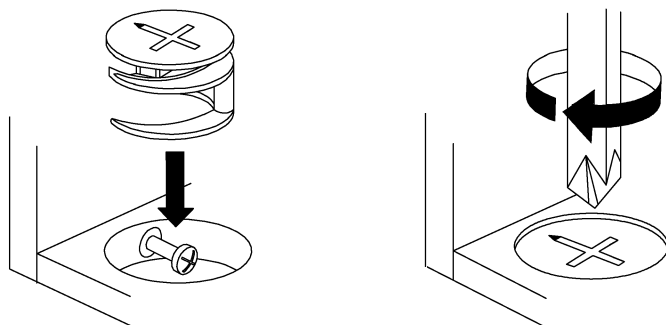


Turn cam lock clockwise to tighten.




Part List

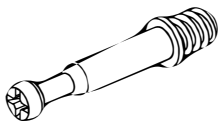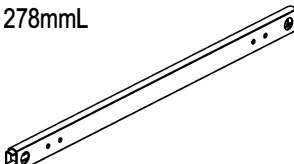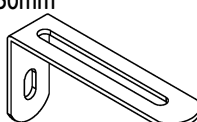No. A Quantity: 47+1 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 47+1 PCS Cam ø15x9.5mm 	No. C Quantity: 47+1 PCS Sticker ø20mm 	No. D Quantity: 20+1 PCS Dowel ø6x30mm 
No. E Quantity: 18+1 PCS Screw ø3.5x12mm 	No. F Quantity: 12+1 PCS Screw ø3x16mm 	No. G Quantity: 1 PCS Screw ø4x12mm 	No. H Quantity: 6+1 PCS Bolt M4x10mm 
No. I Quantity: 6+1 PCS Bolt M4x20mm 	No. J Quantity: 8+1 PCS Bolt M6x10mm 	No. K Quantity: 18+1 PCS Screw ø4x30mm 	No. L Quantity: 1 PCS Hex Key 4mm 
No. M Quantity: 12 PCS plastic buckle 15*15*10mm 	No. N Quantity: 4 PCS Plastic connectors 57*27*27mm 	No. O Quantity: 6 PCS Slide Rail 278mmL 	No. P Quantity: 1 PCS L-Shaped anti tipping iron bar 76x15x30mm 
No. Q Quantity: 1 PCS plastic plug Ø8*40 	No. R Quantity: 1 PCS screw Ø4*38 		


Product structure

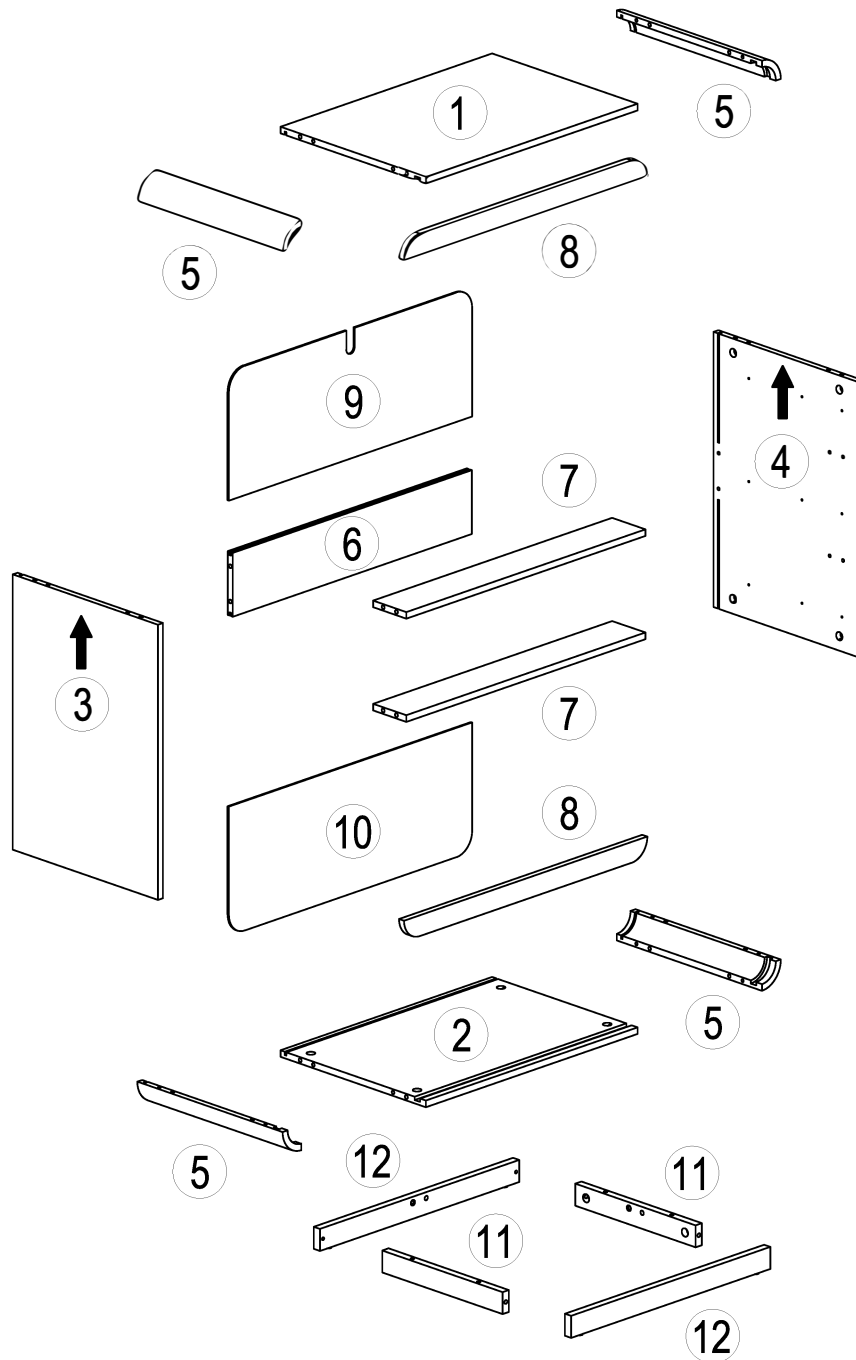



x3

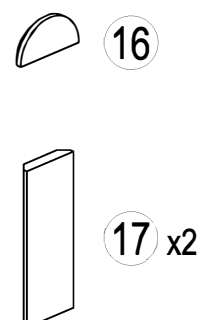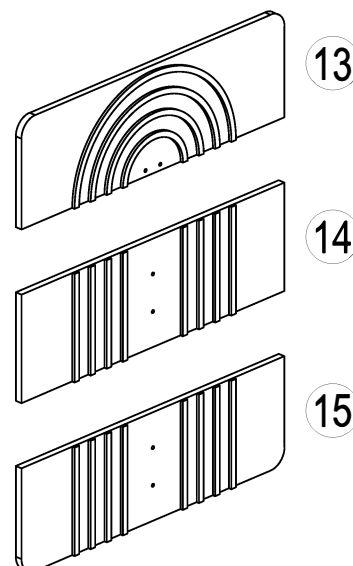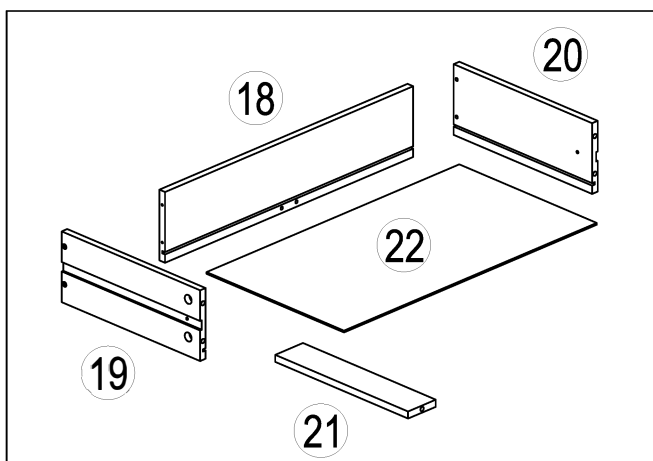


STEP 1

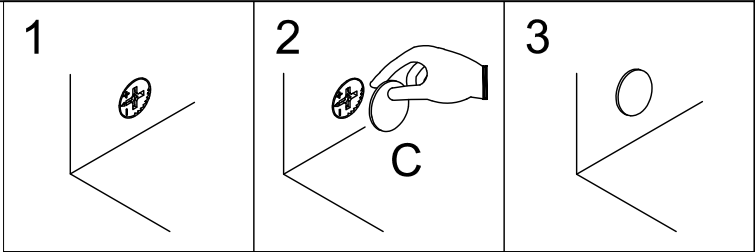

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

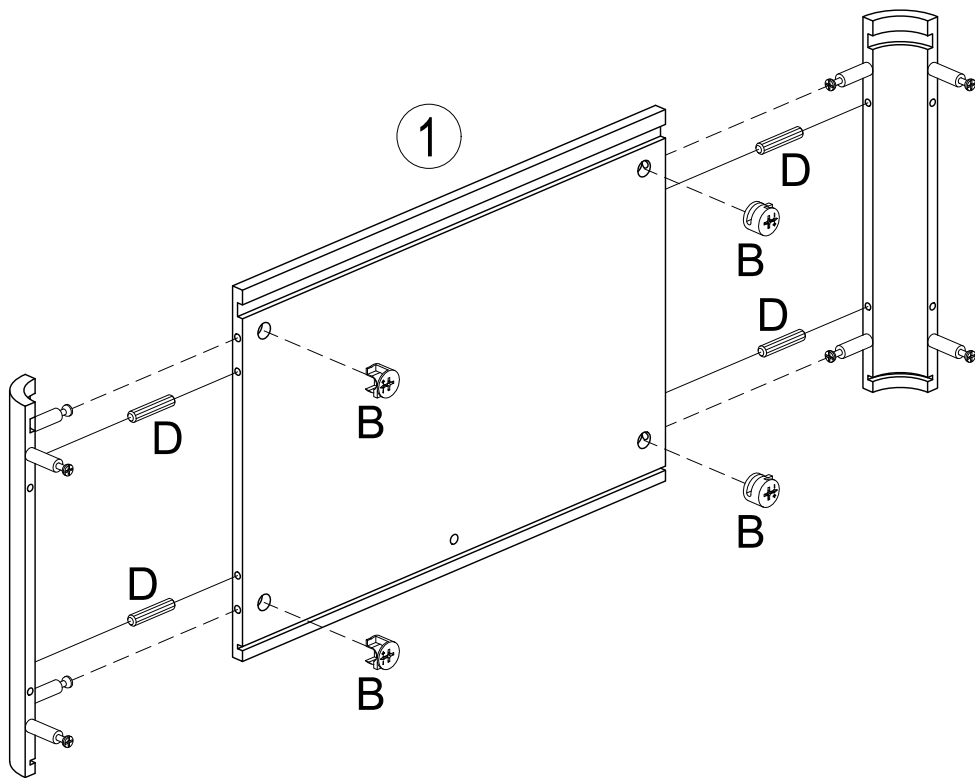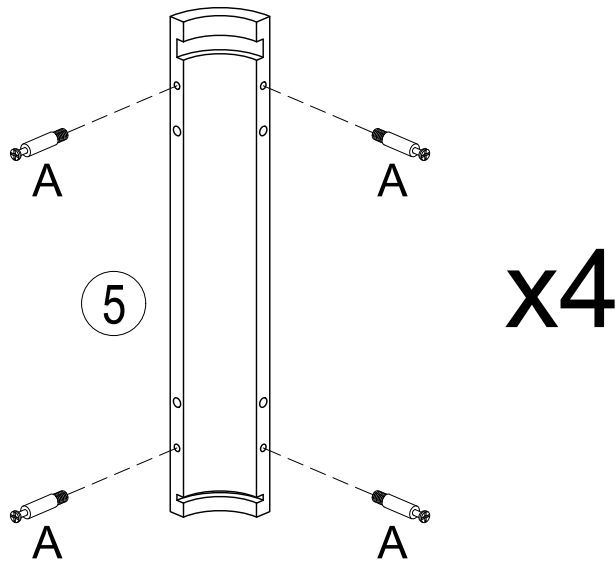

No. A
Quantity: 16 PCS
Cam Bolt
ø6x33.5mm




No. B
Quantity: 4 PCS
Cam
ø15x9.5mm




No. C
Quantity: 4 PCS
Sticker
ø20mm




No. D
Quantity: 4 PCS
Dowel
ø6x30mm



STEP 2

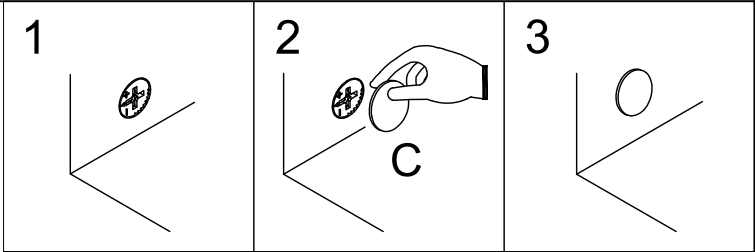

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

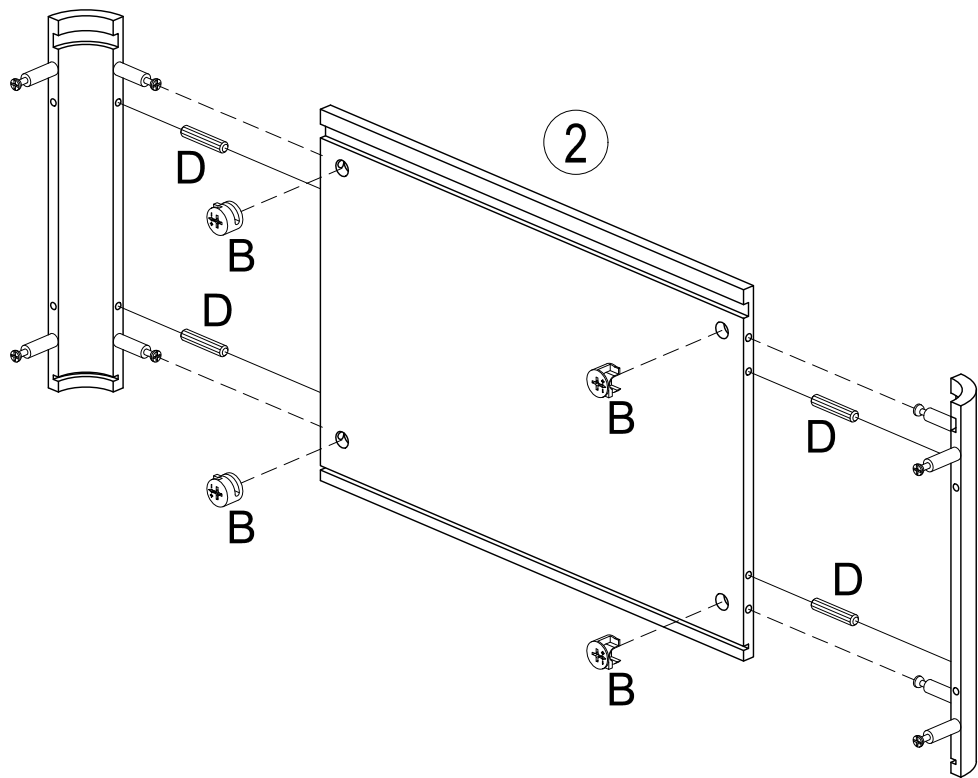

No. B

Quantity: 4 PCS
Cam
ø15x9.5mm




No. C

Quantity: 4 PCS
Sticker
ø20mm





No. D

Quantity: 4 PCS
Dowel
ø6x30mm




STEP 3

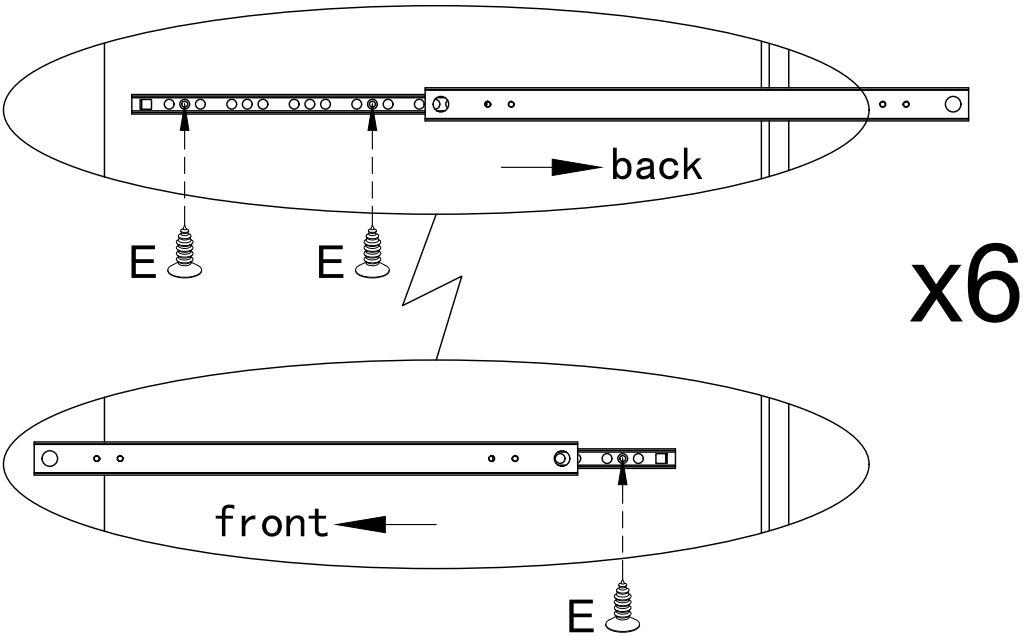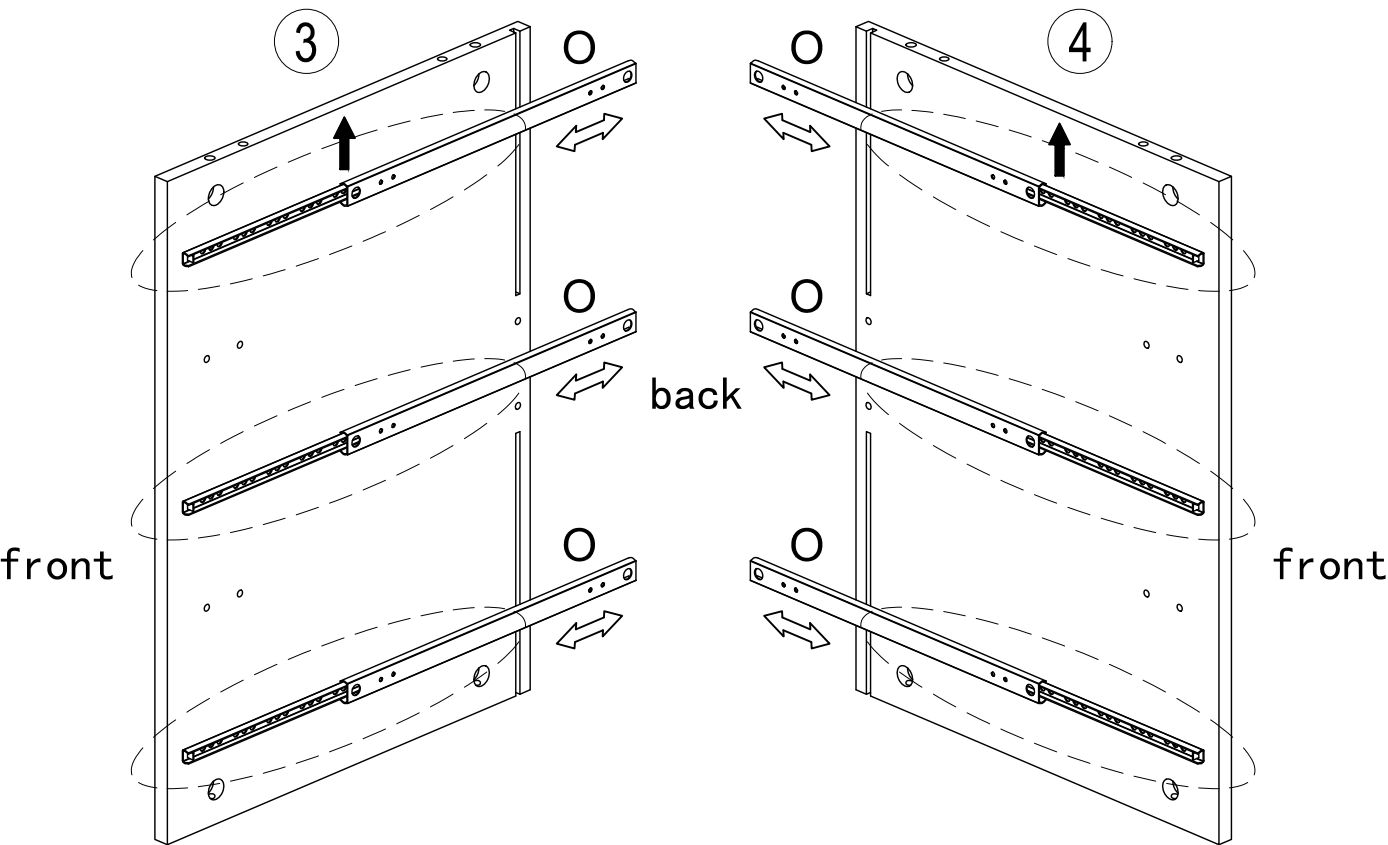


No. E
Quantity: 18 PCS
Screw
ø3.5x12mm




No. O
Quantity: 6 PCS
Slide Rail
278mmL

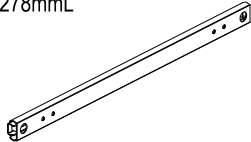


STEP 4

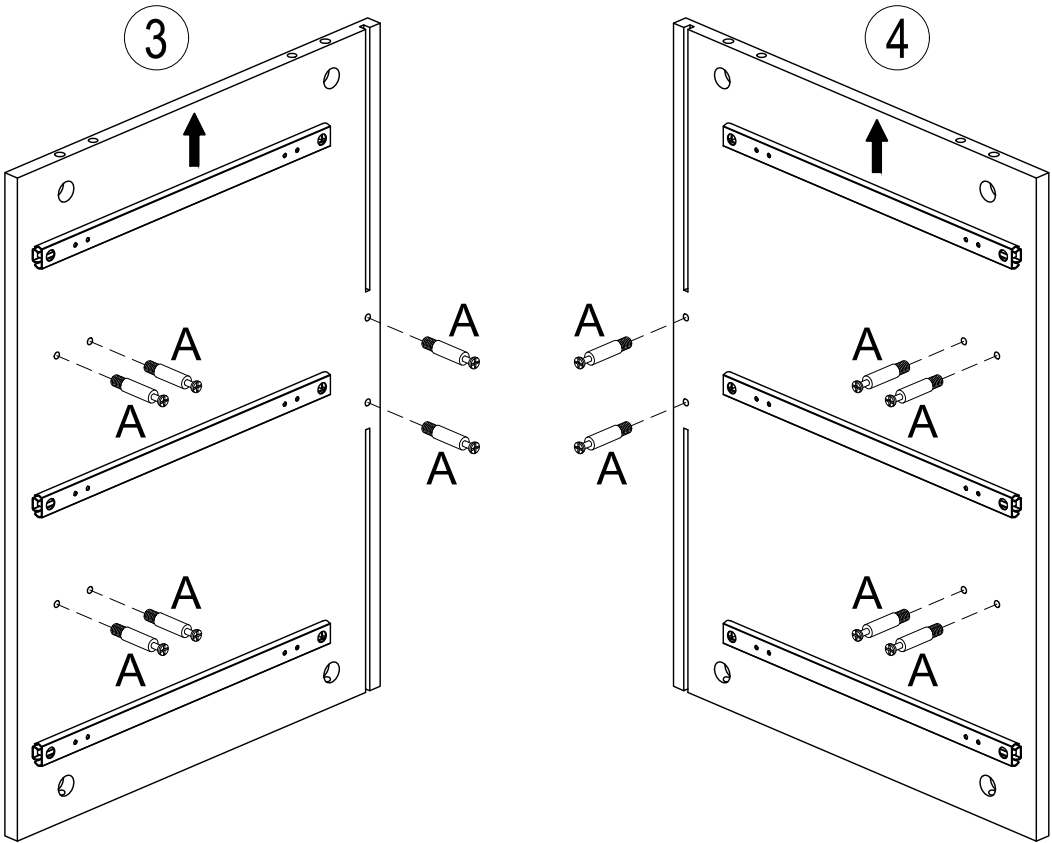


No. A
Quantity: 12 PCS
Cam Bolt
ø6x33.5mm



STEP 5

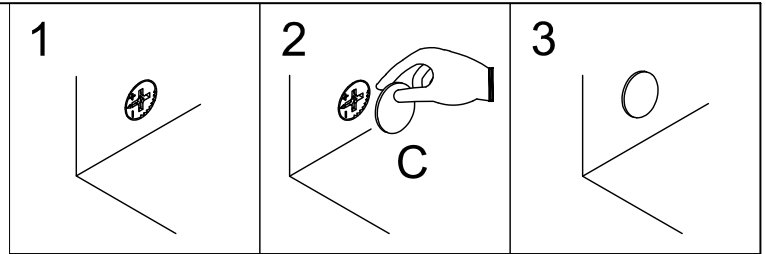

C is a cover, and B is a lock. Once B is installed, it will be very noticeable, so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

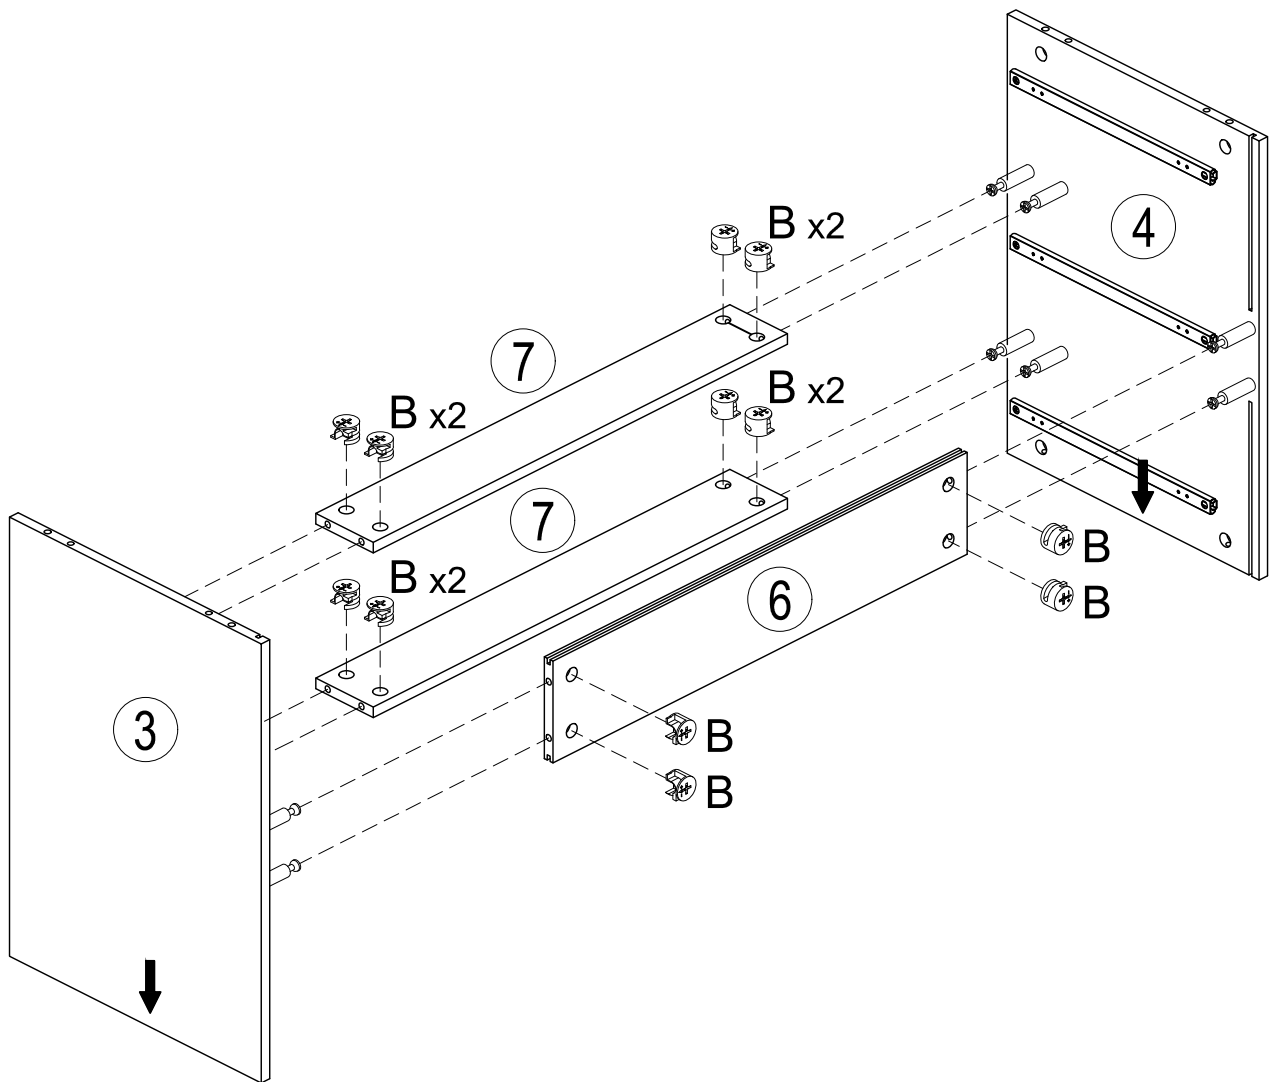

No. B

Quantity: 12 PCS
Cam
ø15x9.5mm





No. C


Quantity: 12 PCS
Sticker
ø20mm



STEP 6

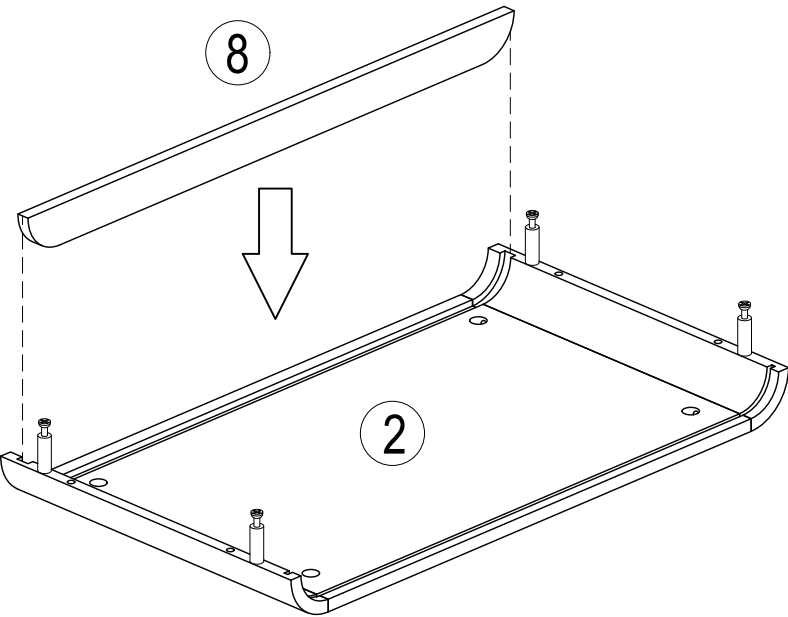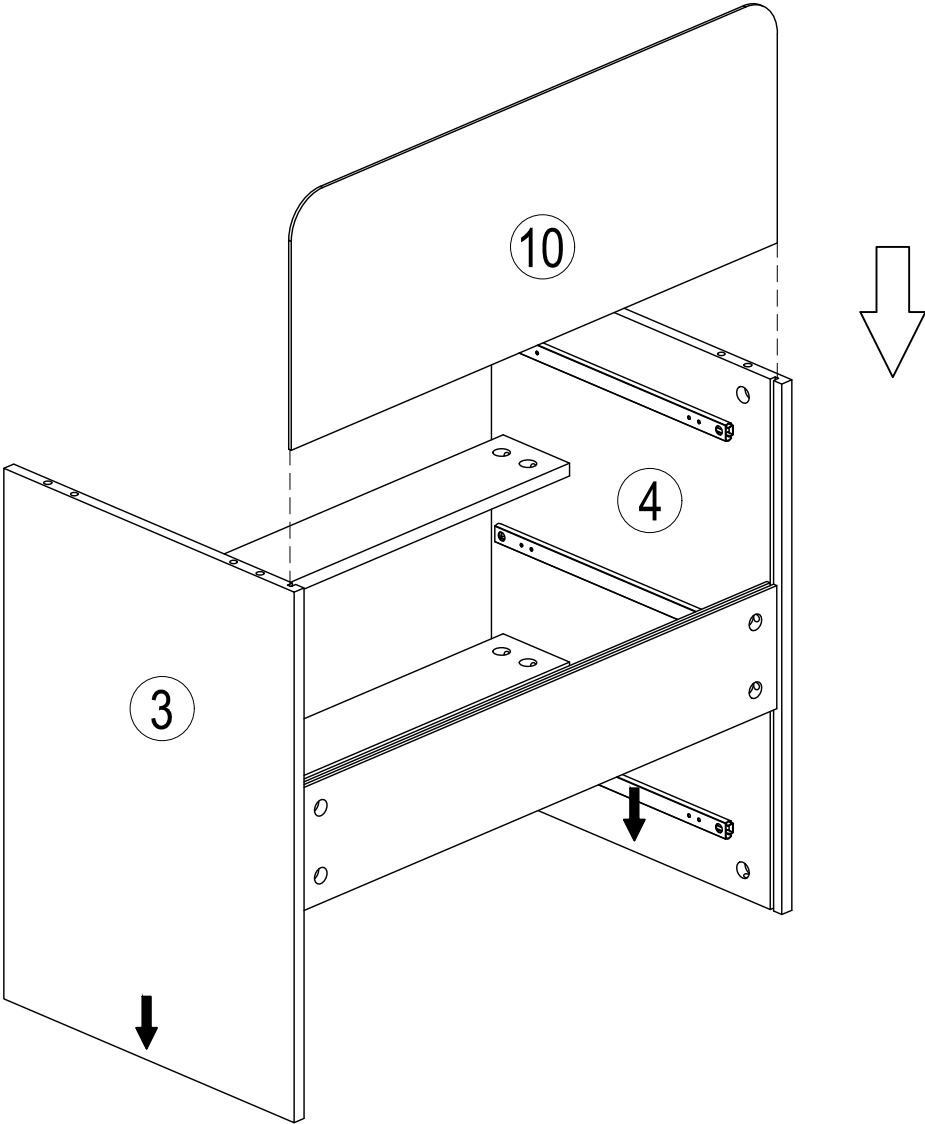

STEP 7

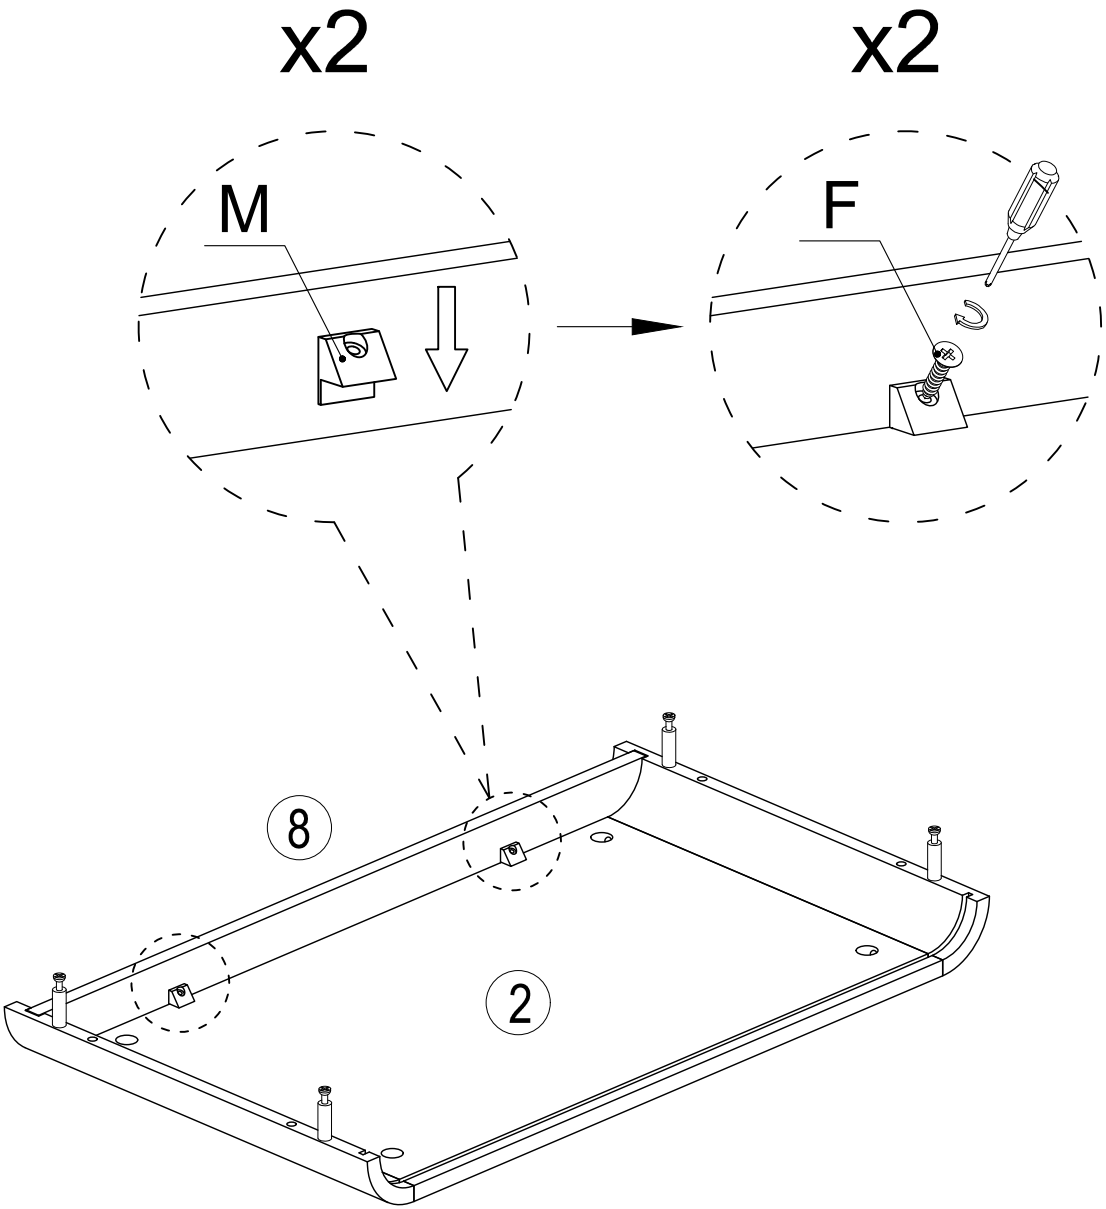


No. F

Quantity: 2 PCS
Screw
ø3x16mm




No. M


Quantity: 2 PCS
plastic buckle
15*15*10



STEP 8

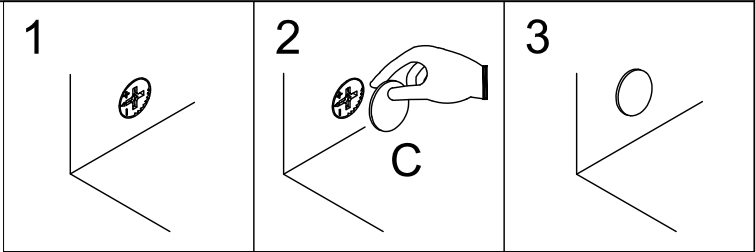

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

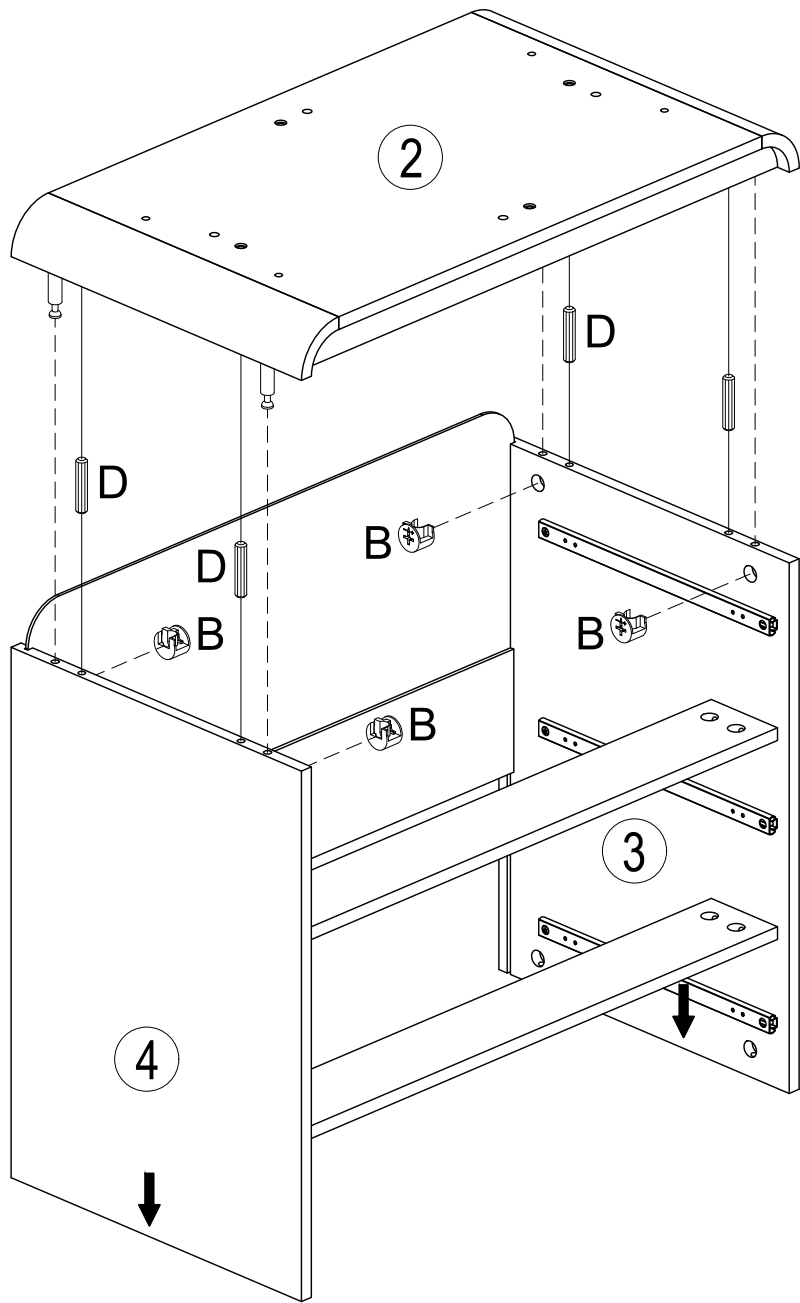

No. B

Quantity: 4 PCS
Cam
ø15x9.5mm




No. C

Quantity: 4 PCS
Sticker
ø20mm




No. D


Quantity: 4 PCS
Dowel
ø6x30mm




STEP 9

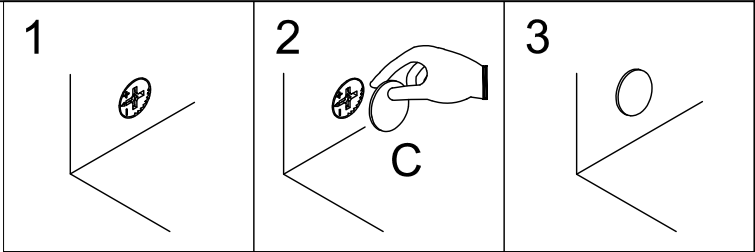


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

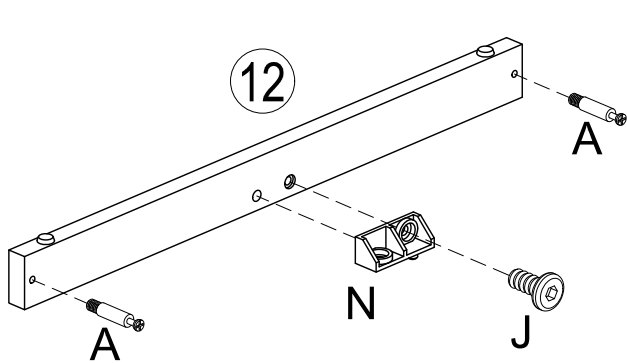

x2

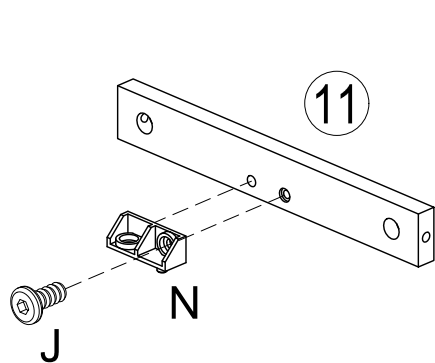


x2

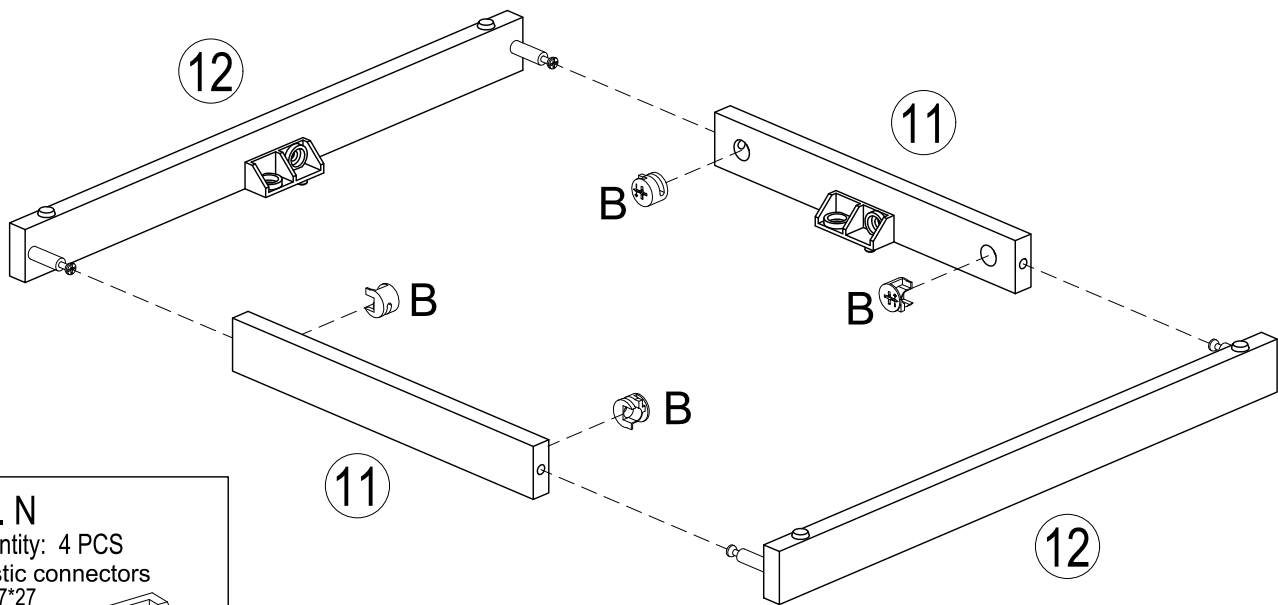


No. N

Quantity: 4 PCS
Plastic connectors
57*27*27

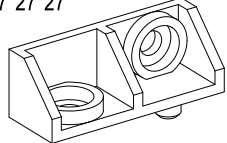

No. A

Quantity: 4 PCS
Cam Bolt
ø6x33.5mm



No. B

Quantity: 4 PCS
Cam
ø15x9.5mm




No. C

Quantity: 4 PCS
Sticker
ø20mm




No. J

Quantity: 4 PCS
Bolt
M6x10mm




STEP 10

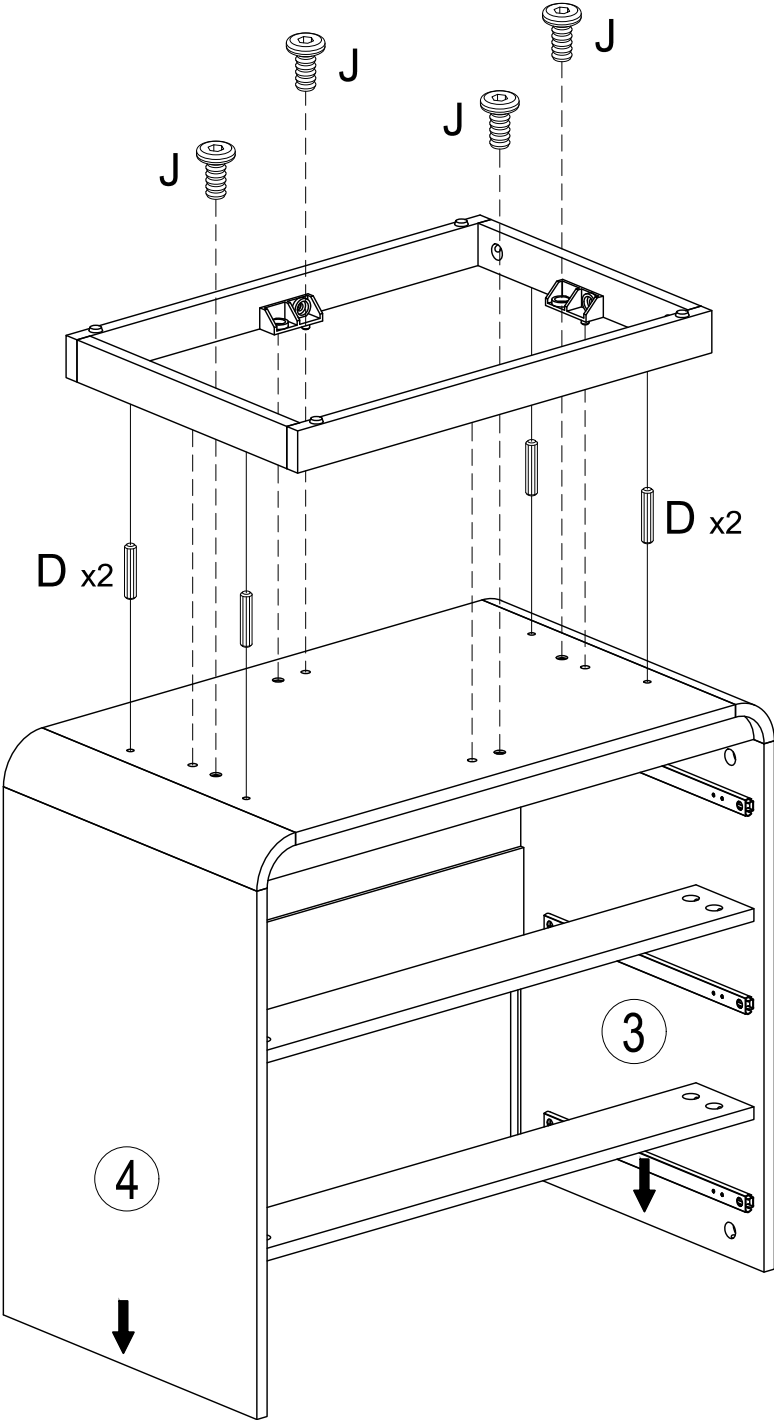


No. J

Quantity: 4 PCS
Bolt
M6x10mm





No. D


Quantity: 4 PCS
Dowel
ø6x30mm



STEP 11

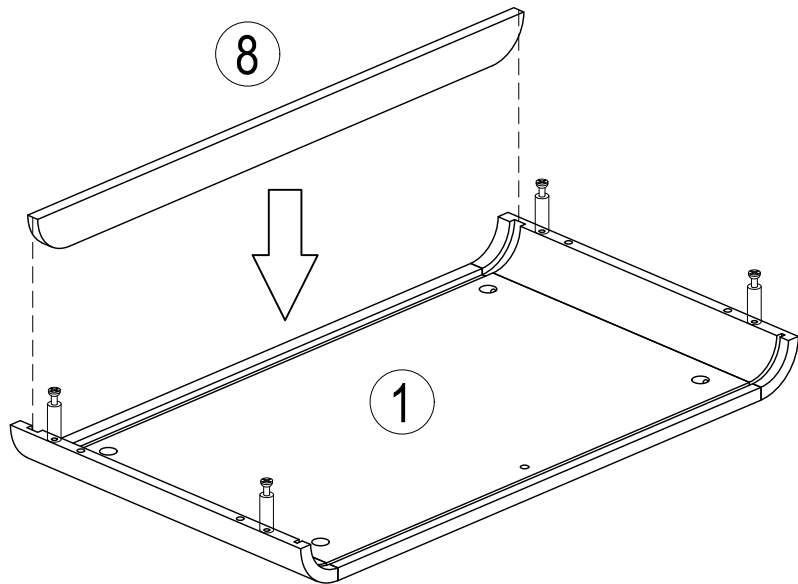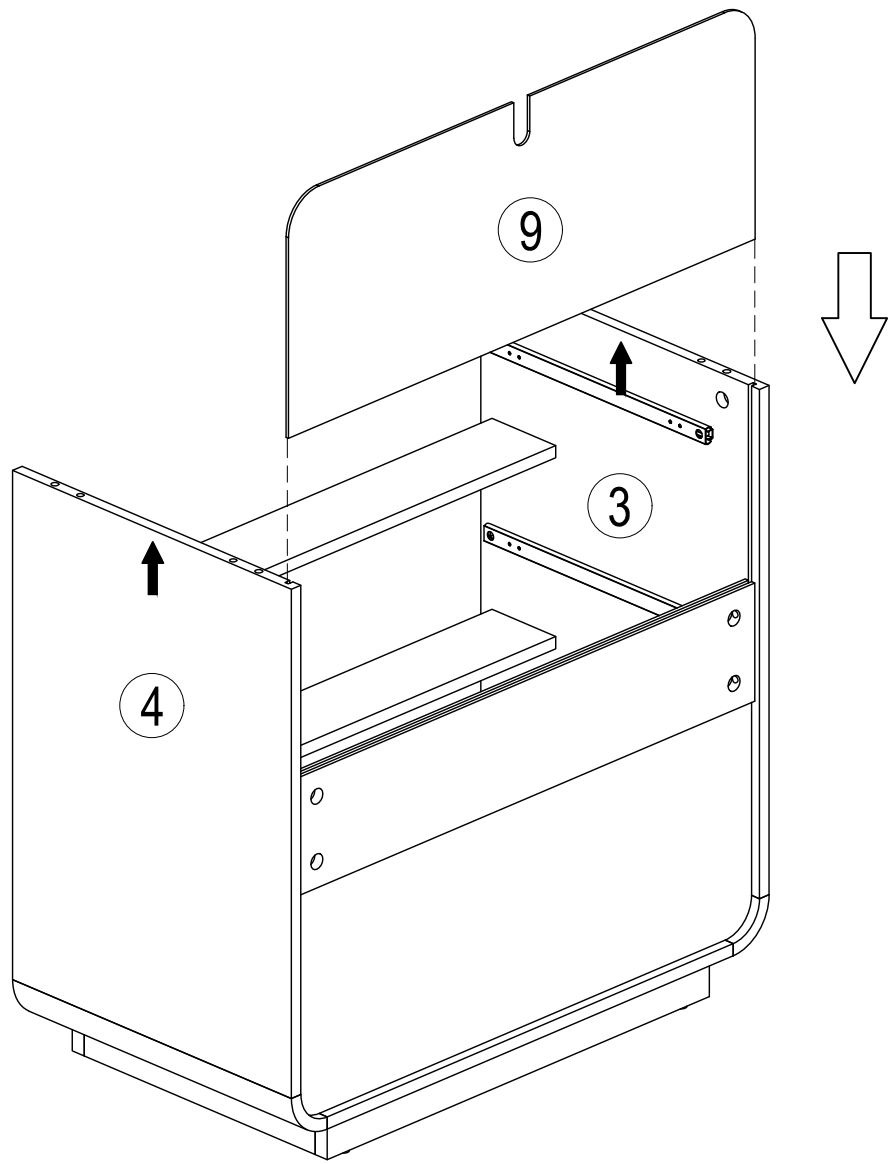

STEP 12

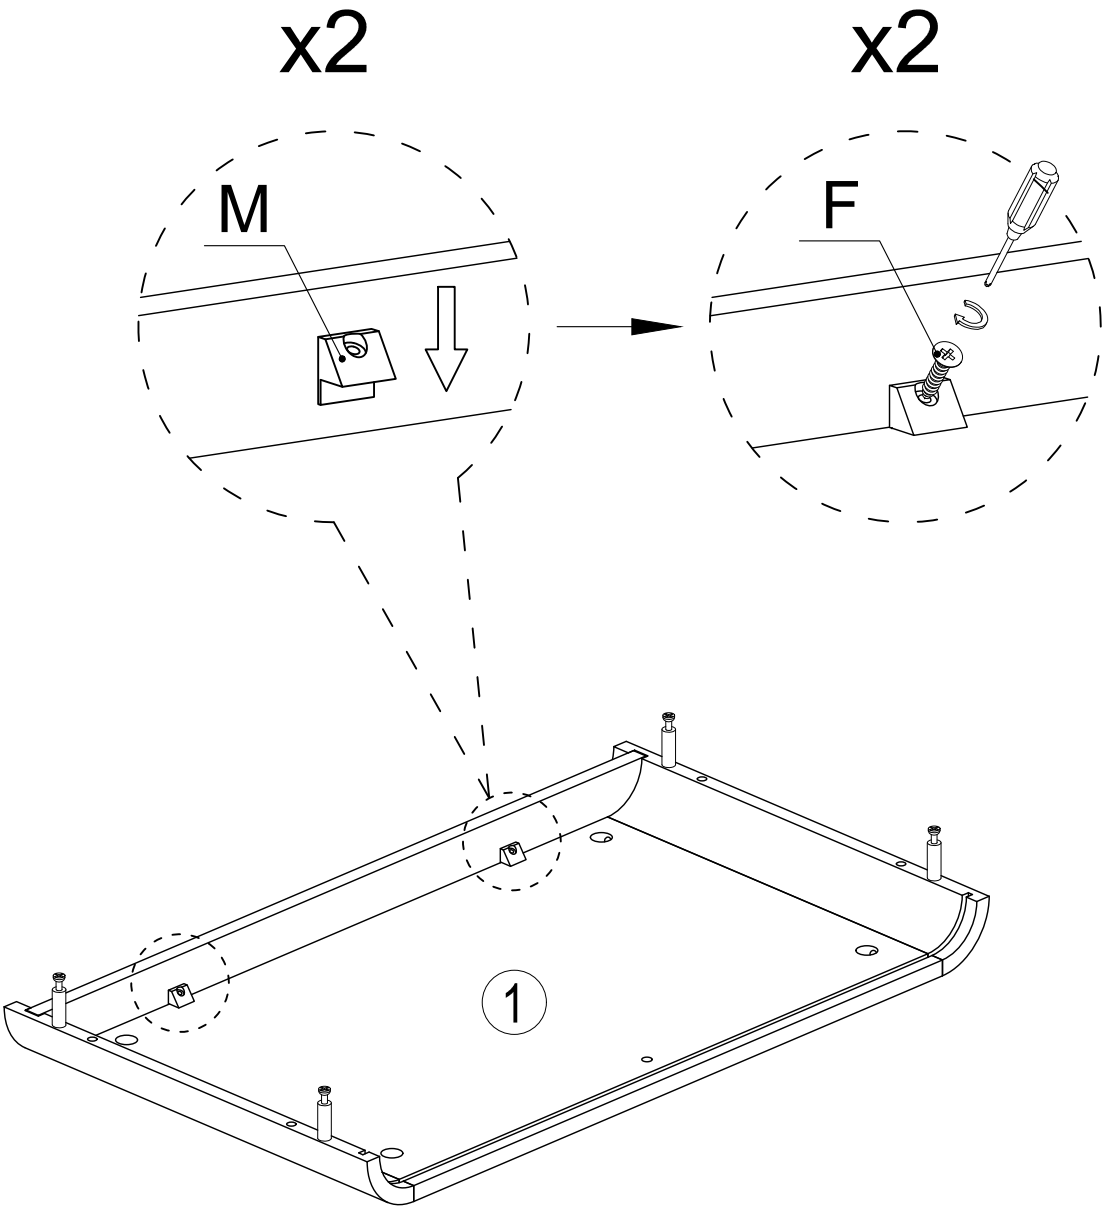


No. F

Quantity: 2 PCS
Screw
ø3x16mm




No. M

Quantity: 2 PCS
plastic buckle
15*15*10



STEP 13

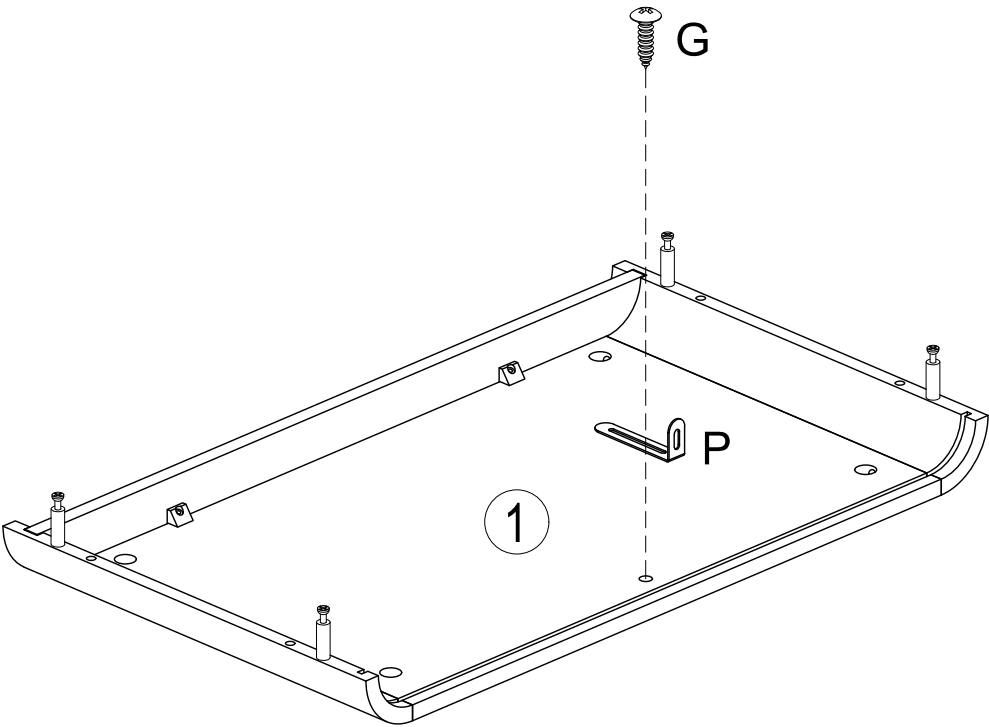


No. G

Quantity: 1 PCS
Screw
ø4x12mm




No. P


Quantity: 1 PCS
L-Shaped anti tipping iron
bar
76x15x30mm



STEP 14

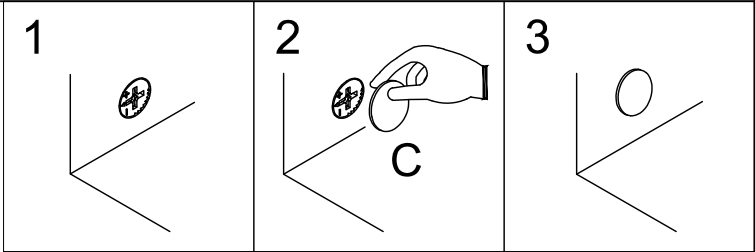

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

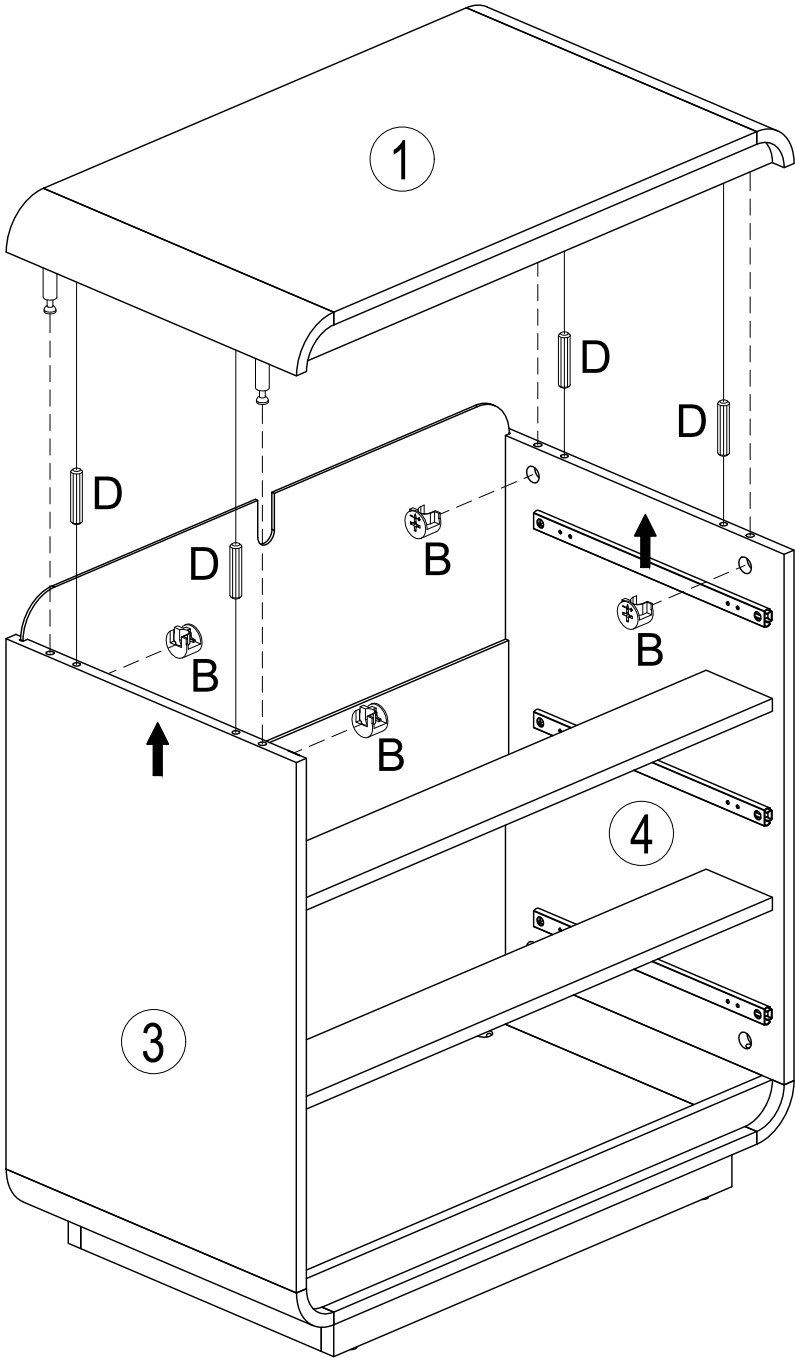


No. B
Quantity: 4 PCS
Cam
ø15x9.5mm



No. C
Quantity: 4 PCS
Sticker
ø20mm






No. D
Quantity: 4 PCS
Dowel
ø6x30mm




STEP 15

Please Note: To ensure greater product stability, parts M and F must be installed according to the instructions. Failure to install them will cause the product to wobble.

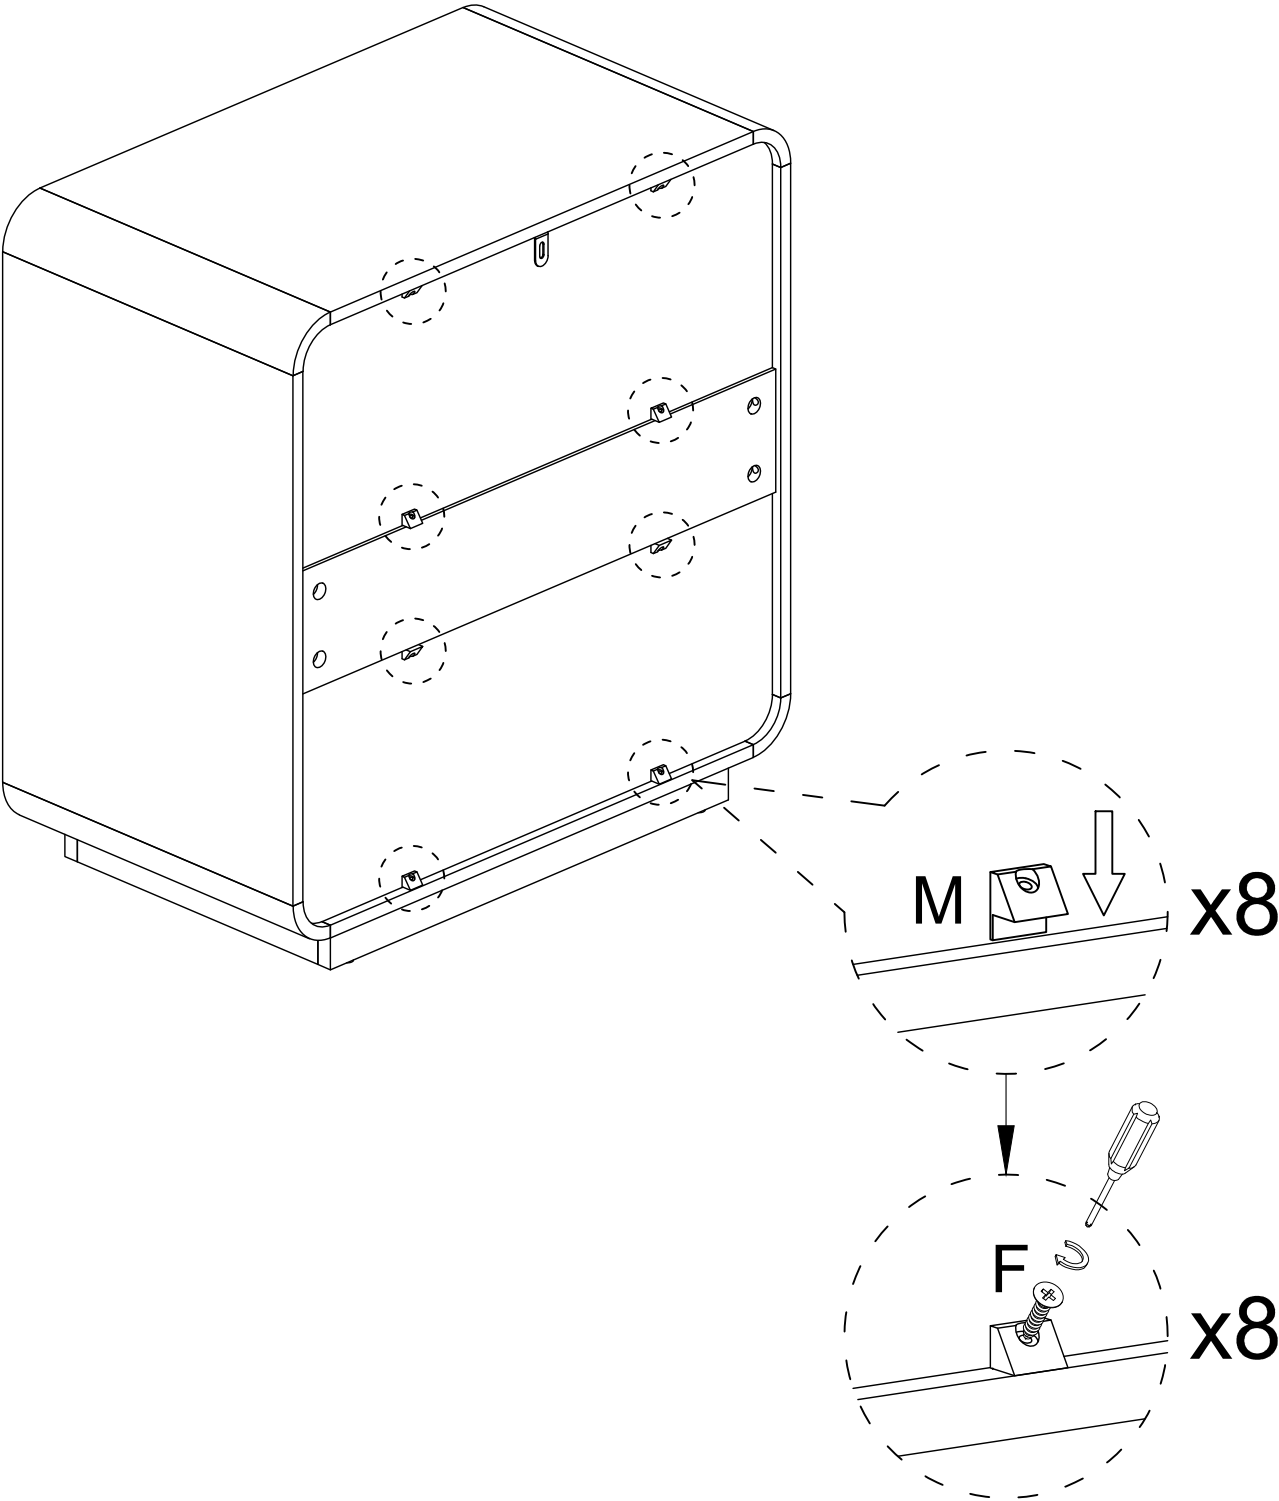


No. F Quantity: 8 PCS Screw ø3x16mm 	No. M Quantity: 8 PCS plastic buckle 15*15*10 
--	--

STEP 16

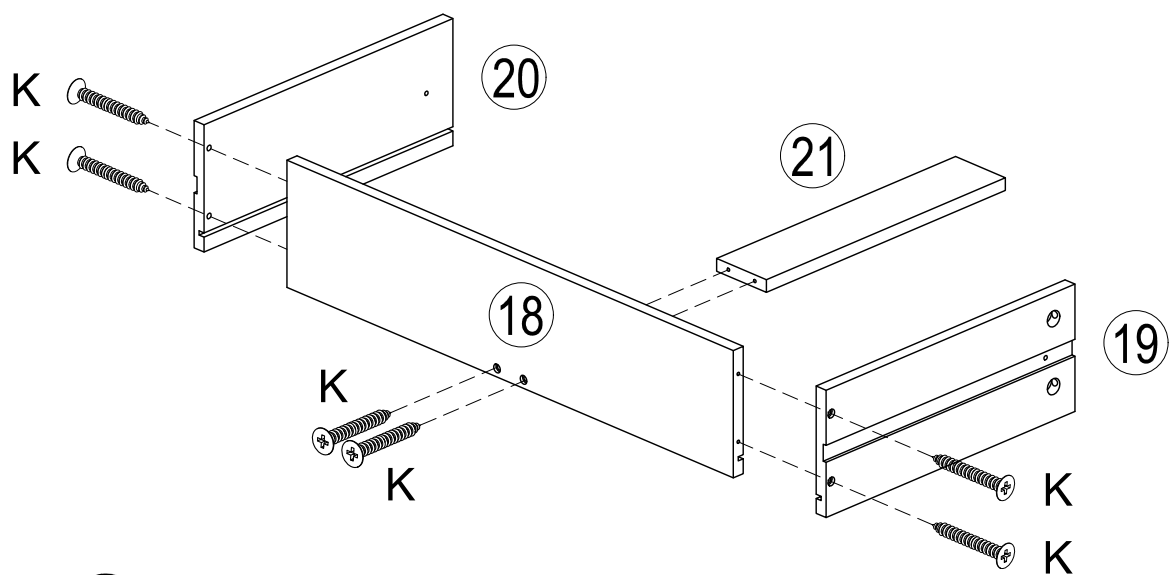


x2



x2

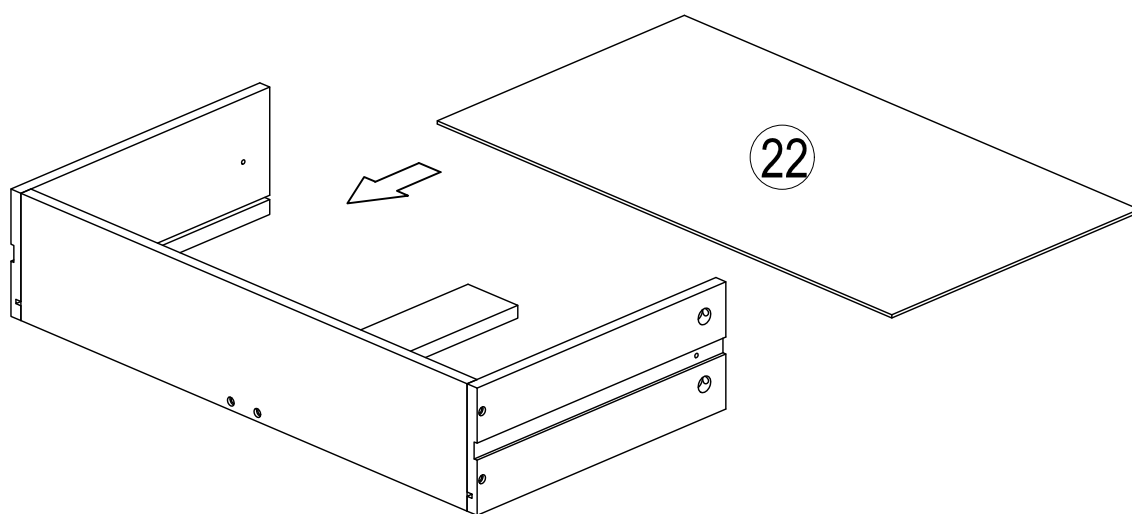


No. K
Quantity: 18 PCS
Screw
ø4x30mm




STEP 17

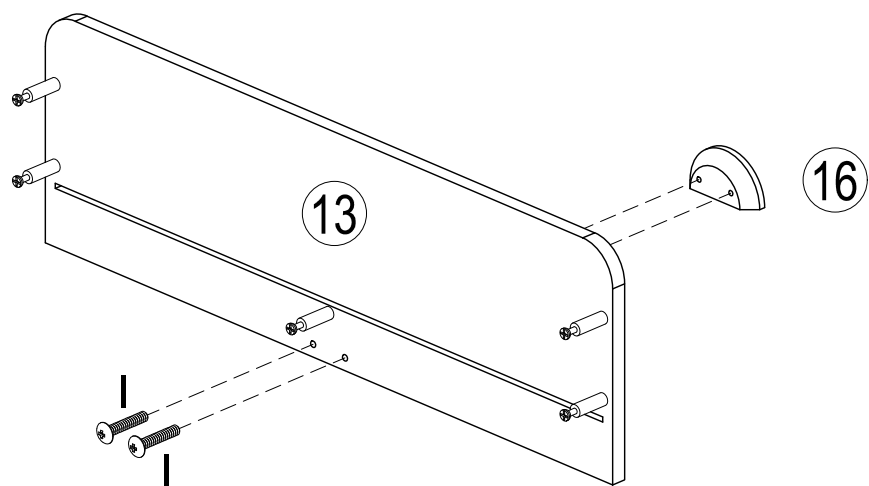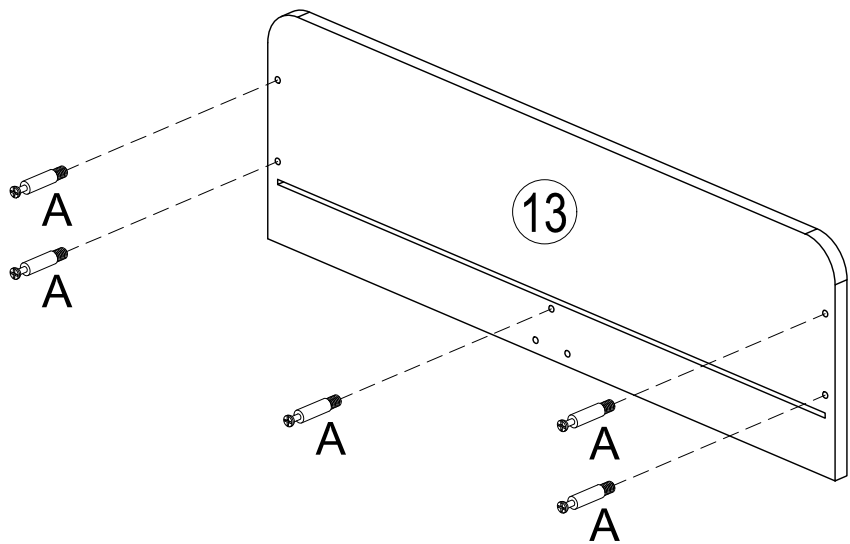



No. I
Quantity: 2 PCS
Bolt
M4x20mm




No. A
Quantity: 5 PCS
Cam Bolt
ø6x33.5mm




STEP 18

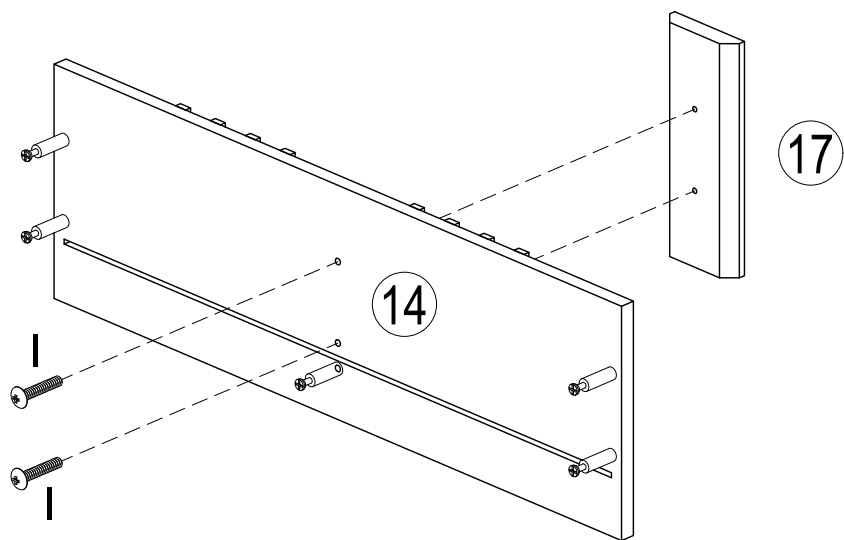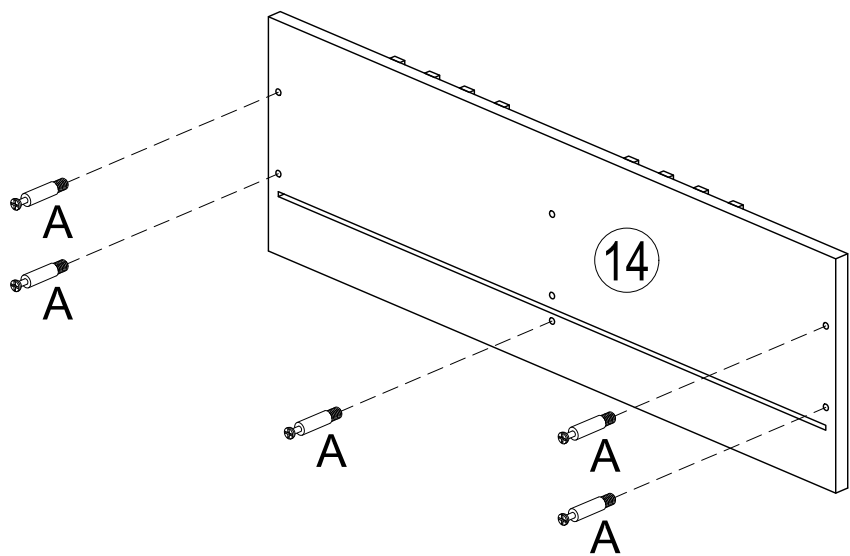



No. I
Quantity: 2 PCS
Bolt
M4x20mm




No. A
Quantity: 5 PCS
Cam Bolt
ø6x33.5mm




STEP 19

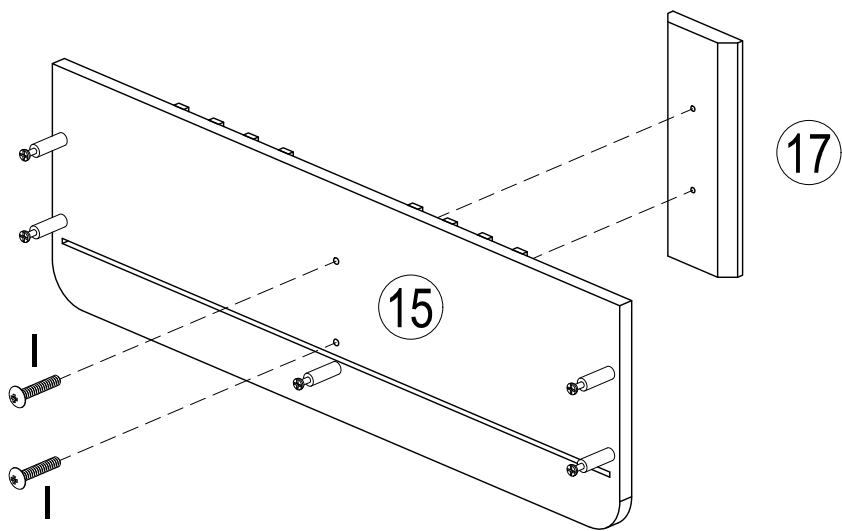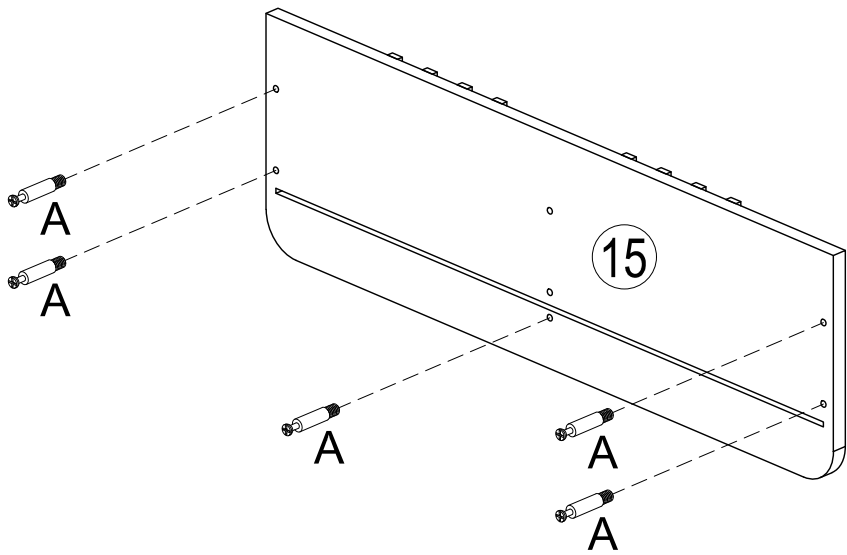


No. I
Quantity: 2 PCS
Bolt
M4x20mm




No. A
Quantity: 5 PCS
Cam Bolt
ø6x33.5mm



STEP 20

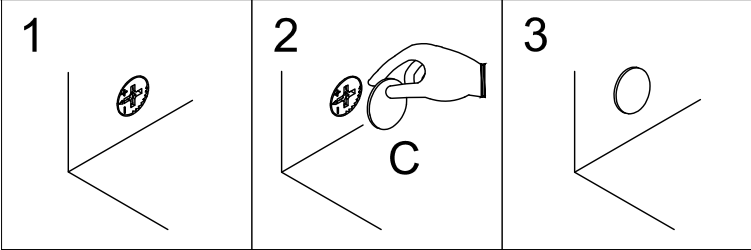

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

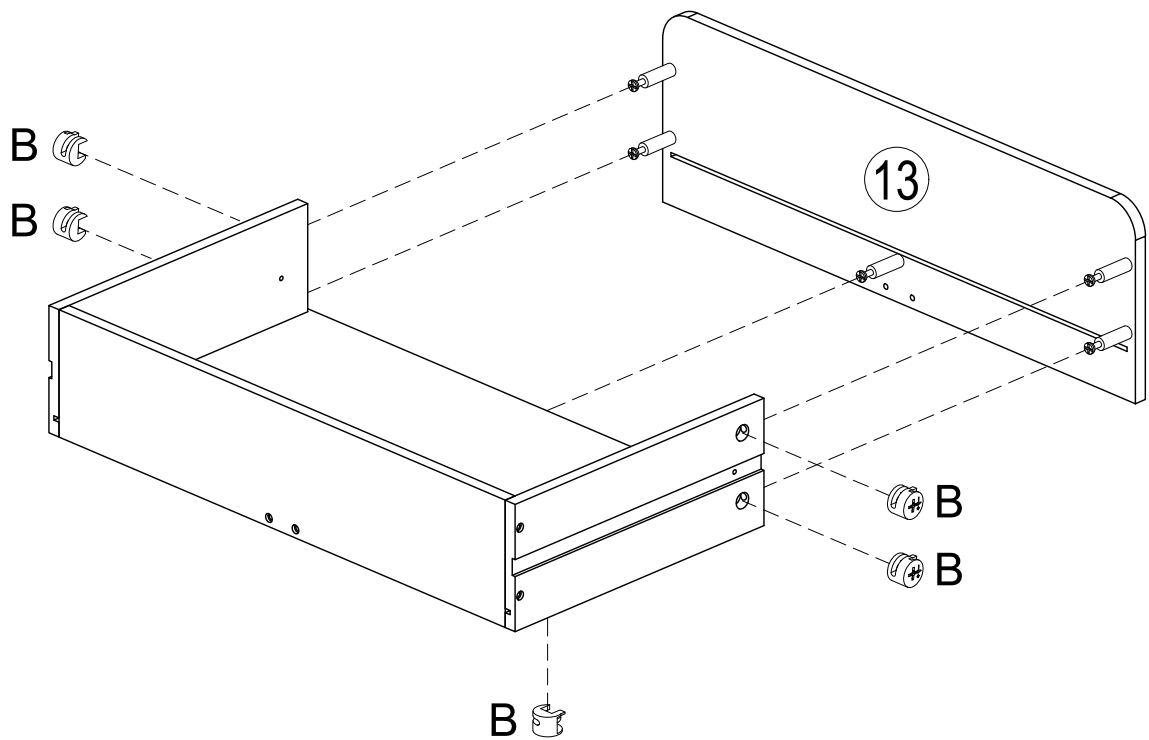

No. B

Quantity: 5 PCS
Cam
ø15x9.5mm




No. C


Quantity: 5 PCS
Sticker
ø20mm



STEP 21

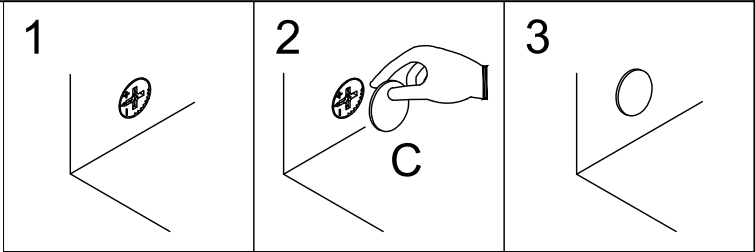

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

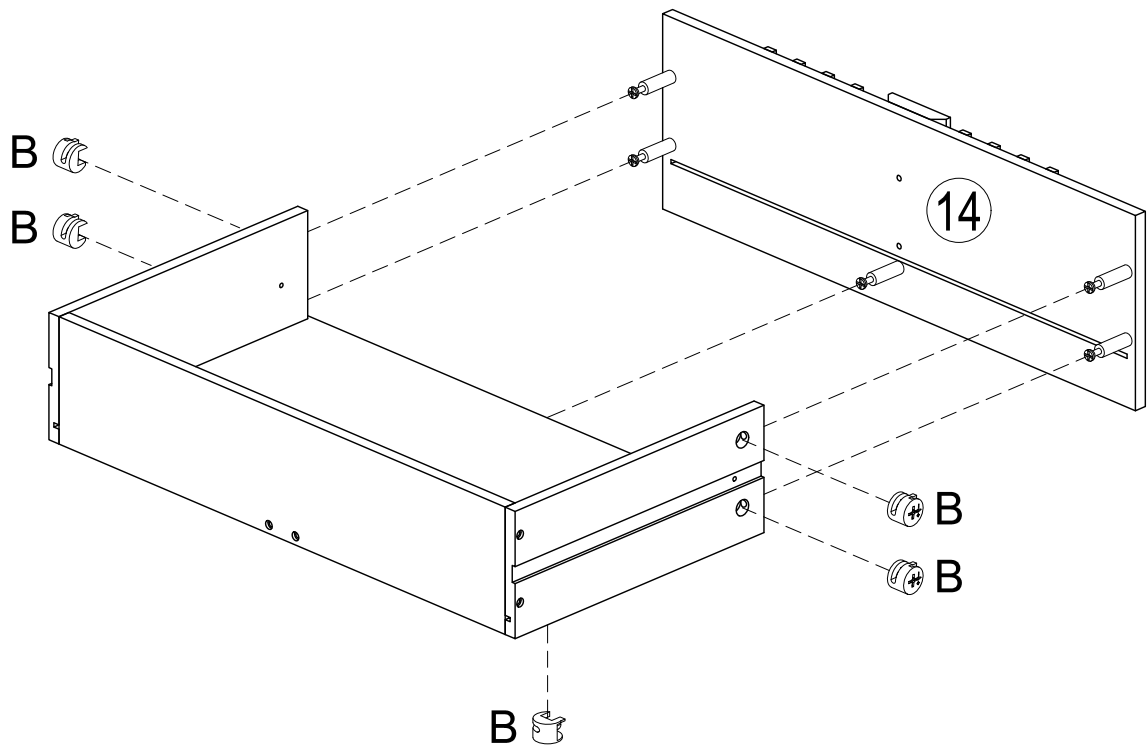

No. B

Quantity: 5 PCS
Cam
ø15x9.5mm




No. C


Quantity: 5 PCS
Sticker
ø20mm



STEP 22

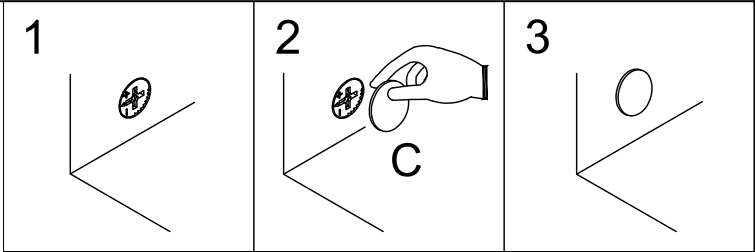

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

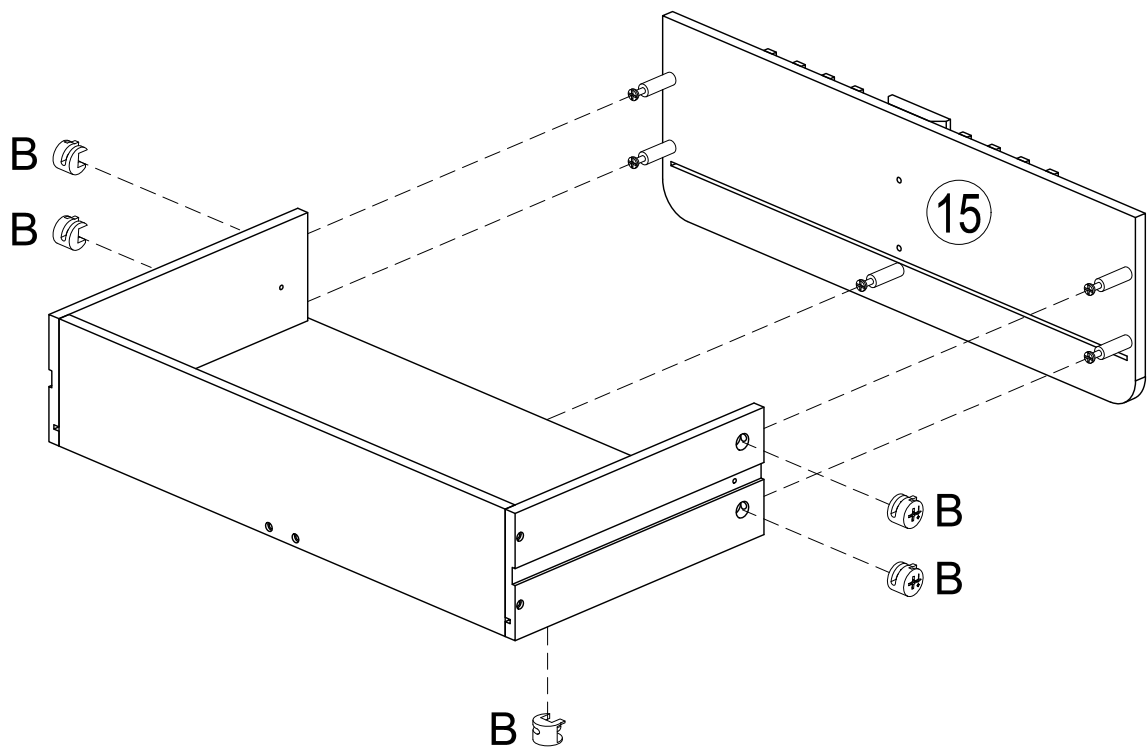

No. B

Quantity: 5 PCS
Cam
ø15x9.5mm





No. C


Quantity: 5 PCS
Sticker
ø20mm



STEP 23

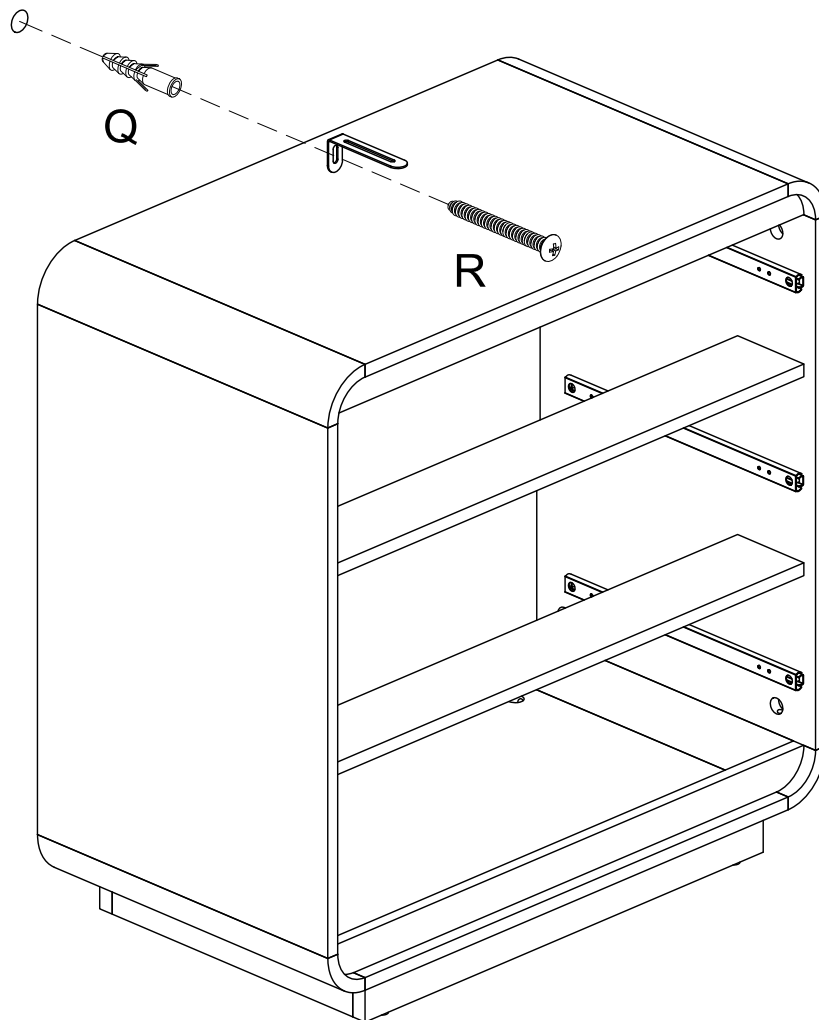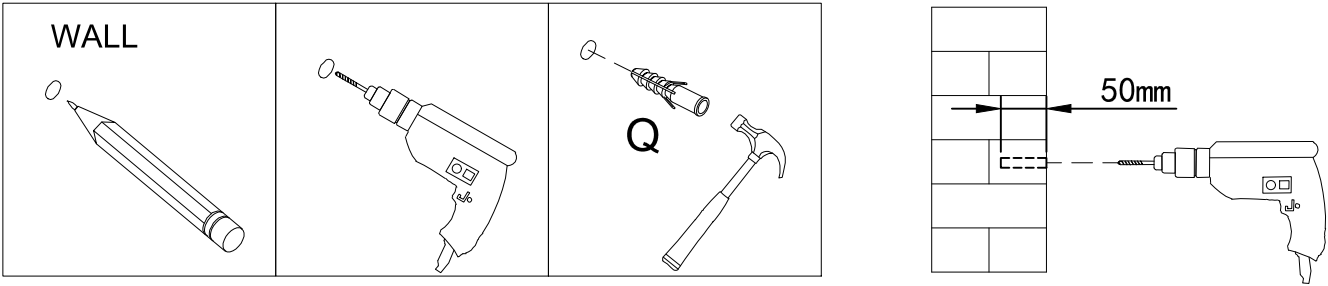


No. Q
Quantity: 1 PCS
plastic plug
Ø8*40





No. R
Quantity: 1 PCS
screw
Ø4*38



STEP 24

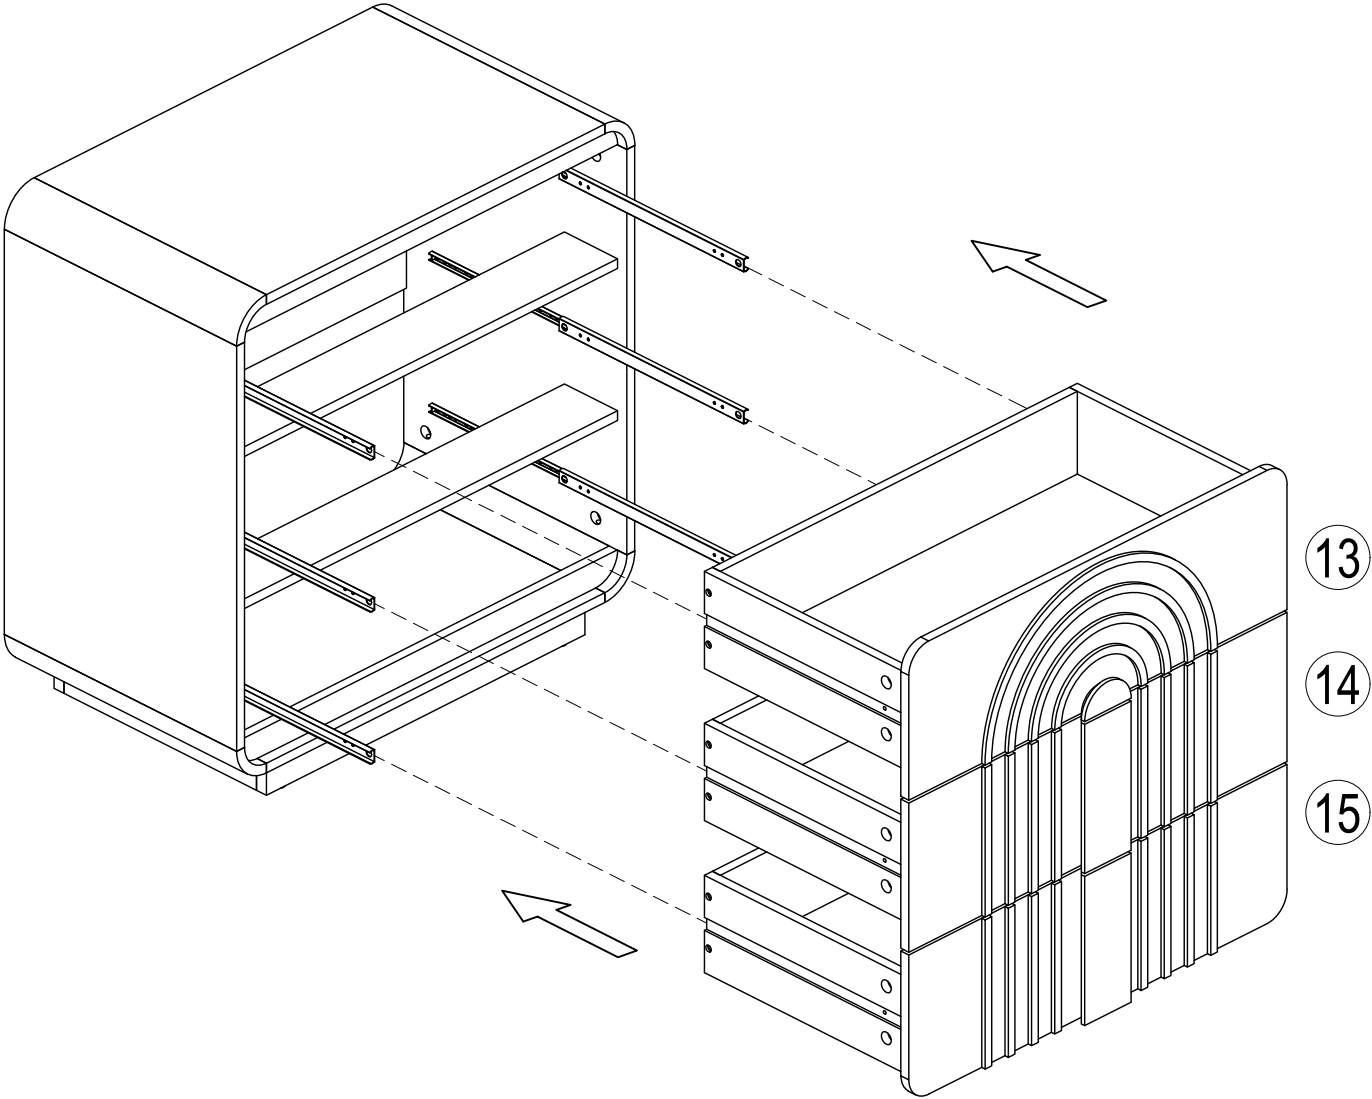

STEP 25

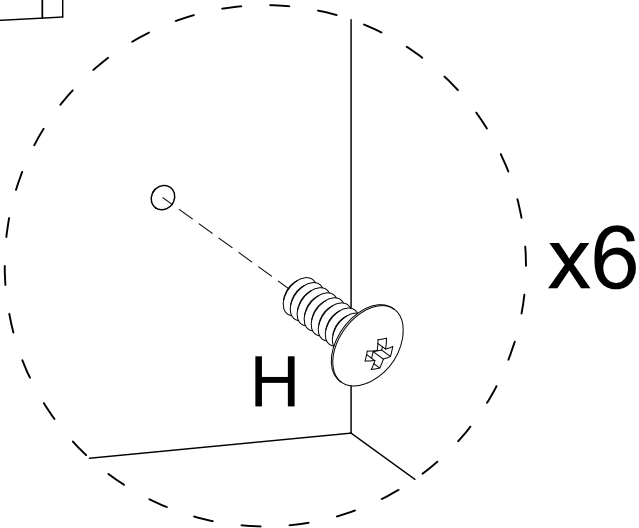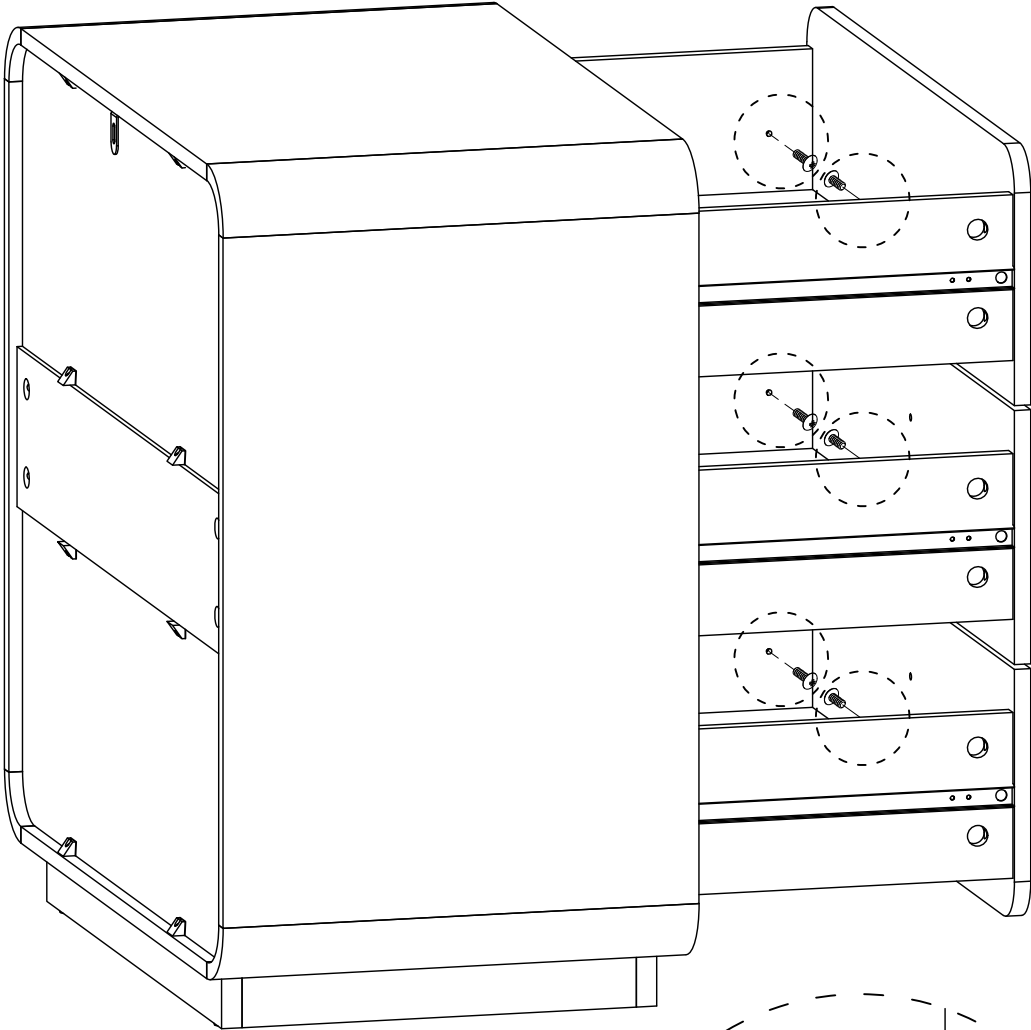

No. H

Quantity: 6 PCS

Bolt
M4x10mm

