
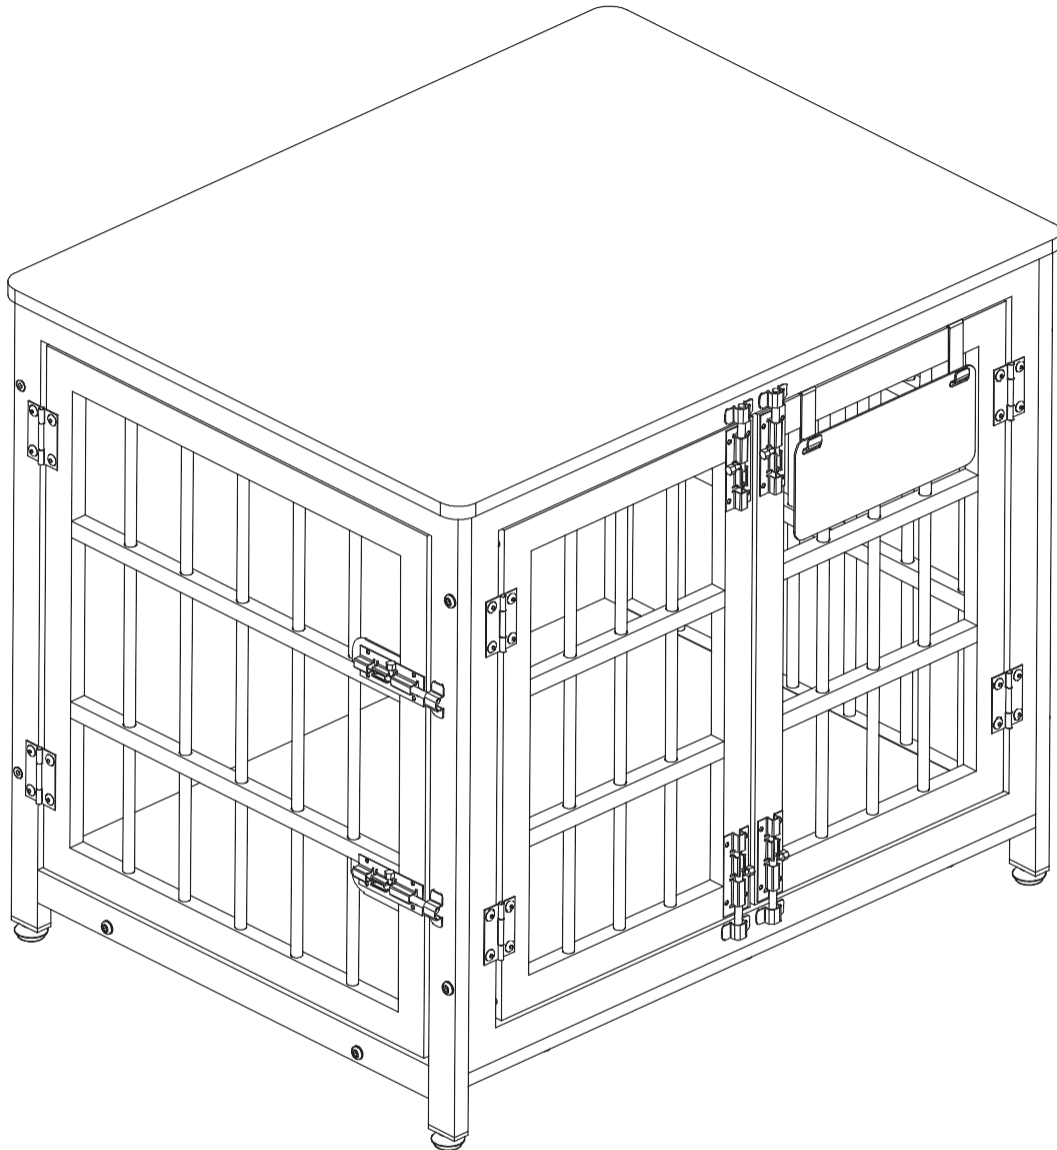
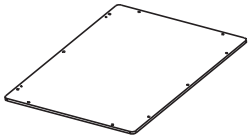

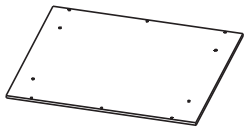
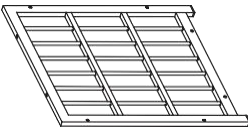
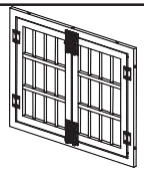
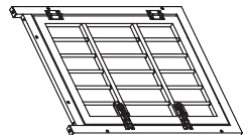
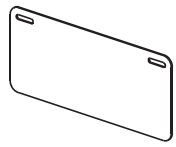





Assembly Guide



Assembled by
Two Adults


PS-DC103S

Letter (number)	Part	Design	Quantily
①	Top Board		x1
②	Back Board		x1
③	Bottom Board		x1
④	Side Frame without Door		x1
⑤	Front Door Frame		x1
⑥	Side Frame with Door		x1
⑦	Bottom Support Slats		x2
⑧	Name Tag		x1
⑨	Hooks for Name Tag		x2

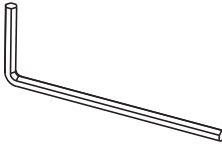Letter (number)	Part	Design	Quantily
Ⓐ	Screw M6*8mm		x7
Ⓑ	Screw M6*23mm		x15
Ⓒ	Screw $\Phi 5 * \Phi 9 * 45$ mm		x7
Ⓓ	Leveling Feet		x4
Ⓔ	Dowel Pin		x2
Ⓕ	Hidden Fasten Screw		x3
Ⓖ	Linkage Screw		x3
Ⓗ	Phillips Screwdriver		x1
Ⓘ	Allen Wrench (For Tightening Screws)		x1



ATTENTION

1. Before starting the installation, please check carefully and take the correct parts to avoid the wrong assembly.
2. We recommend not fully tightening the screw at the beginning.
After all steps are finished and the position is adjusted well, screws can be fully tightened.

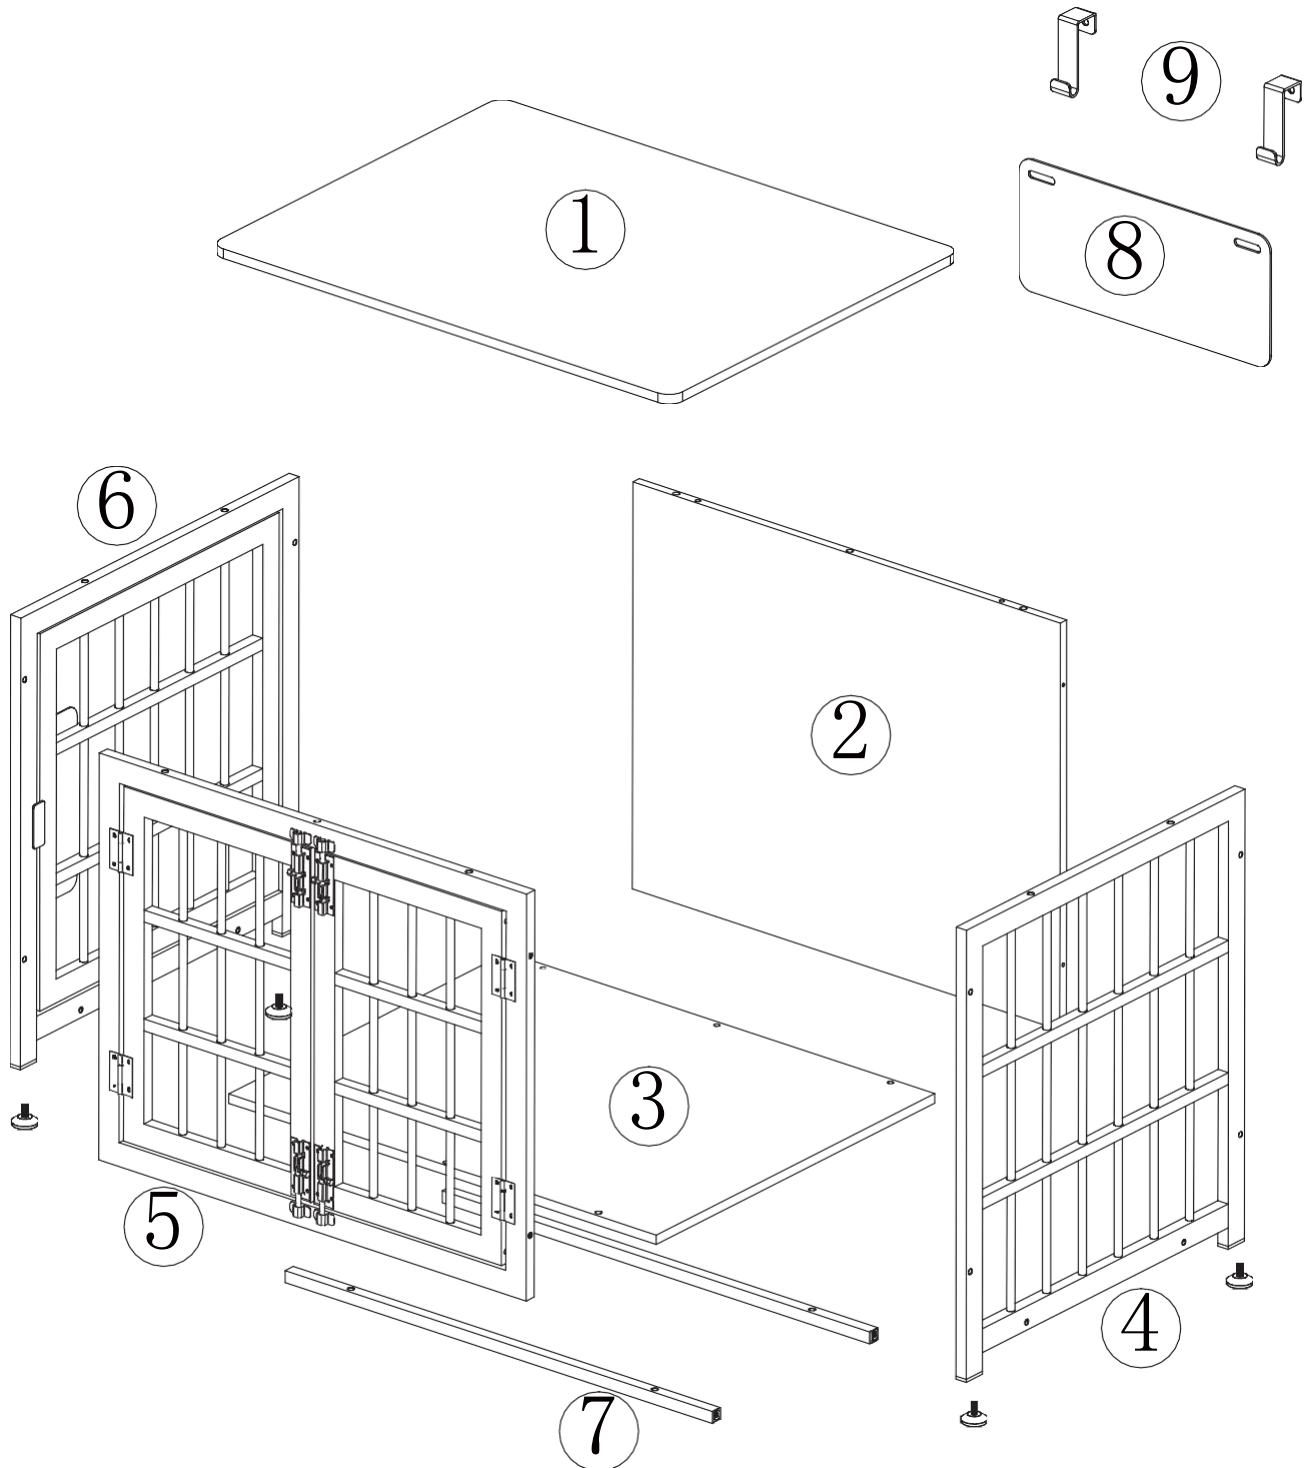



Installation Instructions

According to the room space structure, you can choose either left-hand opening or right-hand opening for installation. Installation steps are as follows.

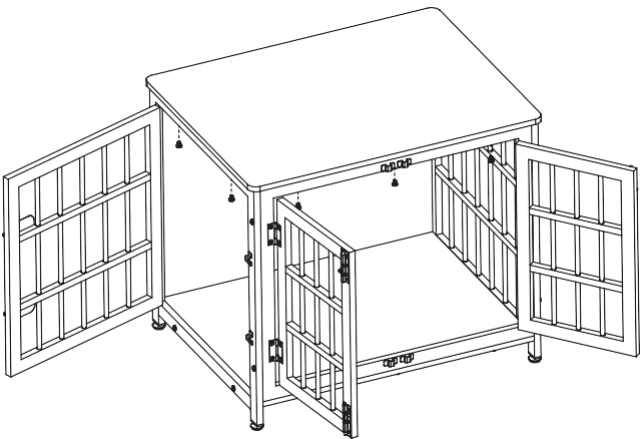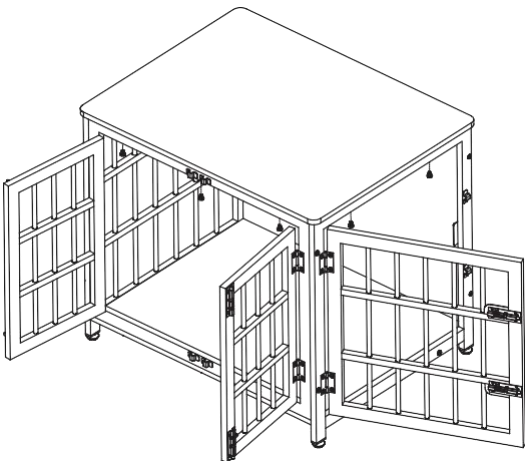Side door open on the left	Side door open on the right
	
Step 1	Step 1
Step 2	Step 2
Step 3	Step 3
Step 4-1	Step 4-2
Step 5-1	Step 5-2
Step 6	Step 6
Step 7-1	Step 7-2
Step 8-1	Step 8-2
Step 9	Step 9

Step 1



③	⑦	B	I
			
x1	x2	x4	

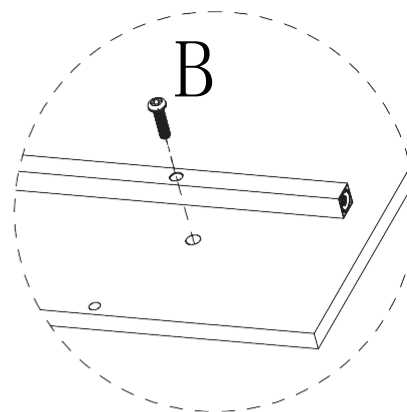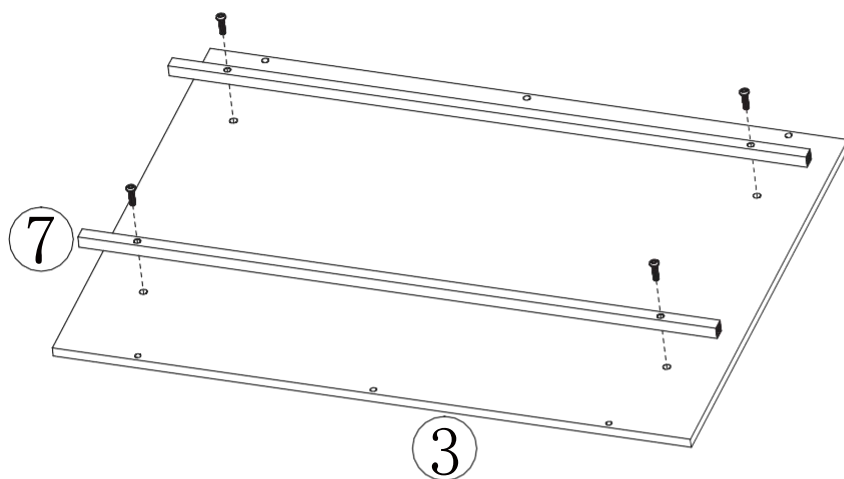

Assemble the bottom support slats ⑦ and bottom board ③.

Step 2

⑤	B	I
		
x1	x3	

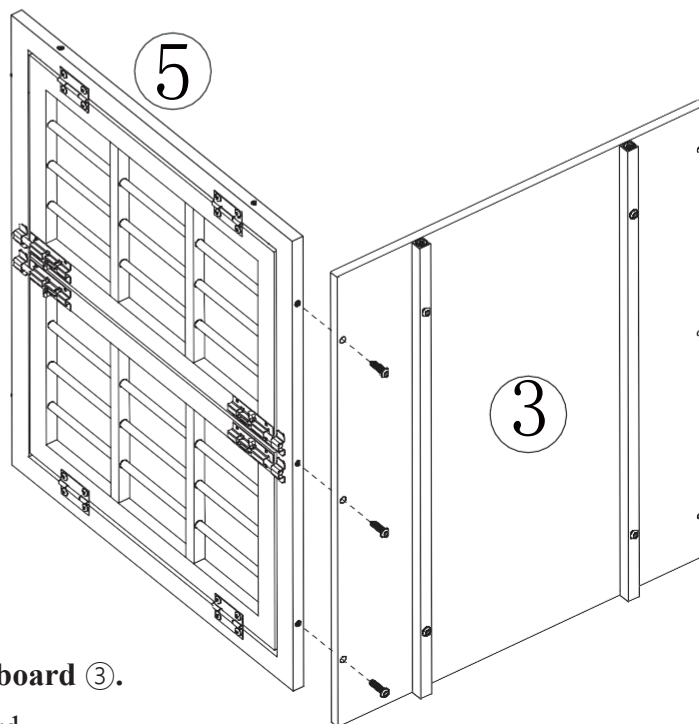
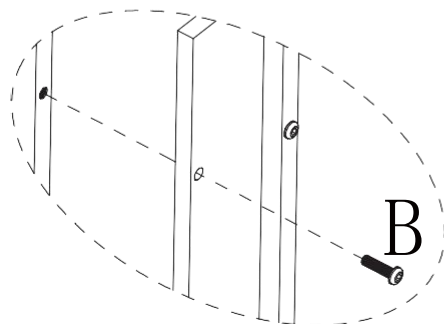


Assemble the front door frame ⑤ and bottom board ③.

⚠ **Note:** The side with the door lock face outward.

Step 3

②	C	I
x1	x3	

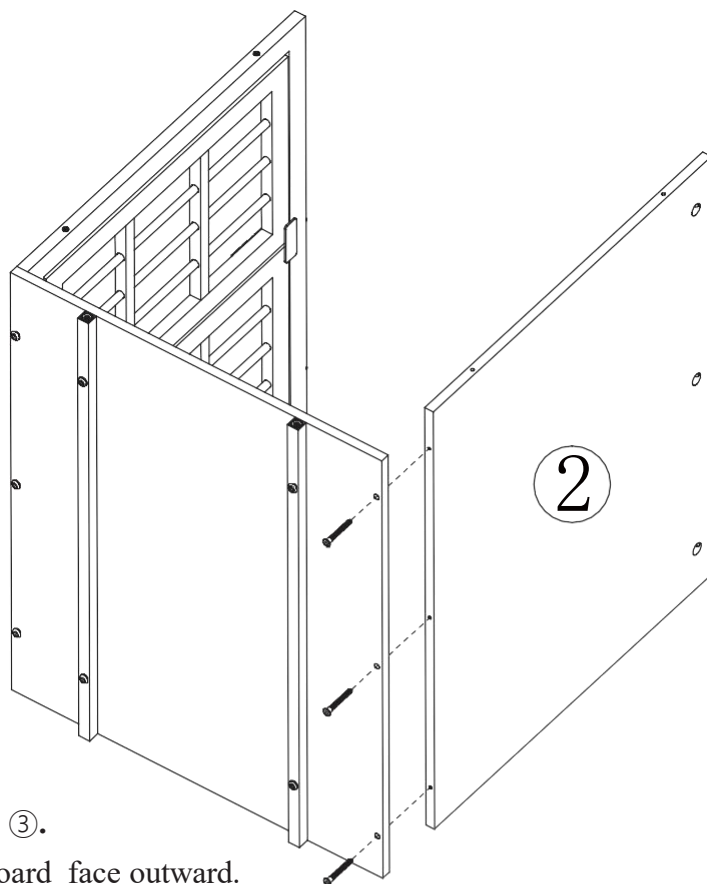
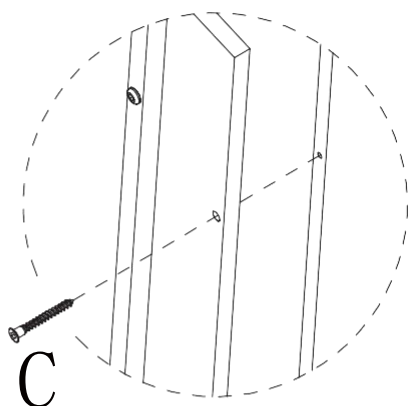


Assemble the back board ② and bottom board ③.

⚠ **Note:** The three holes on the top of the back board face outward.

Step 4-1 Installation steps - Open on the left

④	B	C	I
x1	x4	x2	

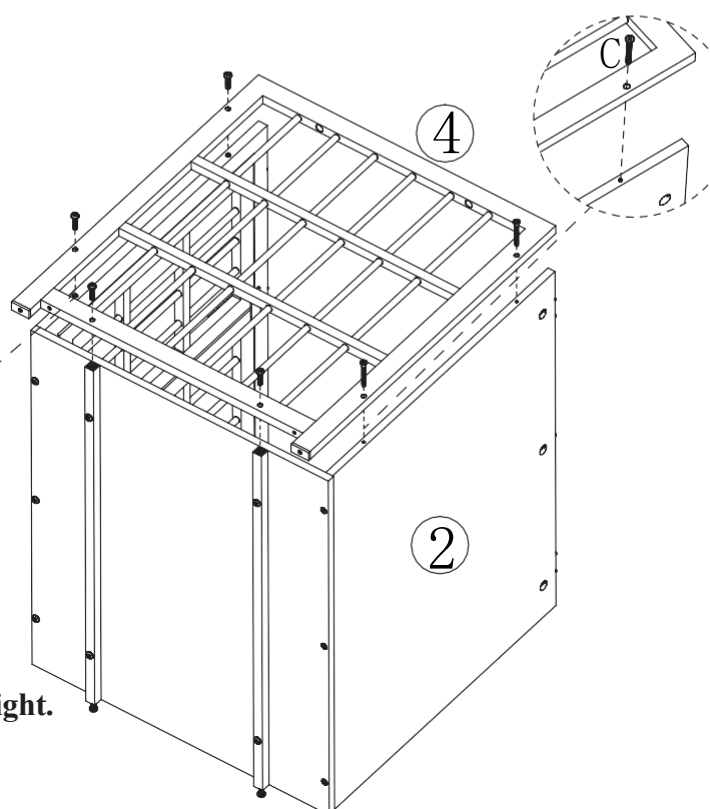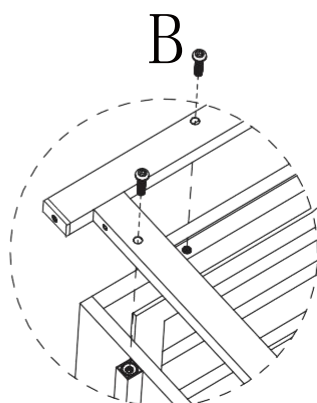



Assemble the side frame without door ④ on the right.

Use screw ⑥ to fasten the front door ⑤.

Use screw ③ to fasten the back board ②.

Step 5-1 Installation steps - Open on the left

⑥	B	C	D	I
				
x1	x4	x2	x4	

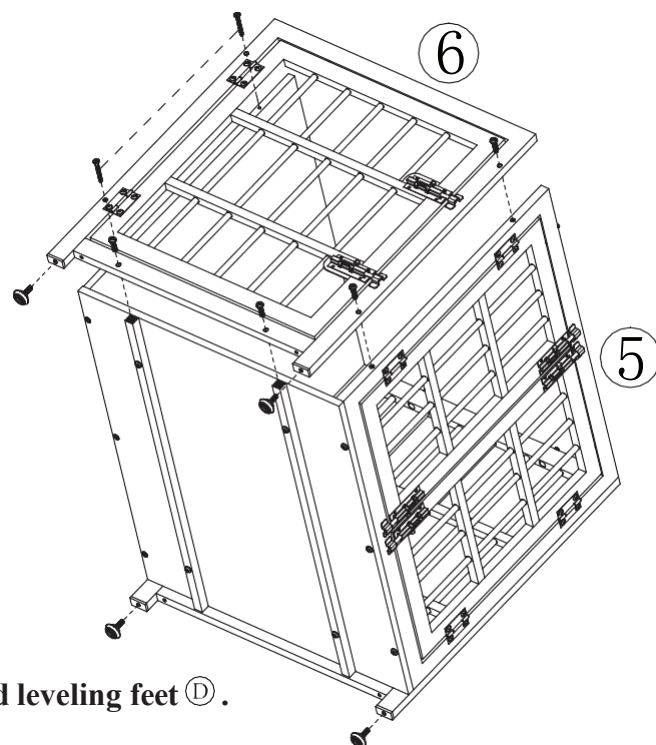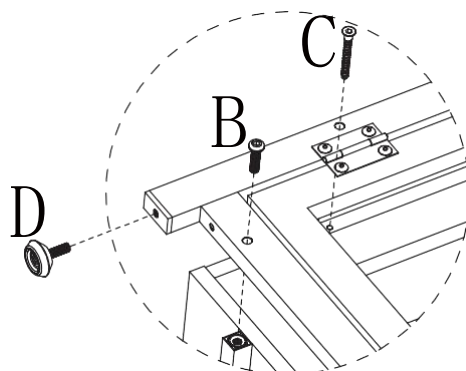



Assemble the side frame with door ⑥ on the left and leveling feet ④.

Use screw ③ to fasten the front door ⑤.

Use screw ② to fasten the back board ②.

Step 6



①	E	G	H
			
x1	x2	x3	

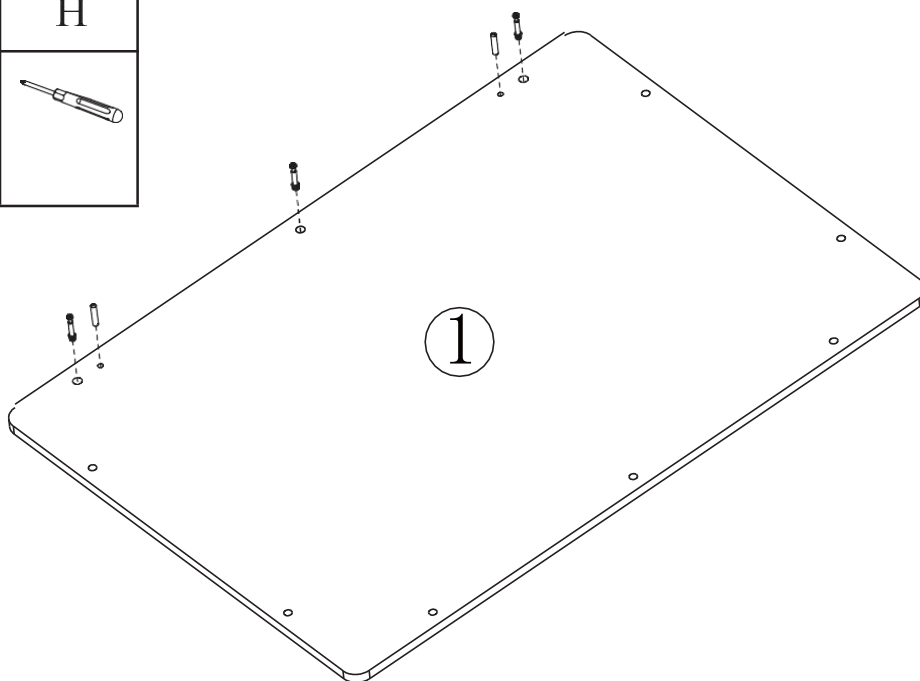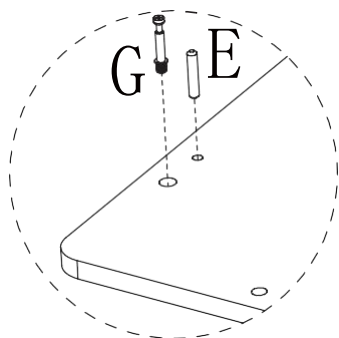

Prepare the top board ①, insert linkage screw ⑥ and dowel pin ⑤.

Step 7-1 Installation steps - Open on the left

A	F	H	I
			
x2	x3		

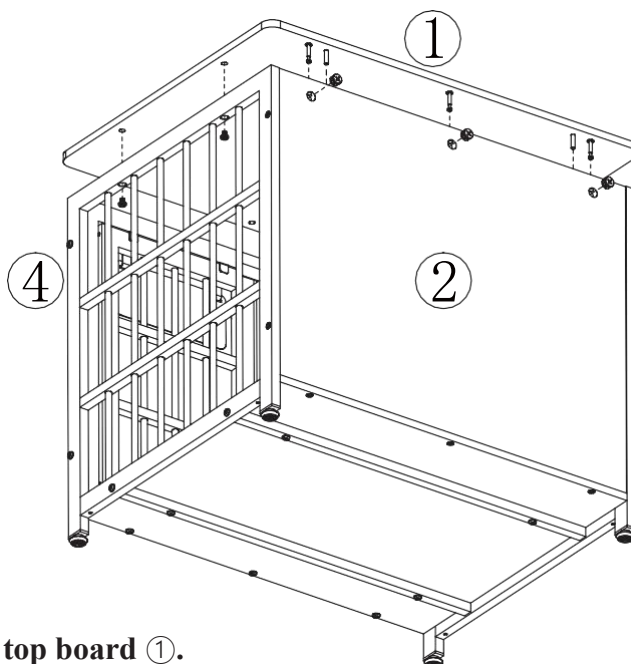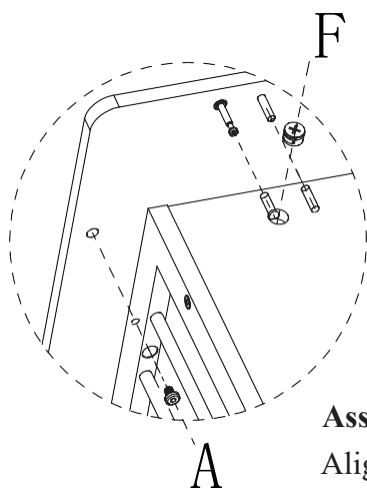



Assemble the top board ①.

Align the holes of the top board ①, then use screw ⑥ to link the linkage screw ⑦.

⚠ NOTE : Screw ⑥ is used to fasten the linkage screw ⑦.

Step 8-1 Installation steps - Open on the left

A	I
	
x5	

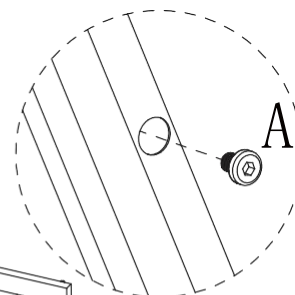
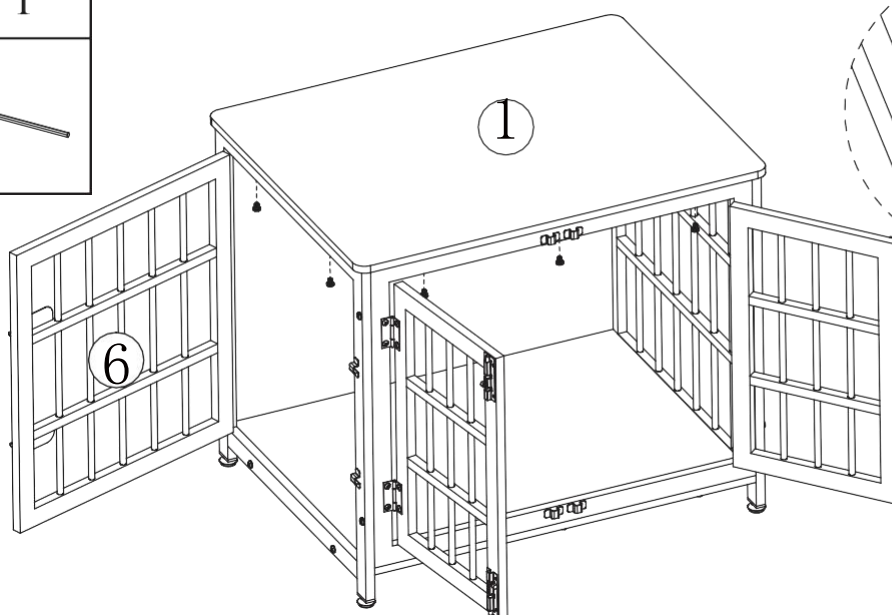


Use screw ⑧ to connect top board ①, front frame ⑤, side frames ④ and ⑥.

⚠ Note: Don't fully tighten screw ⑧ initially to allow for any misalignment. Once all screw ⑧ are in position, tighten each one fully one by one.

Step 4-2 Installation steps - Open on the right

⑥	B	C	I
			
x1	x4	x2	

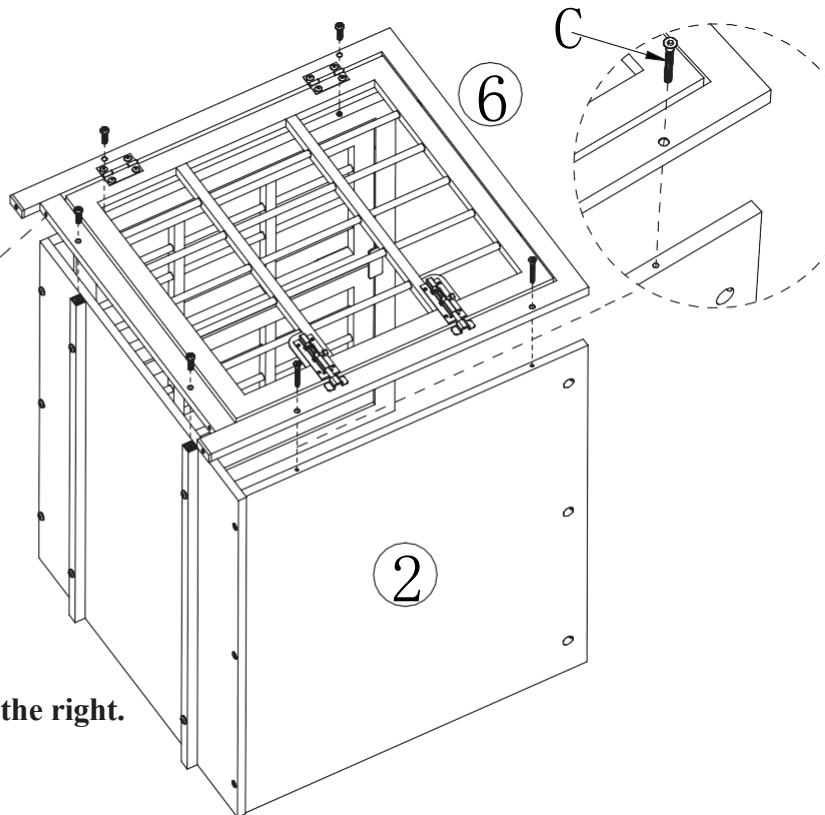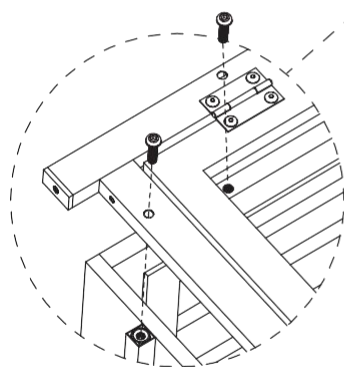



Assemble the side frame with door ⑥ on the right.

Use screw ⑥ to fasten the front door ⑤.

Use screw ⑥ to fasten the back board ②.

Step 5-2 Installation steps - Open on the right

④	B	C	D	I
				
x1	x4	x2	x4	

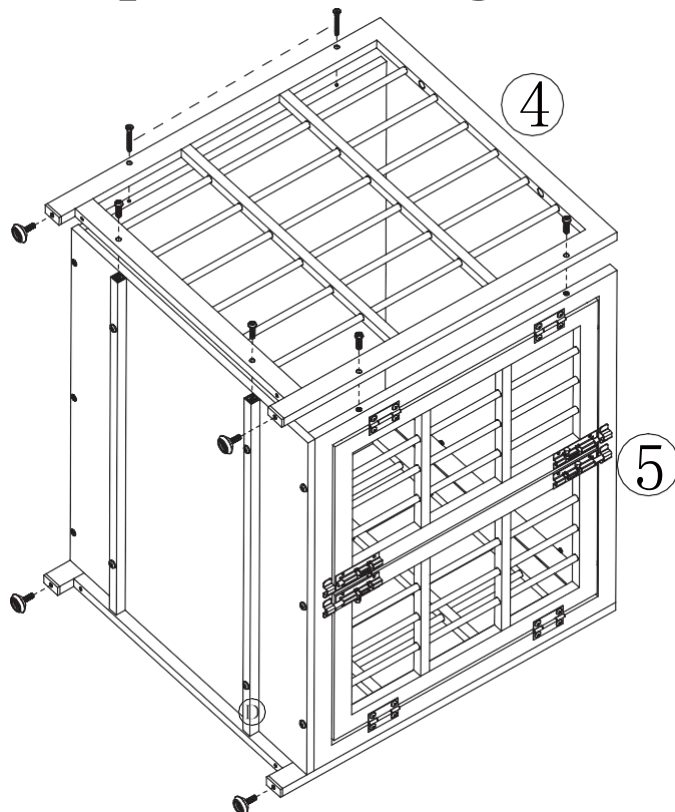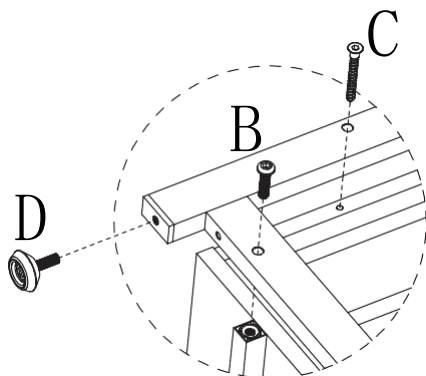



Assemble the side frame without door ④ on the left and leveling feet ④.

Use screw ⑥ to fasten the front door ⑤.

Use screw ⑥ to fasten the back board ②.

Step 6


①	E	G	H
			
x1	x2	x3	

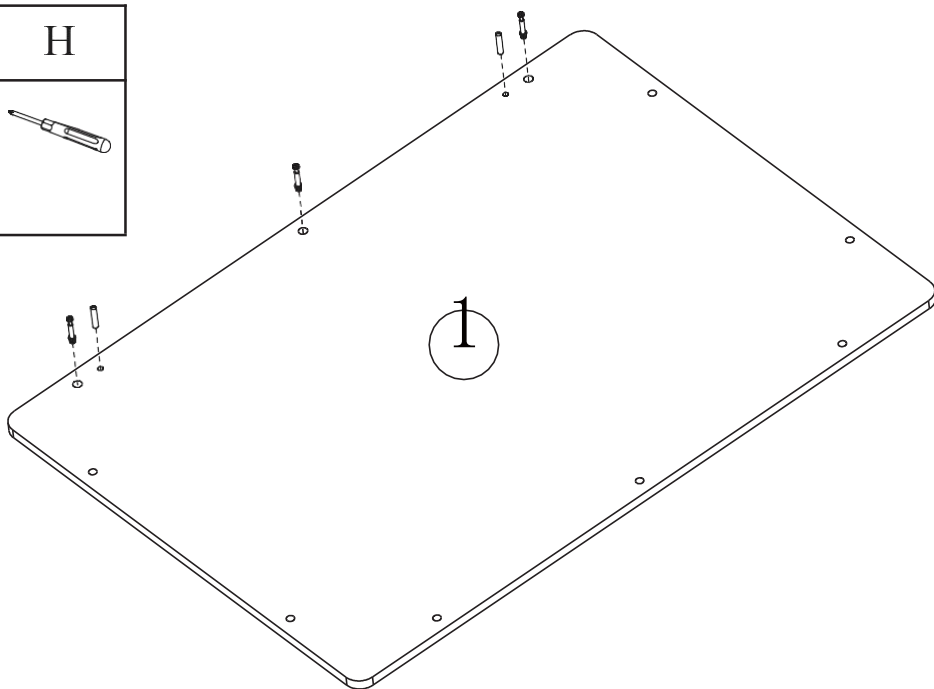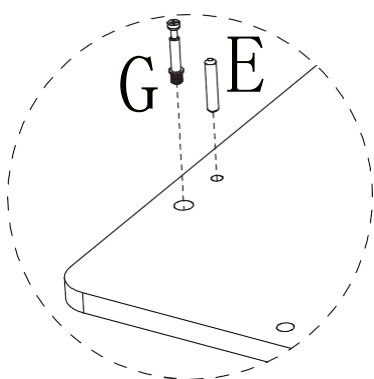

Prepare the top board ①, insert linkage screw ⑥ and dowel pin ⑤.

Step 7-2 Installation steps - Open on the right

A	F	H	I
			
x2	x3		

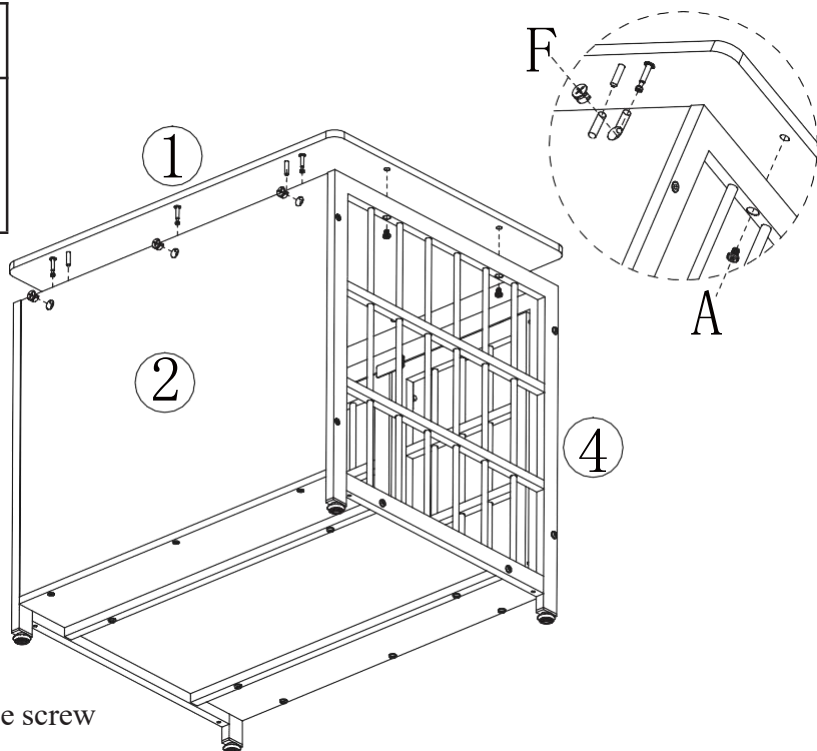



Assemble the top board ①.

Align the holes of the top board ①, then use screw ⑥ to link the linkage screw ⑥.

⚠ **NOTE** : Screw ⑥ is used to fasten the linkage screw ⑥.

Step 8-2 Installation steps - Open on the right

A	I
 x5	

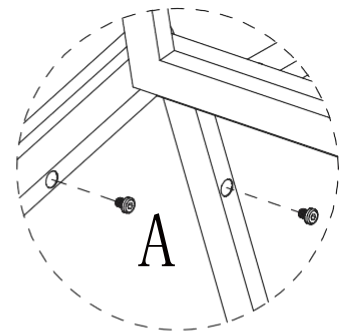
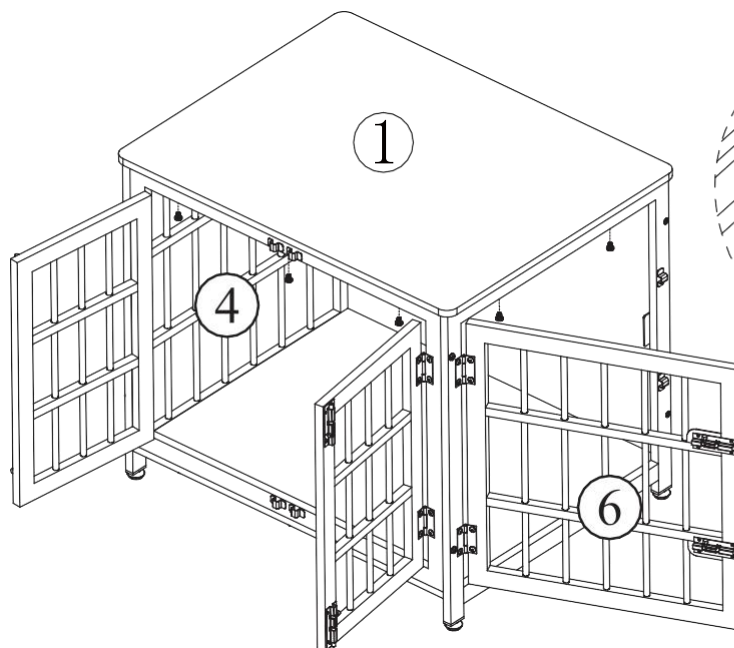


Use screw ① to connect top board ①, front frame ⑤, side frames ④ and ⑥.

⚠NOTE : Don't fully tighten screw ① initially to allow for any misalignment. Once all screw ① are in position, tighten each one fully one by one.

Step 9

⑧	⑨
 x1	 x2

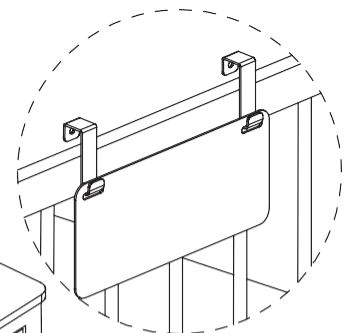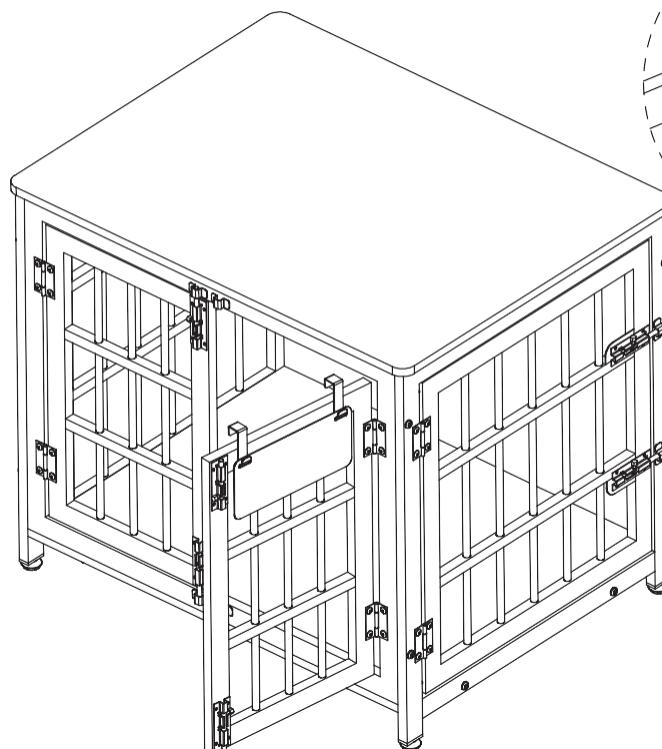

Assemble Name Tag ⑧.