
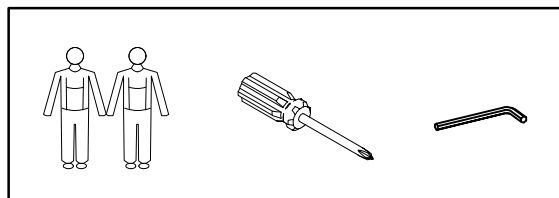


Kitchen Pantry Cabinet

ASSEMBLY INSTRUCTION

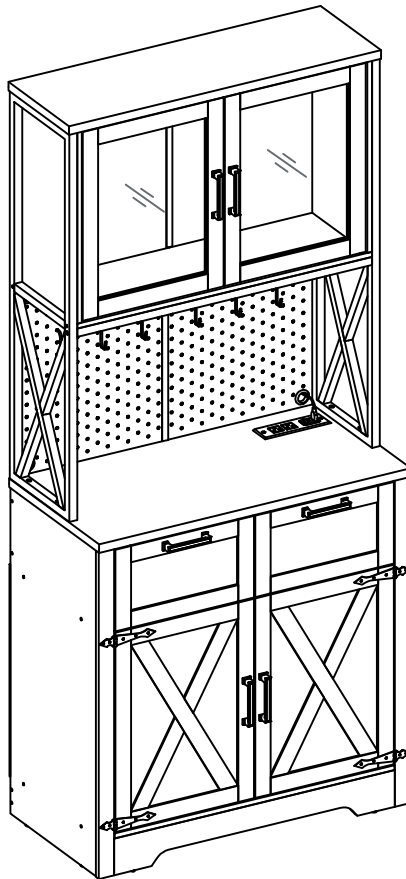

CAUTION

Put the screws in loosely until all pieces are together and then tighten them all.
It will save your time if you make a mistake while installing.

Dear Customers,

Thank you for purchasing our products.



As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please contact us freely at the first time. We will provide you with a 100% satisfactory solution.

Thanks again for your order. Please feel free to contact us from our store or homeycs@hotmail.com in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it. Please call for replacement parts or assistance: 1-857-800-8808. Mon-Fri 9am-5pm (PST)



Please follow the instruction manuals and use a pad to protect the product during your assembly.

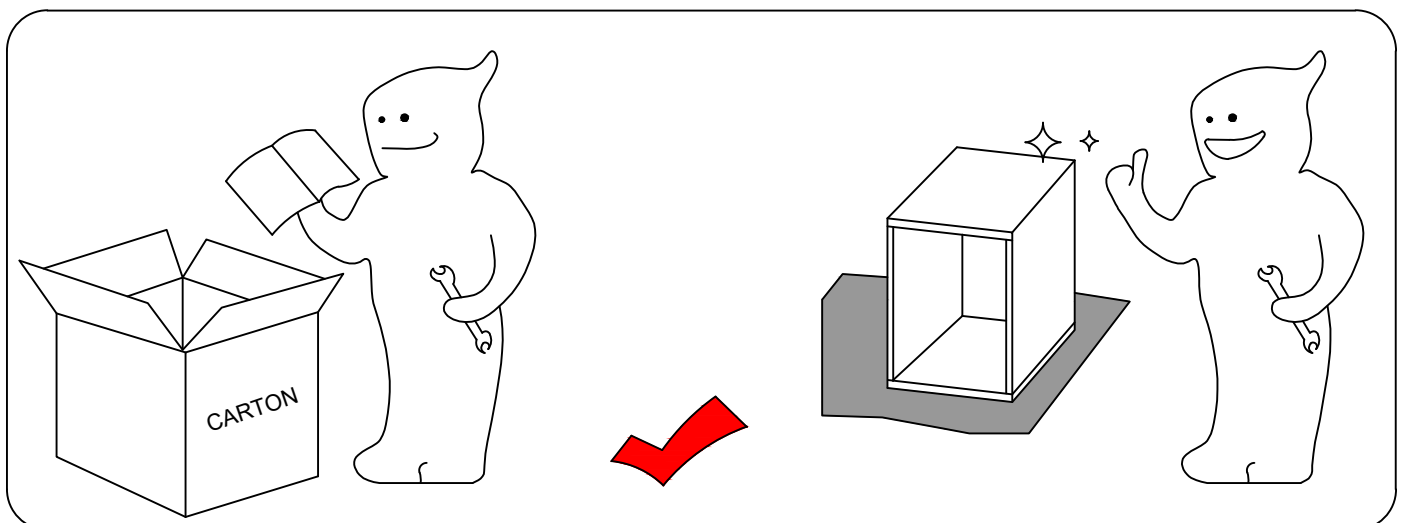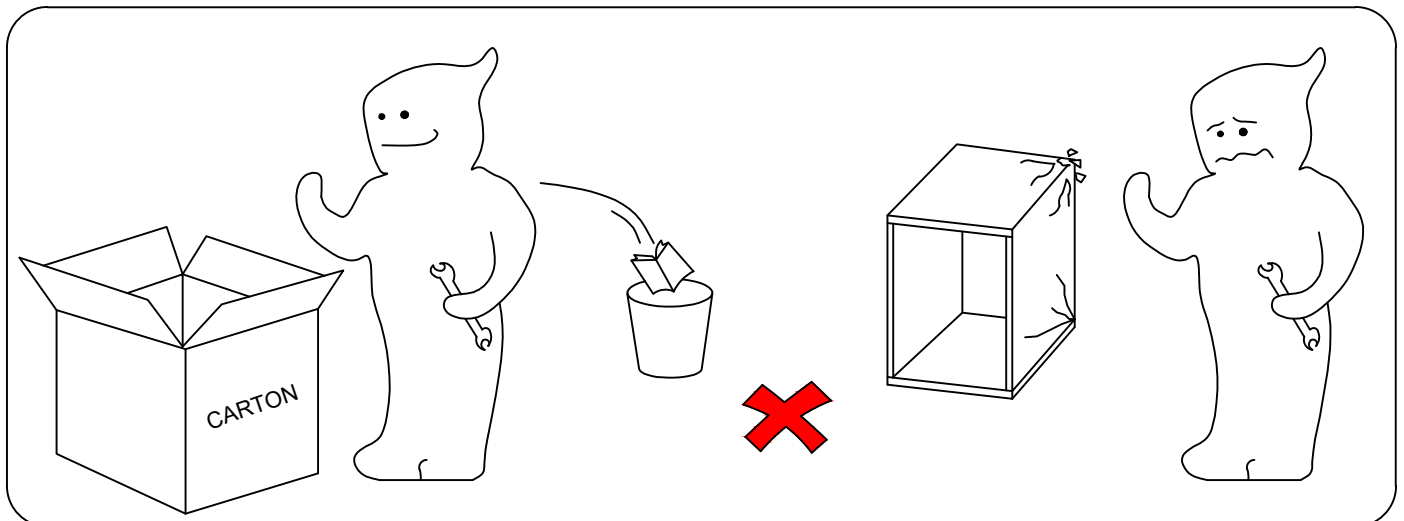


 homeycs@hotmail.com

Using Camlocks


Connect the male camlock as directed in the assembly instructions using a screwdriver.

1 DO NOT OVER TIGHTEN

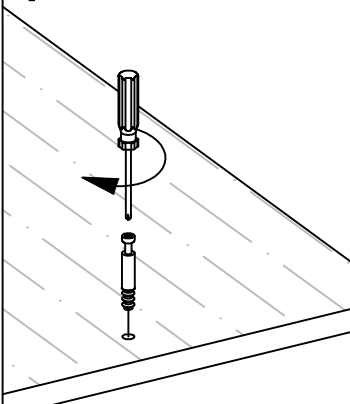

Push the male camlock into the entry hole.


2

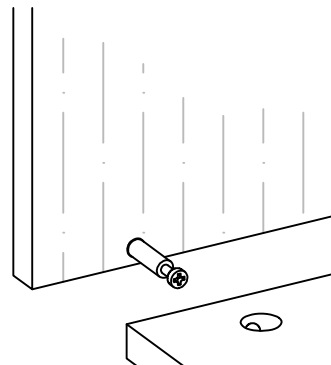

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

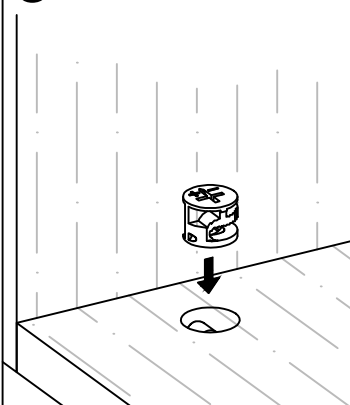



Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.























The joint is now secure.

4























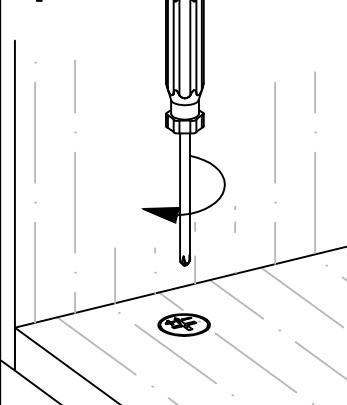


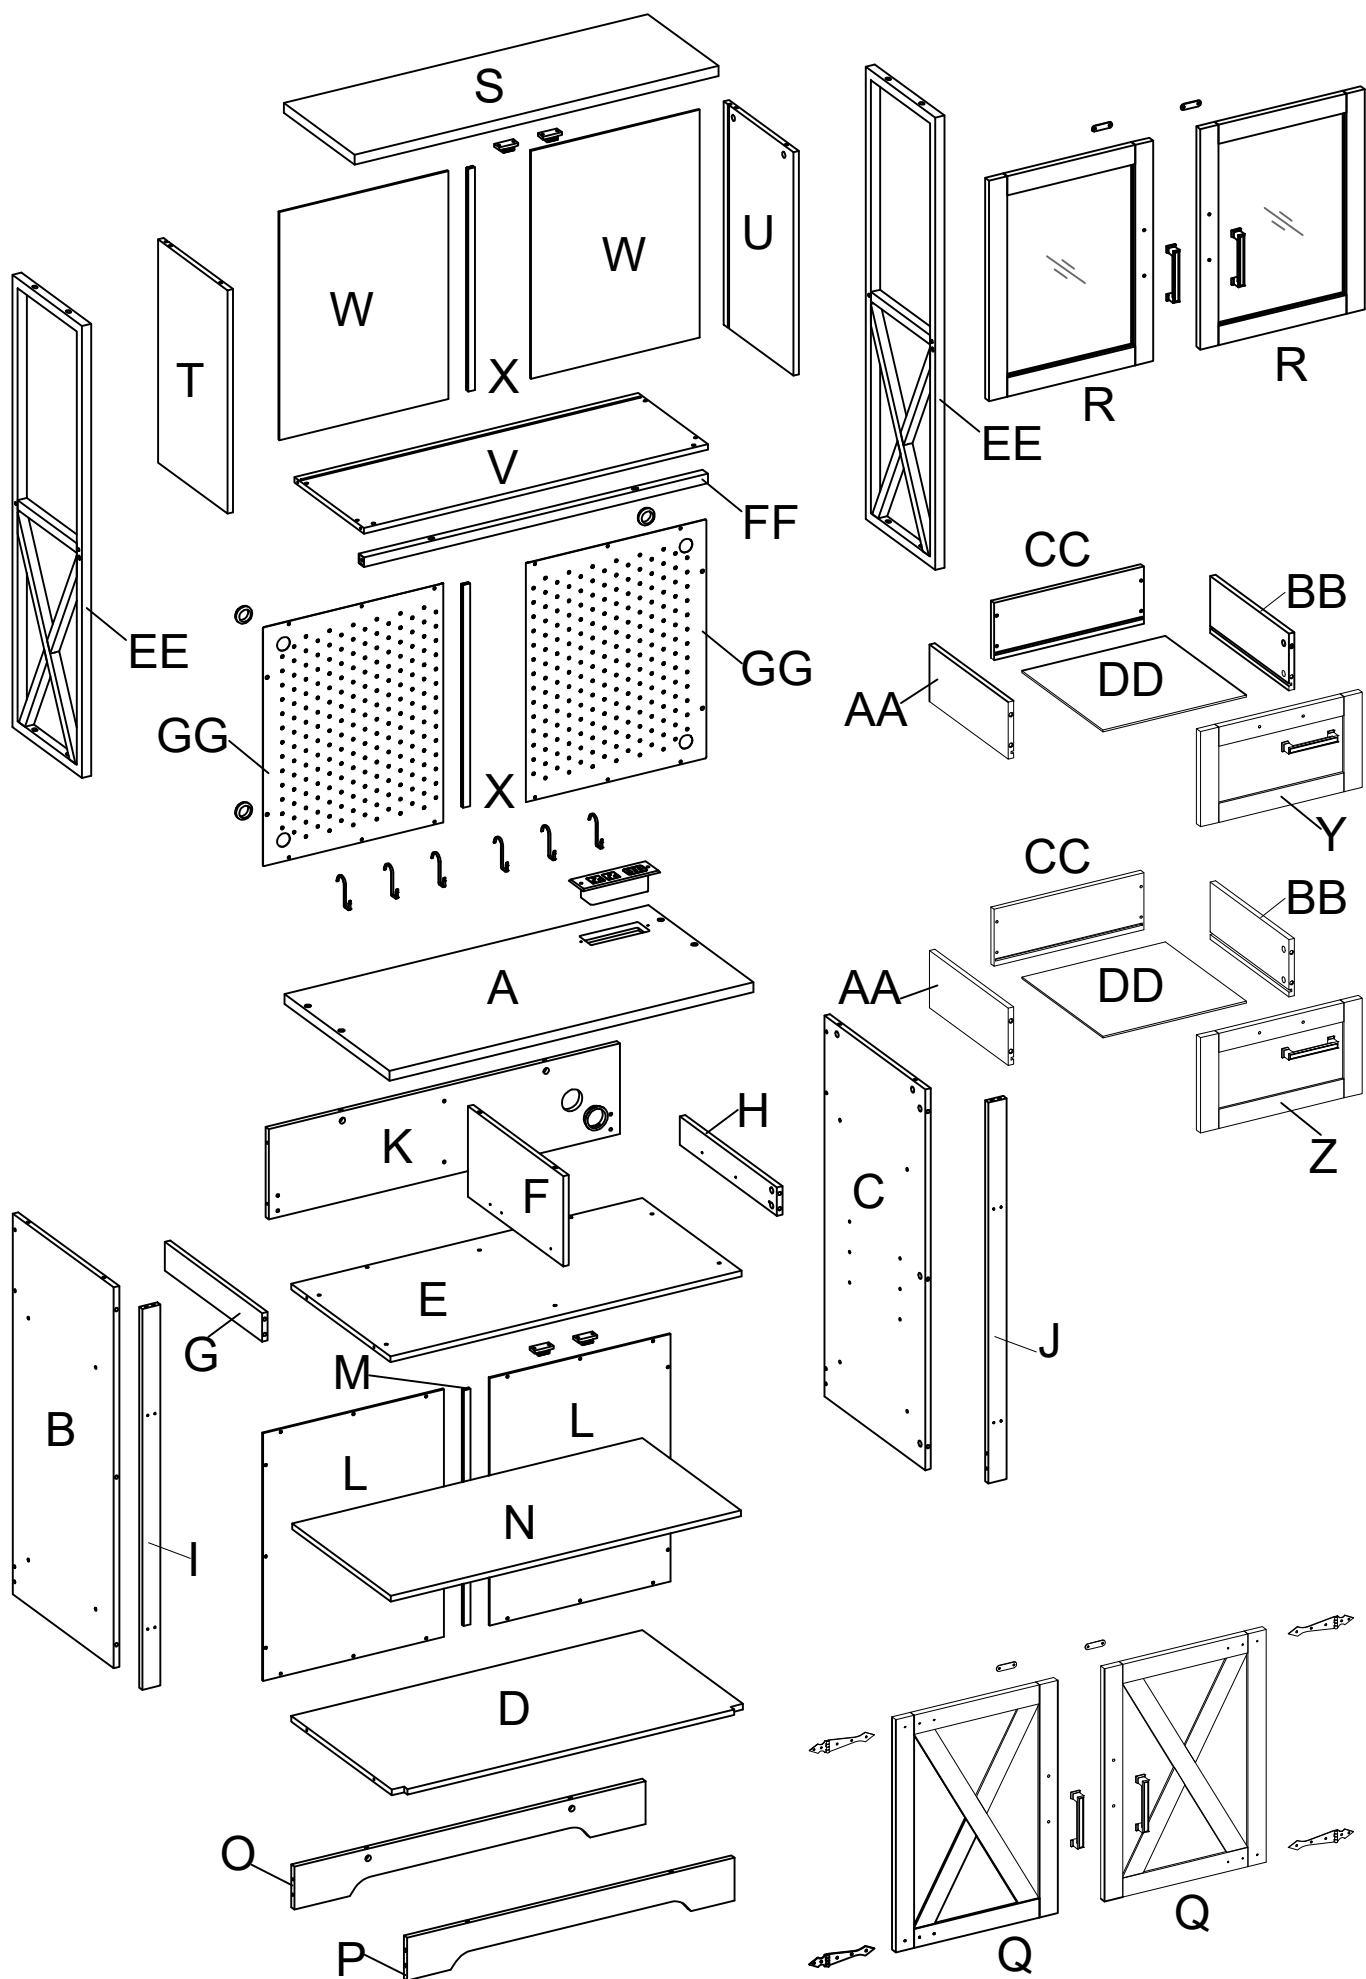

PART LIST

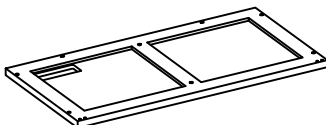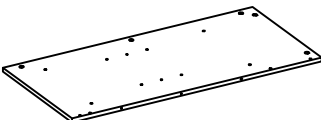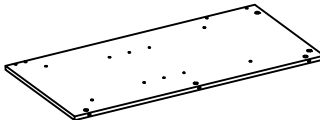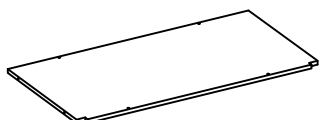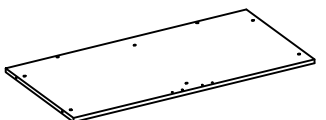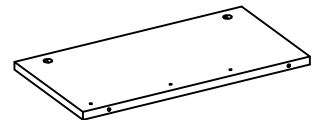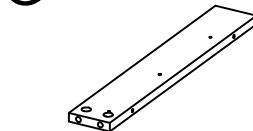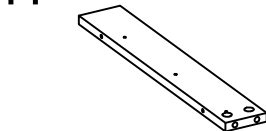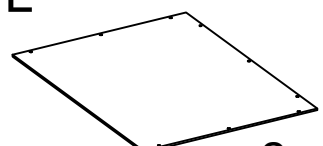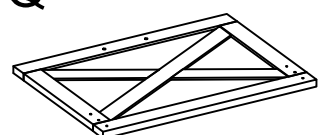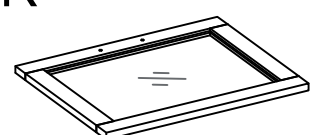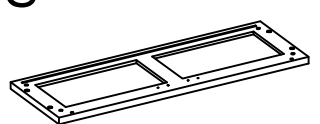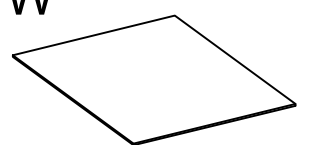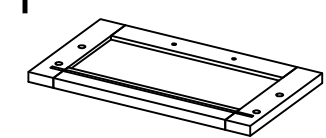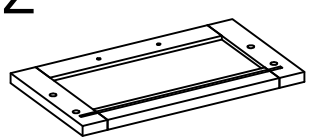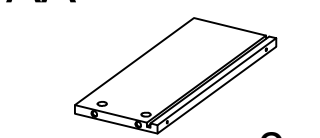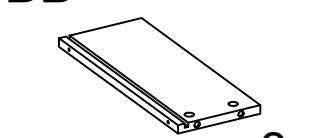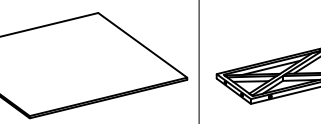
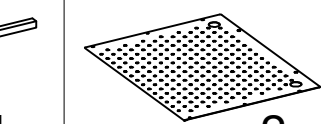
A  1 pc	B  1 pc	C  1 pc	D  1 pc
E  1 pc	F  1 pc	G  1 pc	H  1 pc
I  1 pc	J  1 pc	K  1 pc	L  2 pcs
M  495L 1 pc	N  1 pc	O  1 pc	P  1 pc
Q  2 pcs	R  2 pcs	S  1 pc	T  1 pc
U  1 pc	V  1 pc	W  2 pcs	X  468L 2 pcs
Y  1 pc	Z  1 pc	AA  2 pcs	BB  2 pcs
CC  2 pcs	DD  2 pcs	EE  2 pcs	FF  1 pc
GG  2 pcs			

HARDWARE LIST

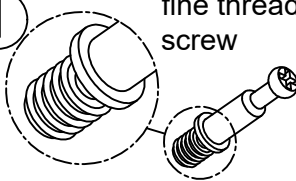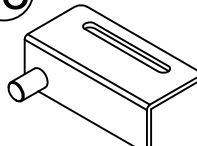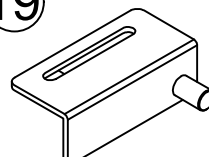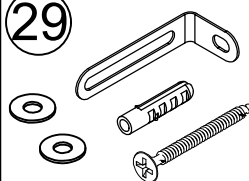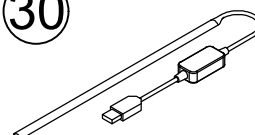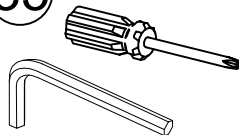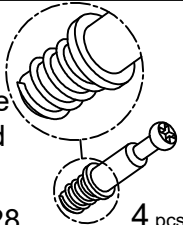①  fine thread screw M6x28 34 pcs	②  Ø12 38 pcs	③  M5x40 38 pcs	④  M4x30 8 pcs	
⑤  M6x30 4 pcs	⑥  M3x12 44 pcs	⑦  M6x19 4 pcs	⑧  M4x18 12 pcs	
⑨  6 pcs	⑩  M6x27 10 pcs	⑪  M6x35 2 pcs	⑫  M6x10 4 pcs	
⑬  300L 2 pcs	⑭  300L 2 pcs	⑮  300L 2 pcs	⑯  300L 2 pcs	⑰  M3.5x12 28 pcs
⑱  2 pcs	⑲  2 pcs	⑳  4 pcs	㉑  4 pcs	㉒  M3x16 4 pcs
㉓  4 pcs	㉔  6 pcs	㉕  4 pcs	㉖  1 pc	㉗  M3x16 30 pcs
㉘  8 pcs	㉙  M4x40 2 pcs	㉚  60cm 1 pc	㉛  3 pcs	㉜  4 pcs
㉝  RF Remote Control 1 pc	㉞  Ø45mm 1 pc	㉟  M4 1 pc	㊱  M3 1 pc	㊲  coarse thread screw M6x28 4 pcs

STEP 1




4  x4

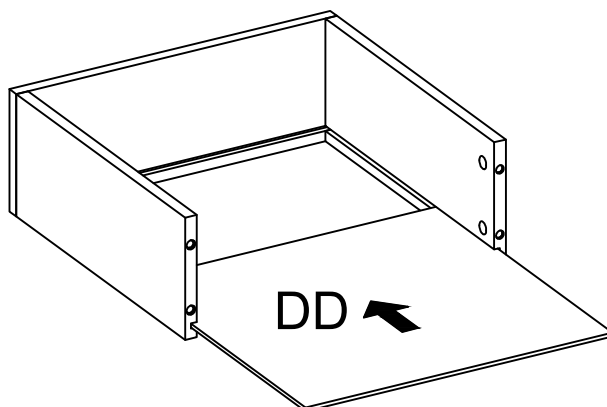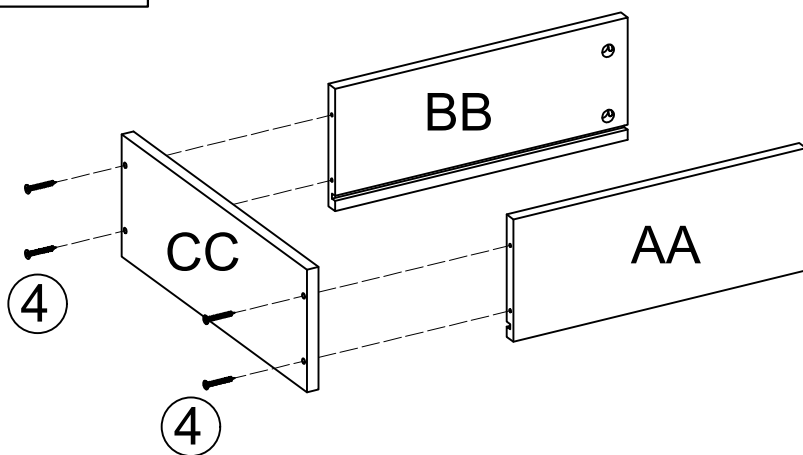




STEP 2

1  x4



2  x4

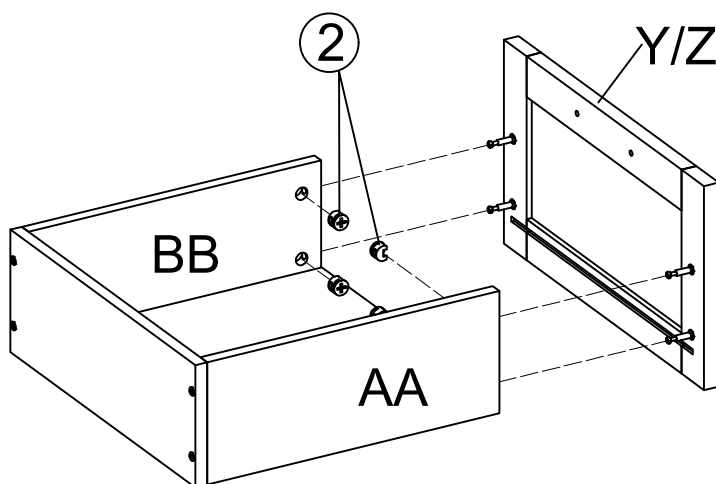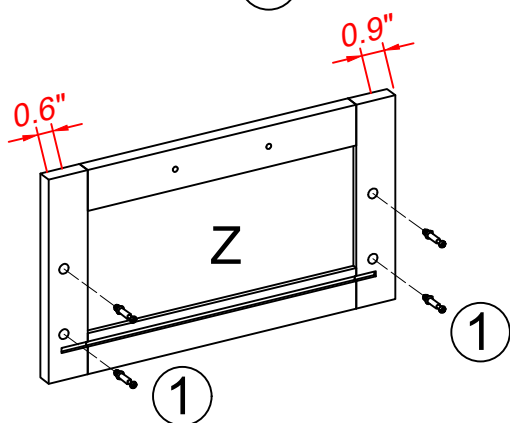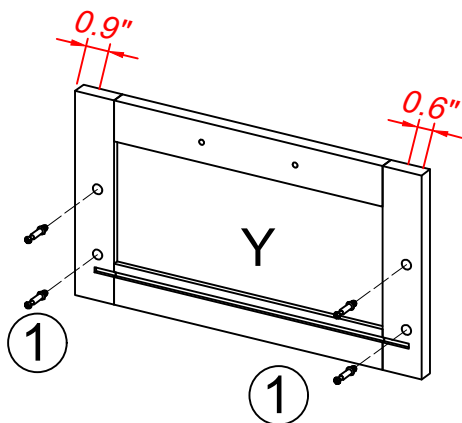

STEP 3

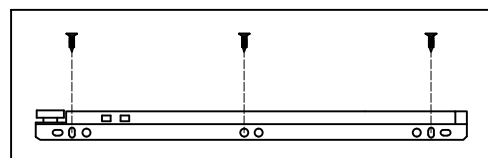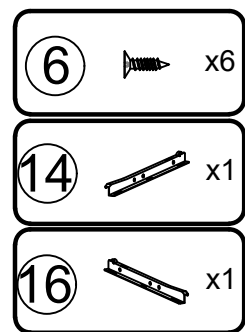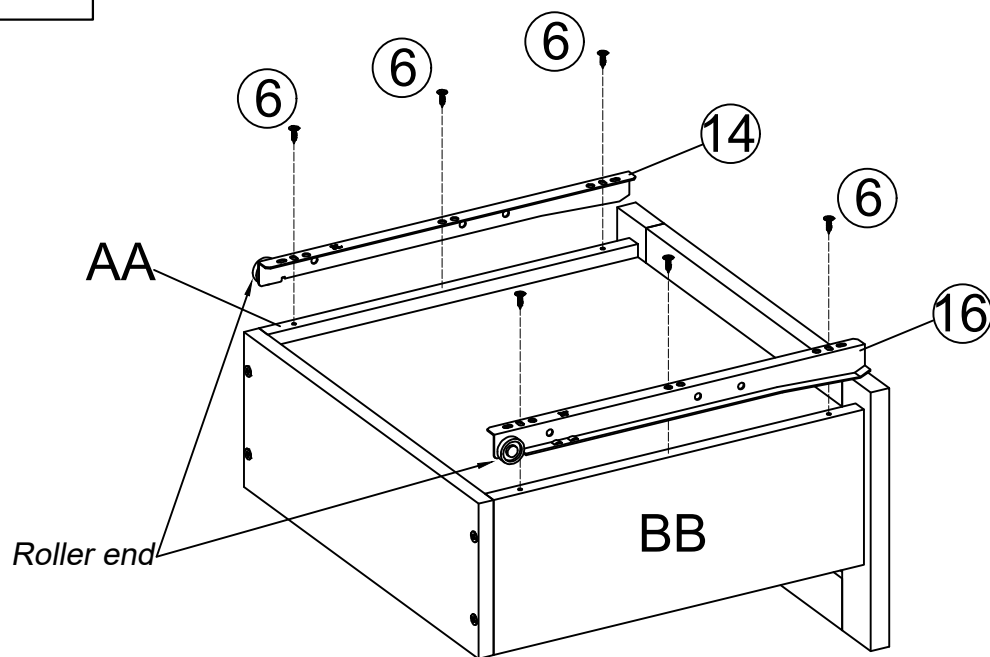



STEP 4

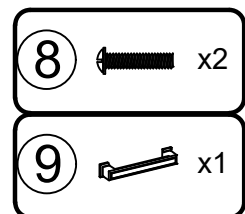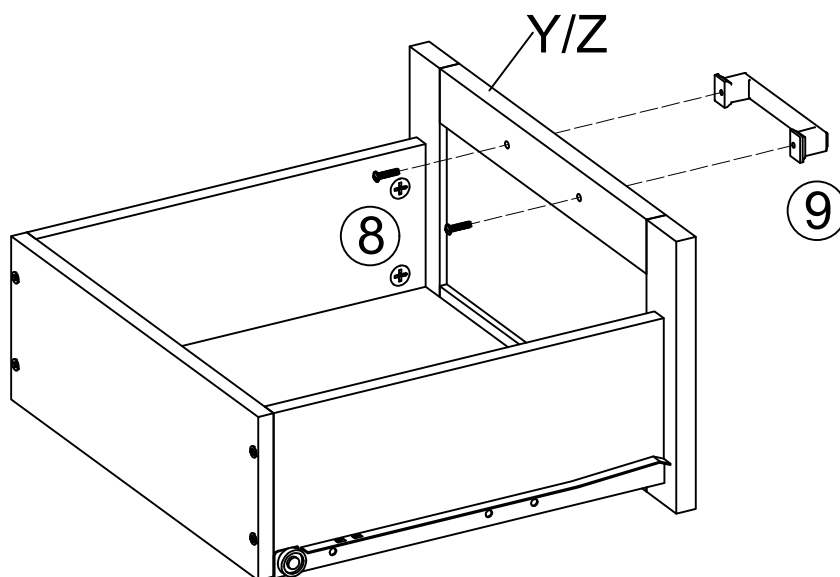



NOTICE:

The installation for all the two drawers is base on the four steps above.


STEP 5

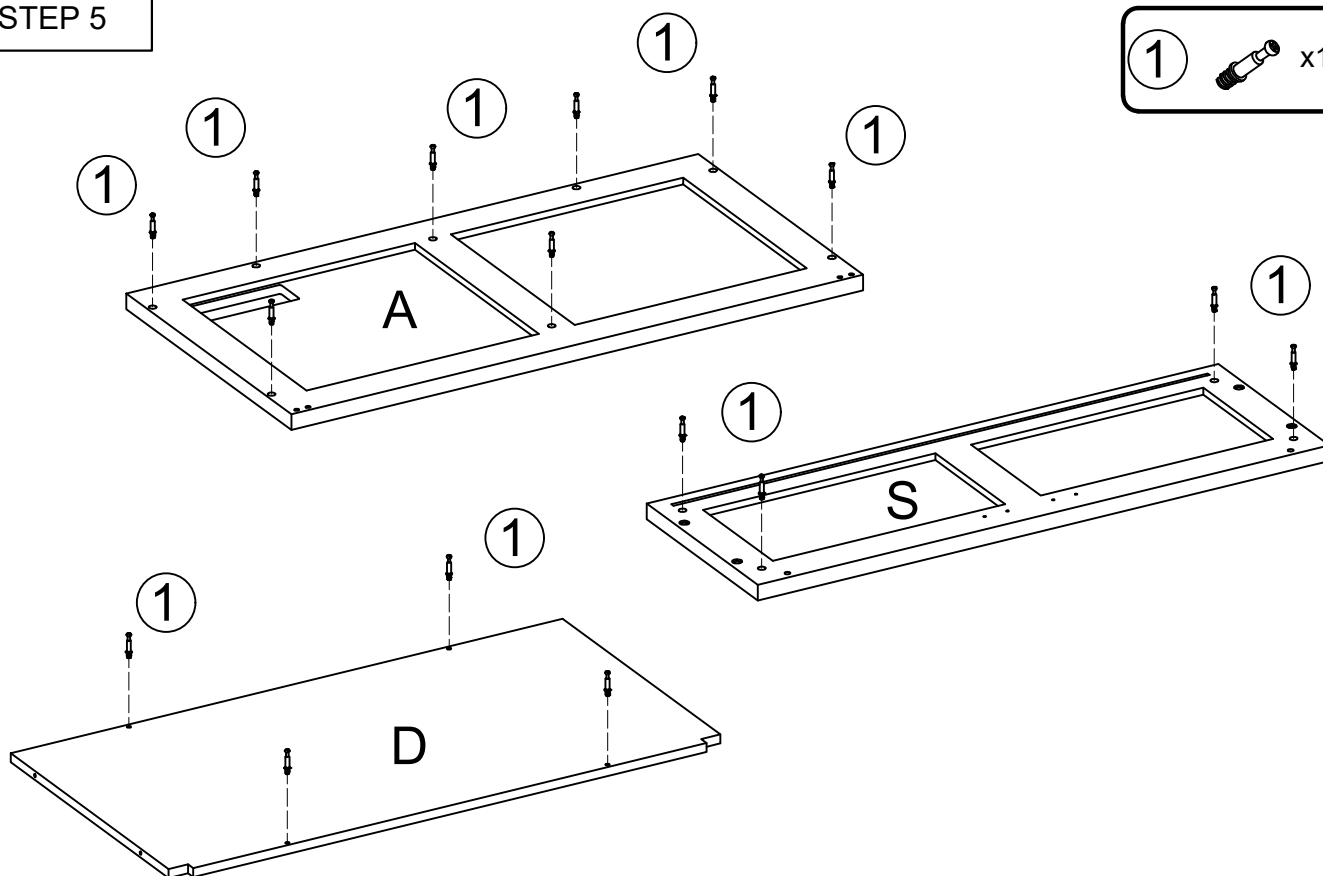

STEP 6




Please ensure that using the correct screws for panel assembly. Using the wrong screw will cause a cracked panel.

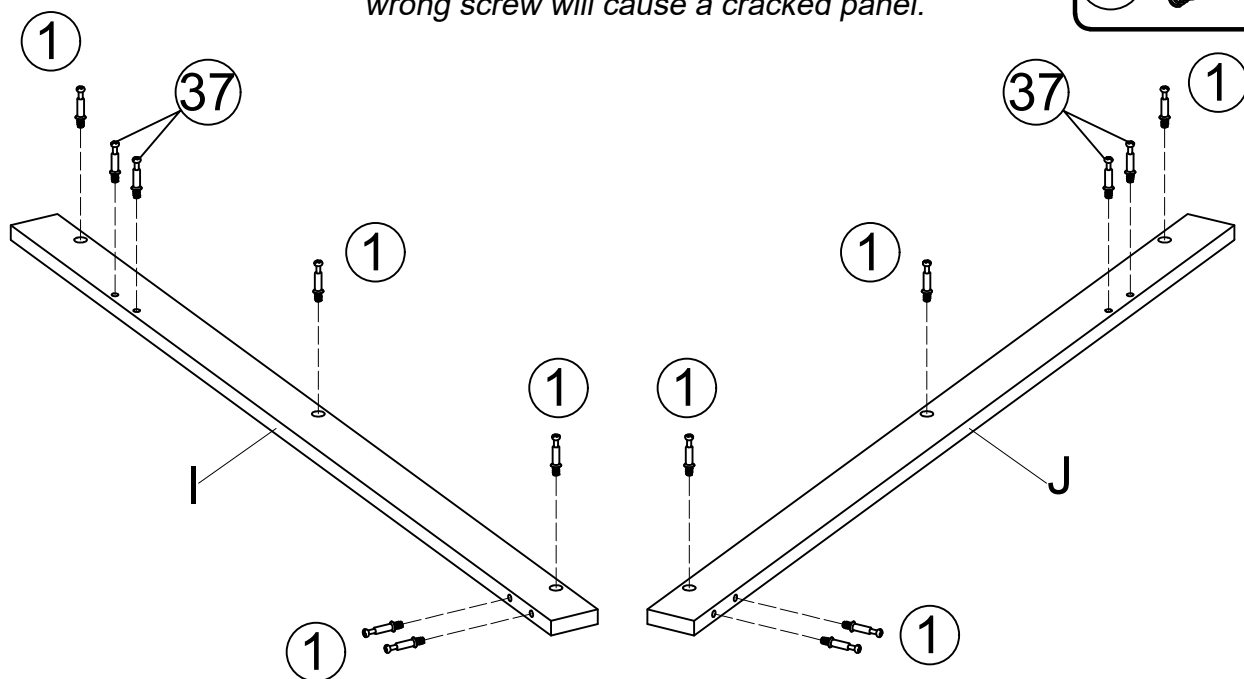


STEP 7

22  x4

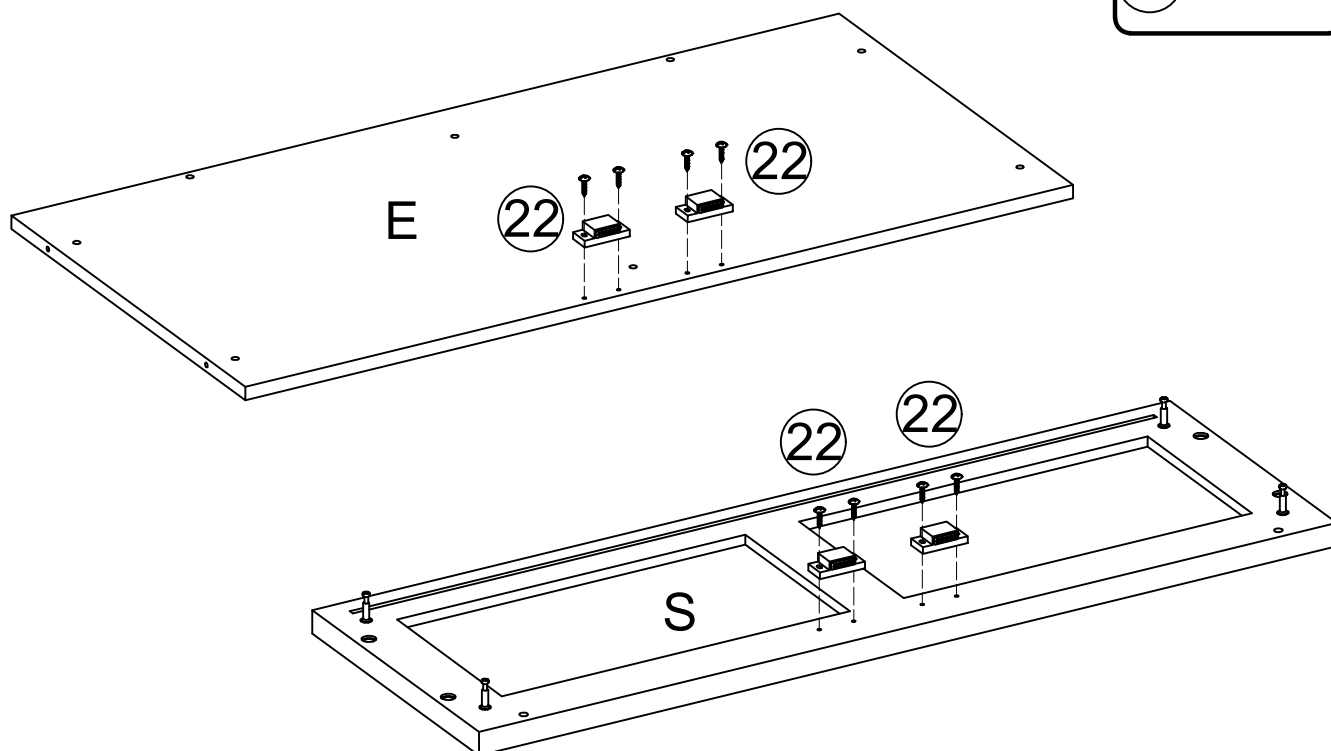

STEP 8


10  x2

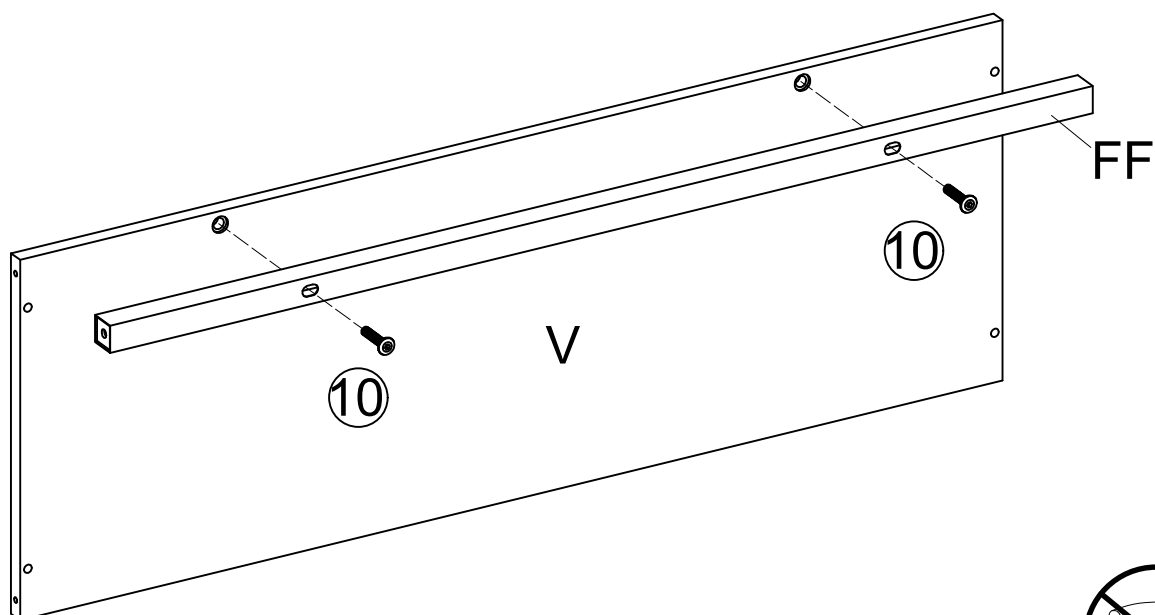

STEP 9

③  x4


Keep the holes of the
Part T and Part U toward
this direction as shown

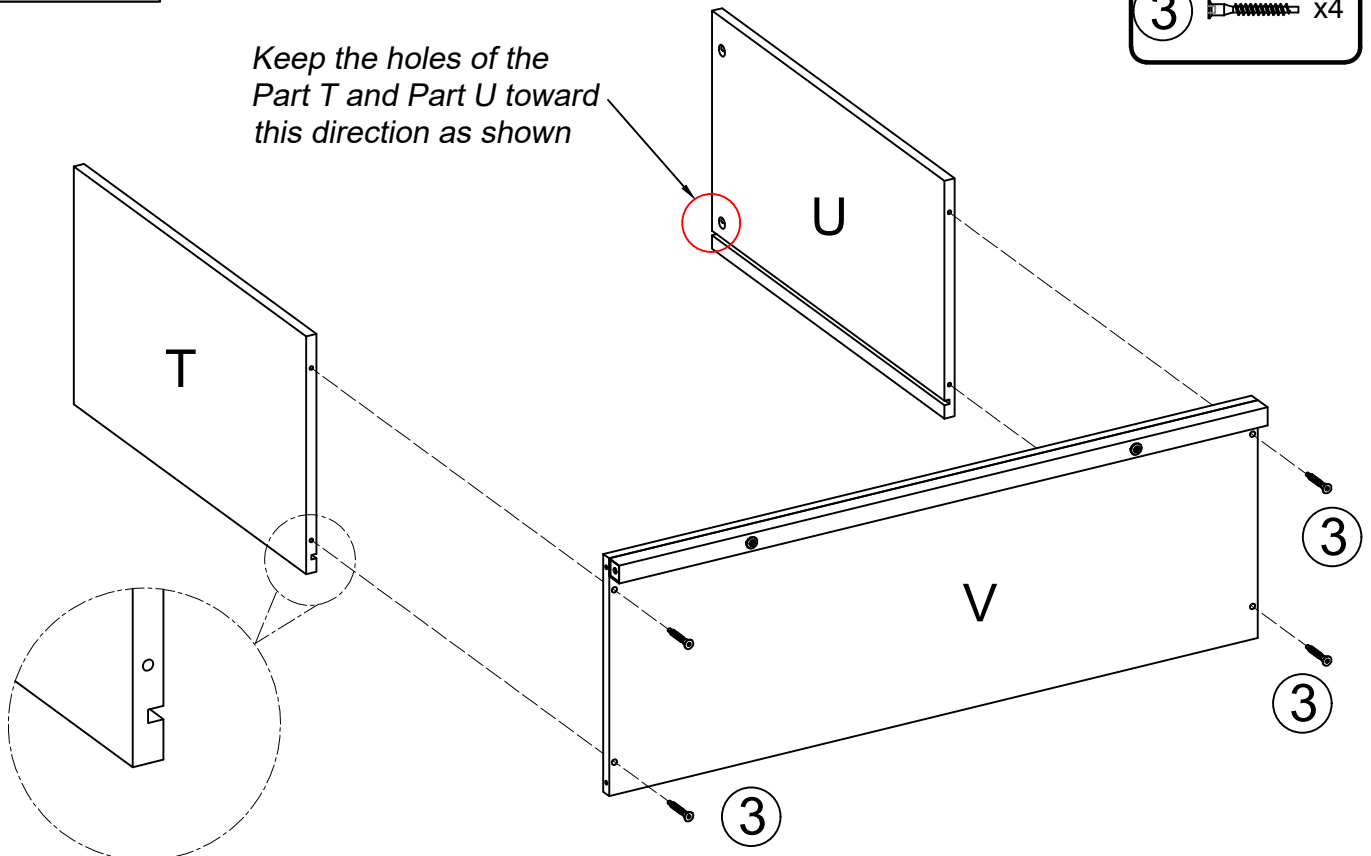


STEP 10

③  x4


⑪  x2

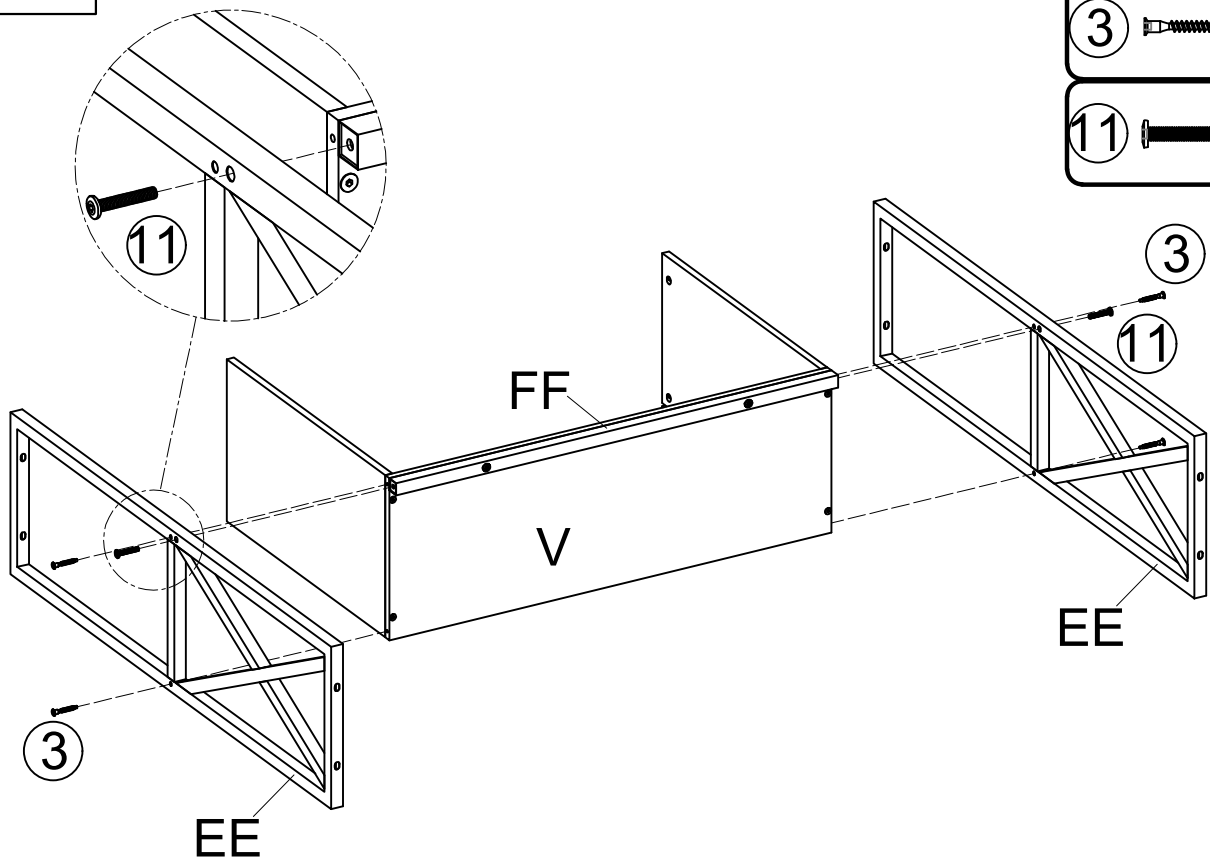

STEP 11

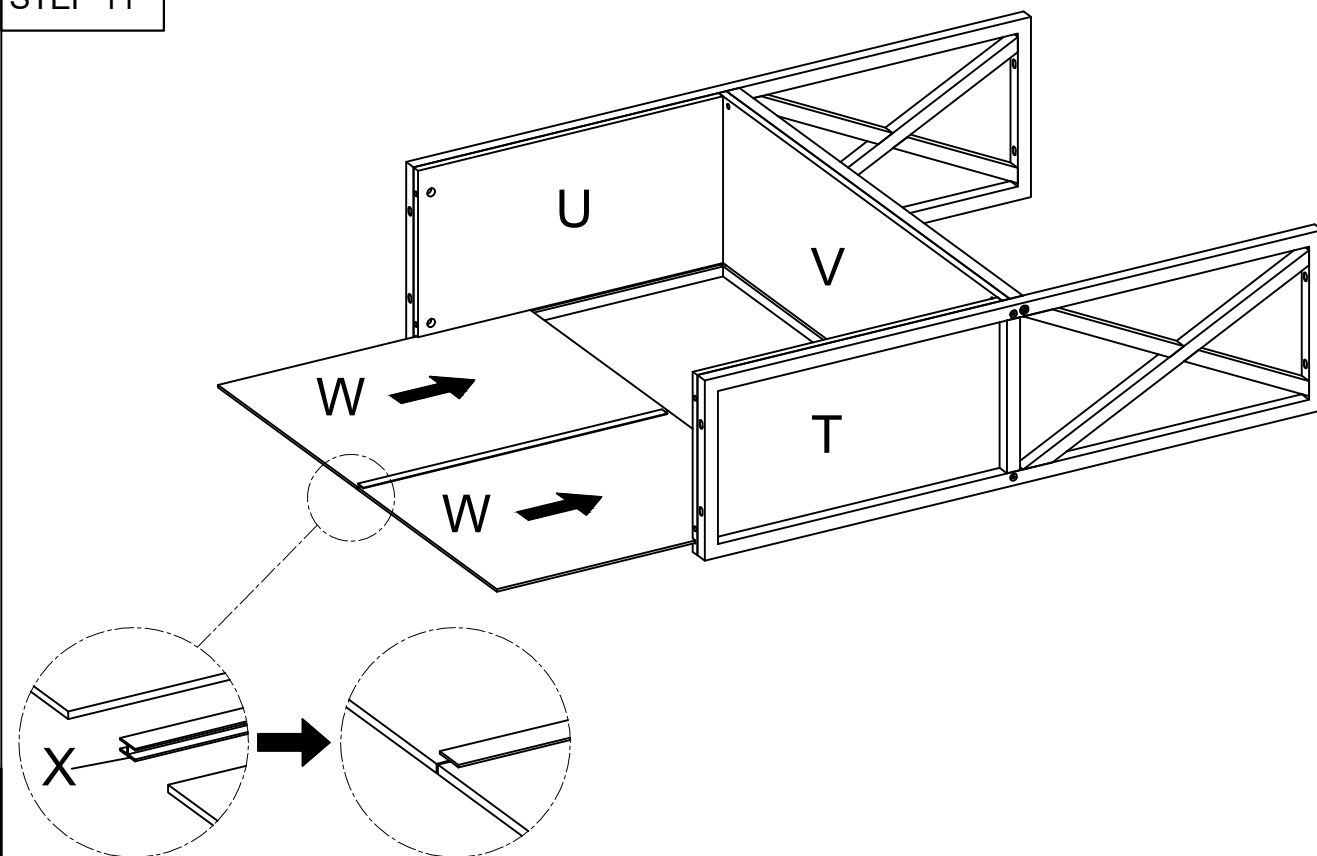

STEP 12

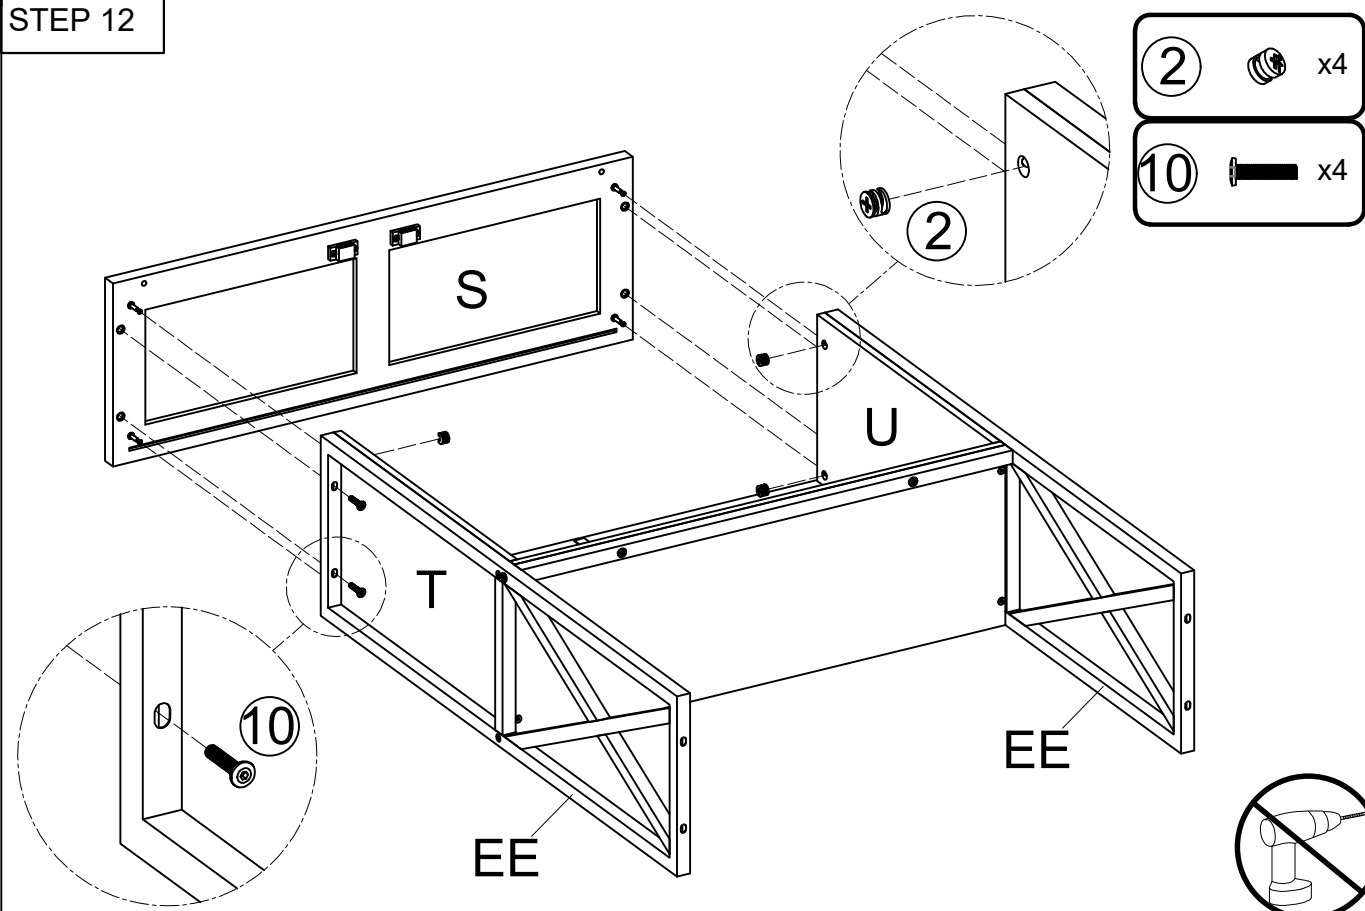





STEP 13

Tear off the tape of the LED strip, stick the LED strip roughly in the center of the bottom of shelf panel (V).

Fix the LED strip with plastic clips.


Note: Do not cover the lamp beads.

- 6  x10
- 30  x1
- 31  x3
- 32  x4

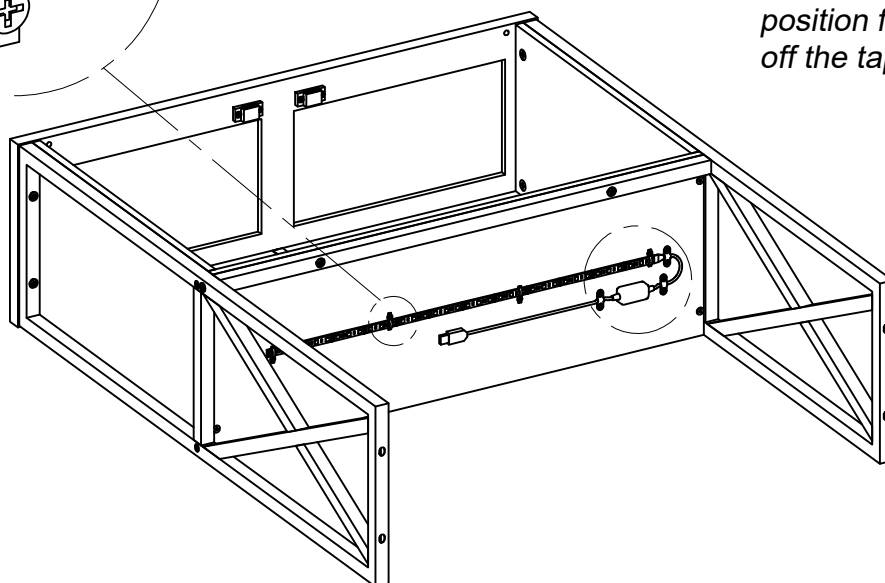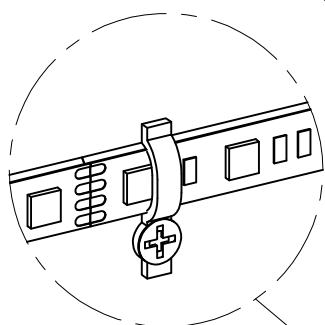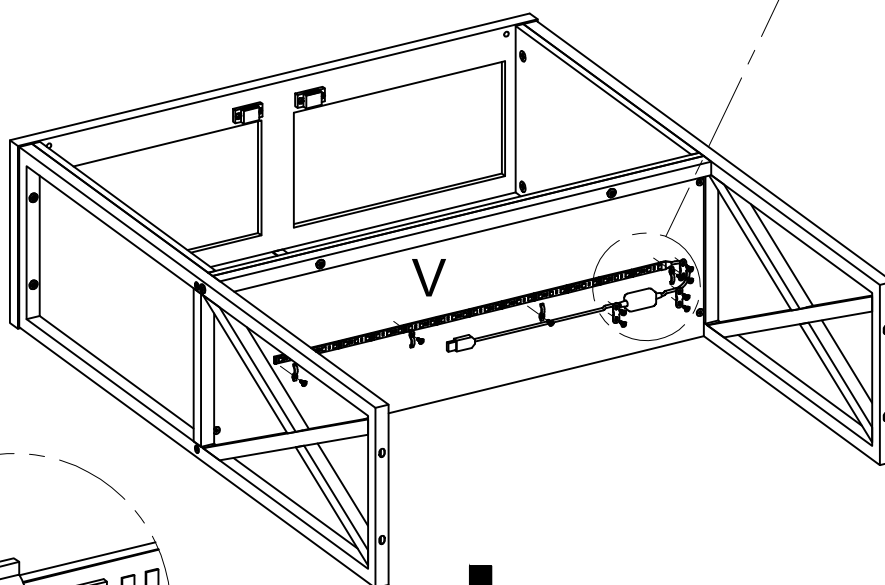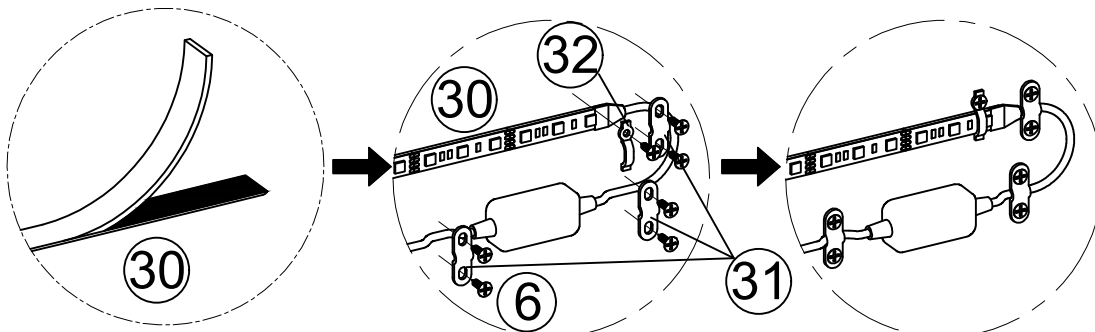


NOTE: please make sure the LED strip is in proper position first before tear off the tape.

STEP 14

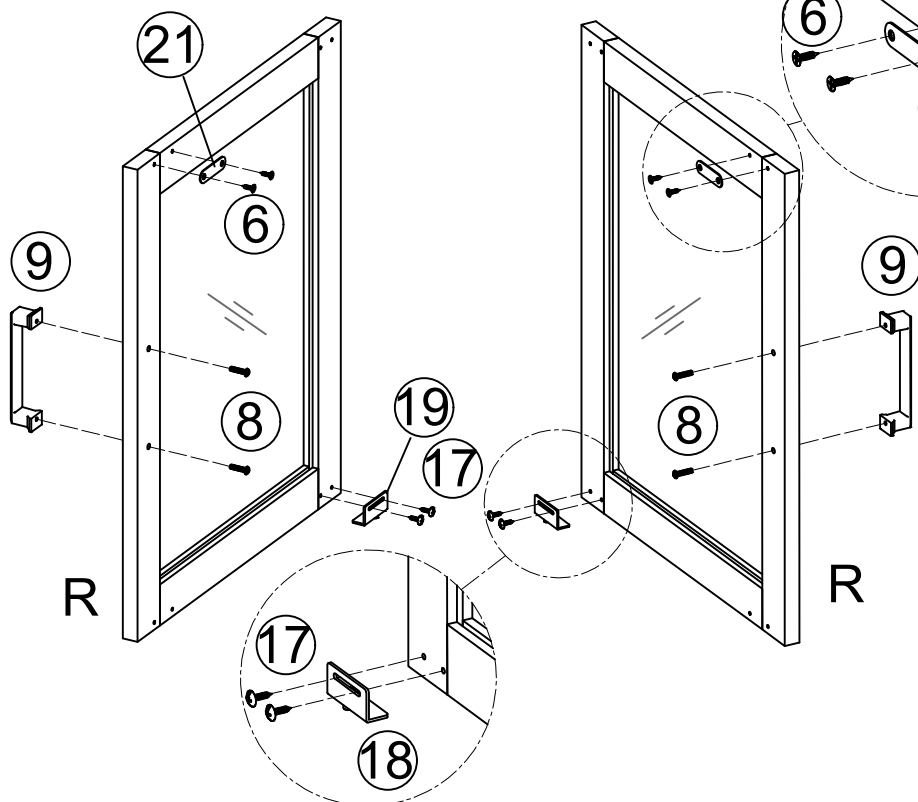


- 6  x4
 - 8  x4
 - 9  x2
 - 17  x4
 - 18  x1
 - 19  x1
 - 21  x2
- 

STEP 15

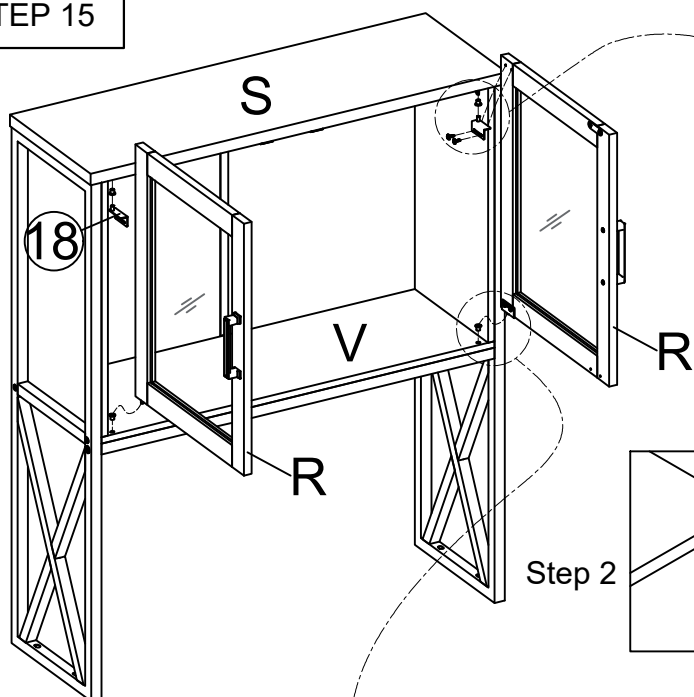


- 17  x4
- 18  x1
- 19  x1
- 20  x4



Step 2

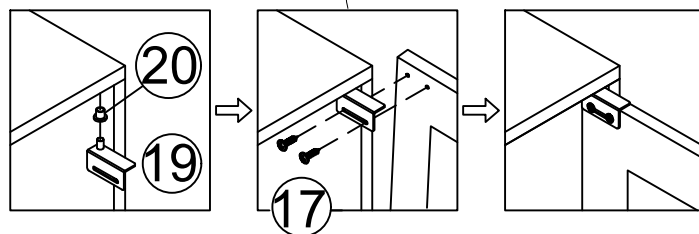


Step 1

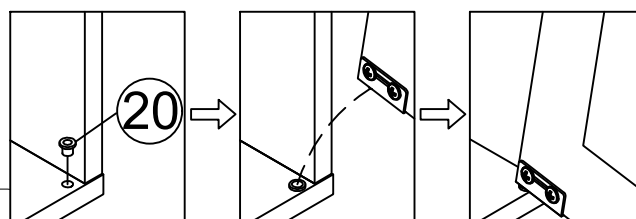

STEP 16


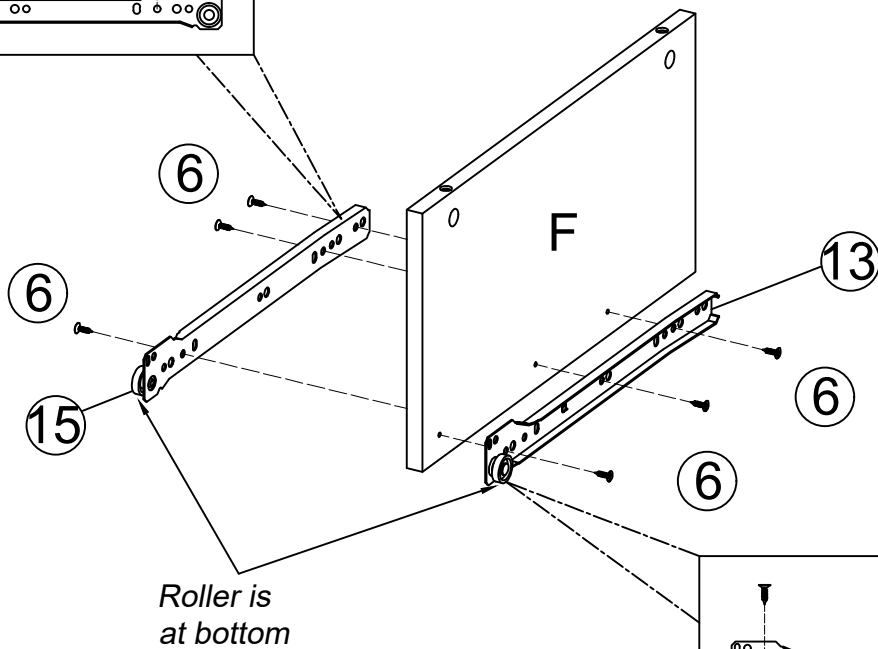
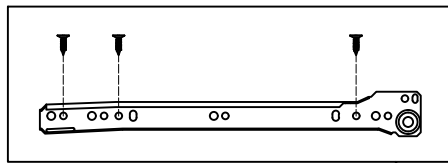


- ⑥  x6
- ⑬  x1
- ⑮  x1

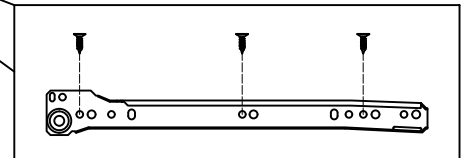

STEP 17

Keep the holes of the
Part F, Part G and Part H
toward this direction as shown

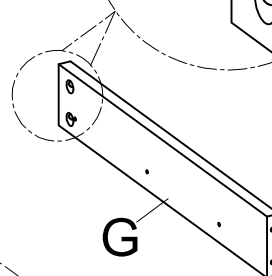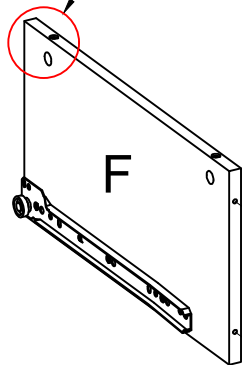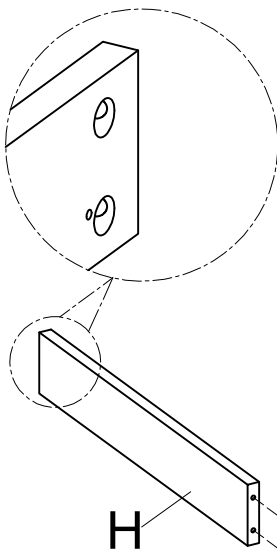


- ③  x6
- ③④  x1

H


F

G

K

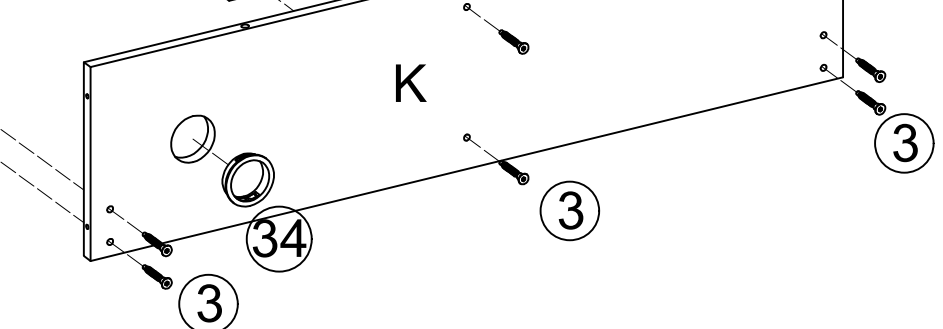


STEP 18

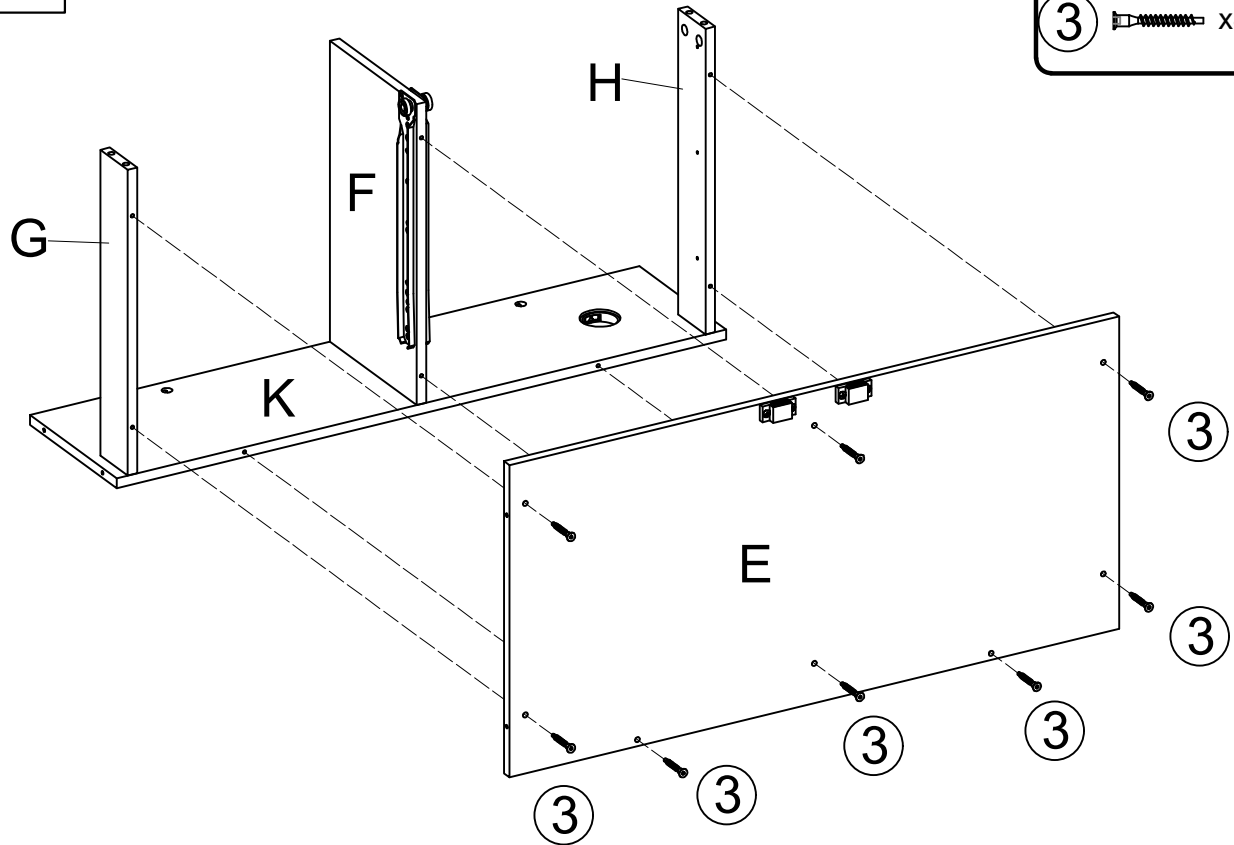


STEP 19

Keep the holes of the Part B and Part C toward this direction as shown

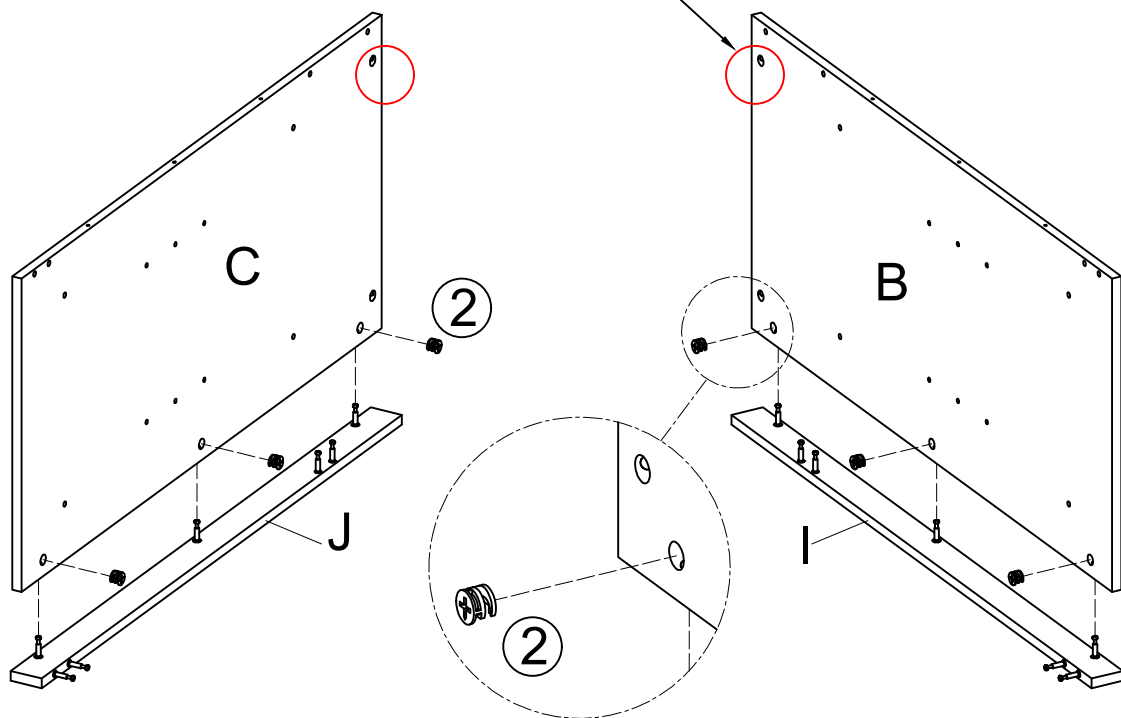

STEP 20


②  x4

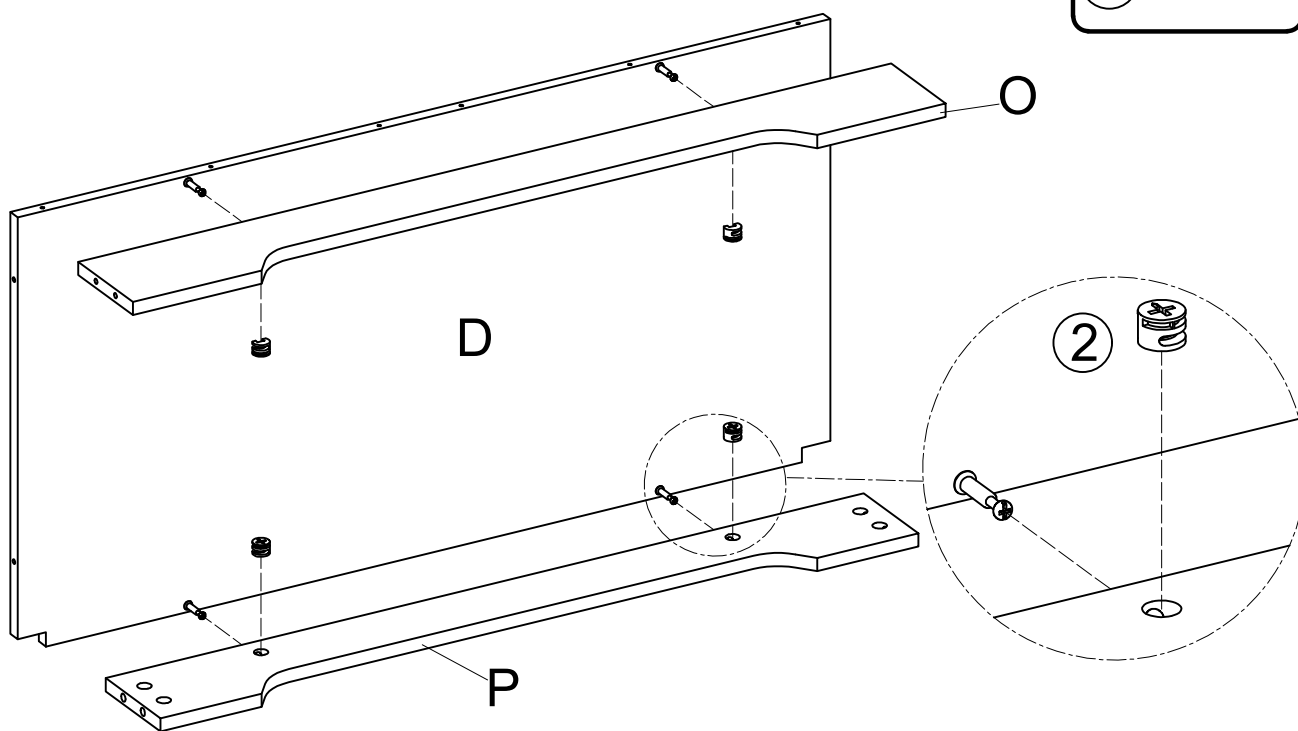


STEP 21

②  x4


③  x8

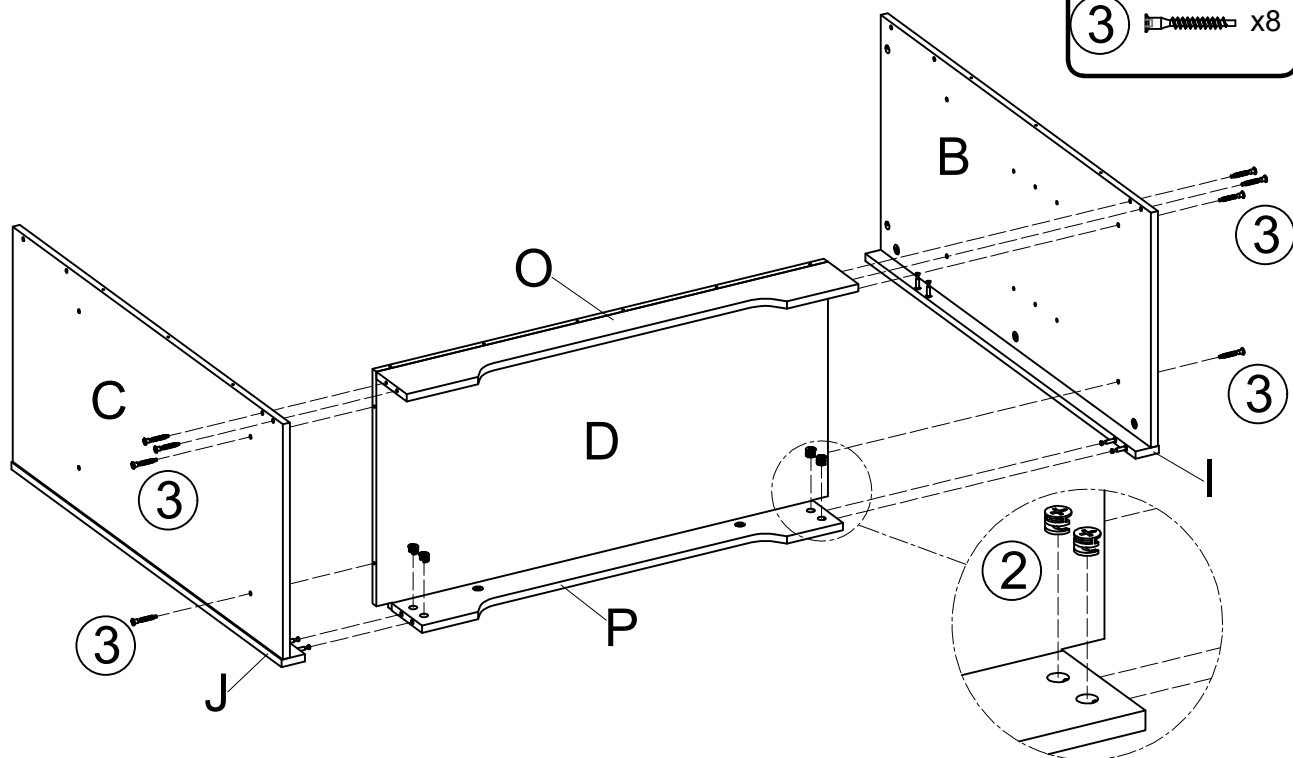


STEP 22

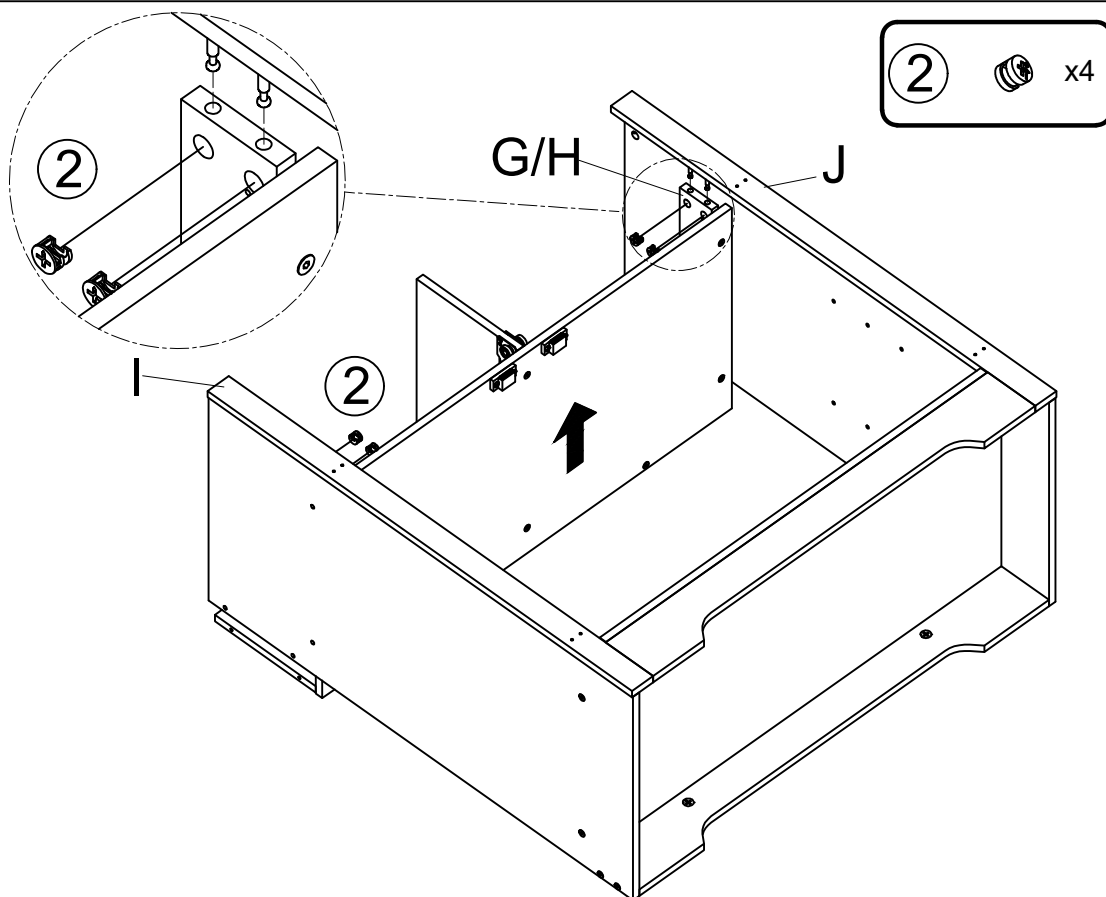

STEP 23

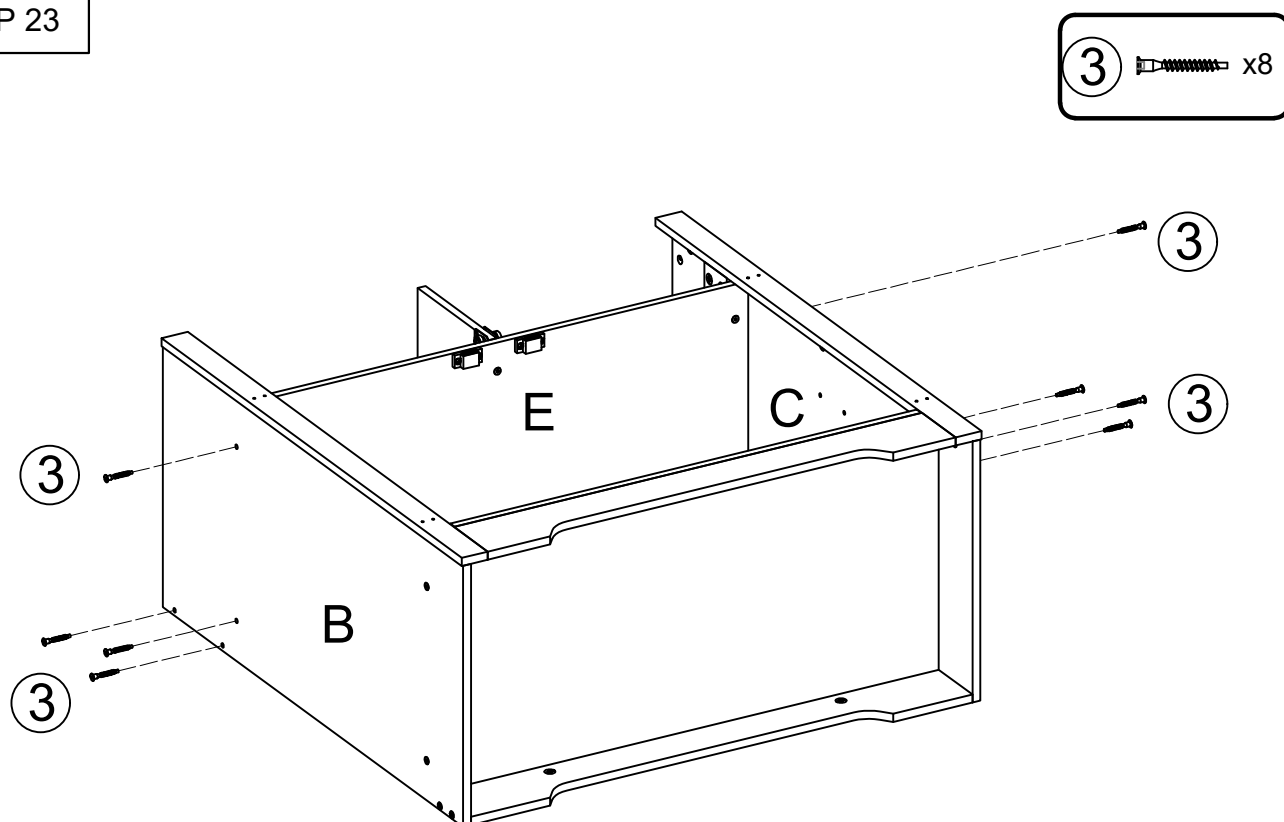


STEP 24

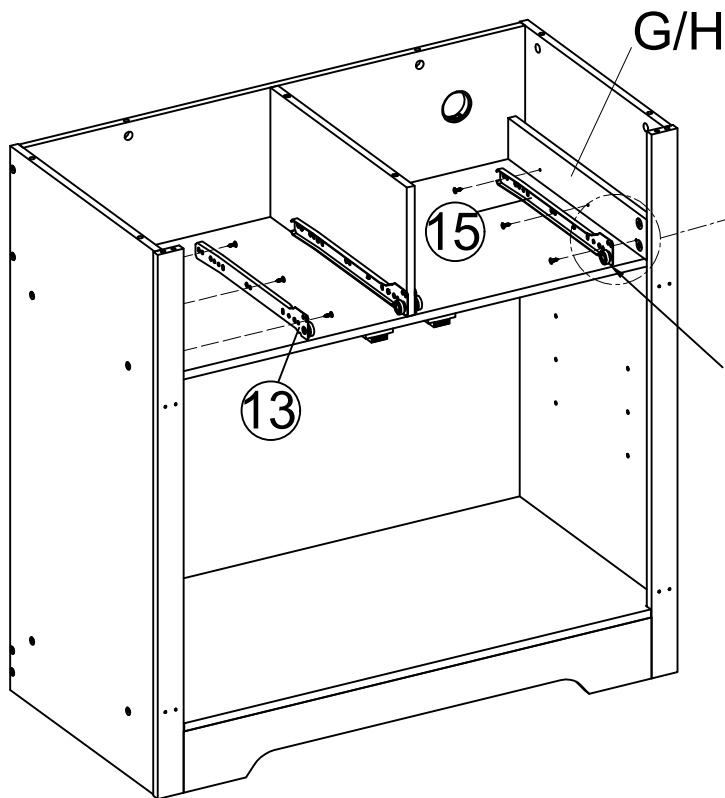


- ⑥  x6
- ⑬  x1
- ⑮  x1

Please ensure the cam locks have been fully tightened before install the slide.


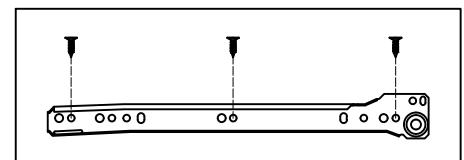


STEP 25

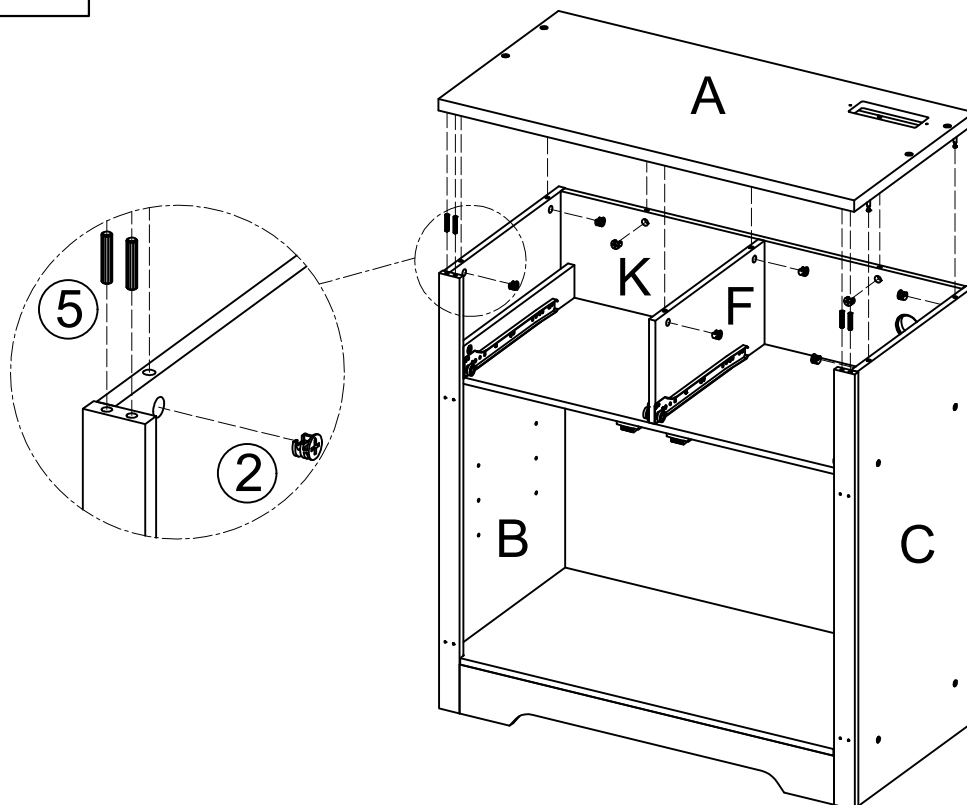



- ②  x8
- ⑤  x4

STEP 26

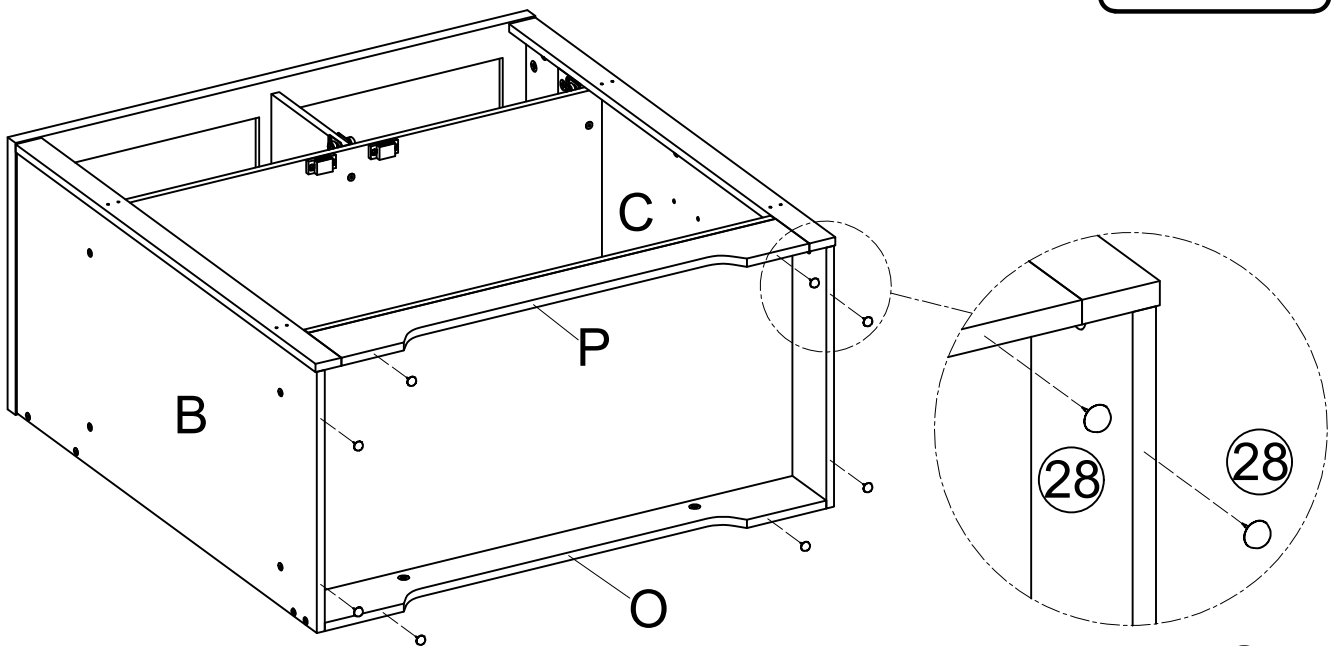


Gently tap the Floor Protectors (28) at the bottom of side panels avoiding crack or damage of side panel.


STEP 27

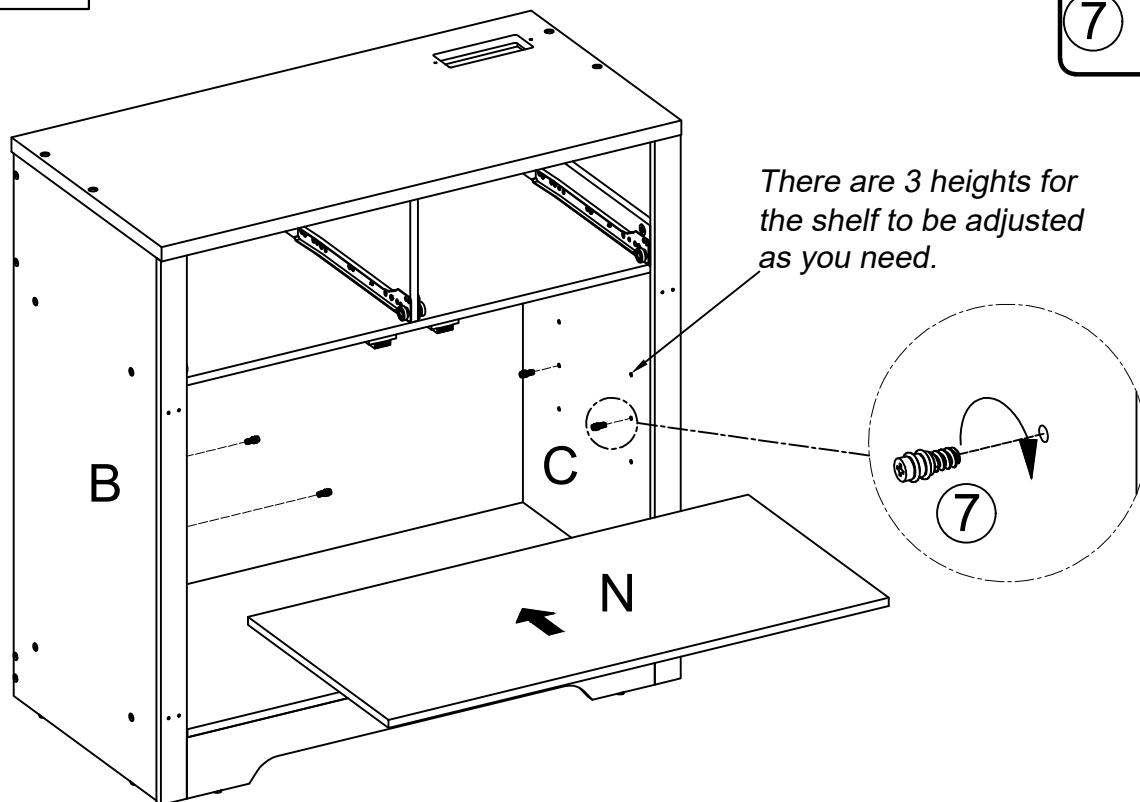

STEP 28

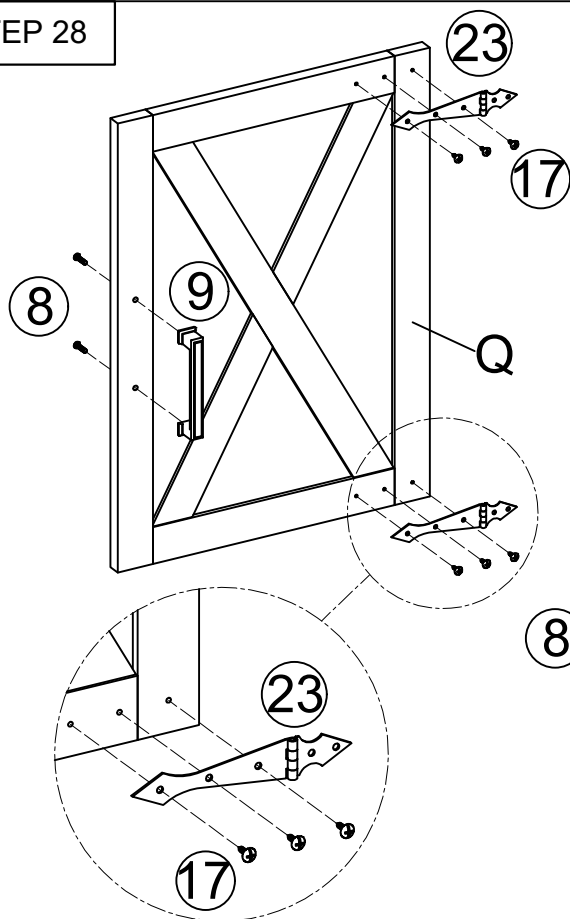


- 8  x4
- 9  x2
- 17  x12
- 23  x4

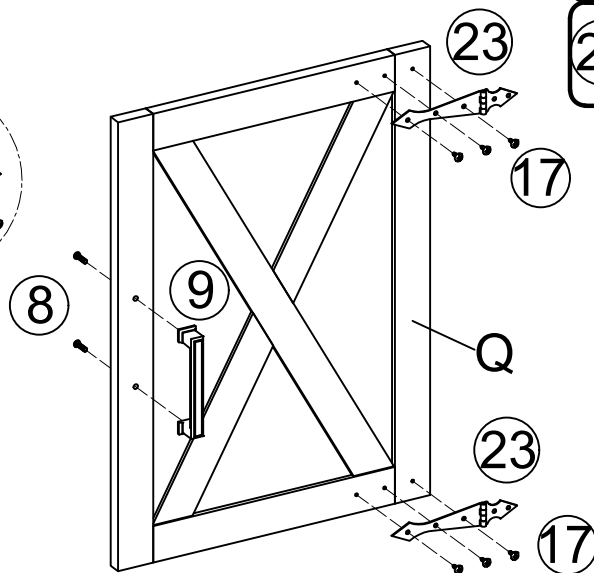


STEP 29


- 17  x8

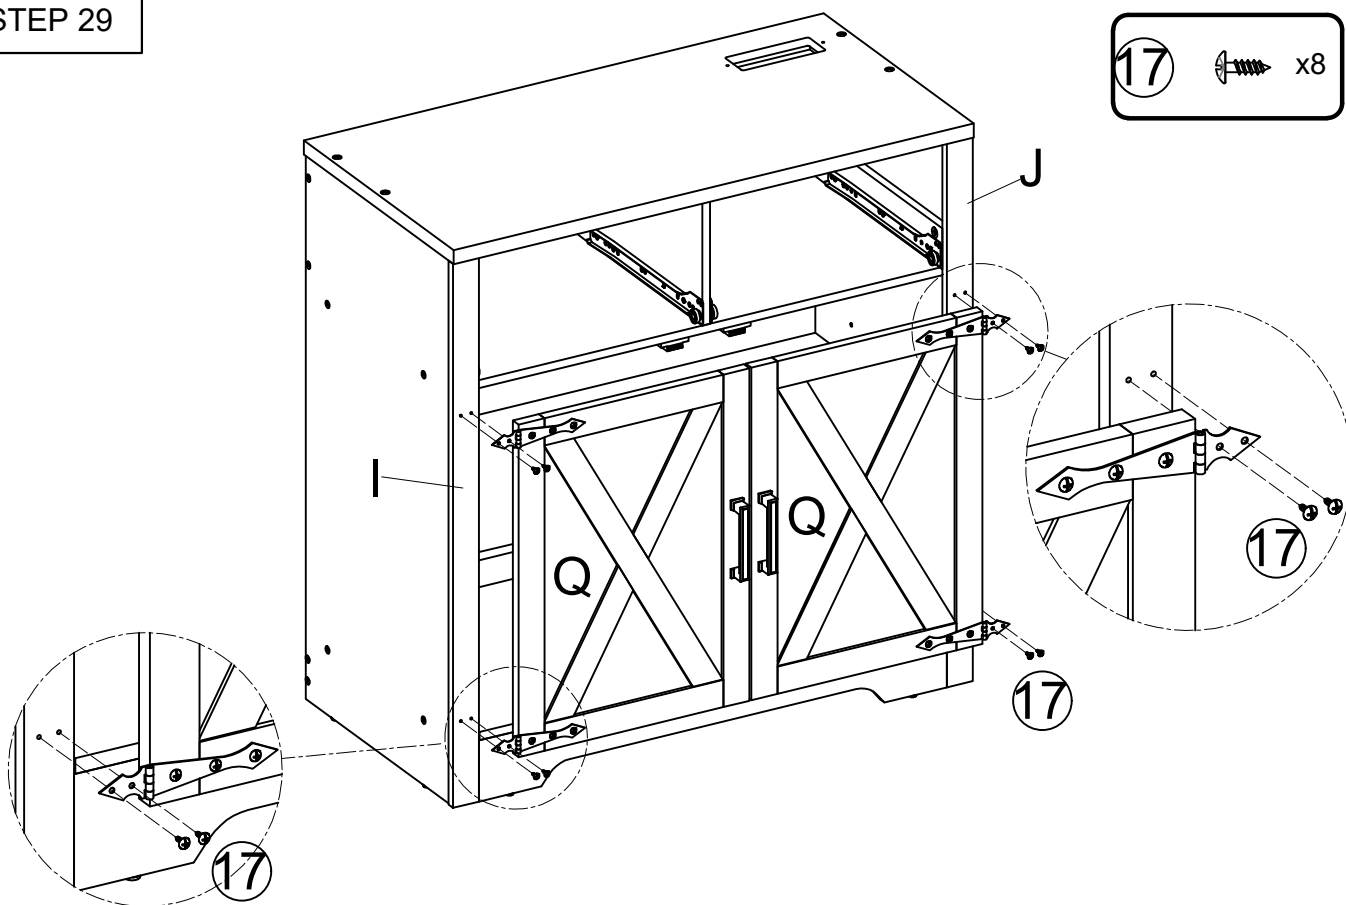

STEP 30

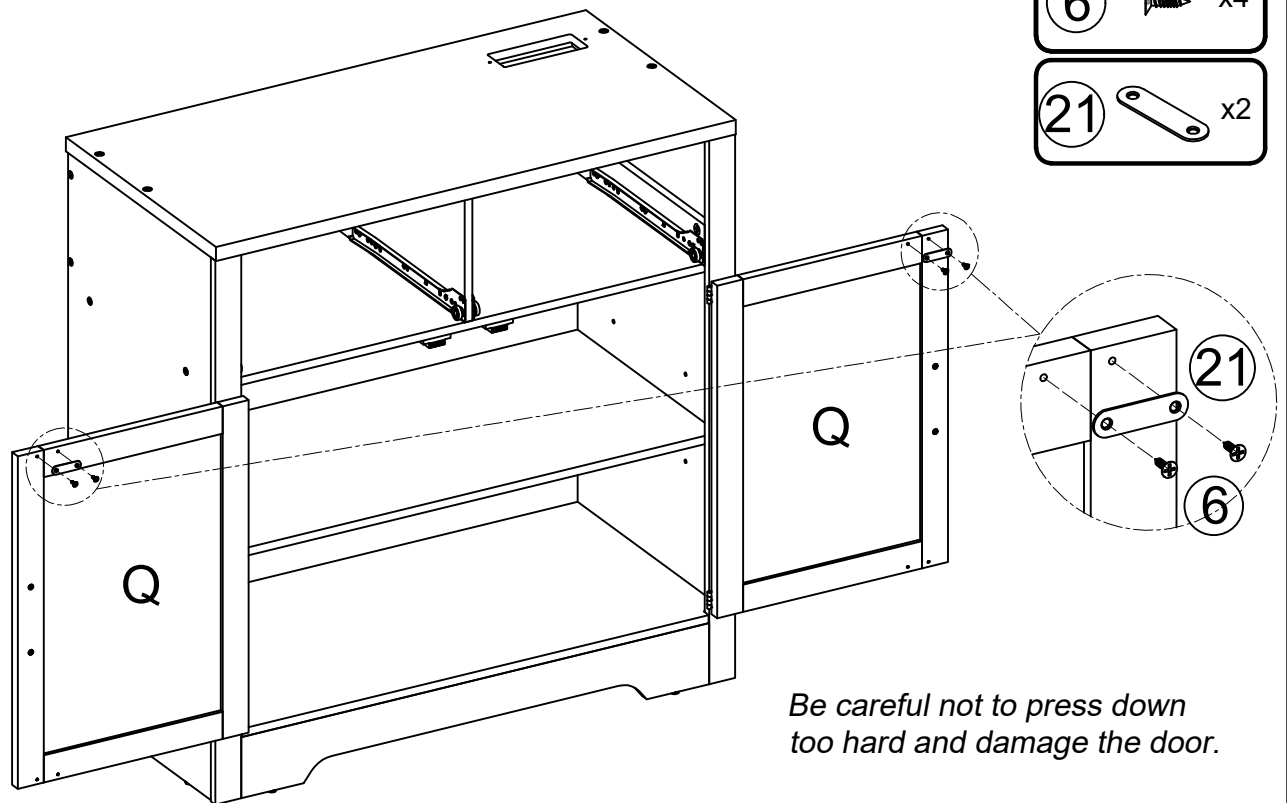


STEP 31

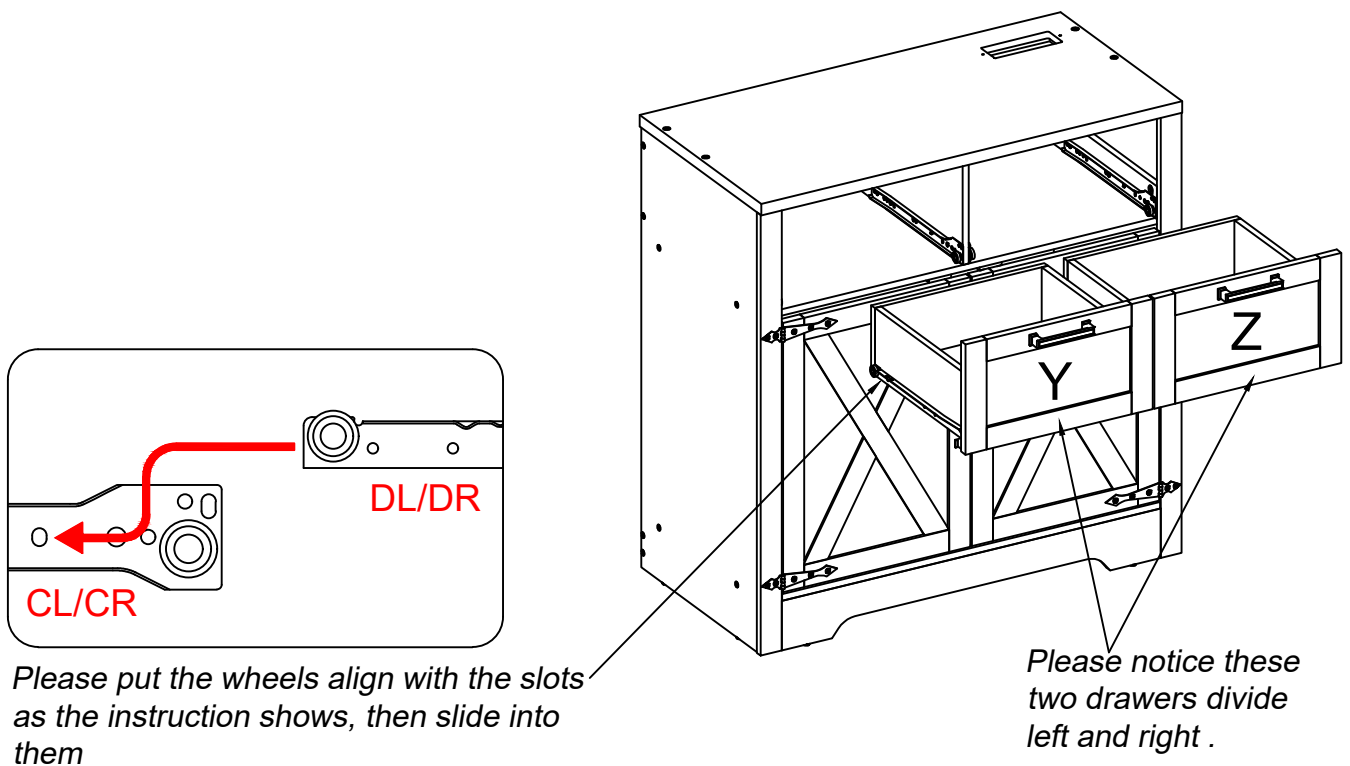


STEP 32

27  x18

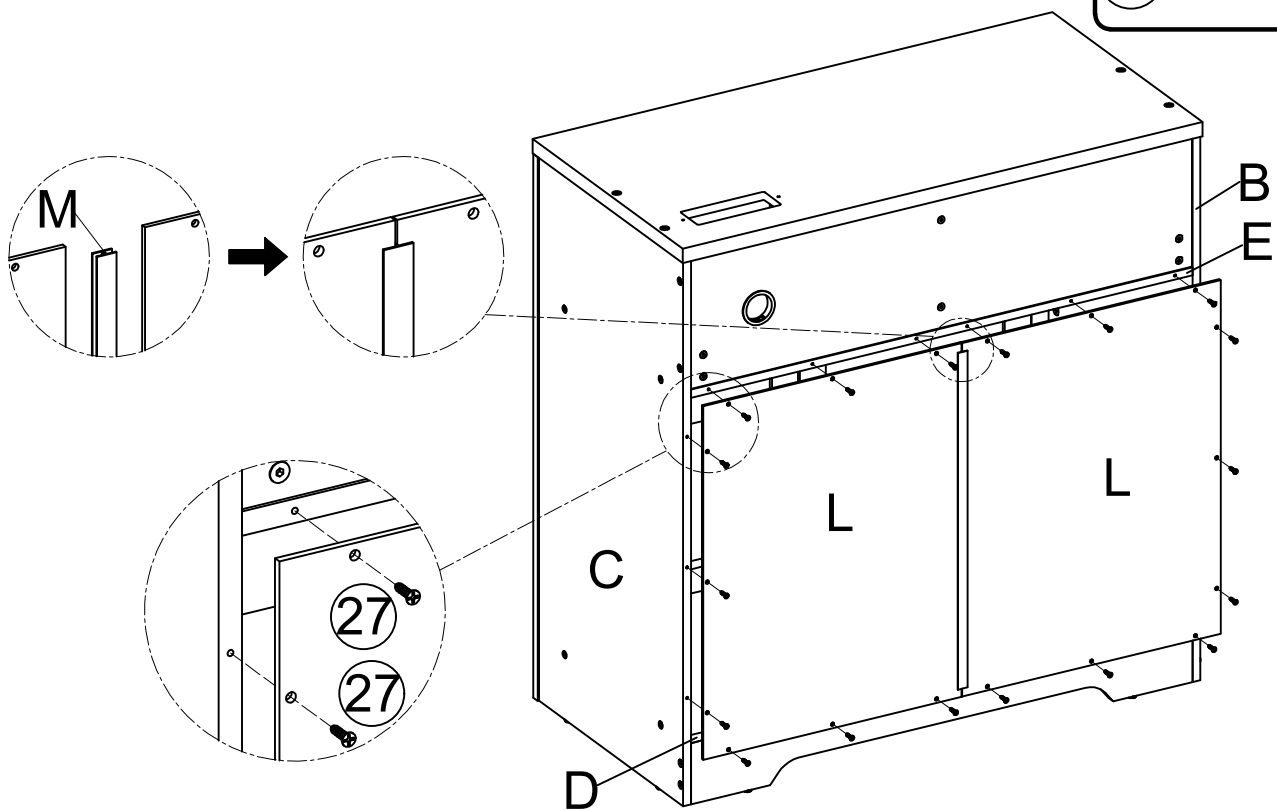


STEP 33

6  x2
26  x1

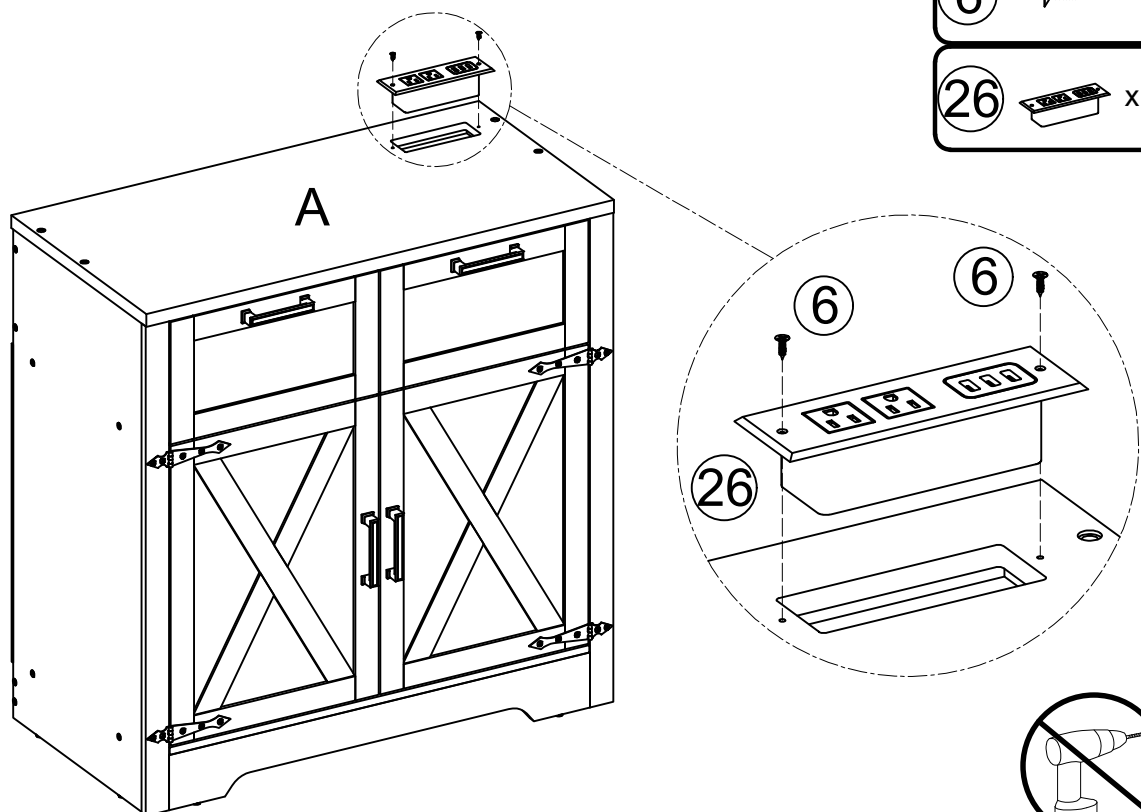


STEP 34

10 x4

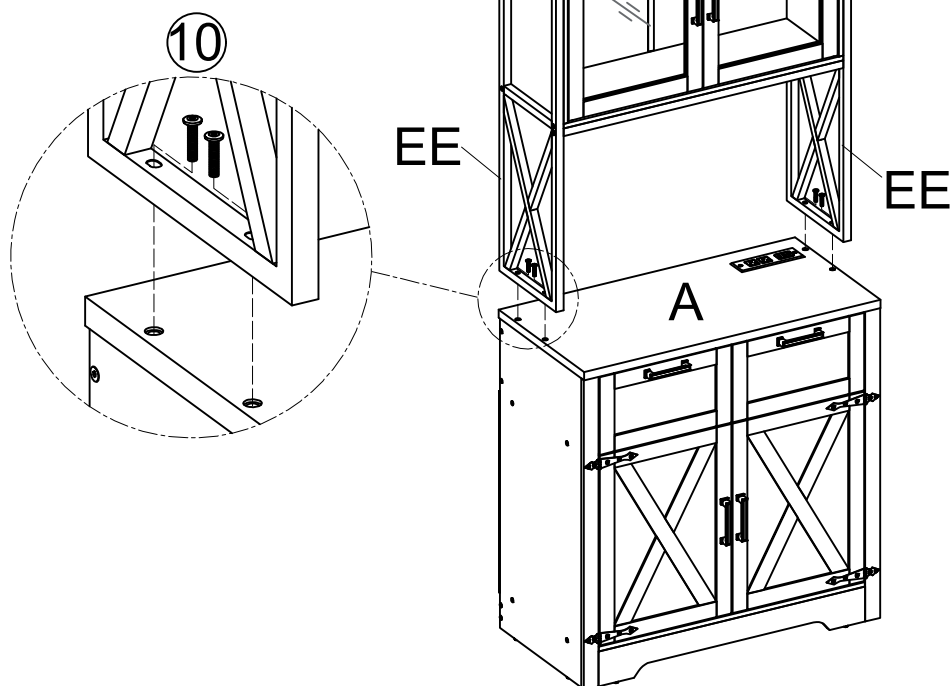


STEP 35

25 x4

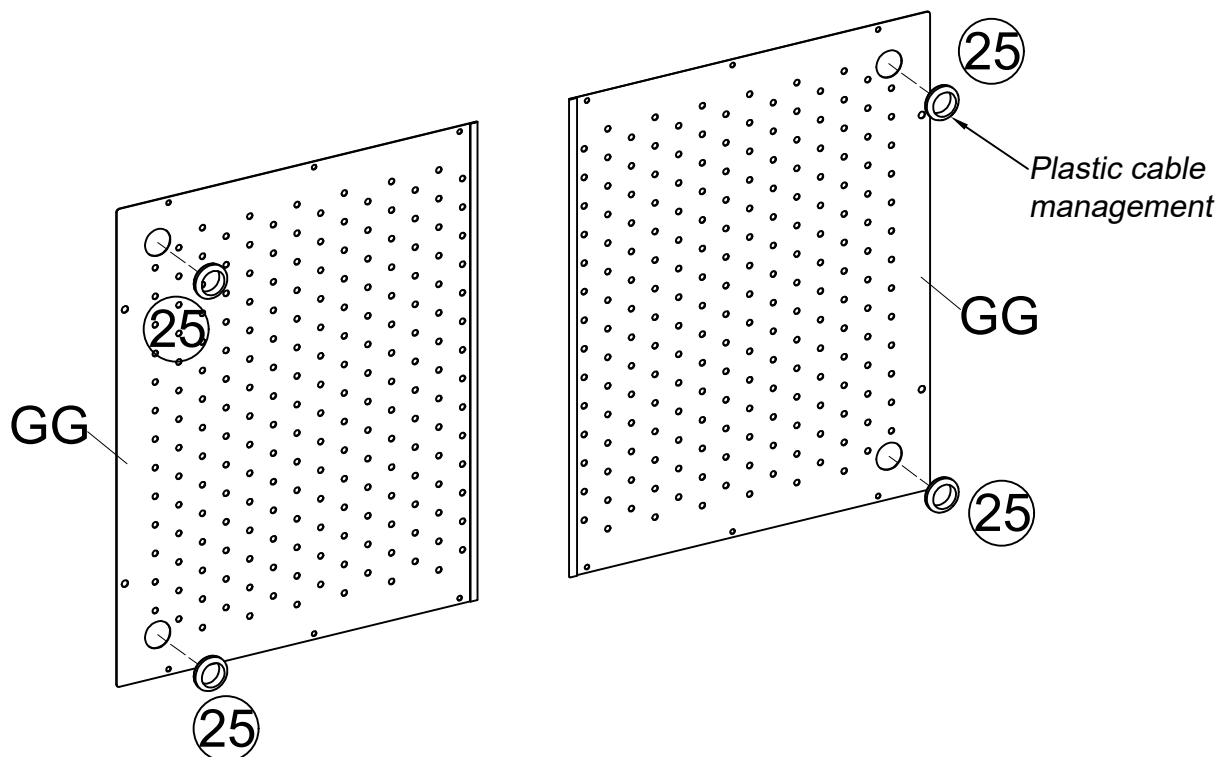

TIPPING RESTRAINT HARDWARE



Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

