



WARNING:
CHOKING HAZARD/SHARP POINTS- Assembly hardware contains small parts and components with sharp points. Adult assembly required.

Required Tools:

- A **power screwdriver** is recommended, although a Medium Phillips screwdriver will work.
- 3/16" Drill Bit with Countersink

Instructions for:

9133JC/9134JC Wall Mounted 2-Section Coat Locker w/Boot Shelf

Hardware Package **HAIN**

Qty	Description
(8) XAFH	3" Drywall Screw



XAFH

Assembly Instructions:

1. Remove the Shipping Brace that protected center dividers during shipment. Dis-assemble Wall Mounting bracket from Shipping Brace by removing 3-Drywall Screws. Retain the Wall Mounting Bracket (with mitered edge) for wall installation. **(See Fig 1)**
2. Select wall location for Locker. Attach the (2) Wall Brackets to the wall studs using 4 of the 3" drywall screws that have been provided **(See Fig 2 and Fig 3)**. **Note:** Wall mounting bracket must be mounted to at least two wall studs.
3. Lift the unit up into position above the Wall Brackets and allow the unit to slide down into position on the Wall Brackets.
4. Finish securing the unit by pre-drilling w/countersink and screwing four more of the 3" drywall screws through the back and into the upper and lower wall brackets, locate holes approximately 6" below the Top and 4" above bottom **(See Fig 2 and Fig 3)**. This step will insure that the unit will not lift off the Wall Brackets.
5. If you experience any difficulties when assembling this product, please contact the Jonti-Craft Customer Relations Team at (800) 543-4149 or sales@jonti-craft.com. All other requests for assistance must be directed to your Jonti-Craft Dealer.

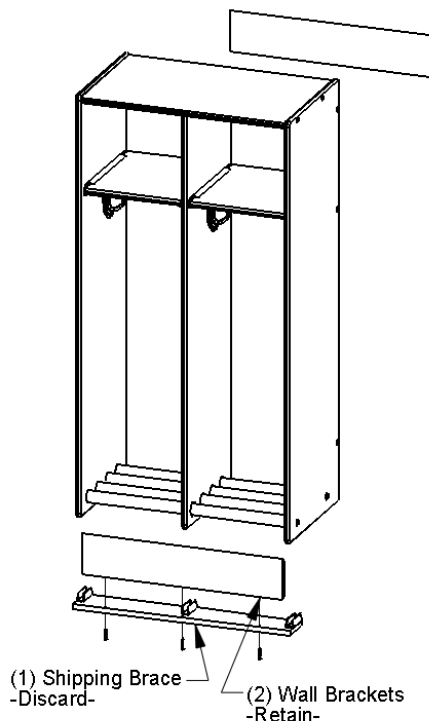
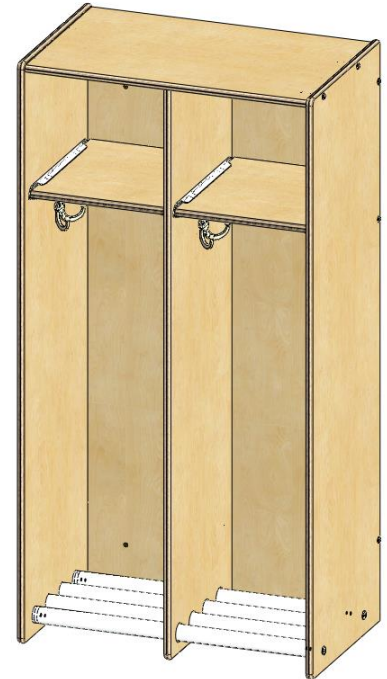


Fig 1

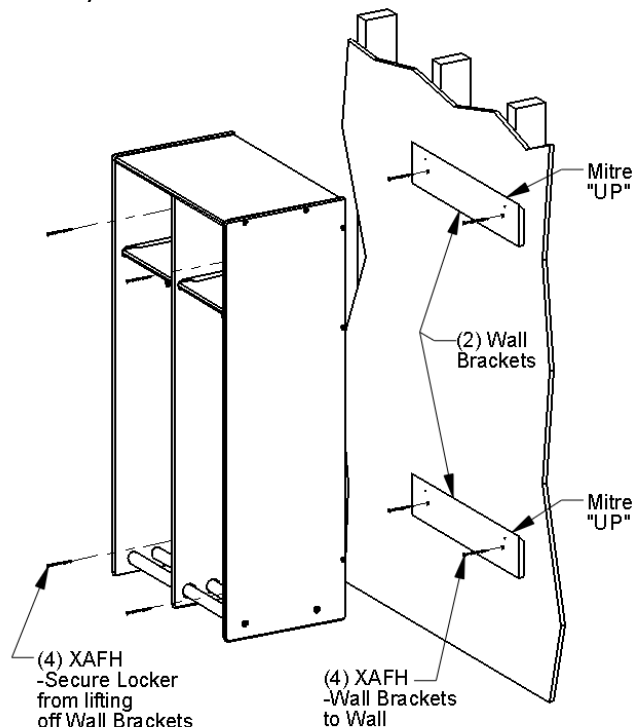


Fig 2

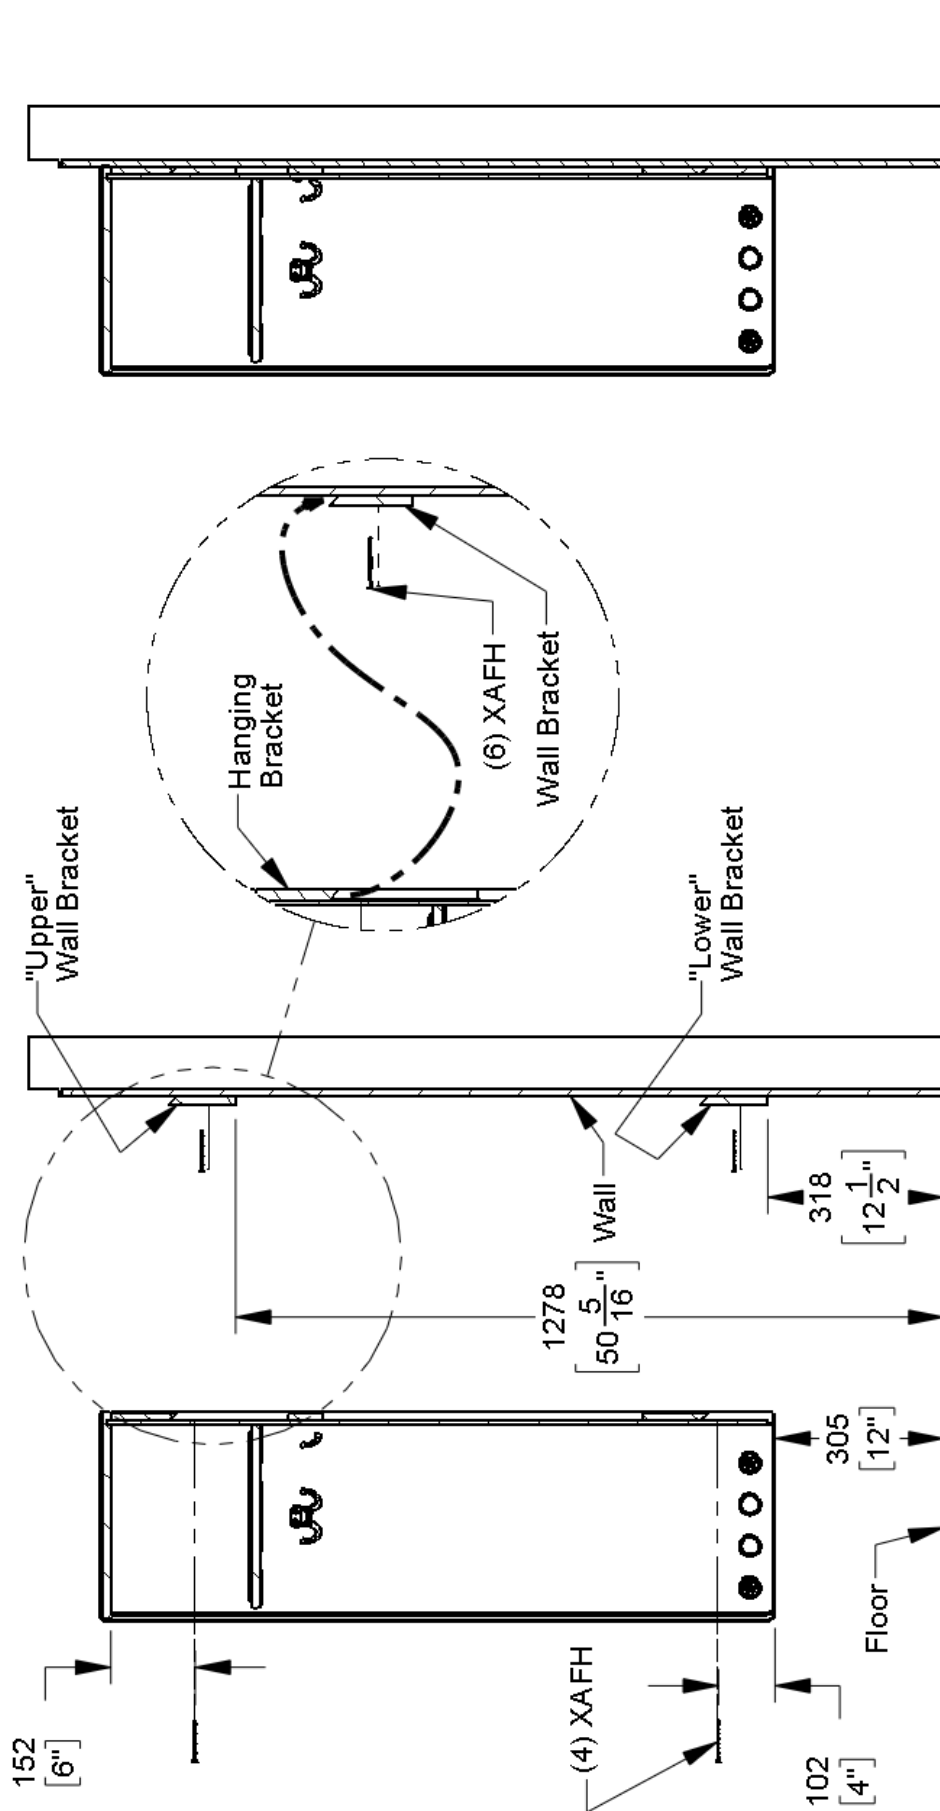


Fig 3

General Care & Maintenance Guidelines: www.jonti-craft.com/generalcare