
DESCRIPTION: KING BED

<u>Caution:</u> Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staple used in packing.

- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come lose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts until the assembly is completed.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

TOOLS REQUIRED (Not provided)		
PHILLIPS SCREWDRIVER		


H	HARDWARE LIST :			
No.	Description	Sketch	Size	Quality
A	Bolt	0	Ø <u>5</u> "x 60mm	8PCS
В	Bolt	0	Ø ₁₆ "x 45mm	8PCS
С	Bolt		Ø ¹ / ₄ "x 20mm	8PCS
D	Bolt		Ø ¹ / ₄ "x 40mm	16PCS
Е	Spring Washer	Ø	Ø ₁₆ "	16PCS
F	Flat Washer	0	Ø ₁₆ "	16PCS
G	Spring Washer	Ø	O_{4}^{1} "	24PCS
Н	Flat Washer	0	\emptyset_{4}^{1} "	24PCS
J	Allen Key		M4	1PC
K	Screw	X	M4x 35mm	28PCS
L	Metal Hook Left			2PCS
M	Metal Hook Right			2PCS

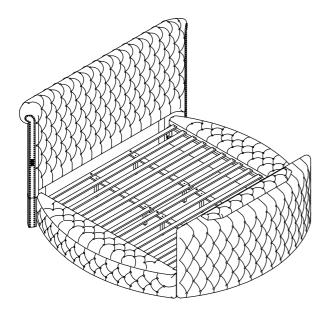


PA	RT LIST :		
(1)	Headboard		1PC
(2)	Headboard Leg- Left		1PC
(3)	Headboard Leg- Right		1PC
(4)	Footboard		1PC
(5)	Side Rail (Cap)		2PCS
(6)	Side Rail (Outer Panel)		2PCS
(7)	Side Rail (Inner Panel)		2PCS
(8)	Side Rail (Bottom Panel)		2PCS
(9)	Slats roll		2Set
(10)	Center Rail		4PCS
(11)	Center Support Leg		8PCS
(12)	Mains Power Lead (3m)		1PC
(13)	TV Lift Remote		1PC
	•	•	•

DESCRIPTION: KING BED

Step 1: Assemble Headboard (1) with Headboard Leg(2)&(3).

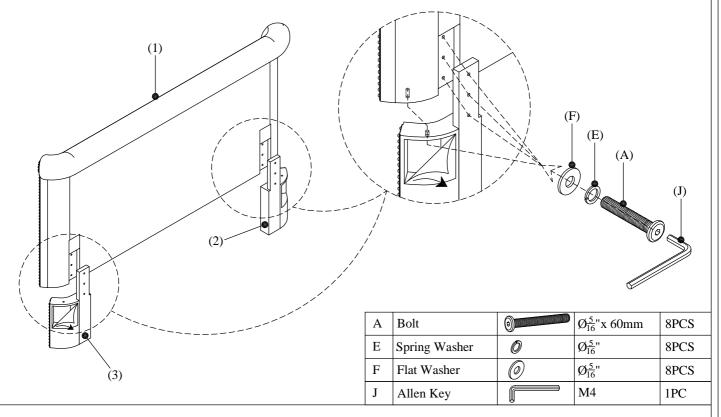


Step 2: Assemble Side Rail (Outer Panel) (6) with Side Rail (Inner Panel) (7).

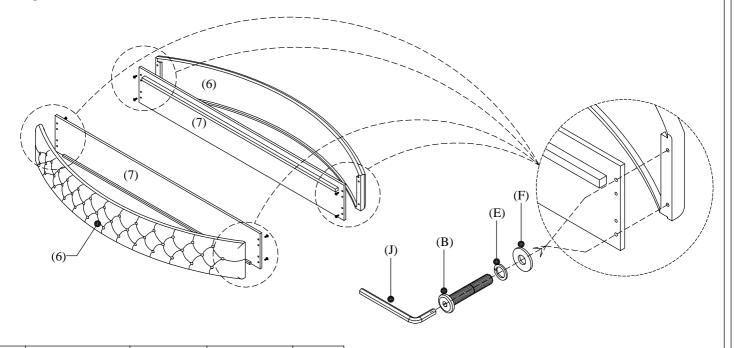

В	Bolt	0	\emptyset_{16}^{5} "x 45mm	8PCS
Е	Spring Washer	Ø	Q_{16}^{5} "	8PCS
F	Flat Washer	0	Ø <u>5</u> "	8PCS
J	Allen Key		M4	1PC

PAGE 2 OF 7


Step 3: Assemble Side rail with Metal Hook Left (L) & Metal Hook Right (M). Place Side rail (Bottom Panel) (8) inside the of Side rail storage.

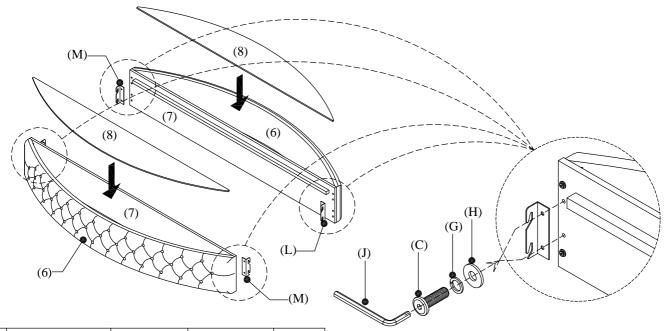


C	Bolt		Ø ₄ ¹ "x 20mm	8PCS
G	Spring Washer	0	$O_{\overline{4}}^{1}$ "	8PCS
Н	Flat Washer	0	$O_{\overline{4}}^{1}$ "	8PCS
J	Allen Key		M4x 4"L	1PC

L	Metal Hook Left		2PCS
M	Metal Hook Right		2PCS

Step 4: Place Side rail(Cap) (5) on top of the side rail storage.

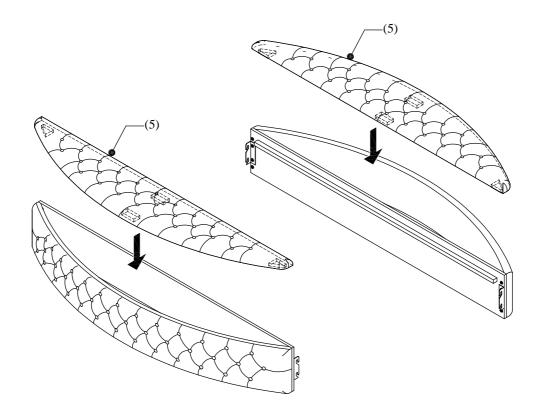





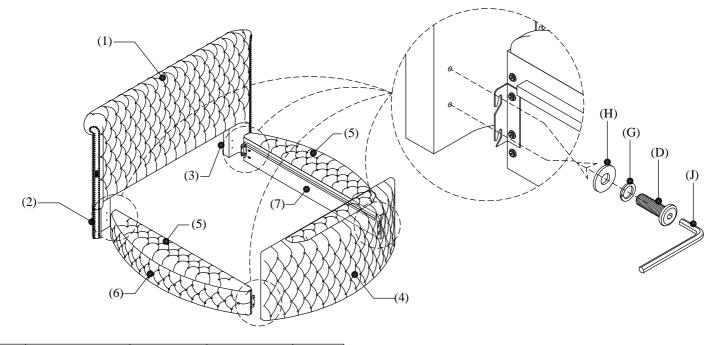


D	Bolt		Ø ¹ / ₄ "x 40mm	8PCS
G	Spring Washer	Ø	O_{4}^{1} "	8PCS
Н	Flat Washer	0	O_{4}^{1} "	8PCS
J	Allen Key		M4x 4"L	1PC

Step 6: Connect Main Power Lead (12) to your wall socket - for safety, this must be an earthed supply

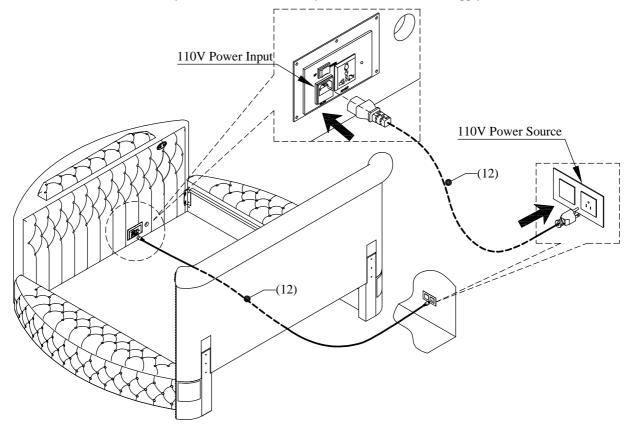


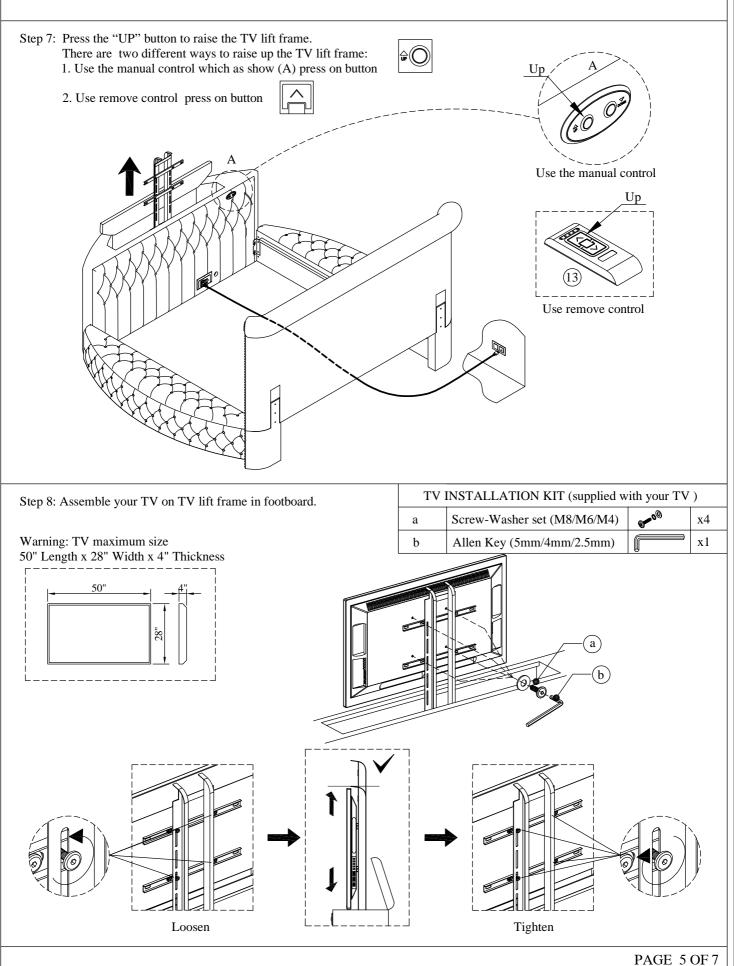

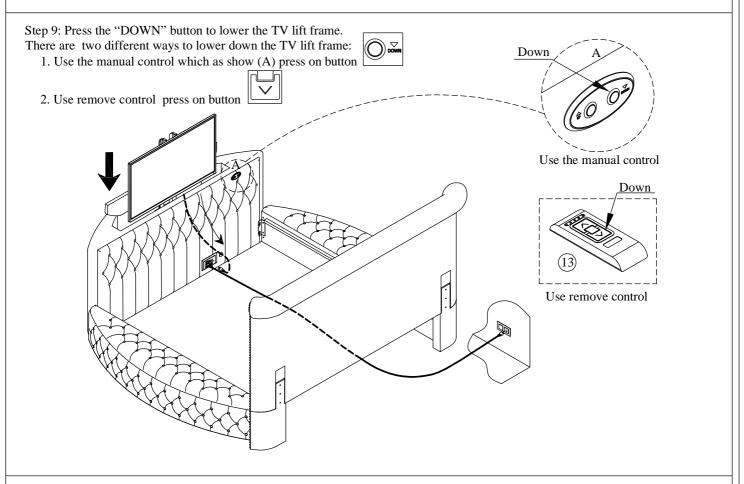


Step 10: Connect your TV electric with the output 110V socket.


Plug in the wire of USB with USB adaptor, then connect with power.

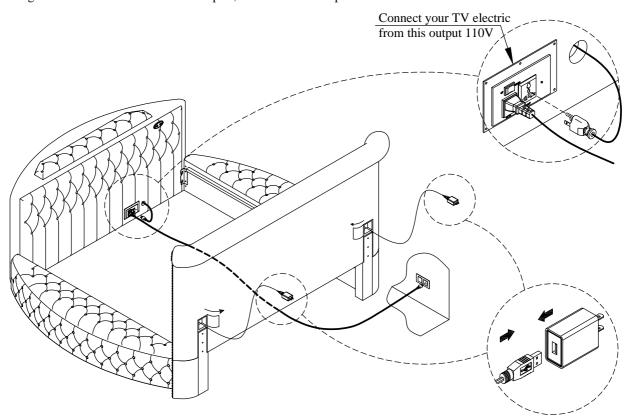

DESCRIPTION: KING BED

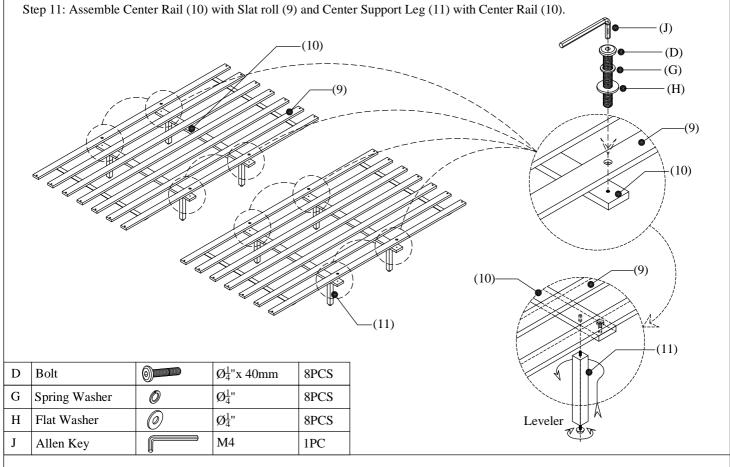

Step 12: Place Slats roll (9), Center rails (10), Support leg (11) in the center of the bed. Attach slats roll (9) to support rails.

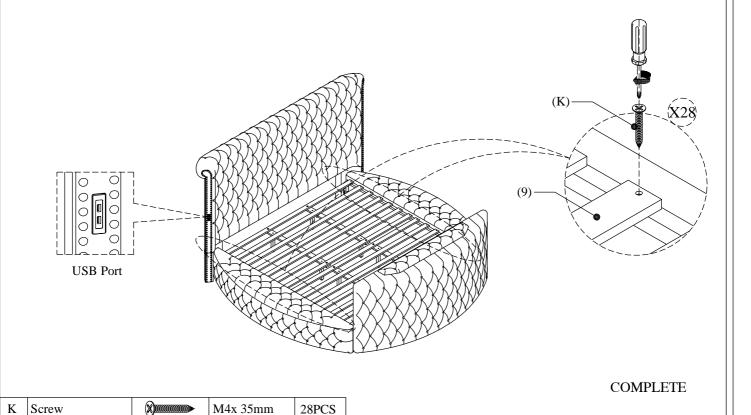

PAGE 7 OF 7

M4x 35mm

28PCS

Screw


DESCRIPTION: QUEEN BED

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staple used in packing.

- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come lose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts until the assembly is completed.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

TOOLS REQUIRED (Not provided)		
PHILLIPS SCREWDRIVER		
HARDWARE LIST :		


H	HARDWARE LIST :			
No.	Description	Sketch	Size	Quality
A	Bolt	0	Ø <u>5</u> "x 60mm	8PCS
В	Bolt	0	Ø ₁₆ "x 45mm	8PCS
С	Bolt		Ø ¹ / ₄ "x 20mm	8PCS
D	Bolt		Ø ¹ / ₄ "x 40mm	12PCS
Е	Spring Washer	Ø	Ø ₁₆ "	16PCS
F	Flat Washer	0	Ø ₁₆ "	16PCS
G	Spring Washer	Ø	O_{4}^{1} "	20PCS
Н	Flat Washer	0	$ \emptyset_{\overline{4}}^{1} $	20PCS
J	Allen Key		M4	1PC
K	Screw	X	M4x 35mm	28PCS
L	Metal Hook Left			2PCS
M	Metal Hook Right			2PCS

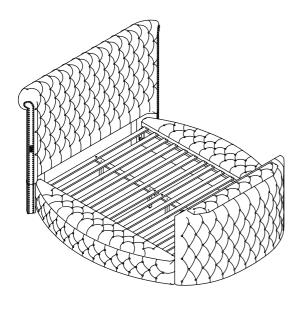


PA	RT LIST :	
(1)	Headboard	1PC
(2)	Headboard Leg- Left	1PC
(3)	Headboard Leg- Right	1PC
(4)	Footboard	1PC
(5)	Side Rail (Cap)	2PCS
(6)	Side Rail (Outer Panel)	2PCS
(7)	Side Rail (Inner Panel)	2PCS
(8)	Side Rail (Bottom Panel)	2PCS
(9)	Slats roll	2Set
(10)	Center Rail	2PCS
(11)	Center Support Leg	4PCS
(12)	Mains Power Lead (3m)	1PC
(13)	TV Lift Remote	1PC

DESCRIPTION: QUEEN BED

Step 1: Assemble Headboard (1) with Headboard Leg(2)&(3).

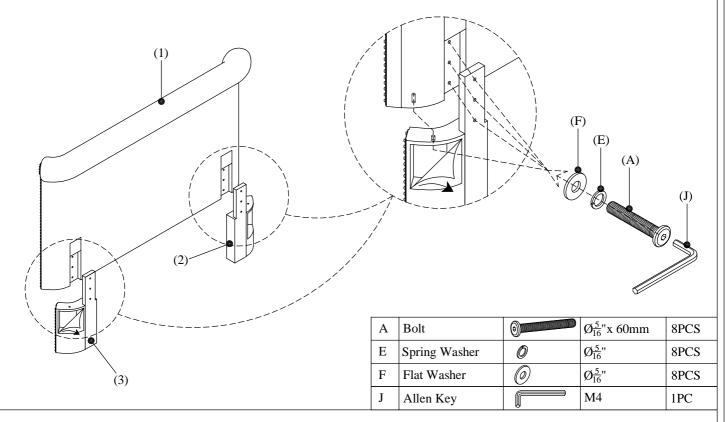

Step 2: Assemble Side Rail (Outer Panel) (6) with Side Rail (Inner Panel) (7).

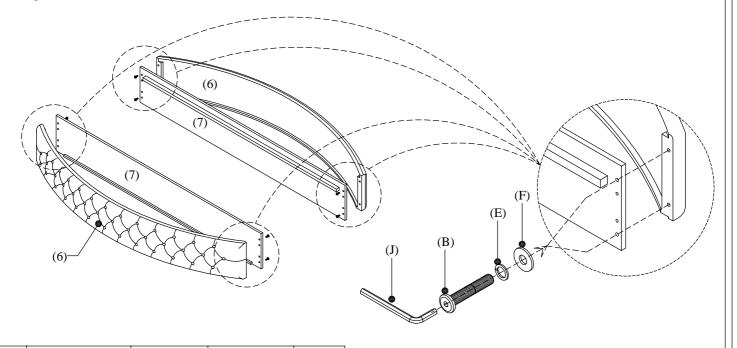


В	Bolt	0	Ø ₁₆ "x 45mm	8PCS
Е	Spring Washer	0	$\emptyset_{\overline{16}}^{5}$ "	8PCS
F	Flat Washer	0	Ø <u>5</u> "	8PCS
J	Allen Key		M4	1PC

PAGE 2 OF 7

DESCRIPTION: QUEEN BED


Step 3: Assemble Side rail with Metal Hook Left (L) & Metal Hook Right (M). Place Side rail (Bottom Panel) (8) inside the of Side rail storage.

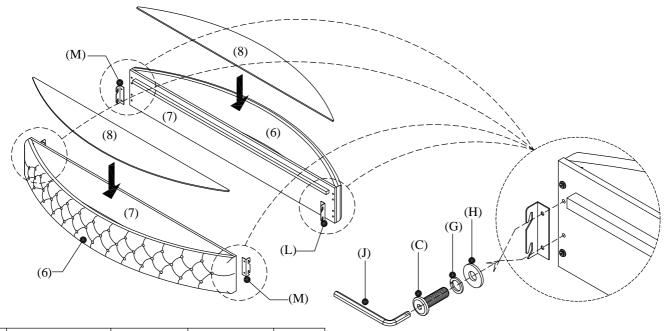


C	Bolt		Ø ₄ ¹ "x 20mm	8PCS
G	Spring Washer	0	$O_{\overline{4}}$ "	8PCS
Н	Flat Washer	0	O_{4}^{1} "	8PCS
J	Allen Key		M4x 4"L	1PC


L	Metal Hook Left		2PCS
M	Metal Hook Right		2PCS

Step 4: Place Side rail(Cap) (5) on top of the side rail storage.

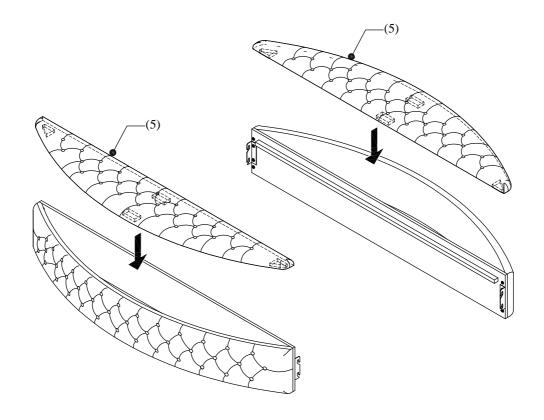


DESCRIPTION: QUEEN BED



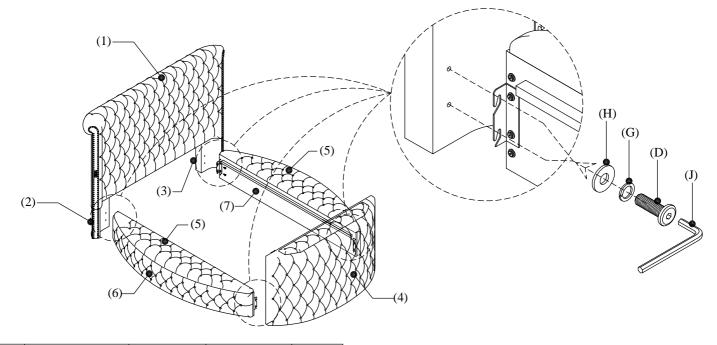


	D	Bolt	9	Ø ¹ / ₄ "x 40mm	8PCS
[G	Spring Washer	Ø	$O_{\overline{4}}$ "	8PCS
	Н	Flat Washer	0	O_{4}^{1} "	8PCS
Γ,	J	Allen Key		M4x 4"L	1PC

Step 6: Connect Main Power Lead (12) to your wall socket - for safety, this must be an earthed supply

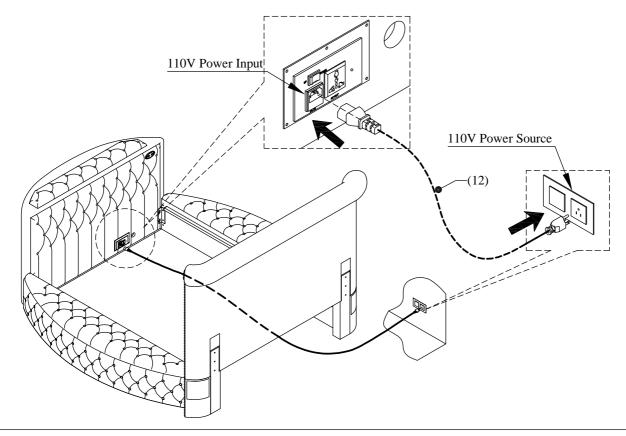


DESCRIPTION: QUEEN BED

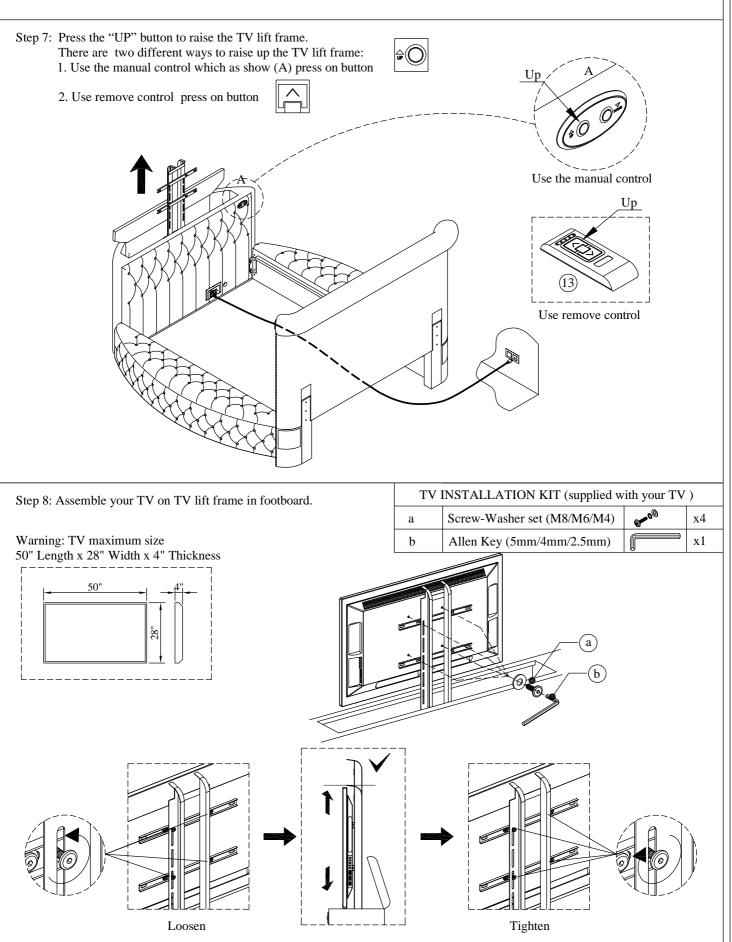


PAGE 5 OF 7

DESCRIPTION: QUEEN BED

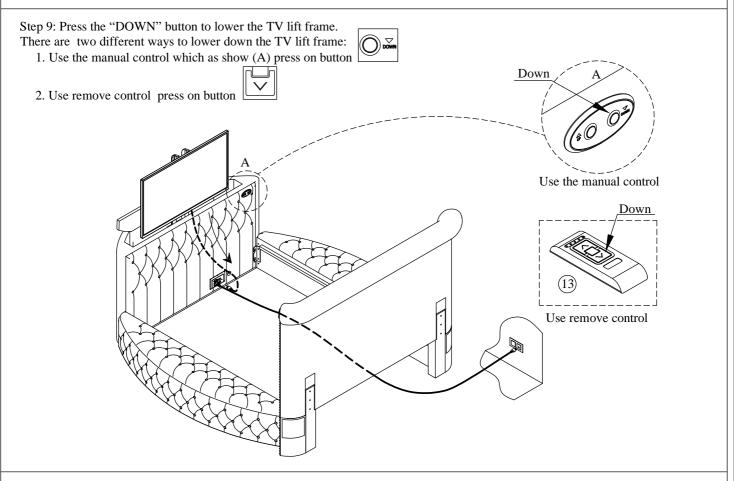


Step 10: Connect your TV electric with the output 110V socket.


Plug in the wire of USB with USB adaptor, then connect with power.

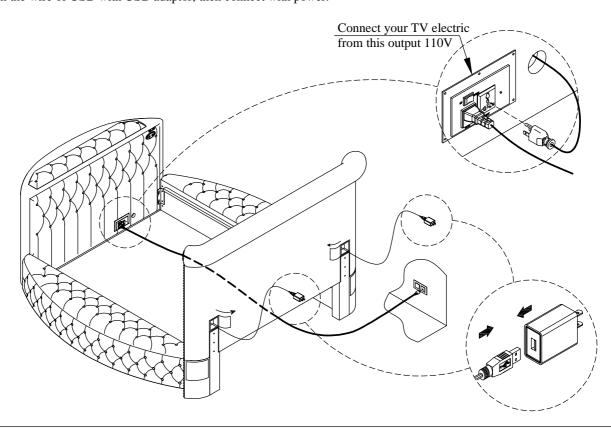

DESCRIPTION: QUEEN BED

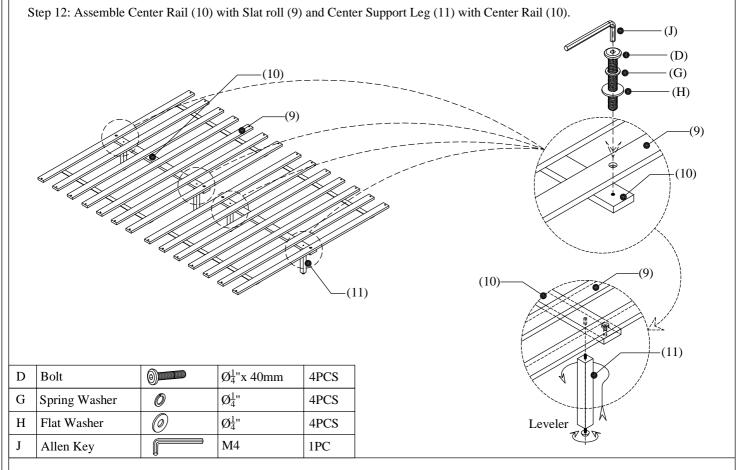

Step 13: Place Slats roll (9), Center rails (10), Support leg (11) in the center of the bed. Attach slats roll (9) to support rails.

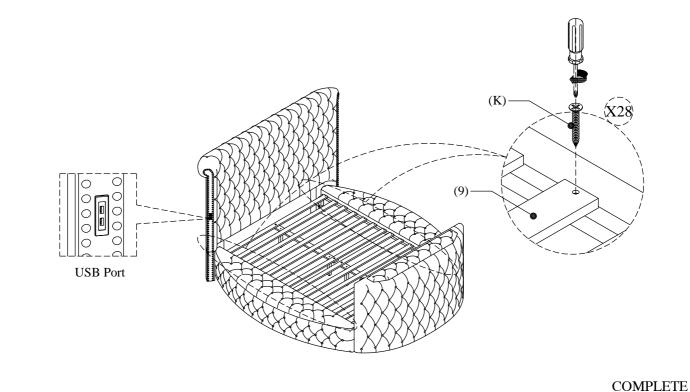

 Screw
 M4x 35mm
 28PCS

PAGE 7 OF 7