


3/4" X 18" PIPE LEGS


NEED HELP OR ADVICE PUTTING THIS KIT TOGETHER? MISSING PIECES?
EMAIL US FOR ANY QUESTIONS

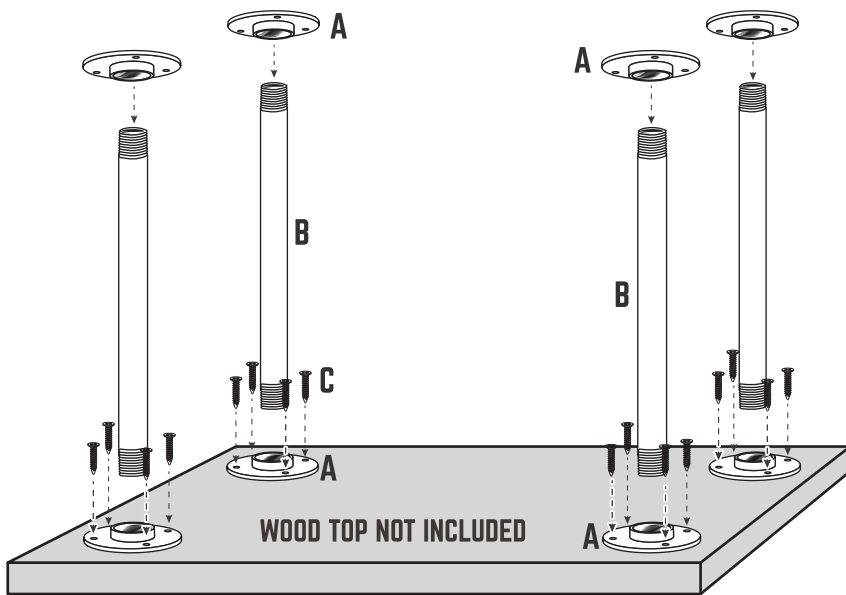

PART	DESCRIPTION	QTY
A	3/4" FLANGE	8
B	3/4" X 18" PIPE LEG	4
C	SCREWS	16

EASY INSTALLATION:

RECOMMENDED TOOLS FOR INSTALLATION

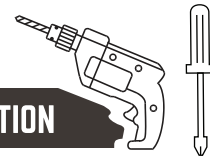

1. PUT LEGS TOGETHER AS SHOWN ABOVE. HAND TIGHTEN EACH PIPE TO THE FLANGE.
2. USING A DRILL, SCREW LEGS INTO THE TABLETOP. WE RECOMMEND USING SETTING #10 TO PREVENT STRIPPING THE WOOD. THERE IS NO NEED TO PRE-DRILL.
3. YOU CAN UNTIGHTEN EACH FLANGE TO HELP LEVEL THE TABLE.



HOW TO PREVENT PIPE CORROSION

Our industrial-grade black pipes and fittings are coated with a rust-preventive oil during manufacturing. For best results, **SEAL THE PIPES TO AVOID ANY RUSTING** after cleaning the kit.

CLEAN AND SEAL INSTRUCTIONS:

- CLEAN:** Recommended supplies: regular degreasing dish soap, washcloths, gloves (optional)
1. Wash your pipes and fittings with warm water and dish soap until the oil is completely removed.
 2. Wipe the pipes with a dry washcloth and wait until the pipes are completely dry.

IMPORTANT: THE PIPES MUST BE COMPLETELY DRY BEFORE YOU START THE SEALING PROCESS.

SEAL:

IF USING POLYURETHANE SPRAY: Spray each dry pipe and fitting with a polyurethane matte or satin finishing spray and let it dry before assembling the kit.

IF USING FINISHING WAX: Coat each dry pipe with a finishing wax. Wait for 20 minutes, then polish the pipe with a dry washcloth by wiping them down. Faster wiping will result in a shinier finish.