
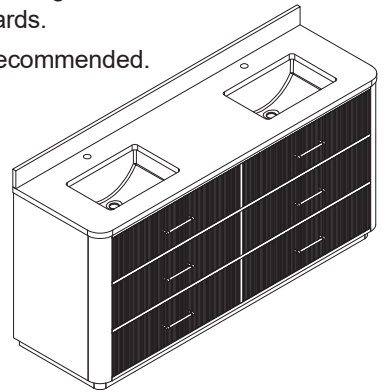



WYNDHAM COLLECTION

- Prior to installation please check received items against the "Packing List".
- Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.
- Install on a level surface

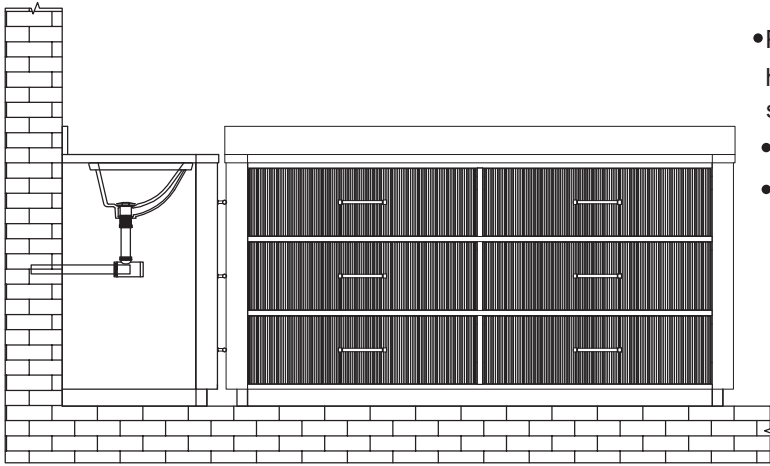


PACKING LIST


(Not all components may be included, depending upon your purchase)

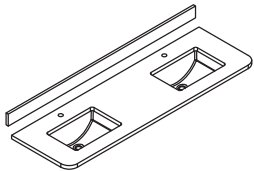


Counter & Sink /1

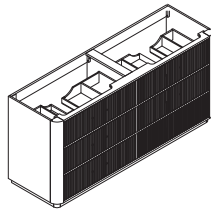

Main Cabinet/1

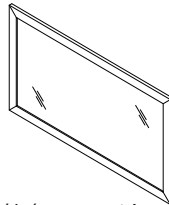


Mirror /1 (may not be included)

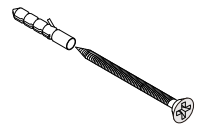

Screws for mirror / 2


REQUIRED TOOLS NOT IN BOX

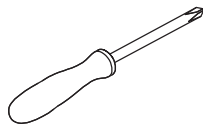


WC-9898-60DBL
Installation Guide

WYNDHAM COLLECTION


1. Place cabinet in desired location and determine where the wall studs are. Adjust the feet if needed.

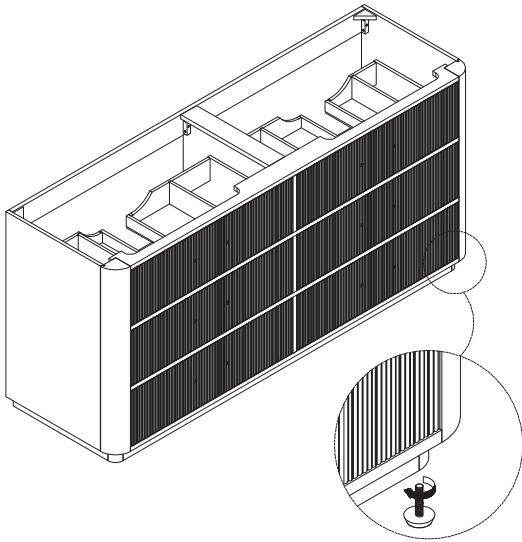


2. Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

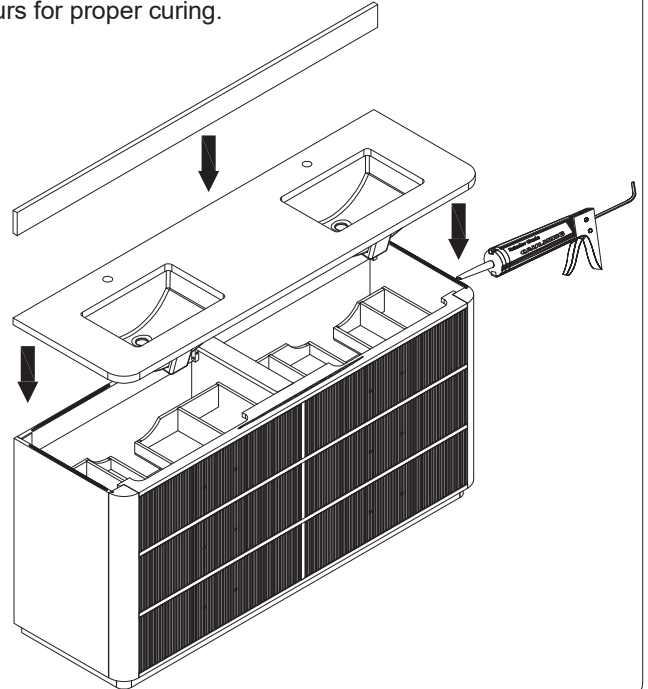

3. The handles are safely stored for transport in a box inside of the cabinet. Look inside the vanity for the box with your handles.

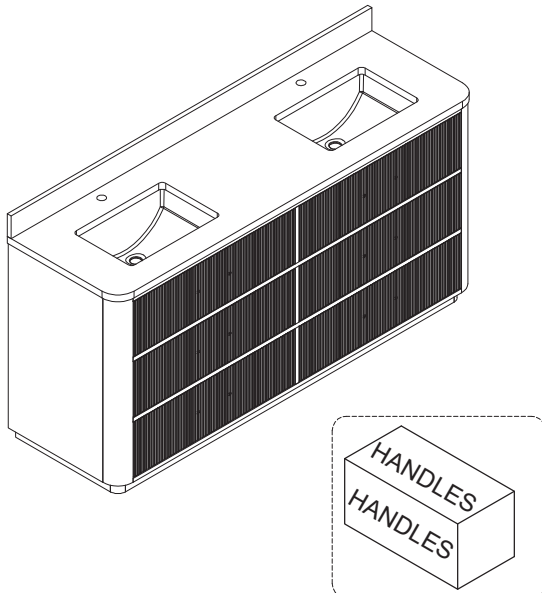

4. Unpack the handles and install them on the vanity. Do not over tighten when attaching.

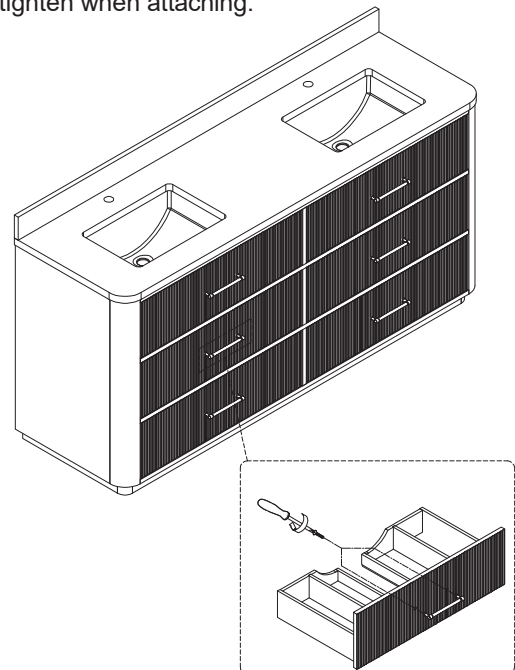

WC-9898-60DBL
Installation Guide