

Installation Steps

Accessories Included

Extra hardware is included. Some leftover pieces are normal after installation.



STEP 1 — Mark the Mounting Position

Tools Needed: Level · Pencil · Ruler




Use a ruler and level to mark the mounting position.



Pre-assemble the screw with the metal washer and plastic washer.

STEP 2 — Install the Lower Z-Bar Bracket

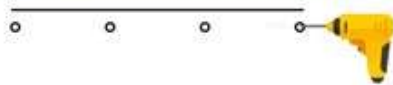


Drill holes at the marked points and insert the expansion anchors.




Secure the lower Z-bar bracket with the prepared screws.

STEP 3 — Mount the Mirror & Install the Upper Z-Bar Bracket

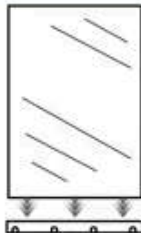

Apply the double-sided tape to the wall, then lower the mirror from above into the lower Z-bar bracket.


Important:
Install from top to bottom. Do not slide in from the side.

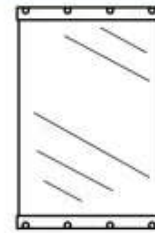

Align and secure the upper Z-bar bracket to hold the mirror firmly in place.

*For best results, install with two adults and confirm the mirror is level before final tightening.