



Assembly Instructions

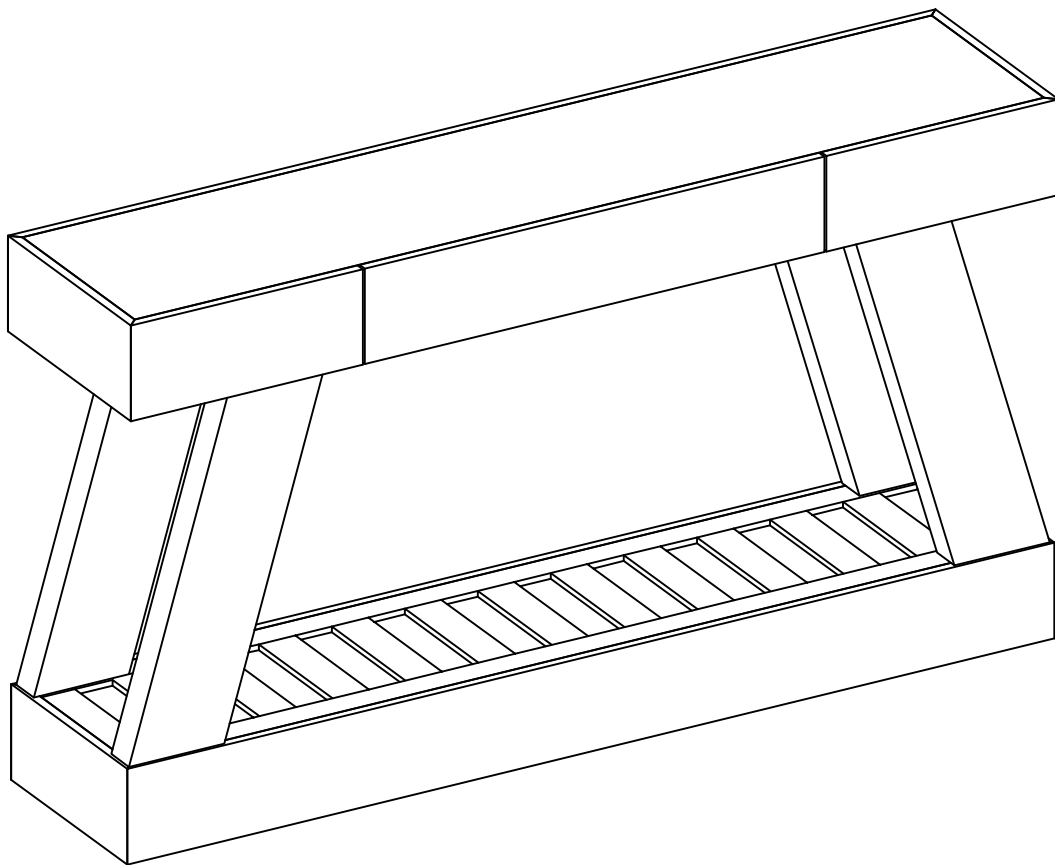


Date 2025-4-1 Rev.01-A

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

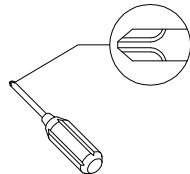

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

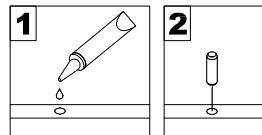


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

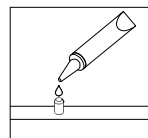


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

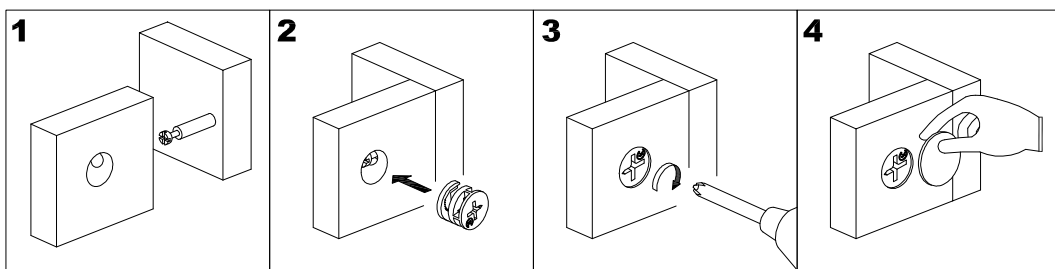




- VII. Power tools should not be used to assemble this product .

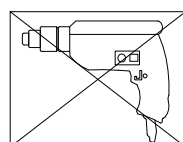


Parts List

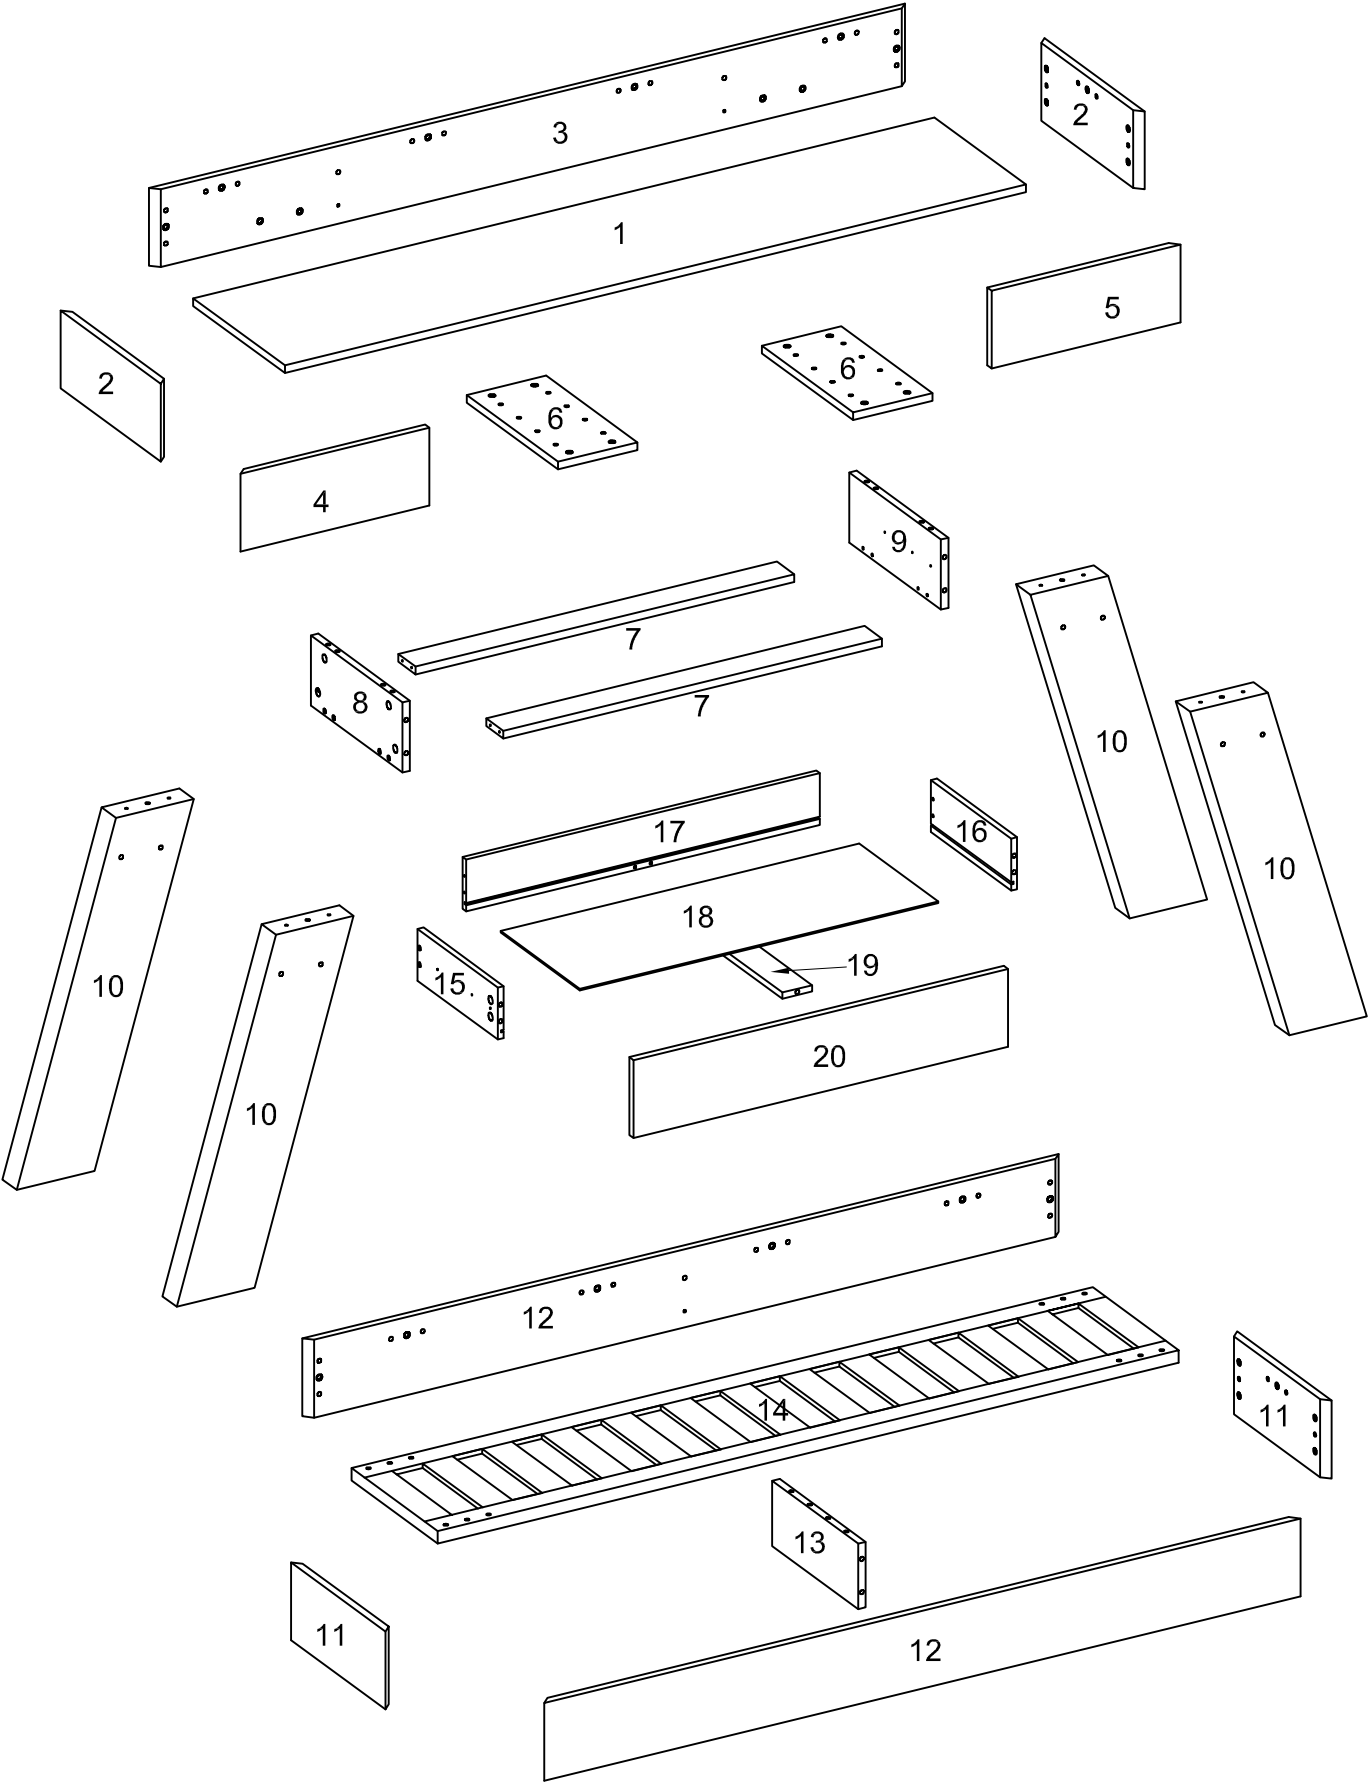



Hardware List


A		Ø8x30mm	Large Dowel	20 pcs
B		Ø6x35mm	Cam Bolt	17 pcs
C		Ø15x11mm	Large Cam Lock	12 pcs
D		Ø30mm	Cam Lover	17 pcs
E			Glue	1 pc
F		Ø15x9.5mm	Small Cam Lock	5 pcs
G		Ø8x20mm	Small Dowel	8 pcs
H		Ø4x44mm	Screw	14 pcs
J		M 4	Allen Wrench	1 pc
K		Ø6x50mm	Screw	16 pcs
L		Ø3.5x12mm	Screw	12 pcs
M		10" --- 35mm	Drawer Slider	1 set

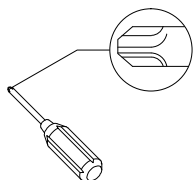

Philips head screwdriver required for assembly
(not included)


Hardware List

N		Ø13x1mm	Lock Washer	16 pcs
P		Ø16x1mm	Flat Washer	16 pcs
Q		Ø6x61mm	Bolt	8 pcs
R		Ø6x28mm	Bolt	8 pcs
S		Ø6x14mm	Bolt	78 pcs
T			Connector Block	26 pcs
U			Tipping Restraint Hardware	2 sets

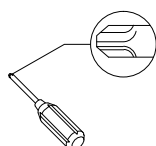


Philips head screwdriver required for assembly
(not included)


Step 1

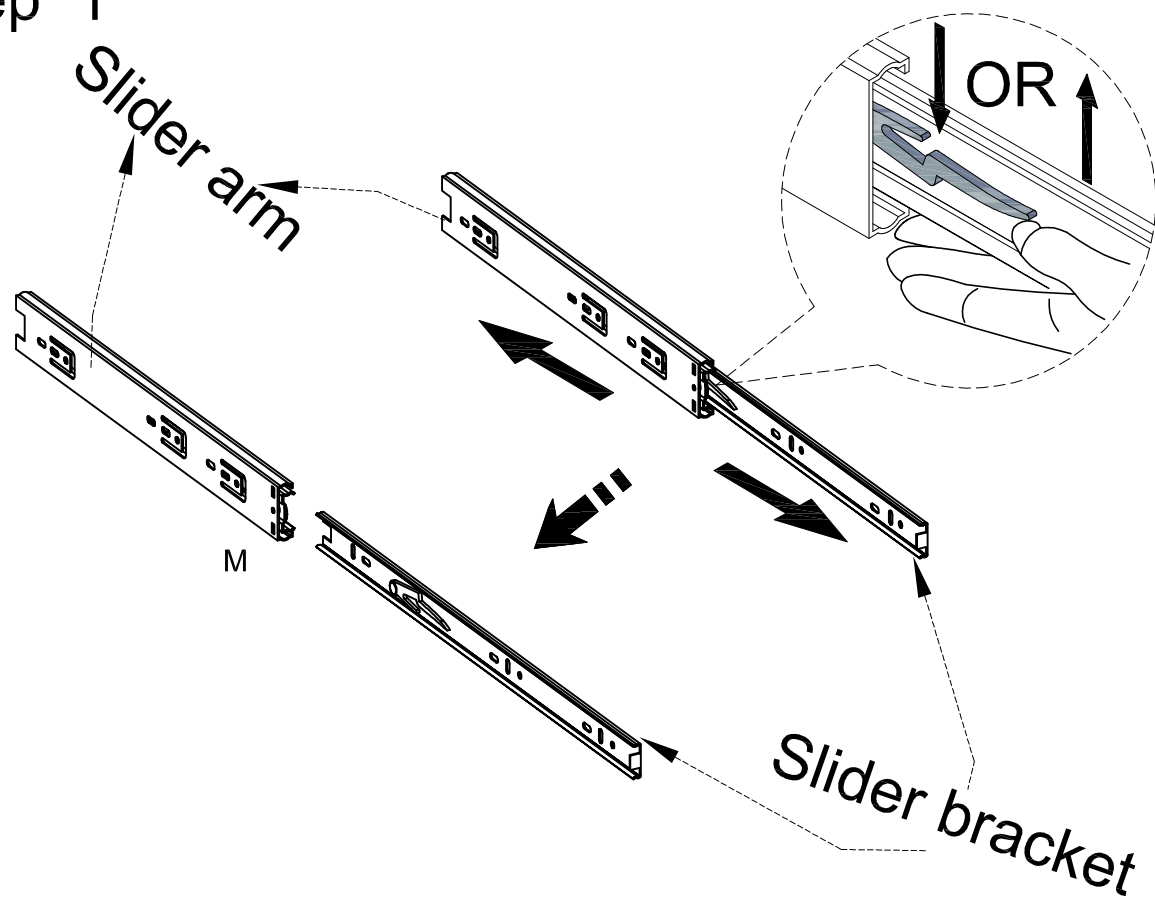


Step 2

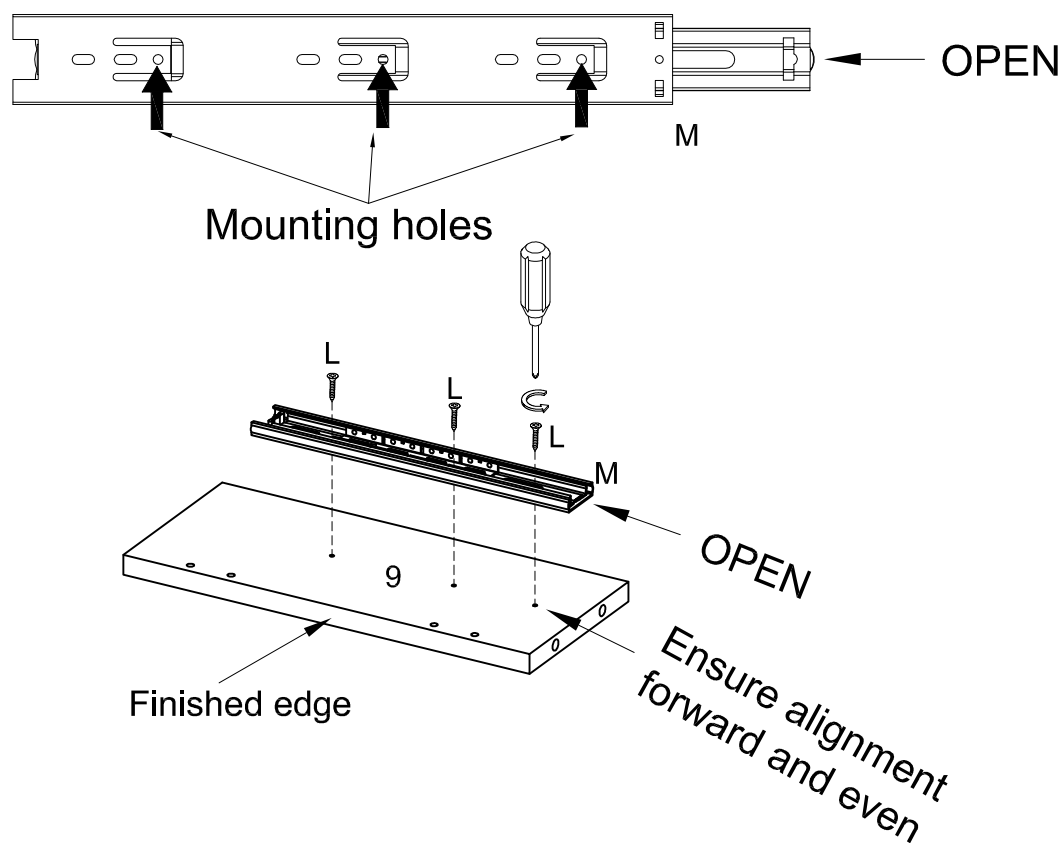


Step 3

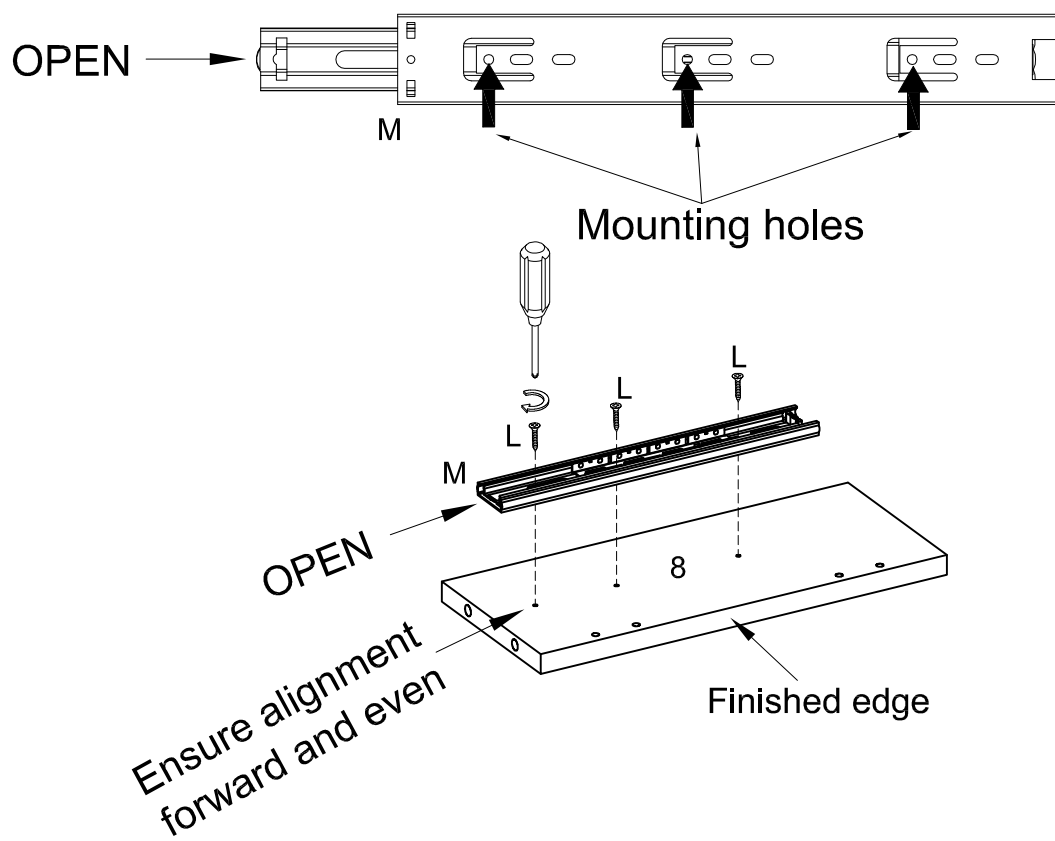


Step 4

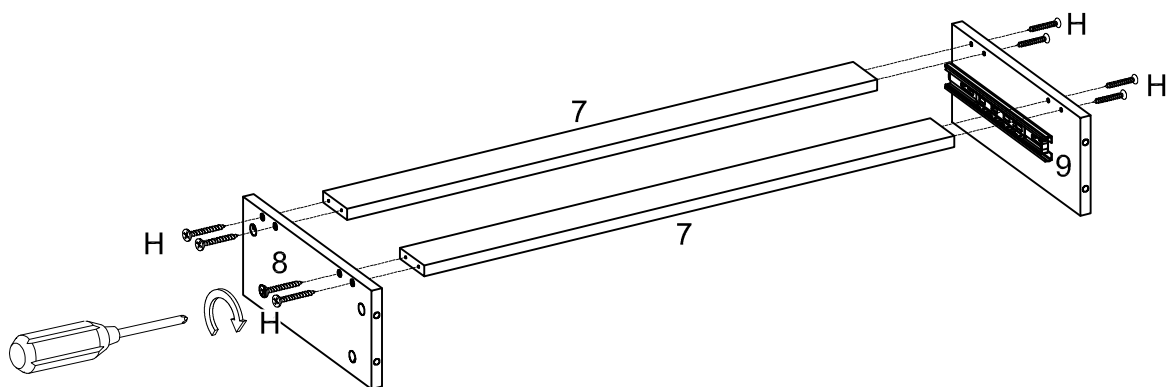



Step 5

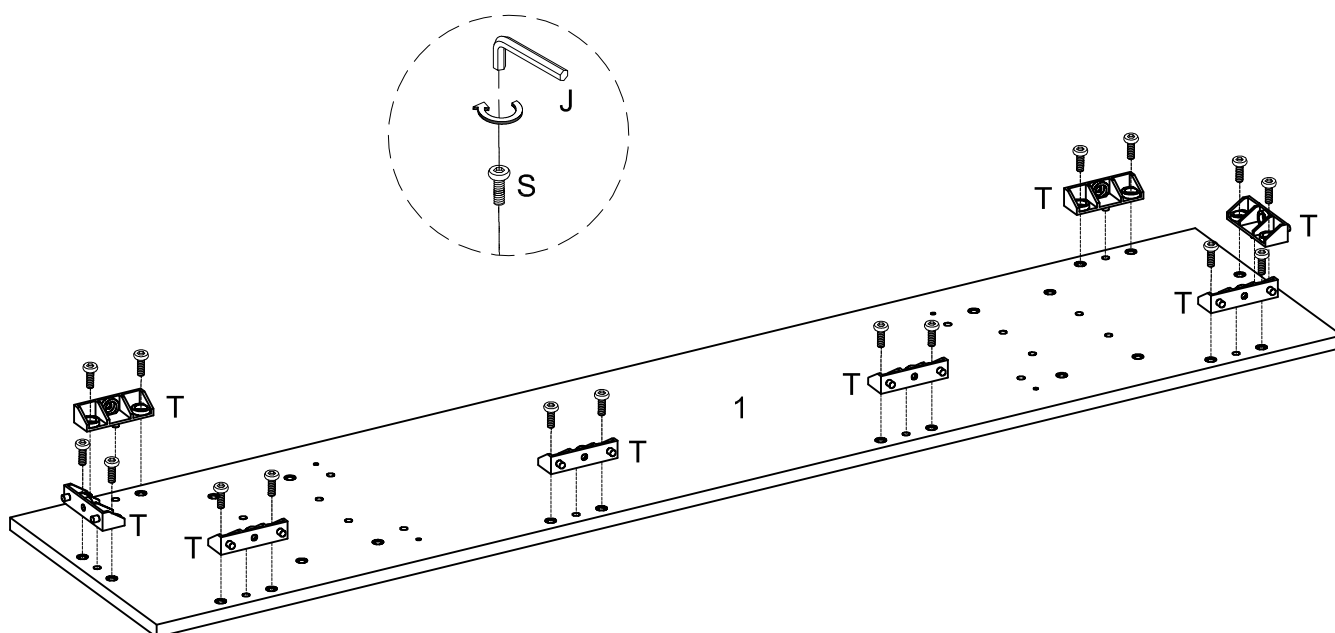


Step 6

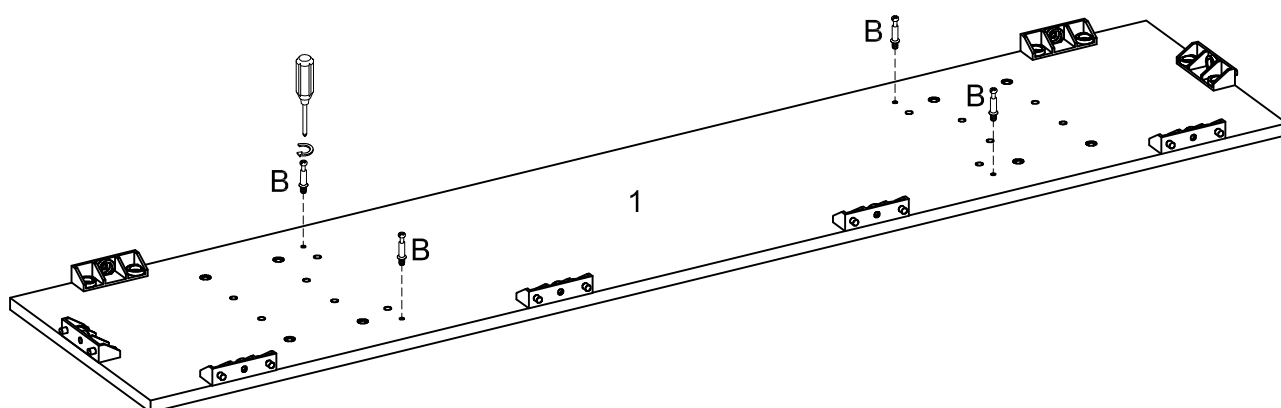


Step 7

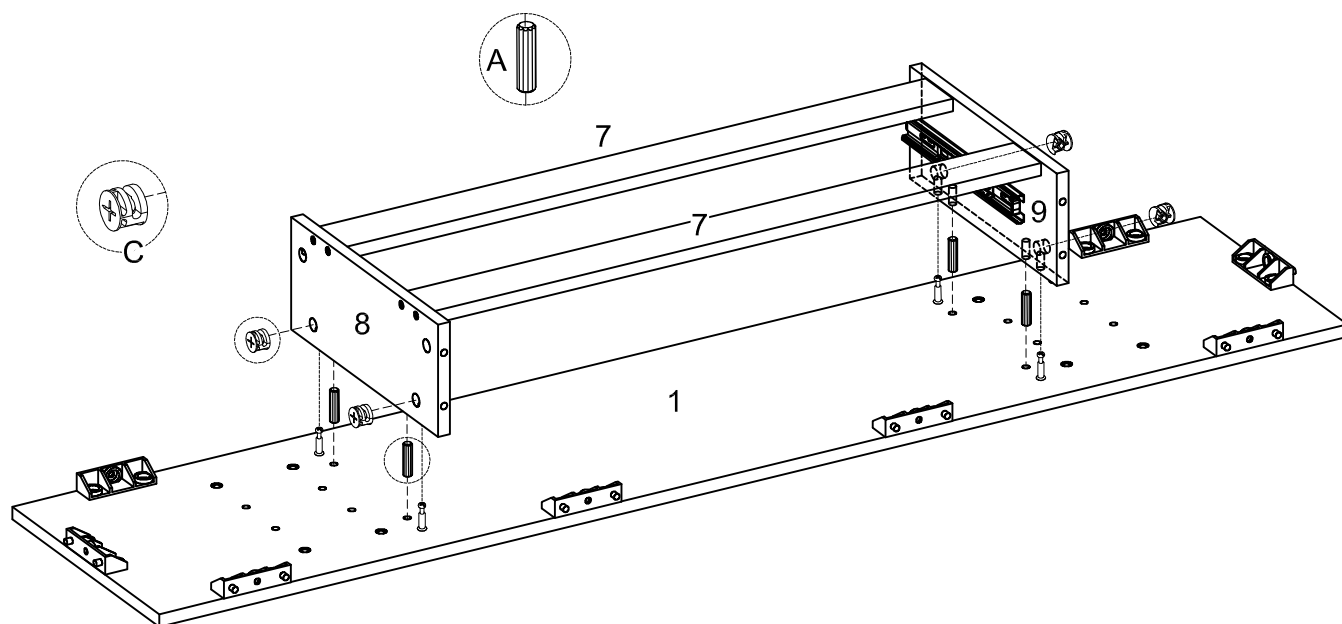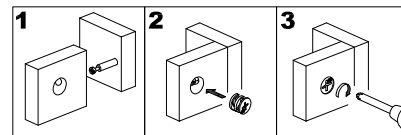


Step 8

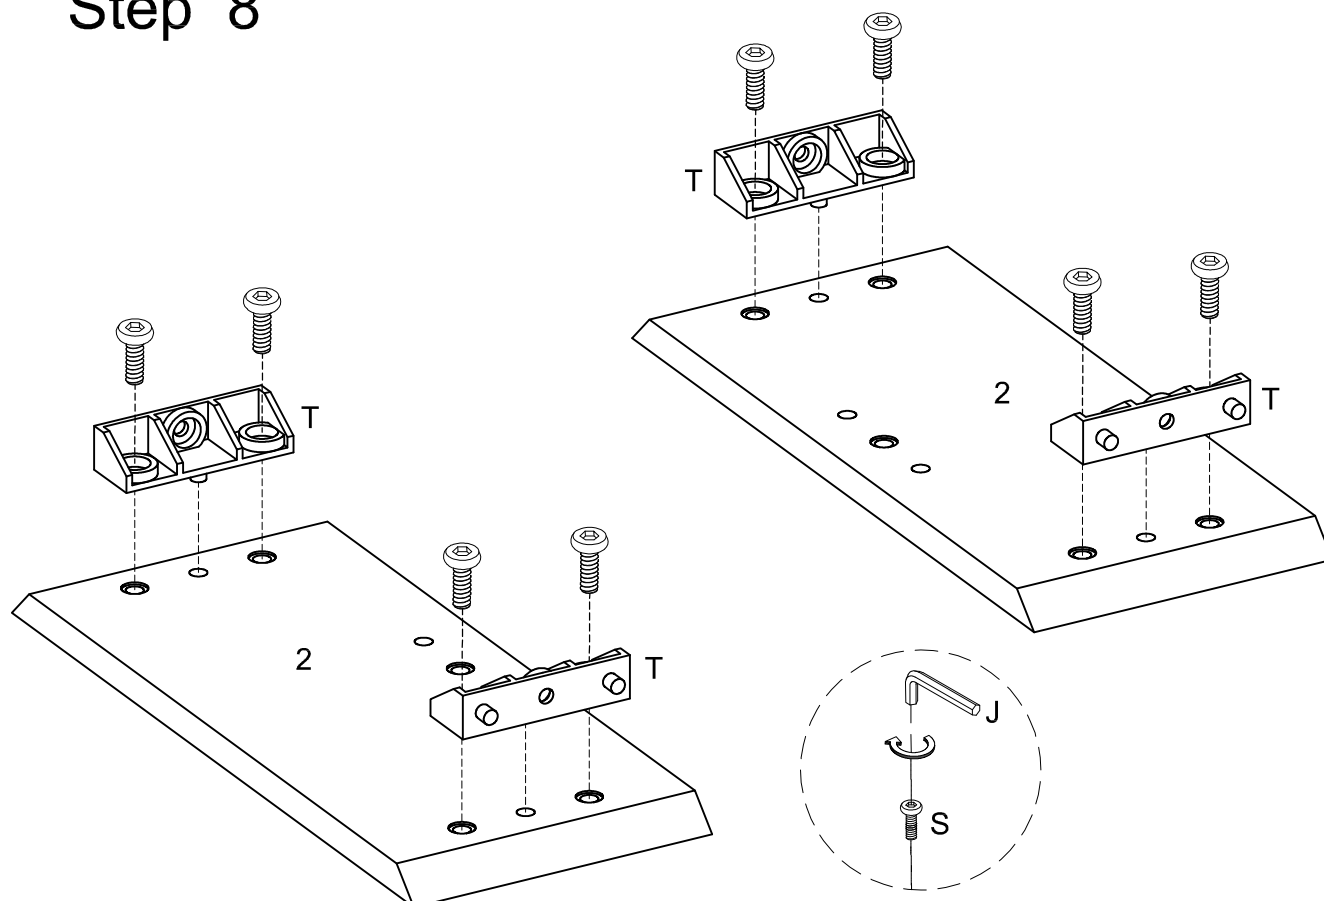



Step 9

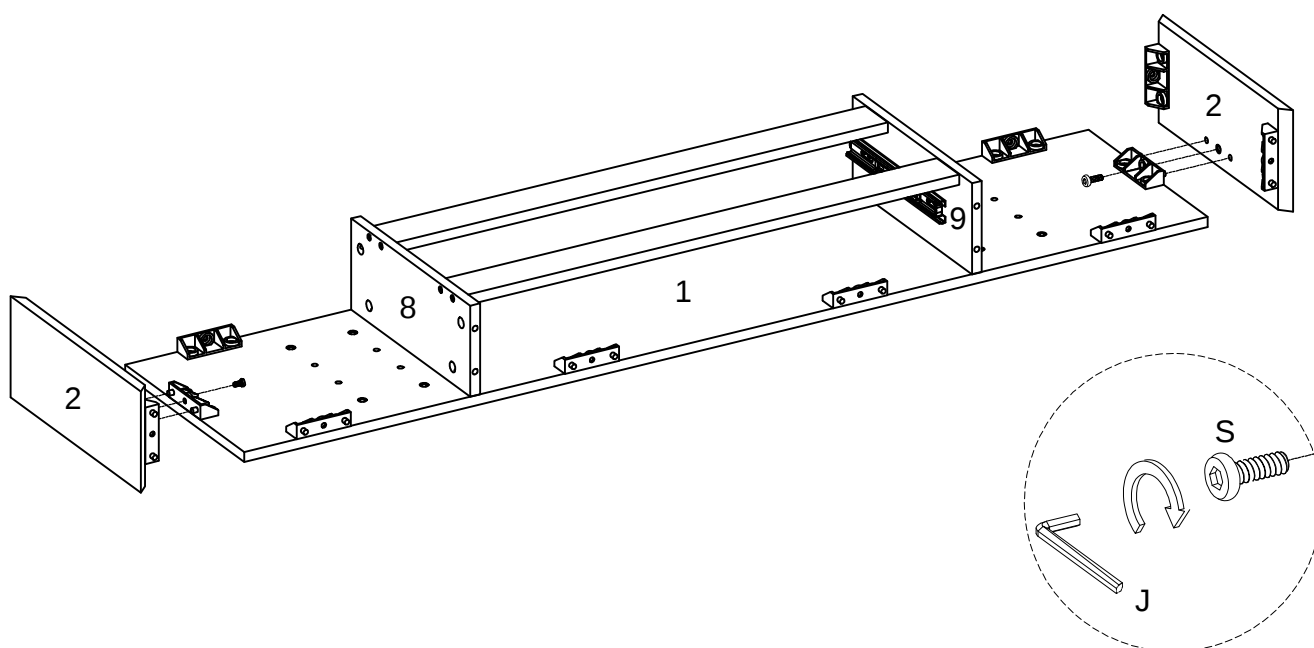



Step 10

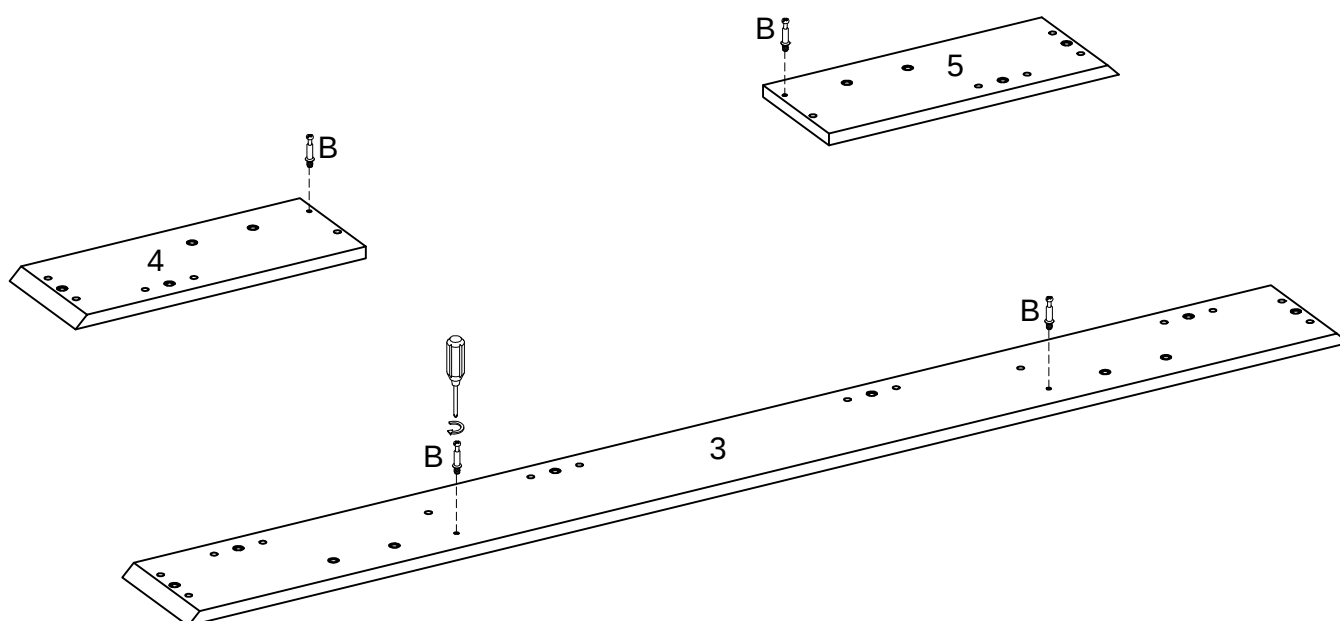


Step 11

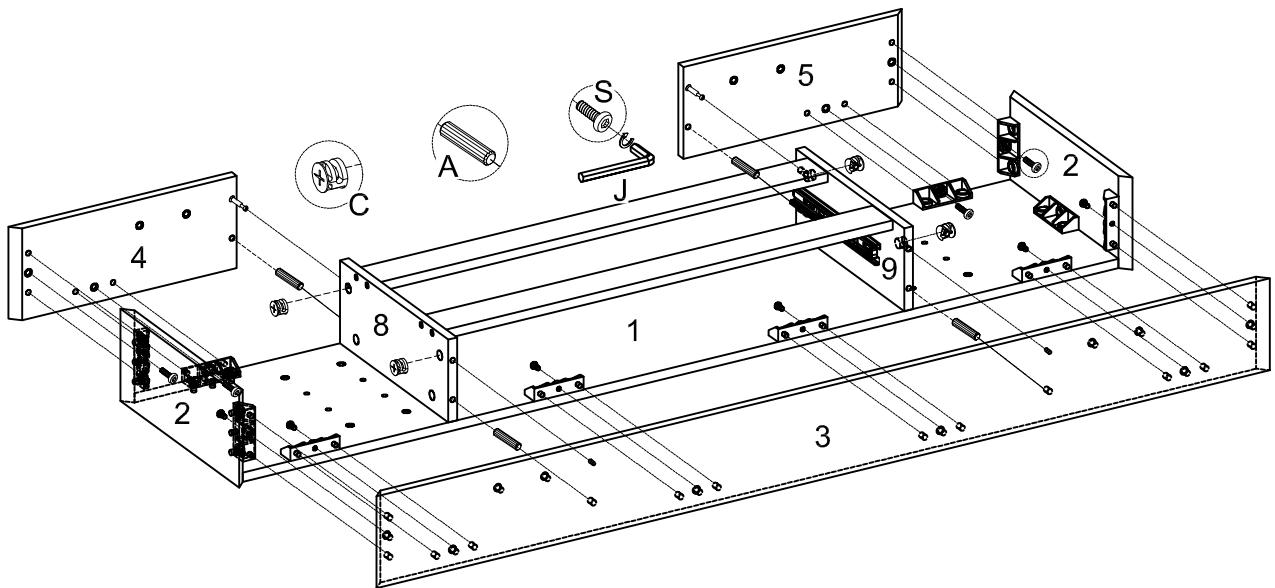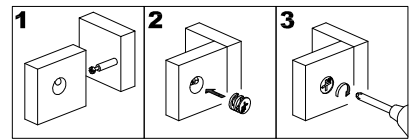

Step 12

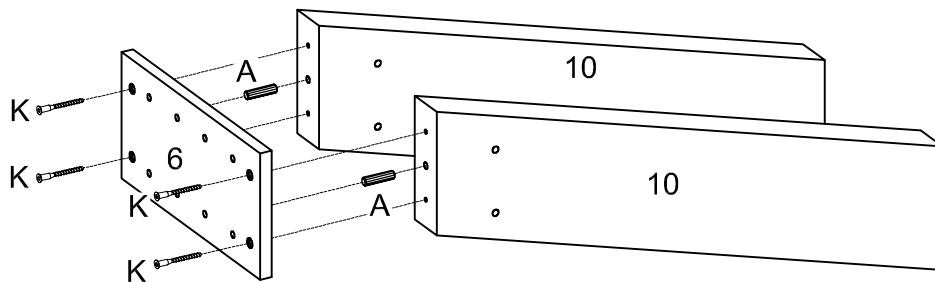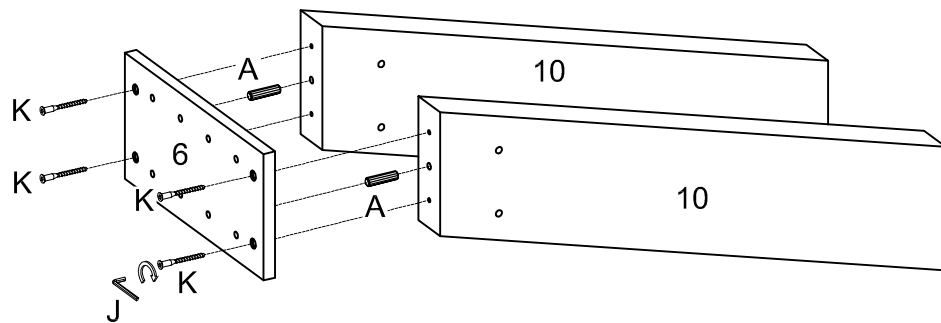


Step 13

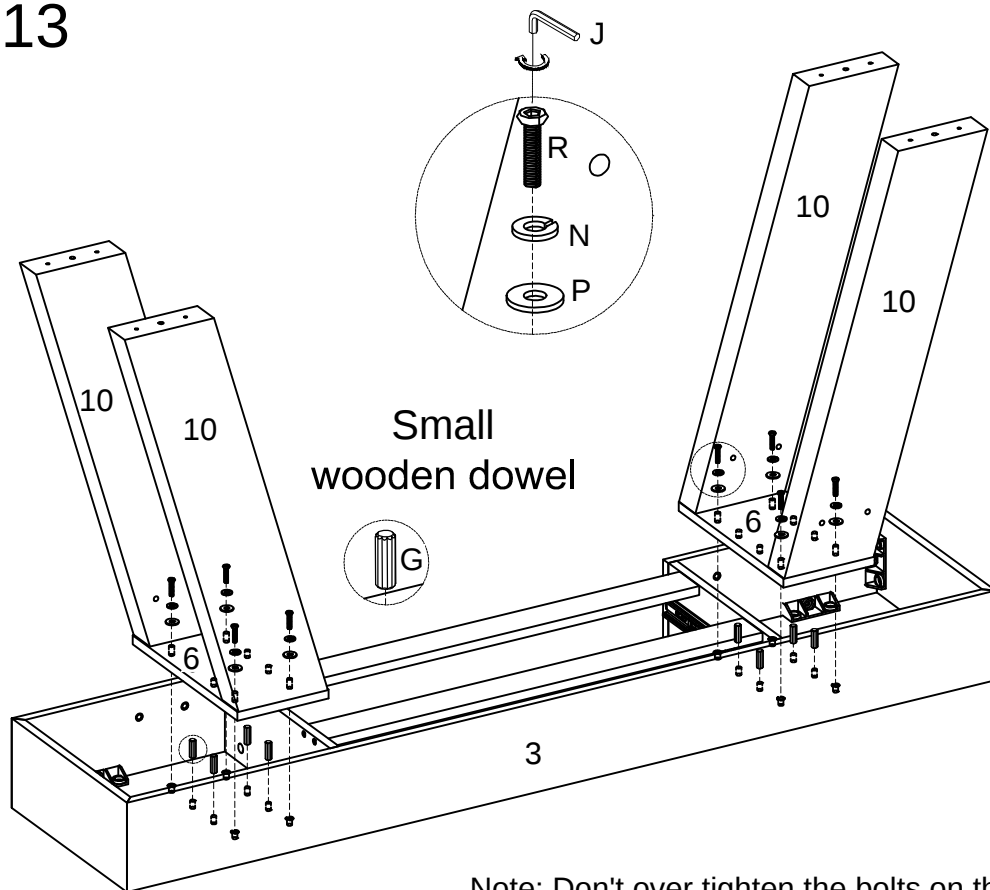


Note: Don't over tighten the bolts on this step.

Step 14

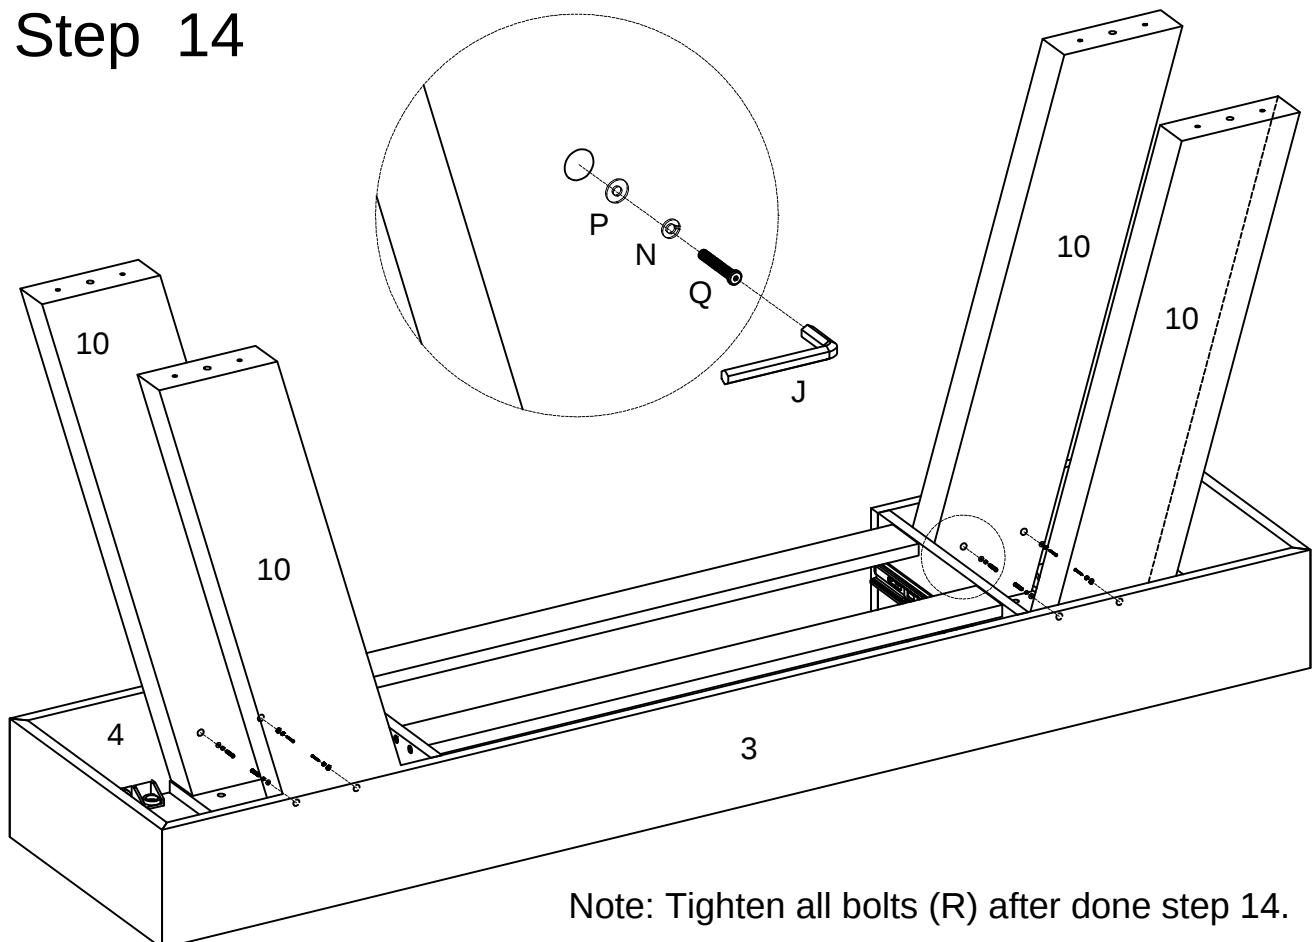


Note: Tighten all bolts (R) after done step 14.



Step 15

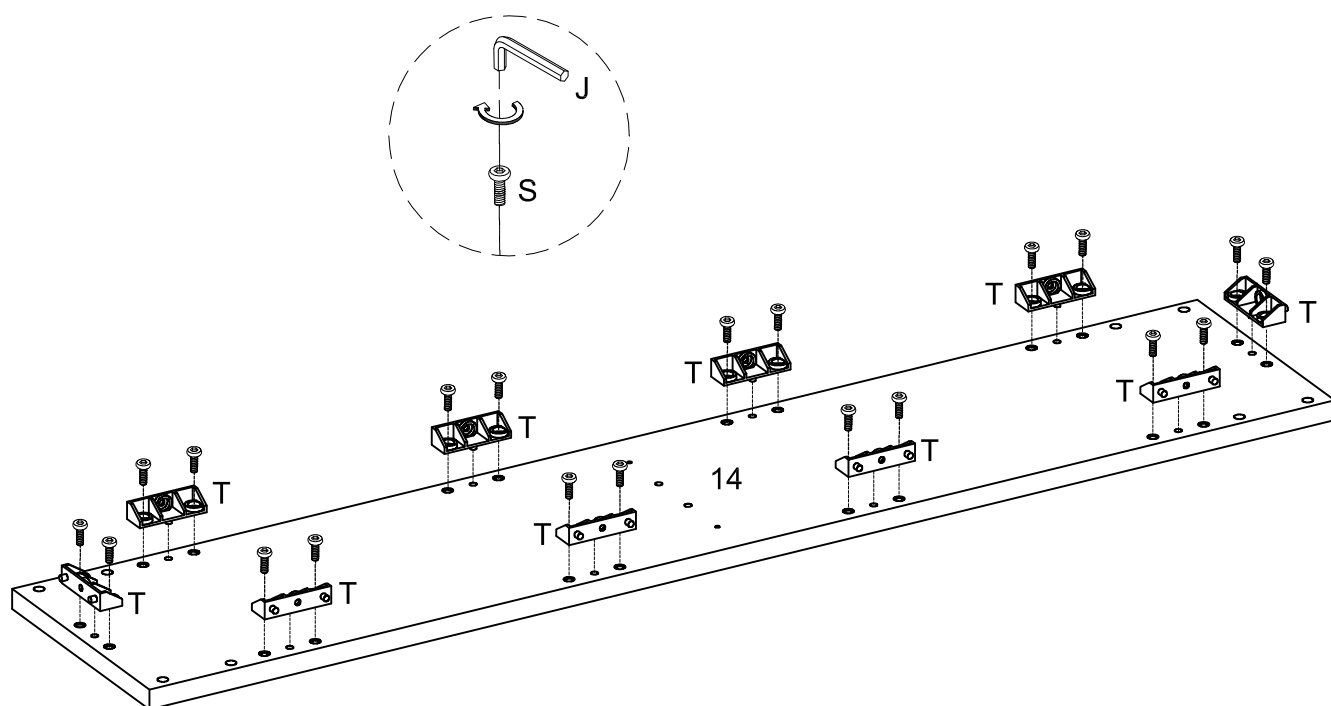



Step 16

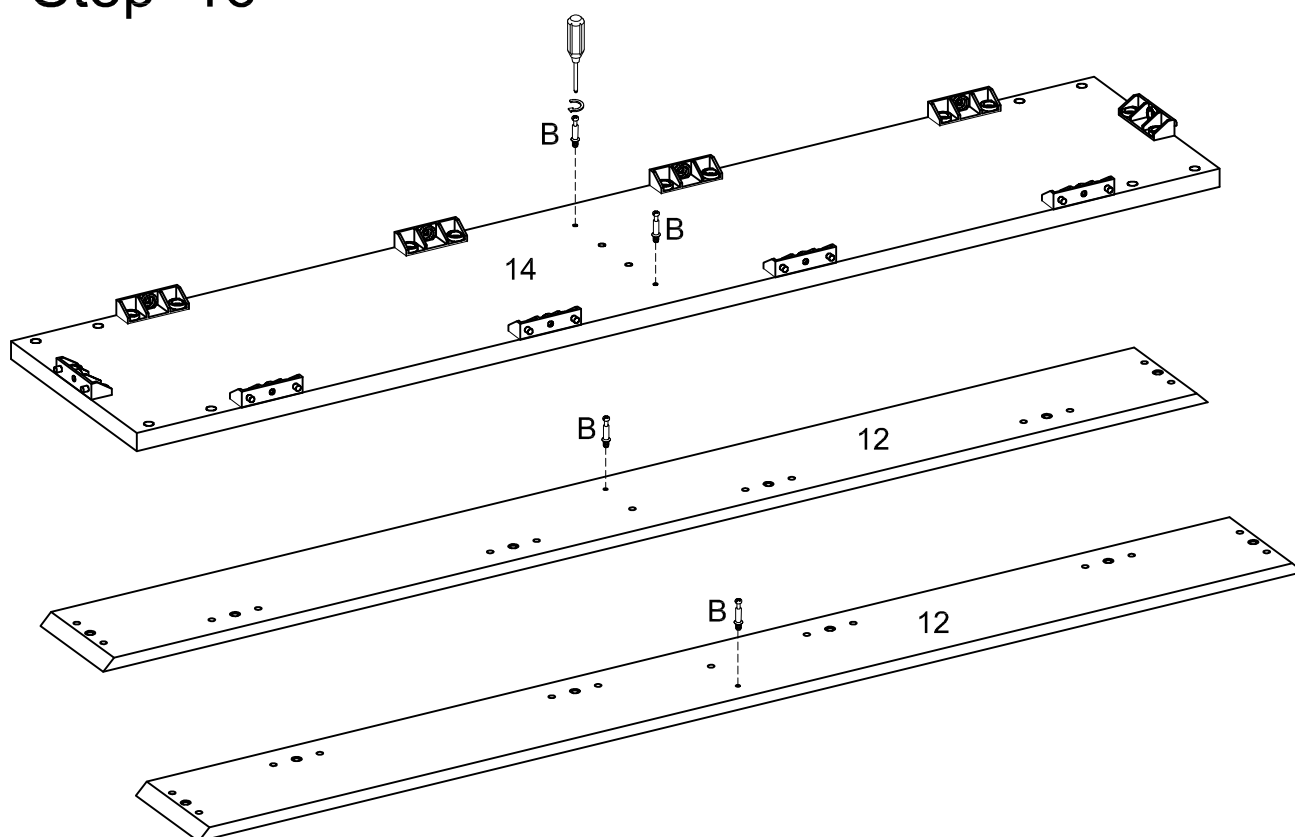


Step 17

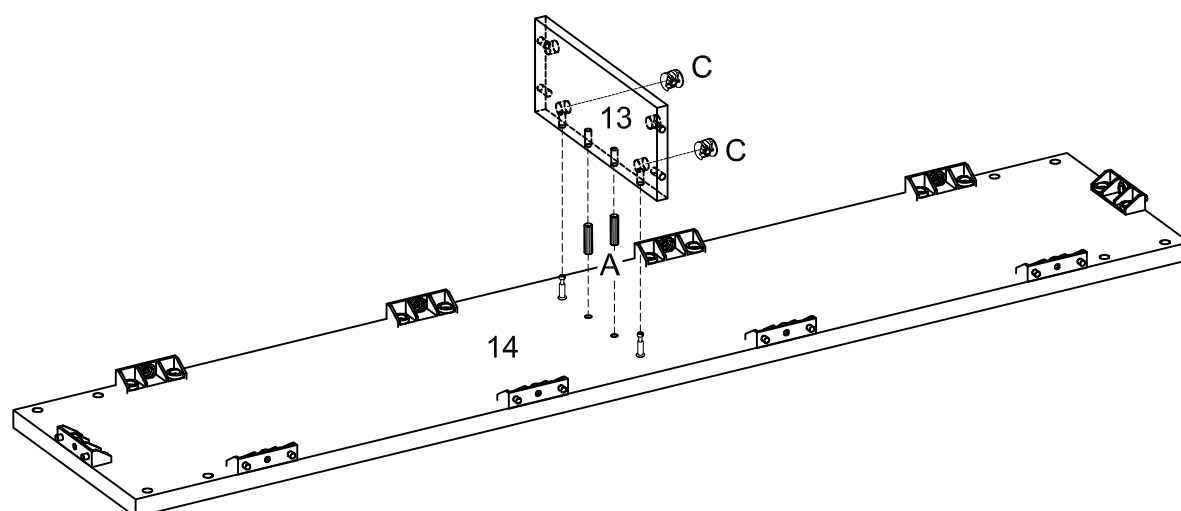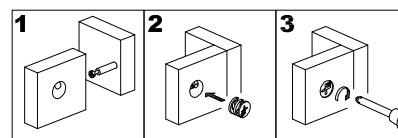


Step 18

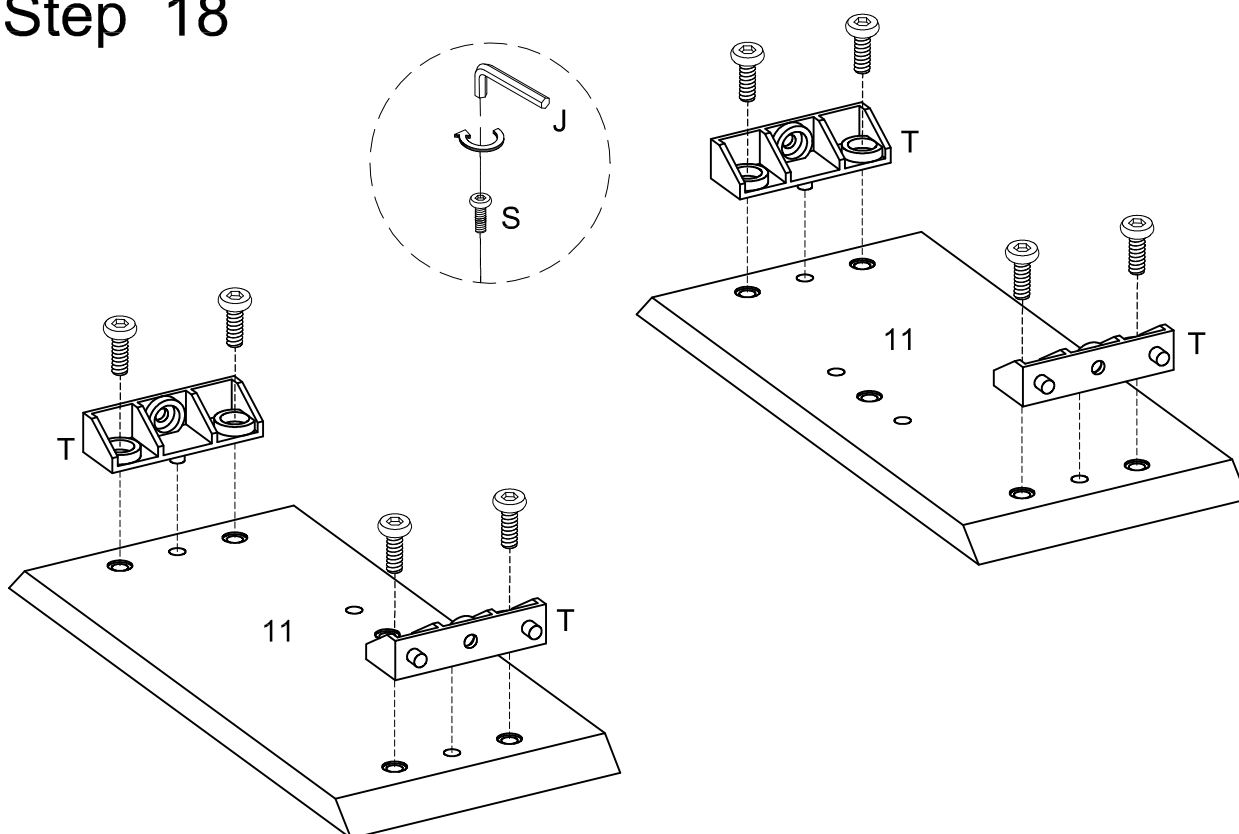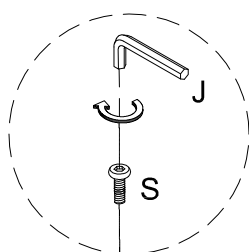


Step 19

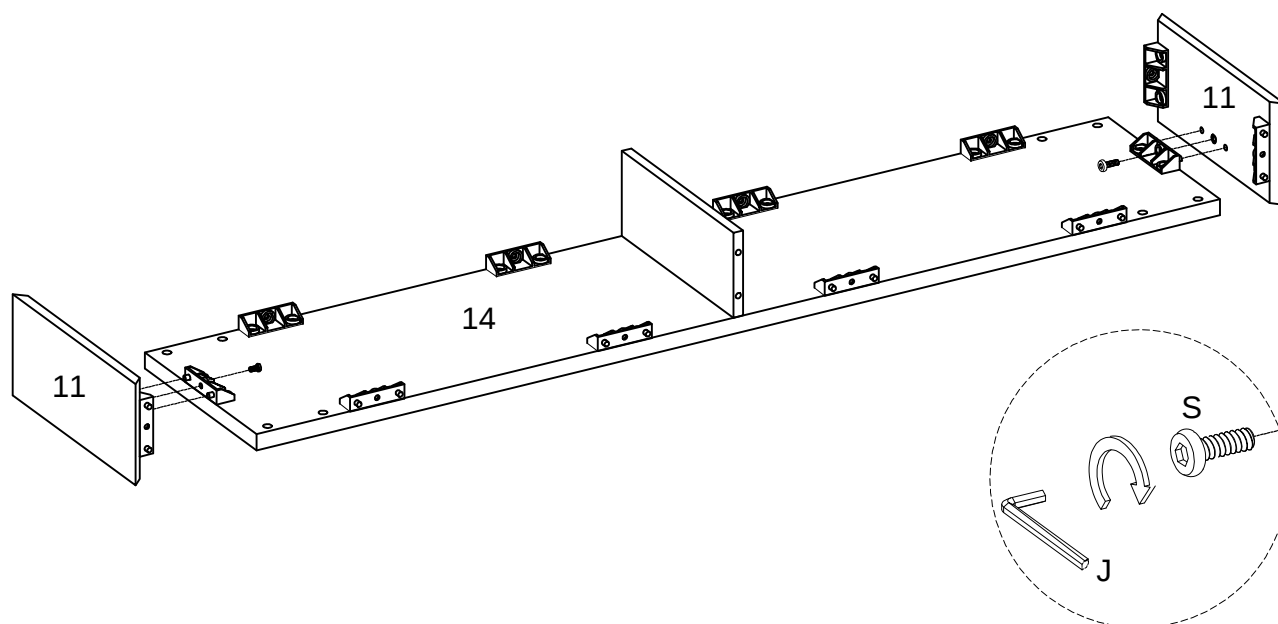


Step 20

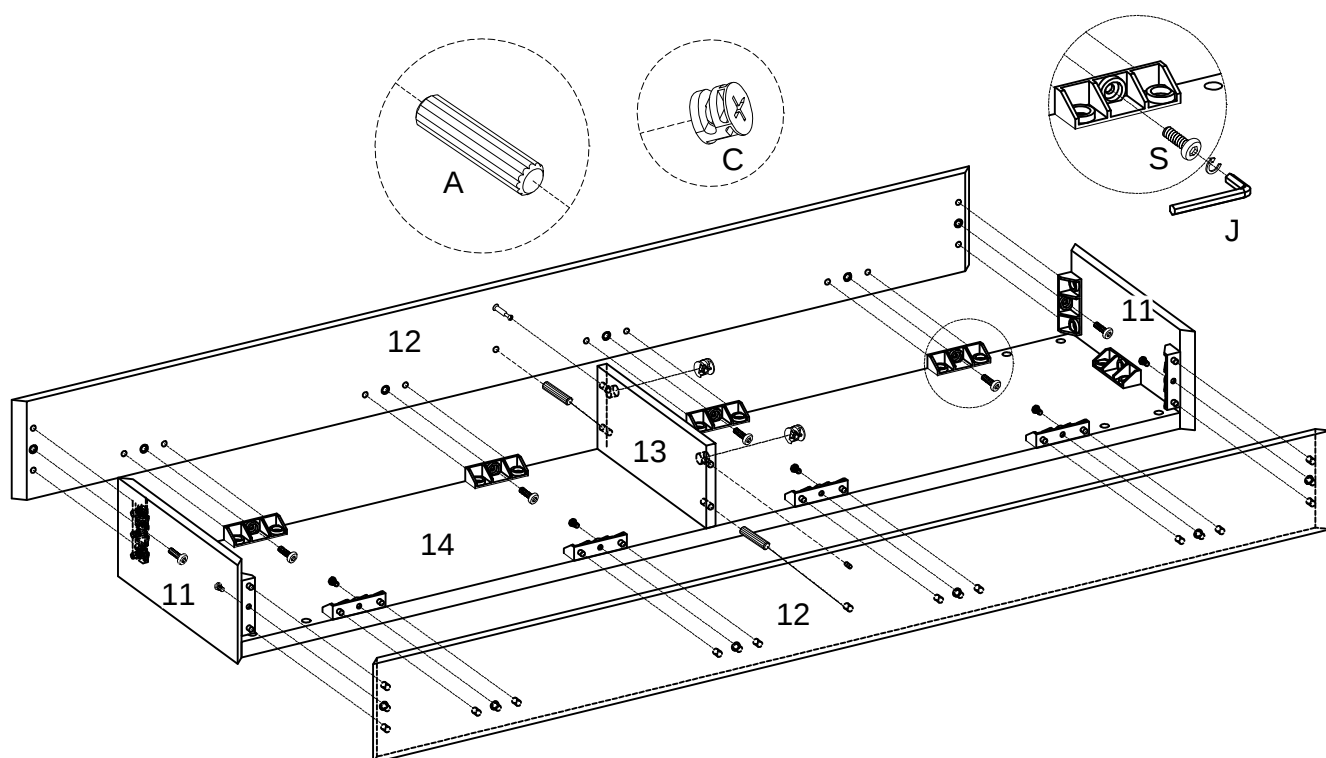


Step 21

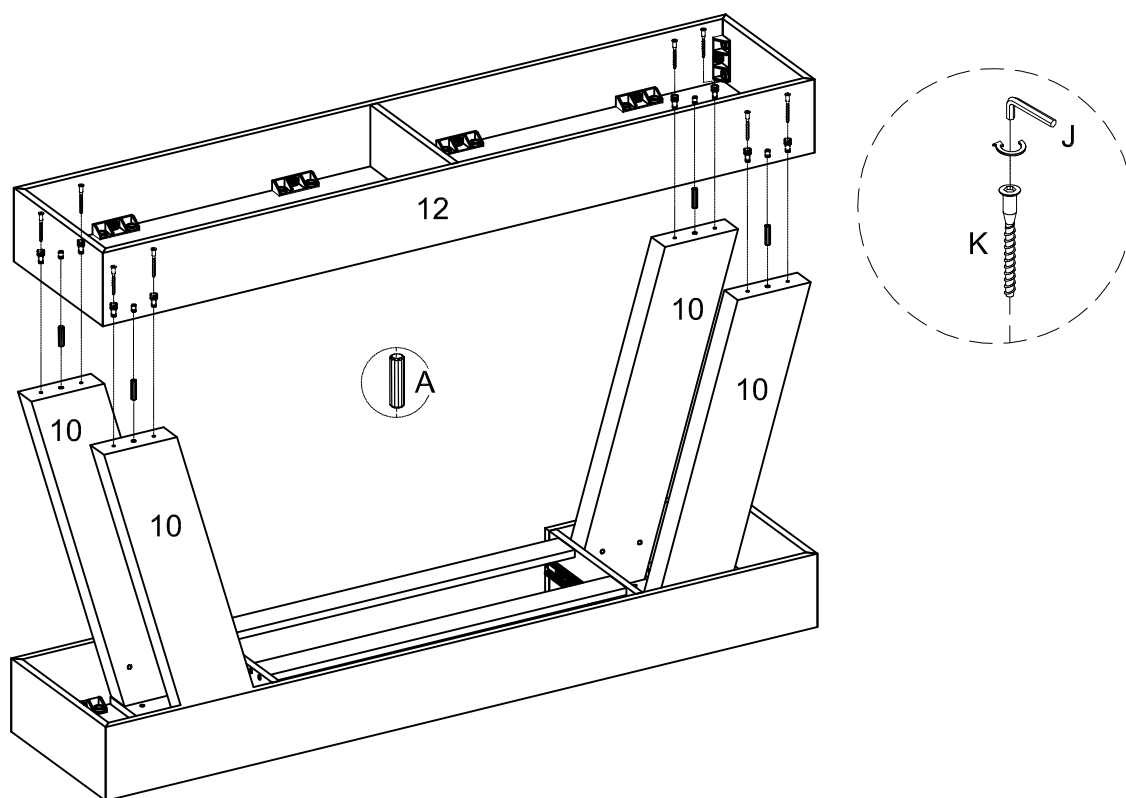


Step 22

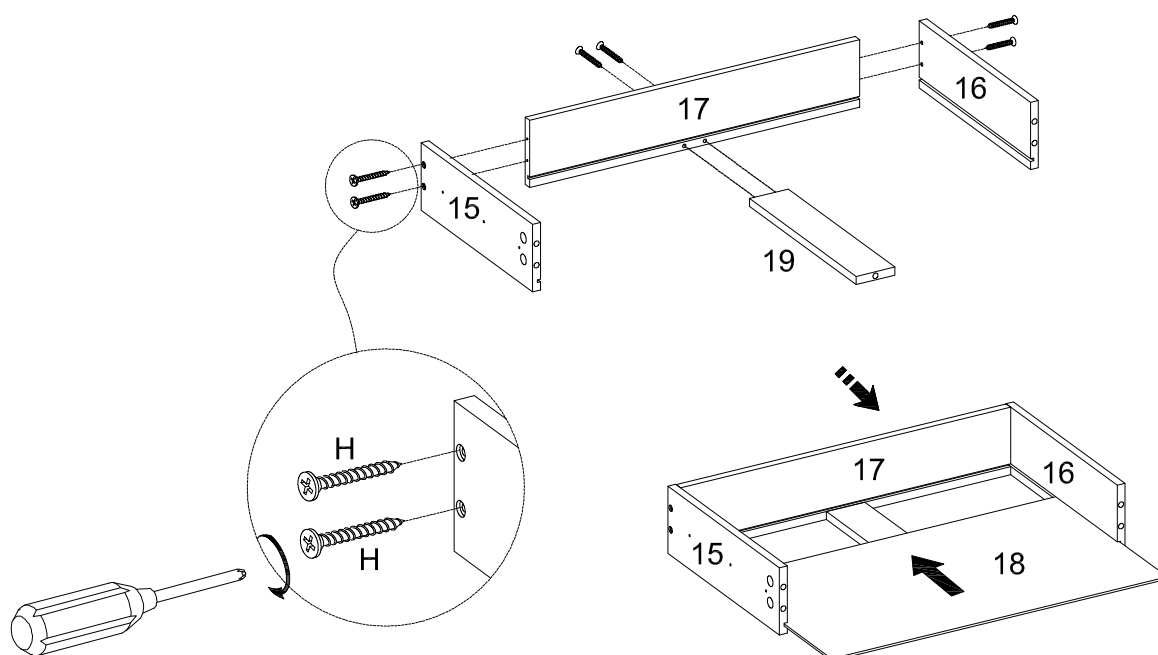




Step 23

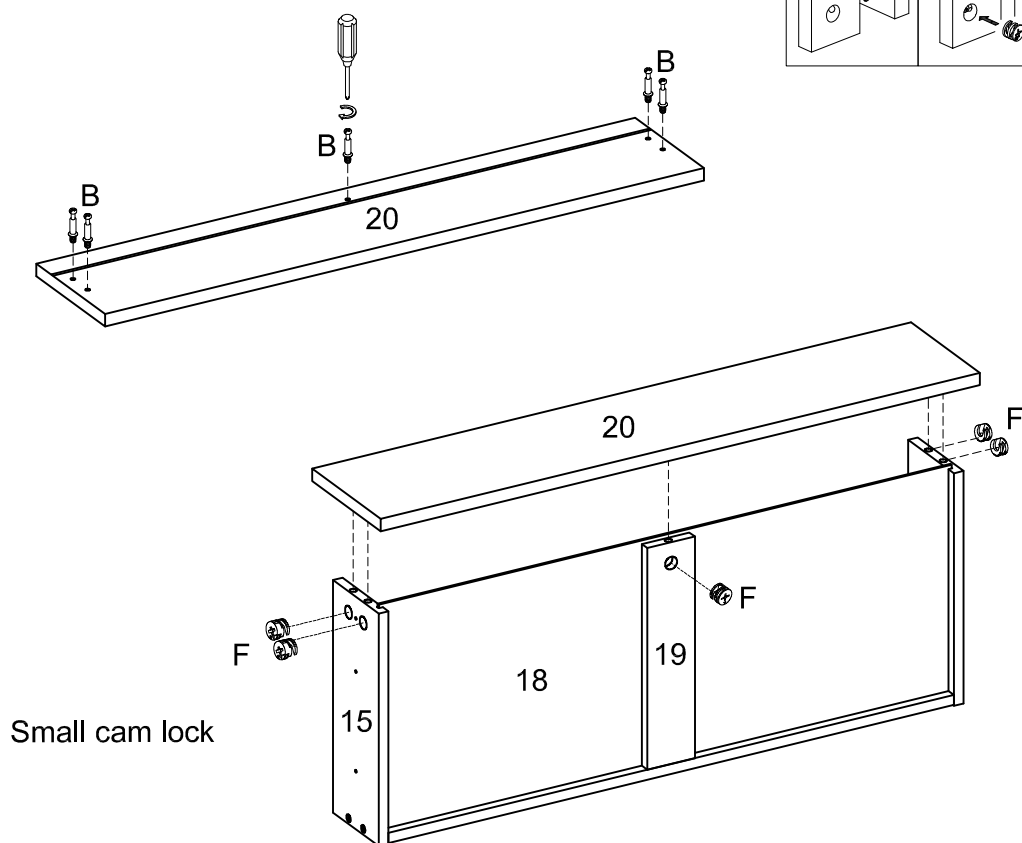


Step 24

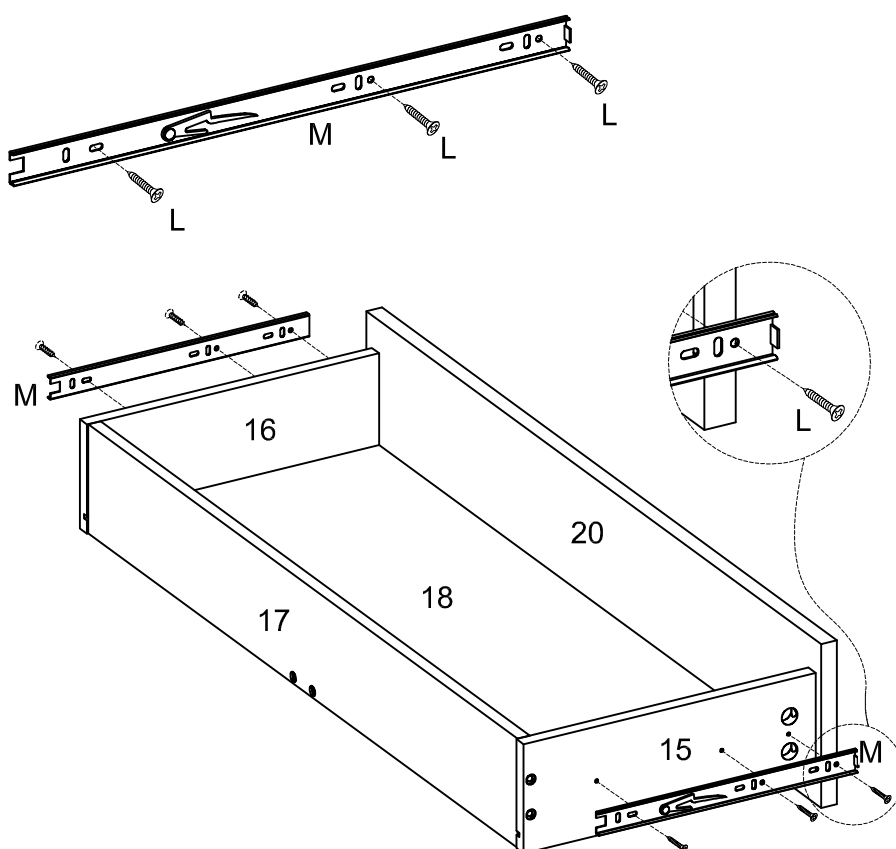


Step 25

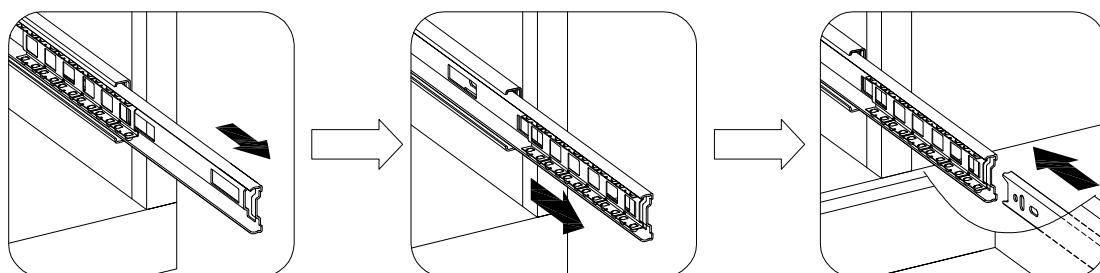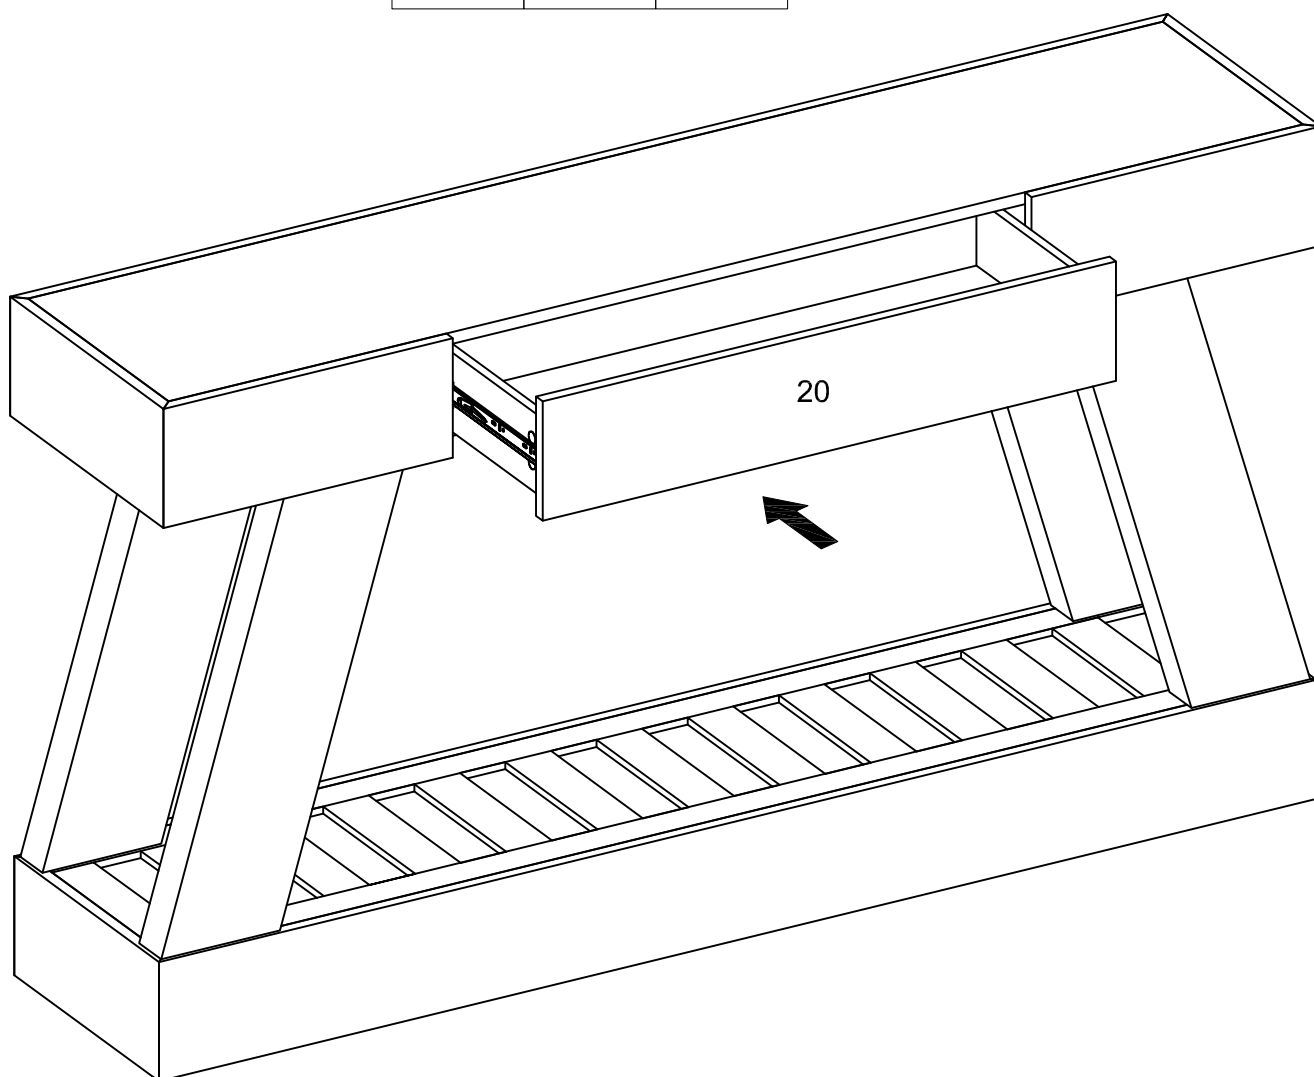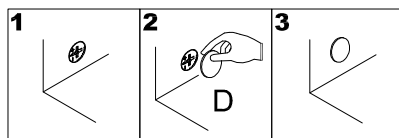


Step 26

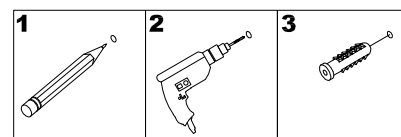

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

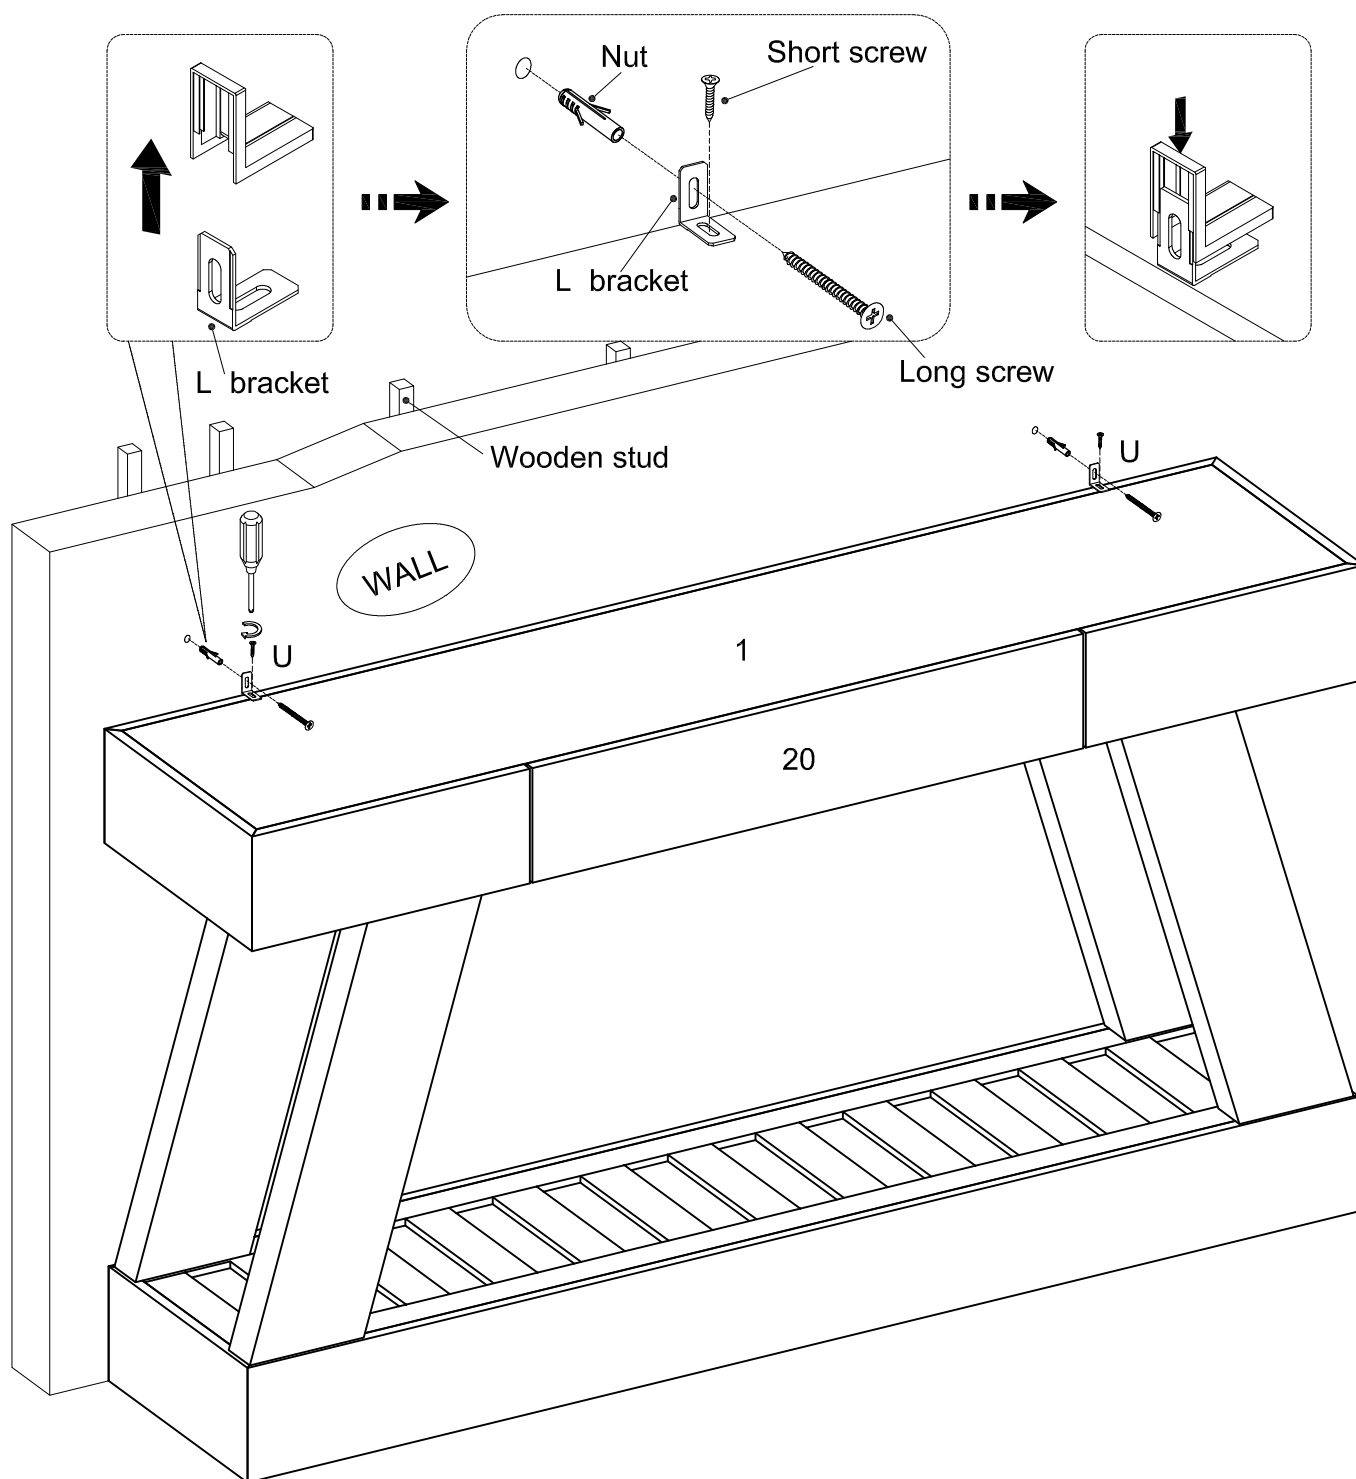

Step 27

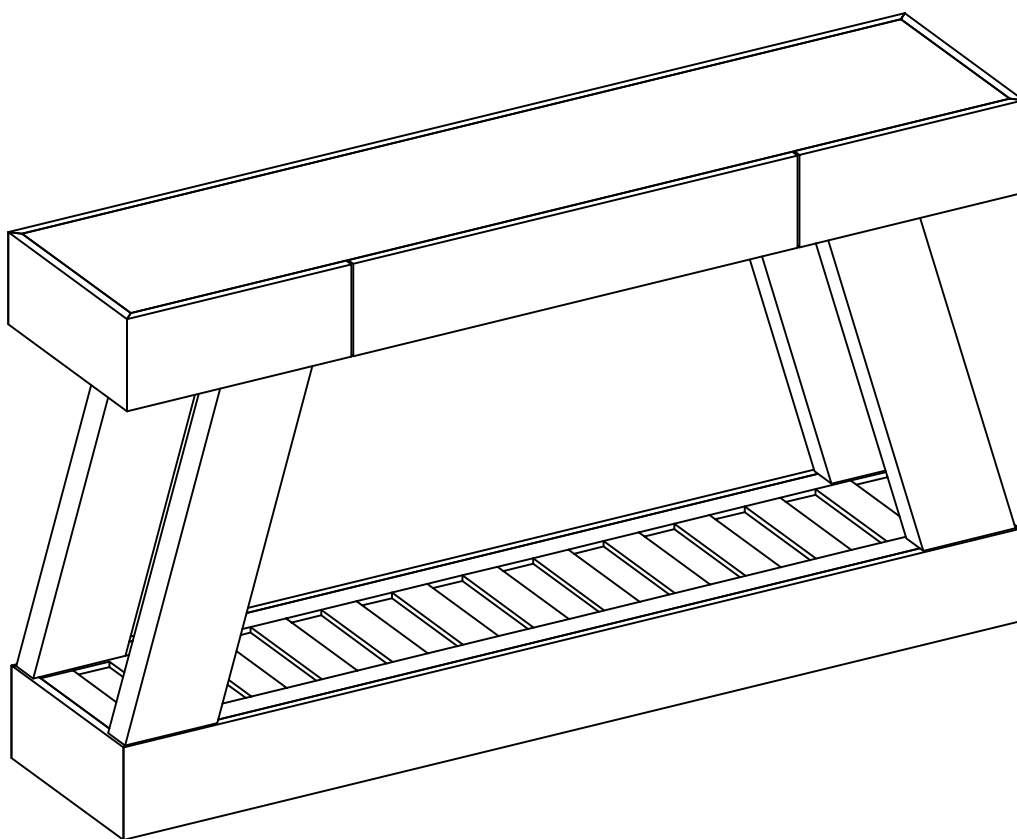

Final Assembly