


# Highbury



## FURNISHINGS

### FARMHOUSE PINE SLAT BOTTOM 54" SINGLE VANITY

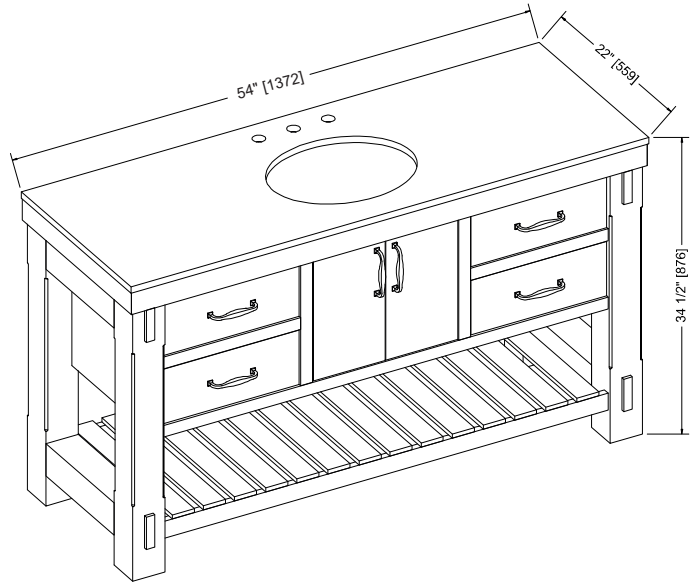

Measures: inch [millimeter]

## DIMENSIONS/DIMENSIONES

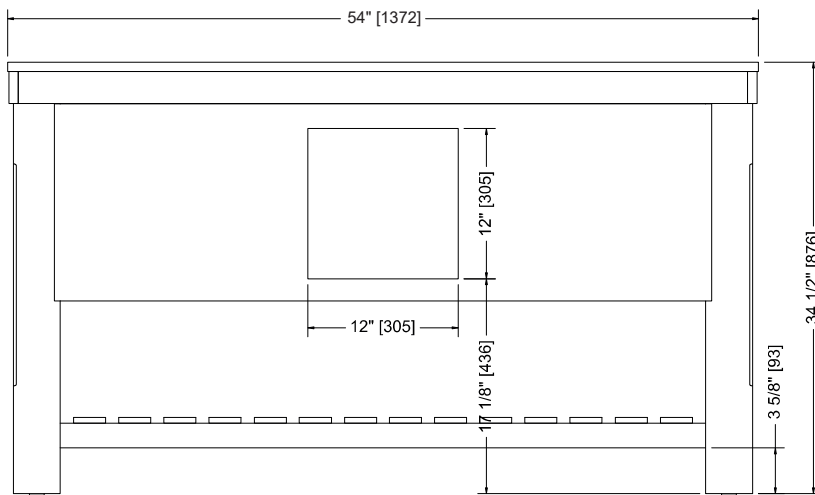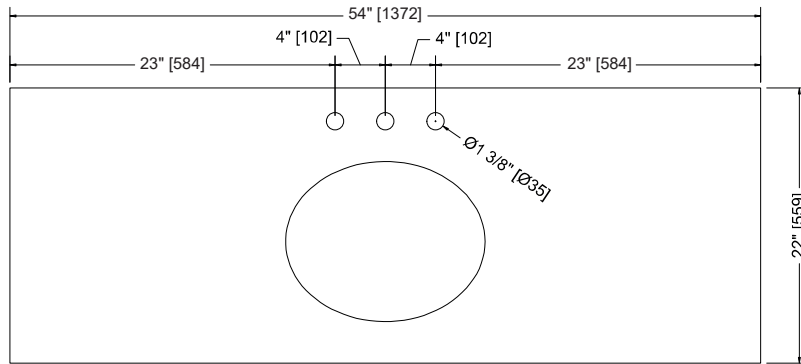

### Installation Manual

- Carefully read the instructions before starting the installation.
- This vanity should be installed by an experienced plumber.
- Drain pipe and drain trap are not supplied. Connect to an existing drain pipe.

### Manuel d'installation

- Lire attentivement ces instructions avant de débiter l'installation
- Cette vanité devrait être installée par un plombier professionnel.
- Drain et trappe non fournis. Connecter à un drain existant.

### Manual de instalación

- Lea las instrucciones antes de comenzar la instalación.
- Esta vanidad debe ser instalado por un experimentado plomero
- ubo de desagüe y sifón no se suministran. Conectarse a una tubería de drenaje.

**WARNING:** The Vanity must be securely fastened to the wall to prevent the possibility of tip over.  
Ce meuble se salle de bains a lavabo encastré doit être solidement fixé au mur pour éviter qu'il ne bascule.  
TenganCuidado asegurense que este mueble de baño con lavabo está bien fijado a la pared para que no se caiga.