



# Drawer Installation Instructions

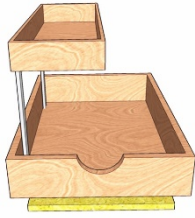


12 inch Width by 18 inches Depth. Designed as 2 layer drawer. The small upper box can be installed on the left or right sides.

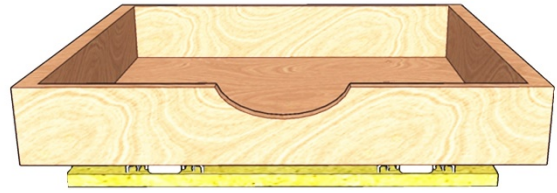

26 inches Width by 18 inches Depth. Designed as the base drawer. **Not including the small upper box.**


## How to Install:

**Press the black lever and then pull the rail to separate it from the drawer rail**

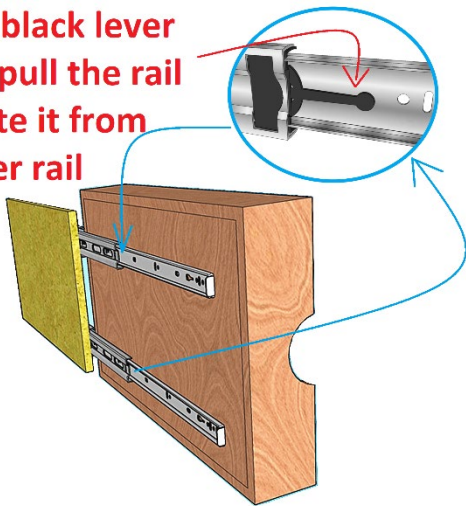

### Step 1

Separate the Bottom support Plate from the Drawer assembly. (Pull the black lever down on both sides, then pull the rail to disassemble the rails, Please refer to the picture)

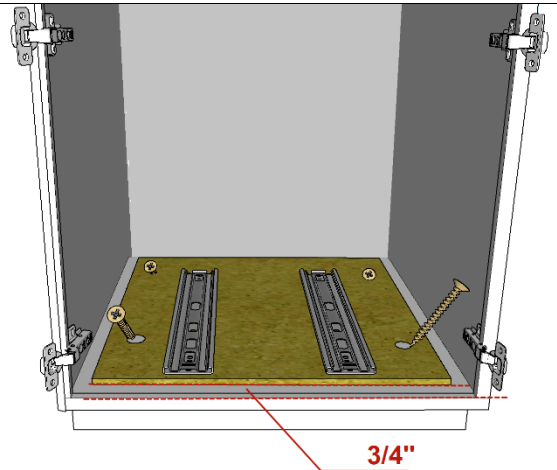


### Step 2

Place the Bottom support Plate  $\frac{3}{4}$  inches behind the front edge of the Cabinet. Fasten it to the cabinet with **1- $\frac{1}{4}$  inch screws** (Yellow color) through the pre-drilled holes.

### Step 3


Insert Drawer onto Bottom support Plate and slide back until you hear a click noise.

**Use 1/4" Long Screws (very short Nickel color Finish)**

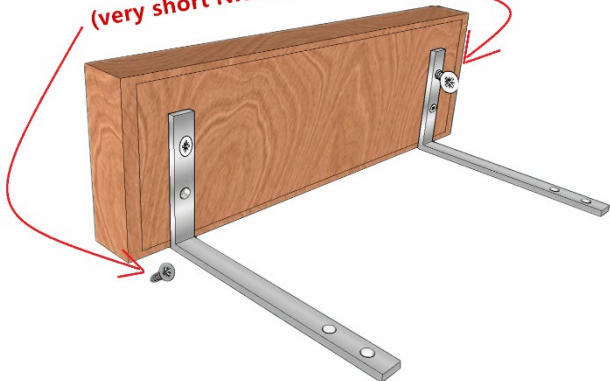

**Optional a)** Line up the metal L-brackets on the pre-drilled holes at the bottom of the small box. You need to screw it in using  $\frac{1}{4}$  inch screws (very short Nickel color finish)  
**\*\* Please ensure to use the correct  $\frac{1}{4}$  inch long screw here to prevent the screw from penetrating the box.**

**Use 1/2" Long Screws (silver color)**

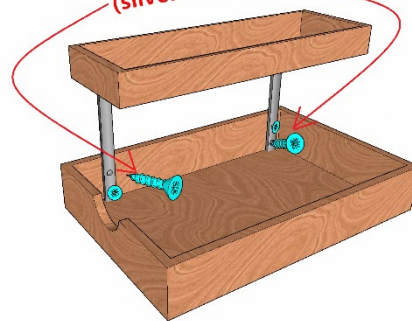

**Optional b)** Line up the Metal L-brackets on either left or right side of the bigger box. (Pre-drilled holes on both sides) depending on the obstructions in the cabinet.  
**\*\* Please ensure tighten with  $\frac{1}{2}$  inch Long screws.**