


Instruction Manual

Coffee Table

SHX-CJ001-X-1-S

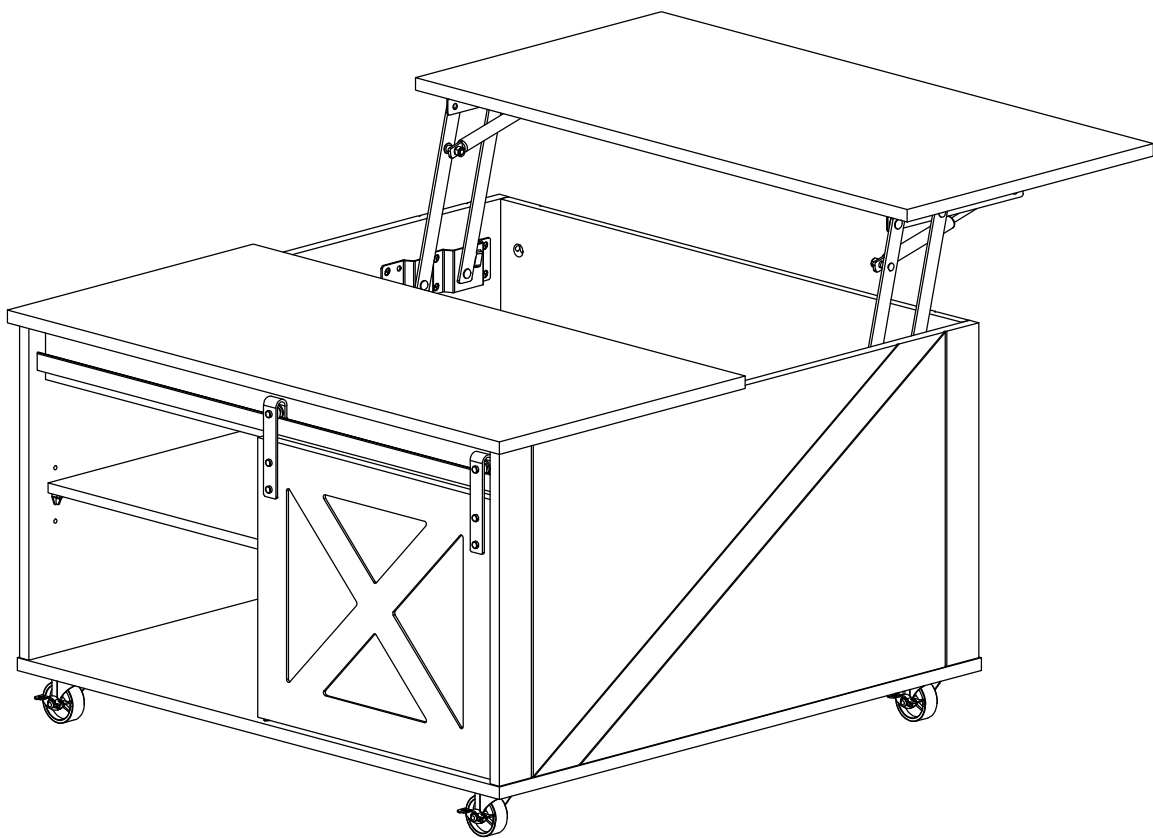


Thank you for shopping with us!


If any part is missing, broken upon receipt or you need any help from us.
For the FASTEST SOLUTION, please FIRSTLY CONTACT US at our
after-sales email:

CSsince1987@hotmail. com!


Power tool is recommended for the assembly.

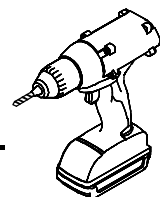













2-Person Assembly

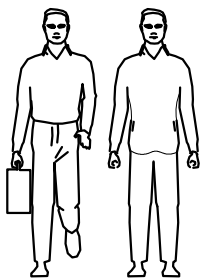














ASSEMBLY OVERVIEW

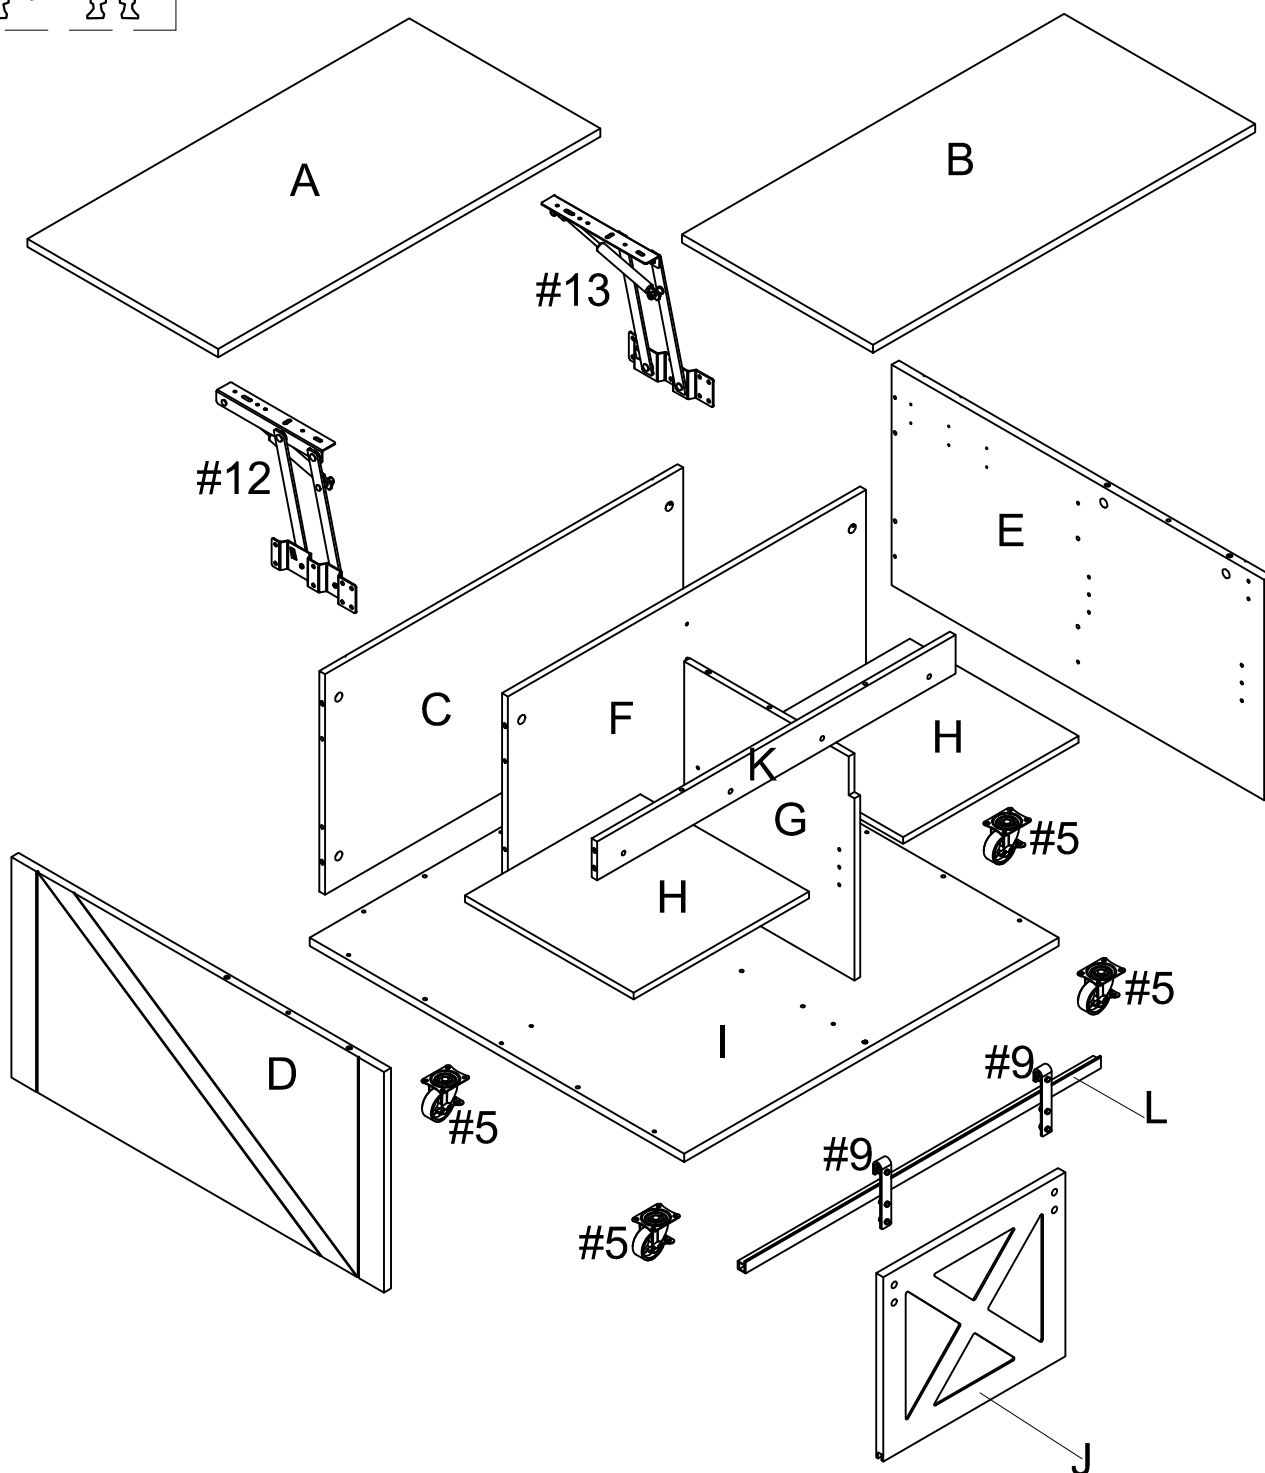

PART LIST

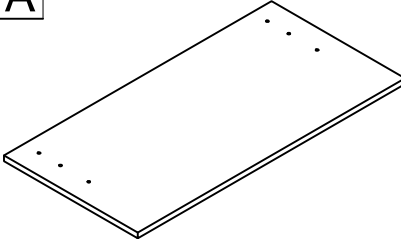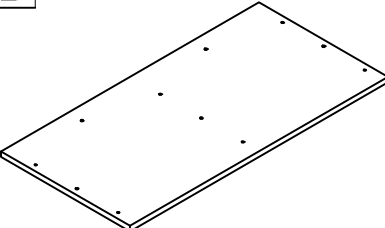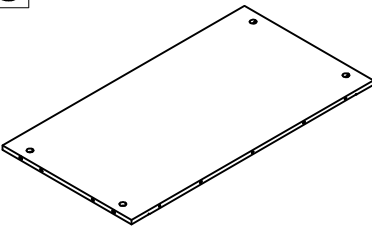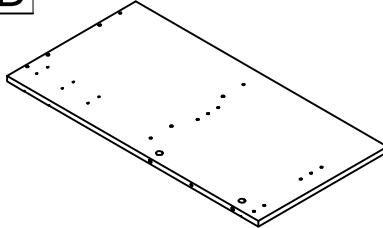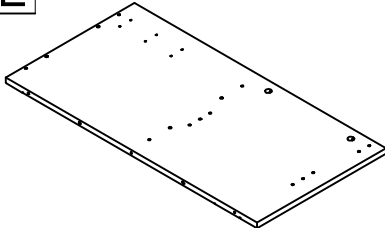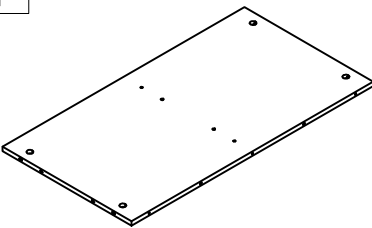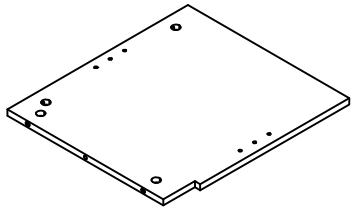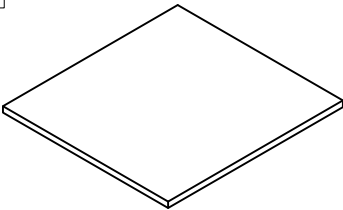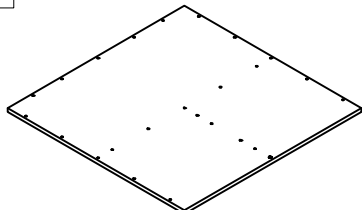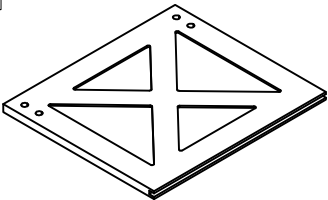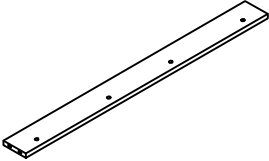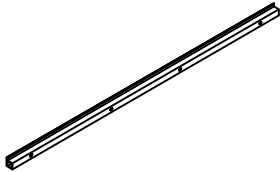A 	B 	C 
Rear Top Panel 1 PC	Front Top Panel 1 PC	Back Panel 1 PC
D 	E 	F 
Left Side Panel 1 PC	Right Side Panel 1 PC	Horizontal Partition 1 PC
G 	H 	I 
Middle Vertical Partition 1 PC	Adjustable Shelf 2 PCS	Bottom Panel 1 PC
J 	K 	L 
Door Panel 1 PC	Front Upper Horizontal Panel 1 PC	744*16.5*21mm Plastic Slide 1 PC

HARDWARE LIST
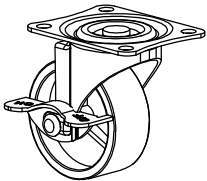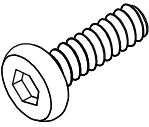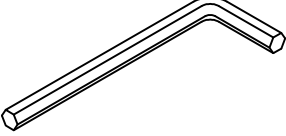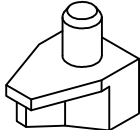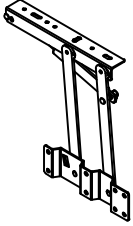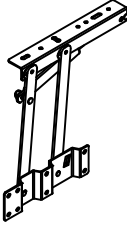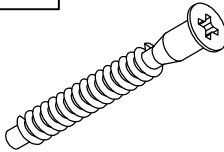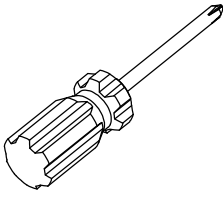
#1  Ø6*35mm Cam-bolt 20 PCS (Extra 3)	#2  Ø15*9mm Cam-lock 20 PCS (Extra 3)	#3  Ø6*30mm Wood Dowel 25 PCS (Extra 4)	#4  Ø4.5*12mm Screw 28 PCS (Extra 4)
#5  52*52*63mm Caster With Lock 4 PCS	#6  M6*12mm Short Bolt 10 PCS (Extra 2)	#7  M6*18mm Long Bolt 4 PCS (Extra 1)	#8  4mm Allen Wrench 1 PC
#9  116*20*22mm Door Hanger 2 PCS	#10  M5*18mm Round iron pillar 1 PC	#11  16*11*Ø5mm Shelf Holder 8 PCS (Extra 2)	#12  309*37*239*2mm Left Support bracket 1 PC
#13  309*37*239*2mm Right Support Bracket 1 PC	#14  Ø10*2mm Bumper 8 PCS (Extra 1)	#15  Ø5*40mm Screw 14 PCS (Extra 2)	 Phillips Screwdriver 1 PC

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

- 1). Remove all packaging materials, staples and packing straps from the carton.
- 2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
- 3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
- 4). Allow ample room for assembly and assemble the product near where the product will be placed.
- 5). During assembly, do not over-tighten any fittings as this may cause damage.
- 6). Always place the product on a flat, level surface.

2. CARE AND MAINTENANCE

- 1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- 3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.
- 4). Avoid placing your furniture in direct sunlight, as sunlight causes fading.

3. Return Policy

- 1). Contact the seller in advance for support if you choose to return the product.
- 2). Ensure that the product is in good condition and returned with the original packaging, along with all original proof of purchase, manuals, certificates, and accessories included.
- 3). Disassemble any items that required assembly before returning the product.

4. Warning

Seller is responsible for the product-related issues occurred upon receipt, but will not be responsible for the personal injury, property damage or loss resulting from the incorrect assembly, improper use, inadequate maintenance or neglect of this product.

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

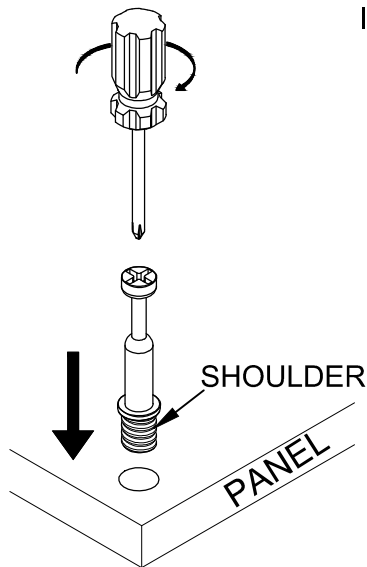

Place Cam-bolt on pre-drilled hole and screw in vertically

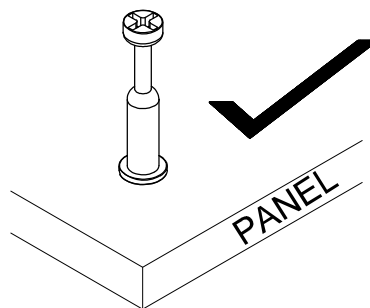


Shoulder is flushed (on the same level) with the panel.

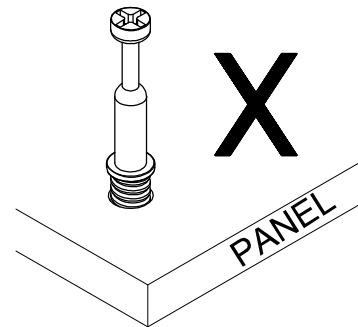


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

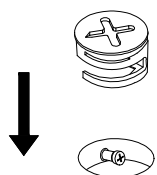

Insert Cam-lock with arrow align to Cam-bolt head

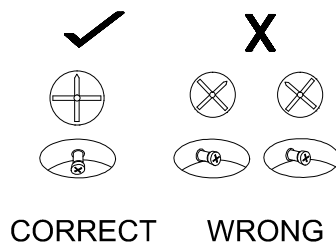


CORRECT

WRONG



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK


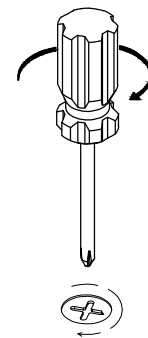


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


Step 1.

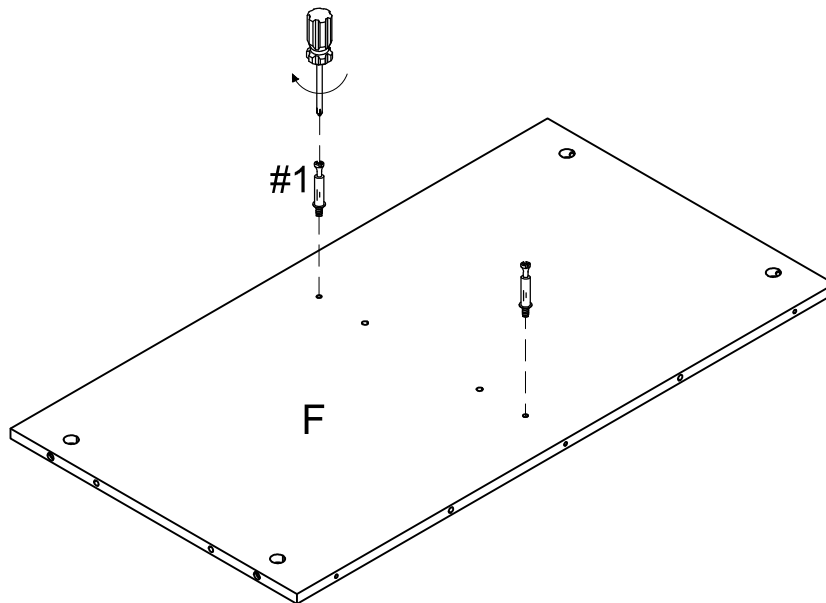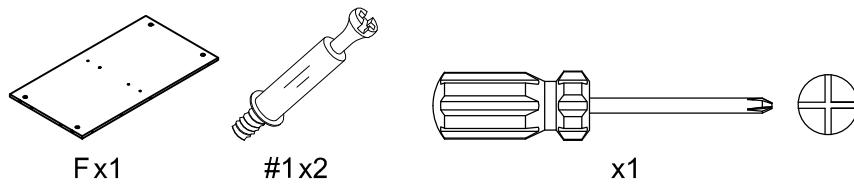


Step 2.

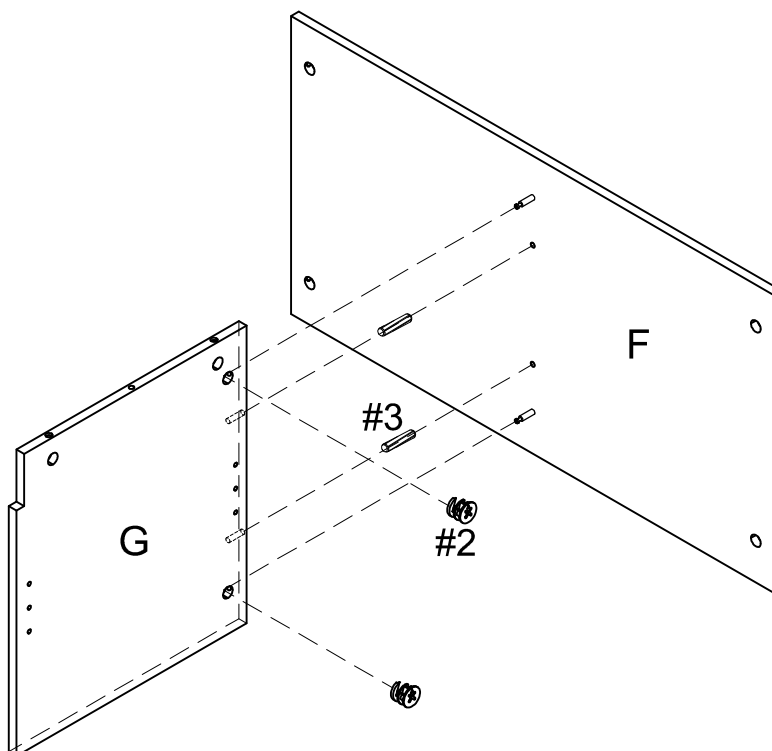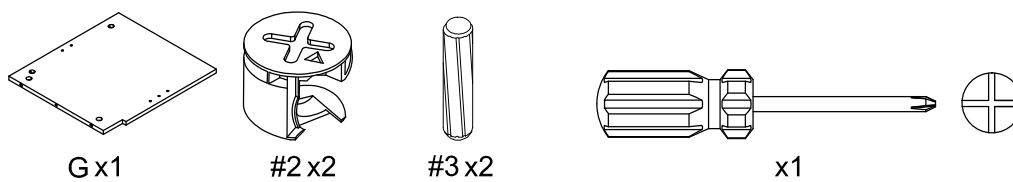


Note: Tighten #2 or it will cause wobble.

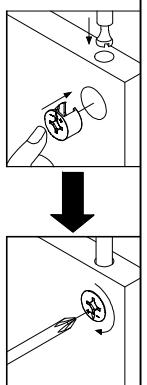


Step 3.

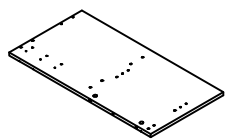


Dx1

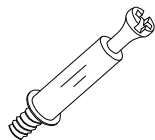

#1x6



x1

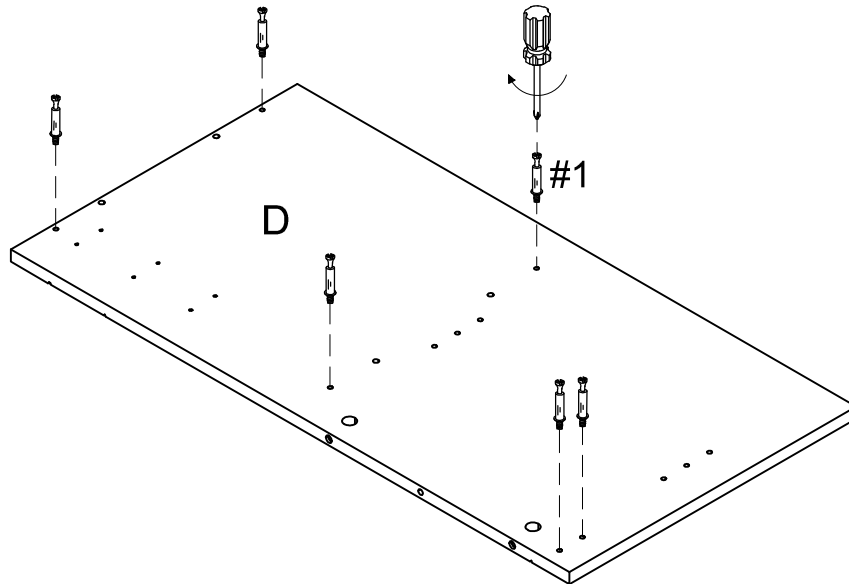


Step 4.




#2 x2




#3 x2





x1

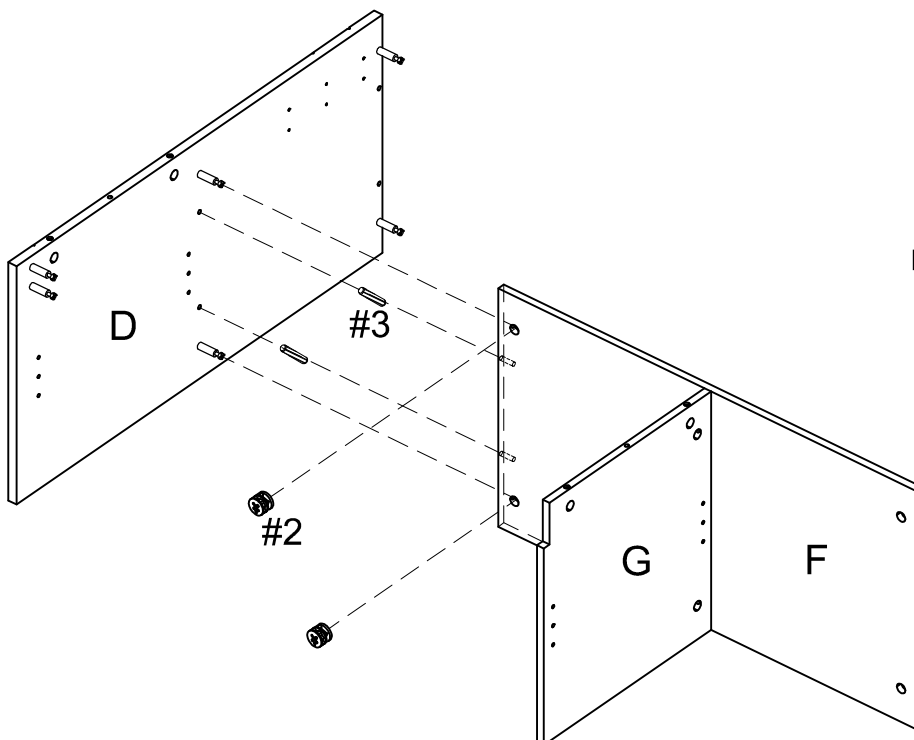


Note: Tighten #2 or it will cause wobble.

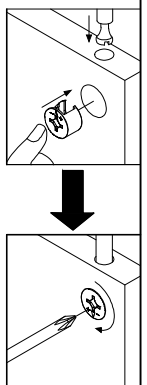



Step 5.

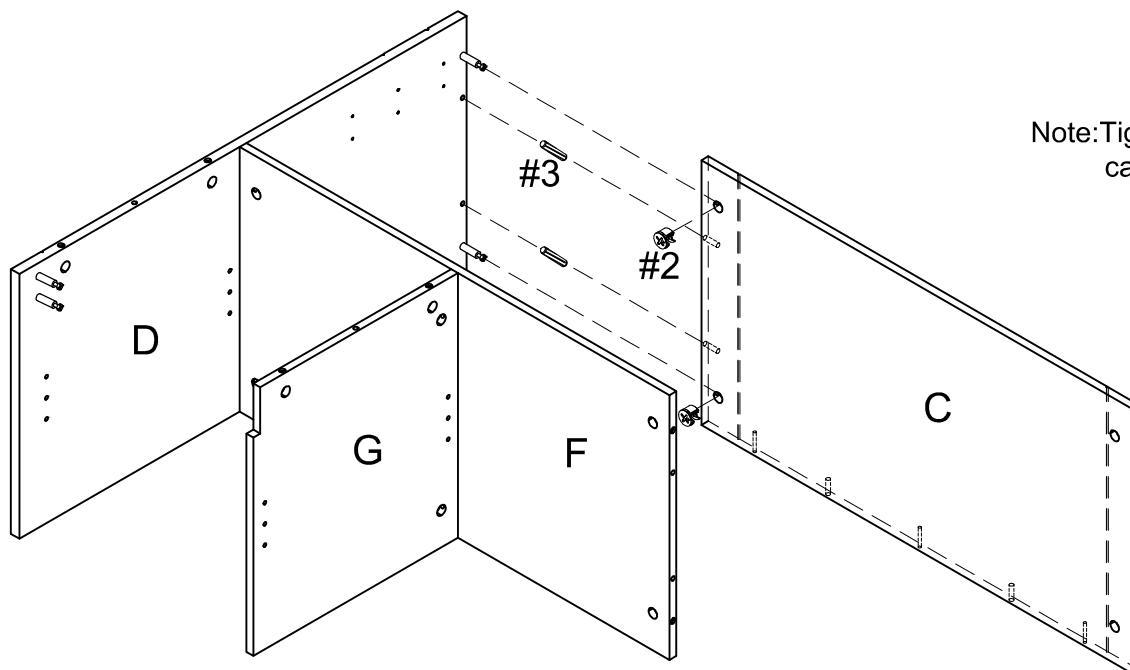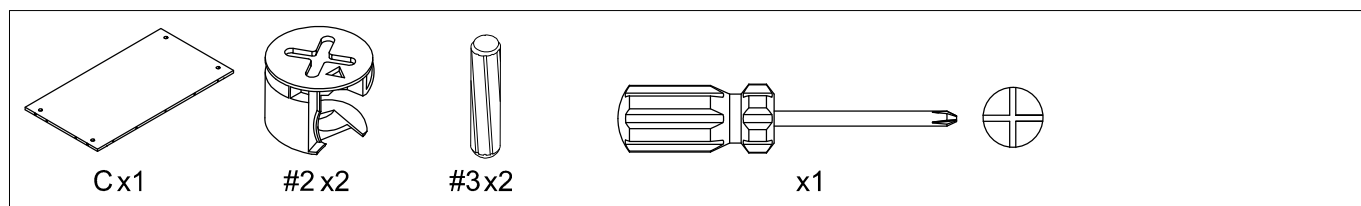

Note: Tighen #2 or it will cause wobble.

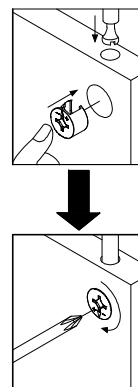


Step 6.

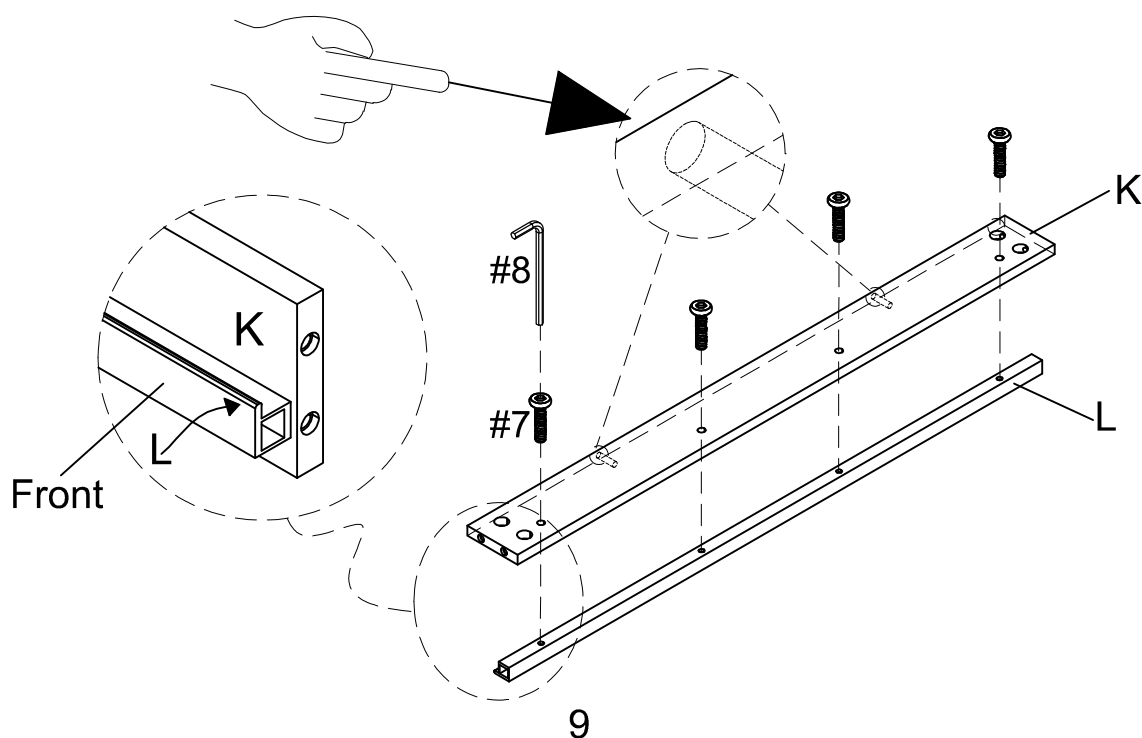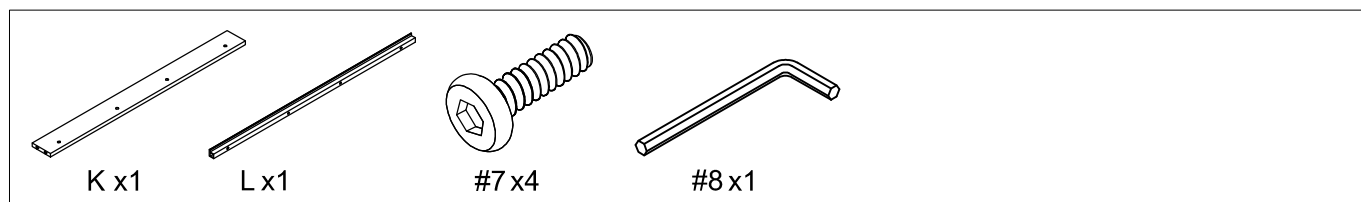


Step 7.




#2 x2




x1

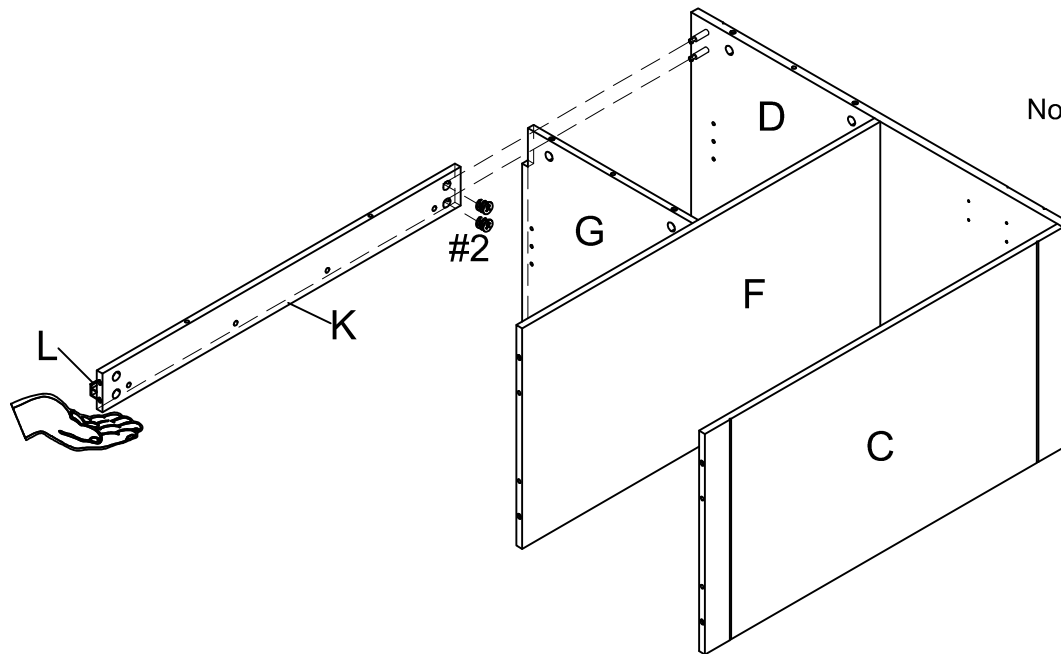


Note: Tighten #2 or it will cause wobble.

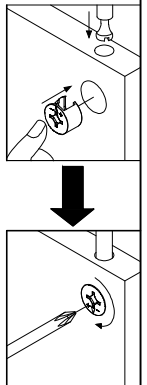


Step 8.

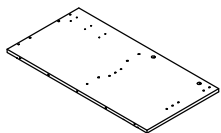


E x1

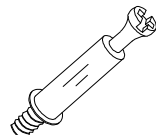

#1x6



x1

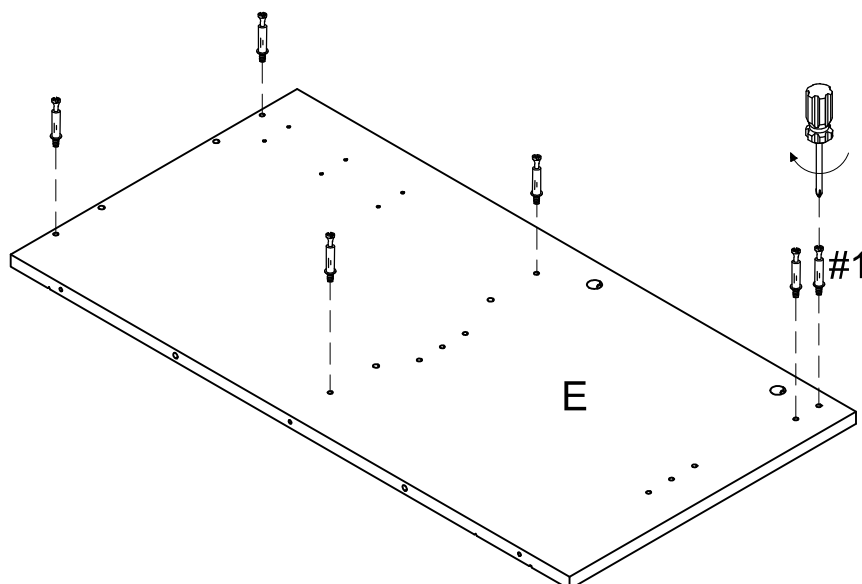


Step 9.






#2 x6



#3 x4




x1

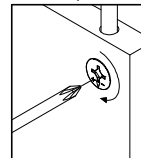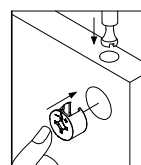
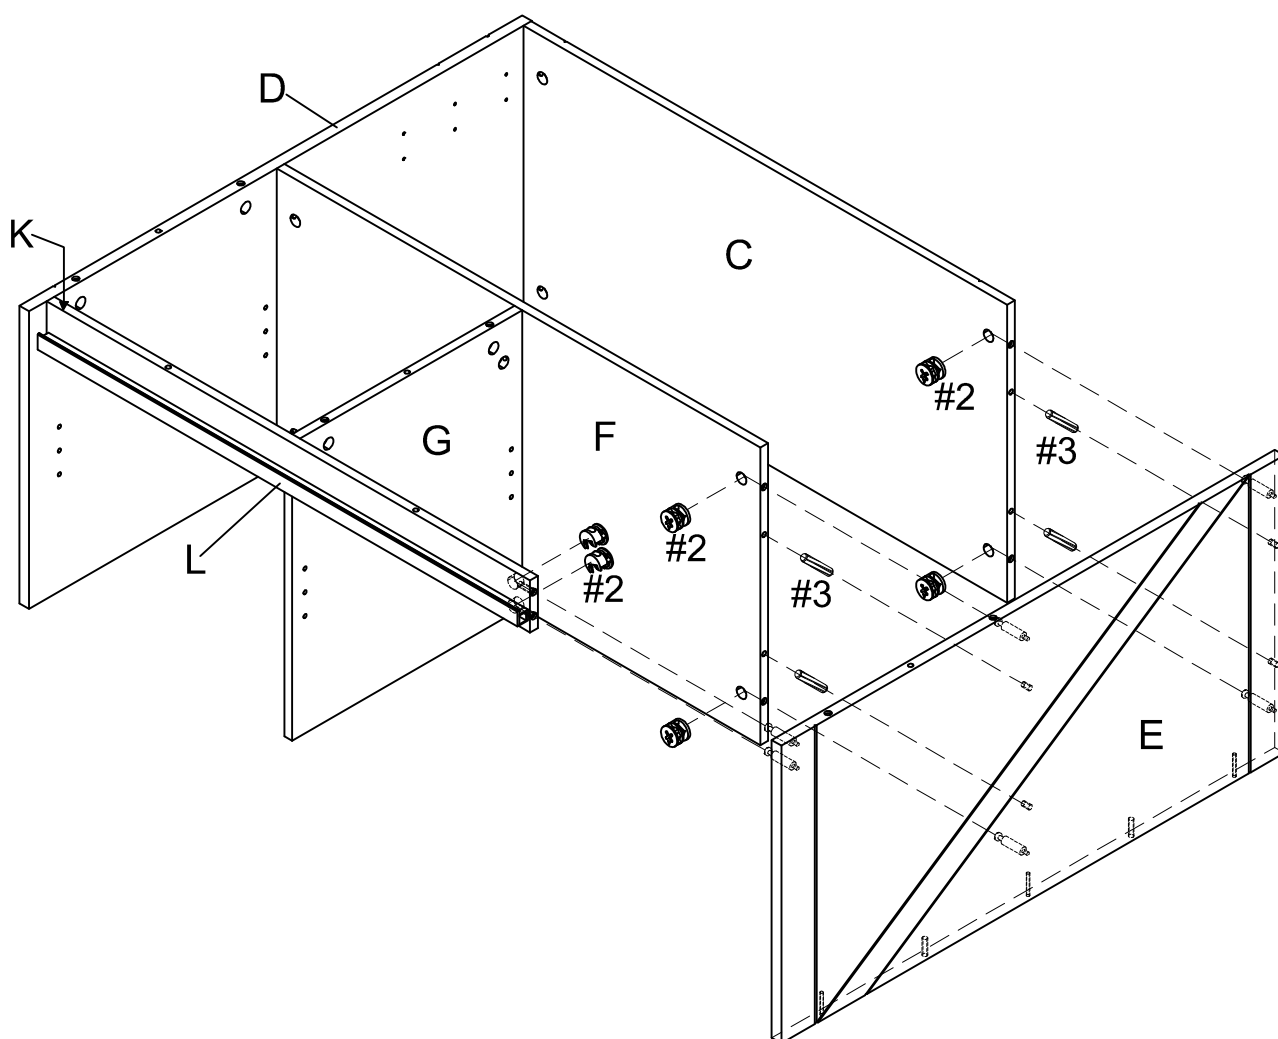


Note: Tighten #2 or it will cause wobble.


Step 10.

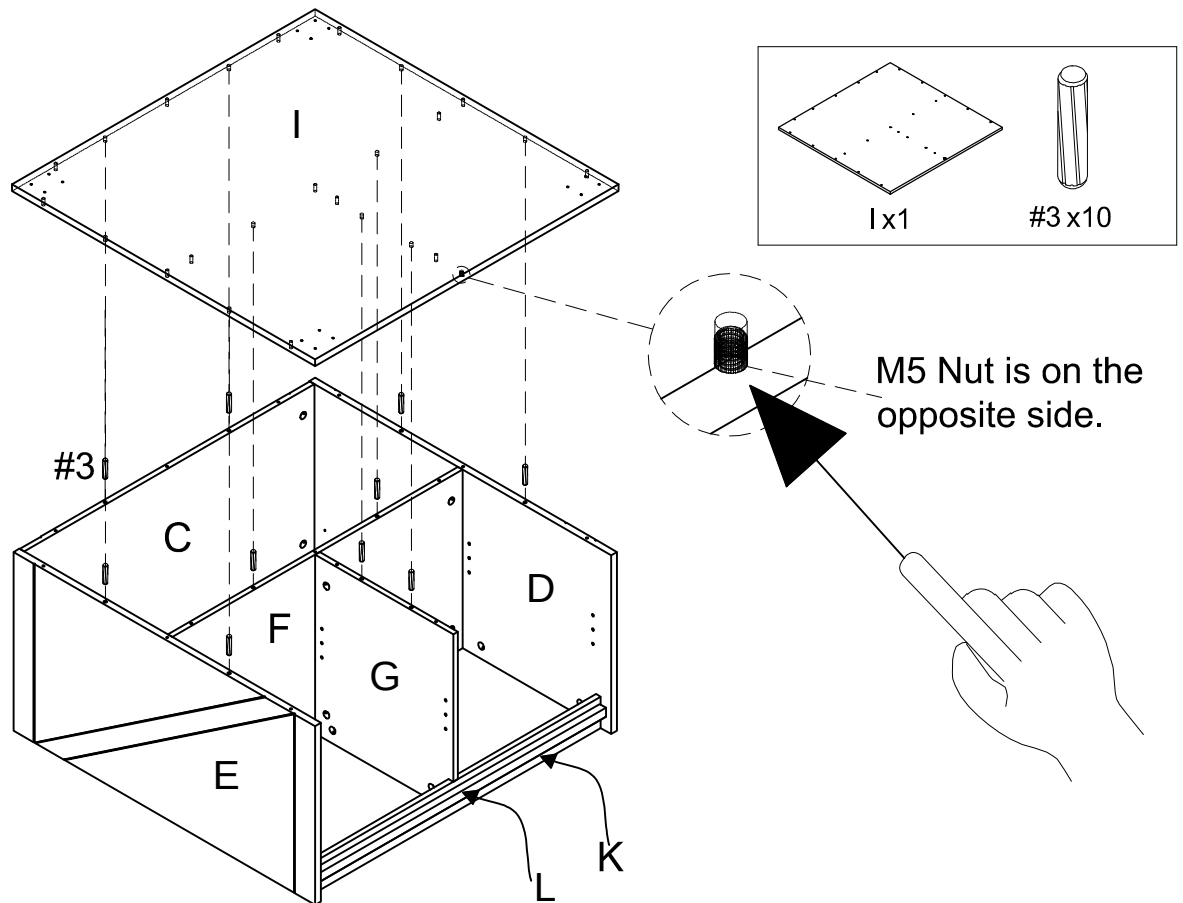


Step 11.

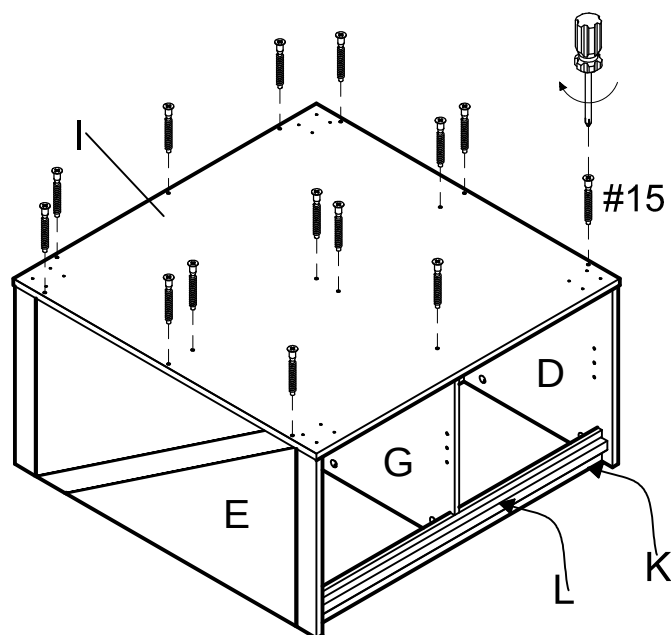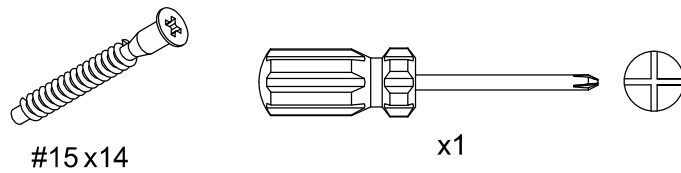


Step 12.




#4 x16

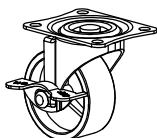


#5 x4




x1

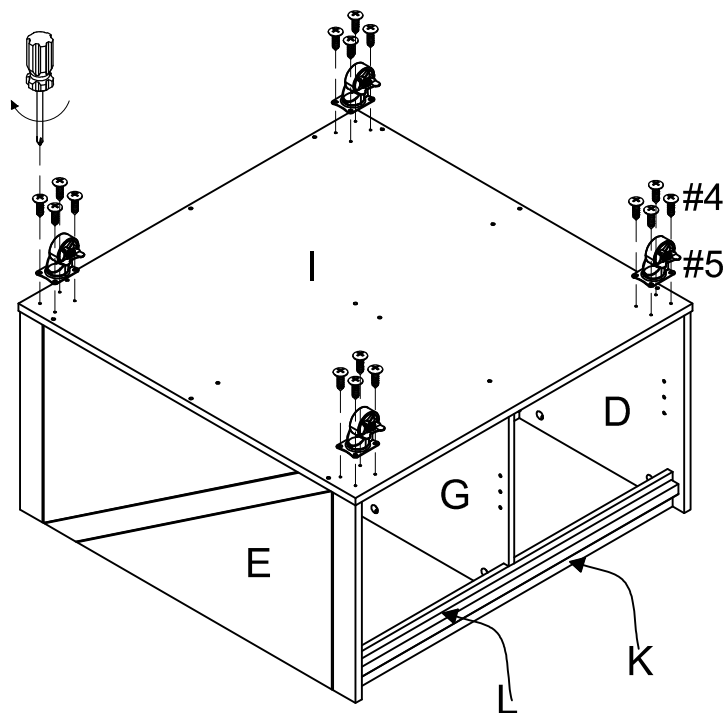


Step 13.

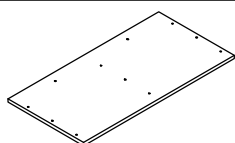


B x1

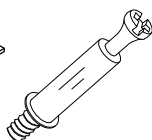

#1 x6



x1

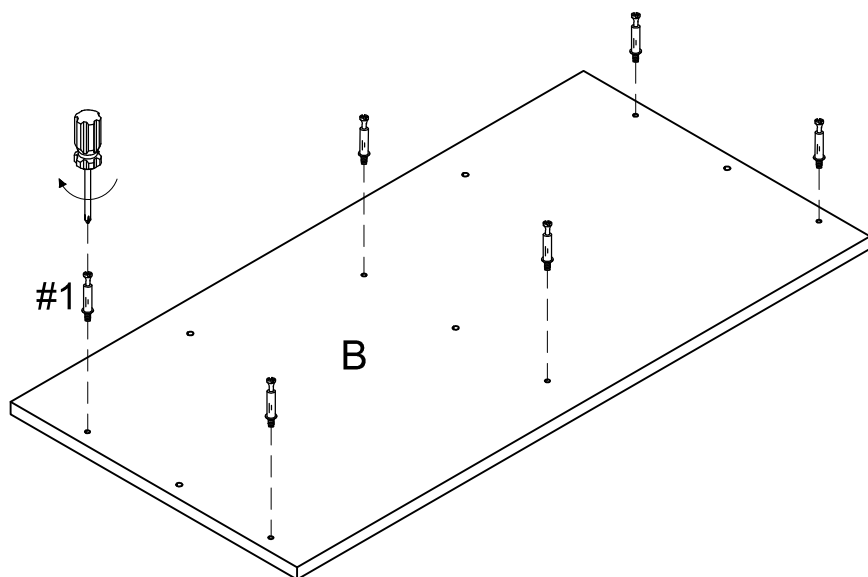

13


Step 14.




#2 x6




#3 x5




x1

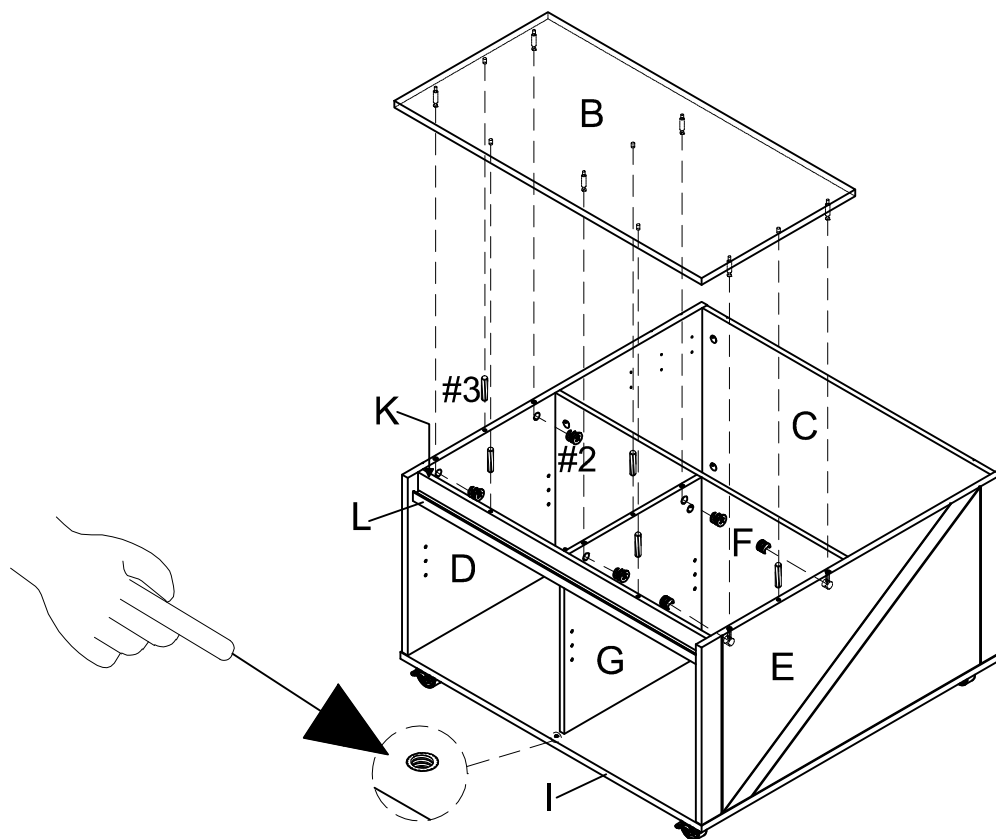


Note: Tighten #2 or it will cause wobble.

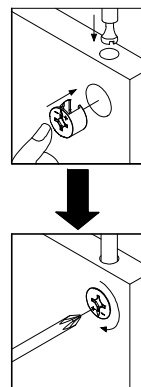

Step 15.




A x1




#6 x6




#8 x1




#12 x1




#13 x1

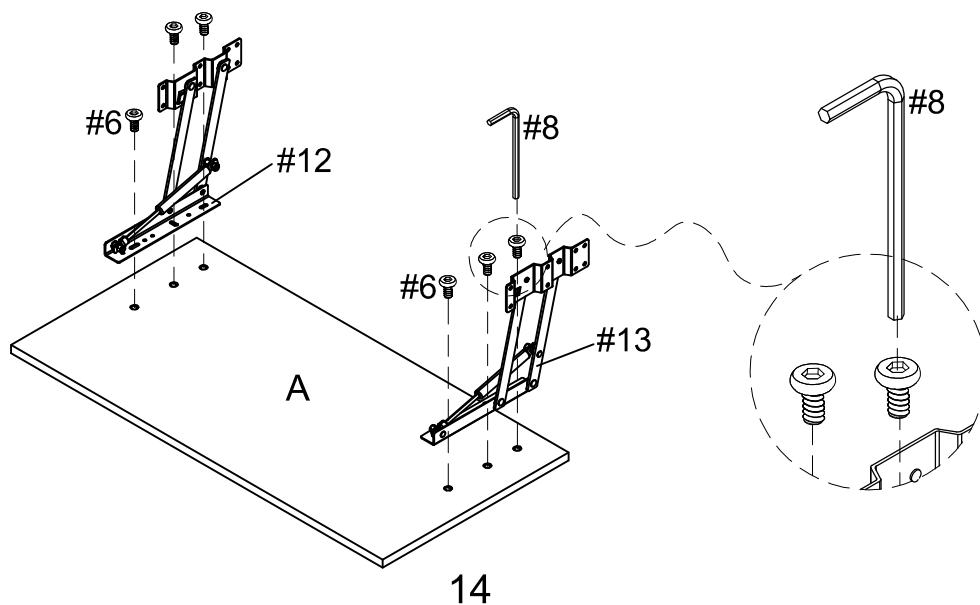


Step 16.




#4 x12




x1

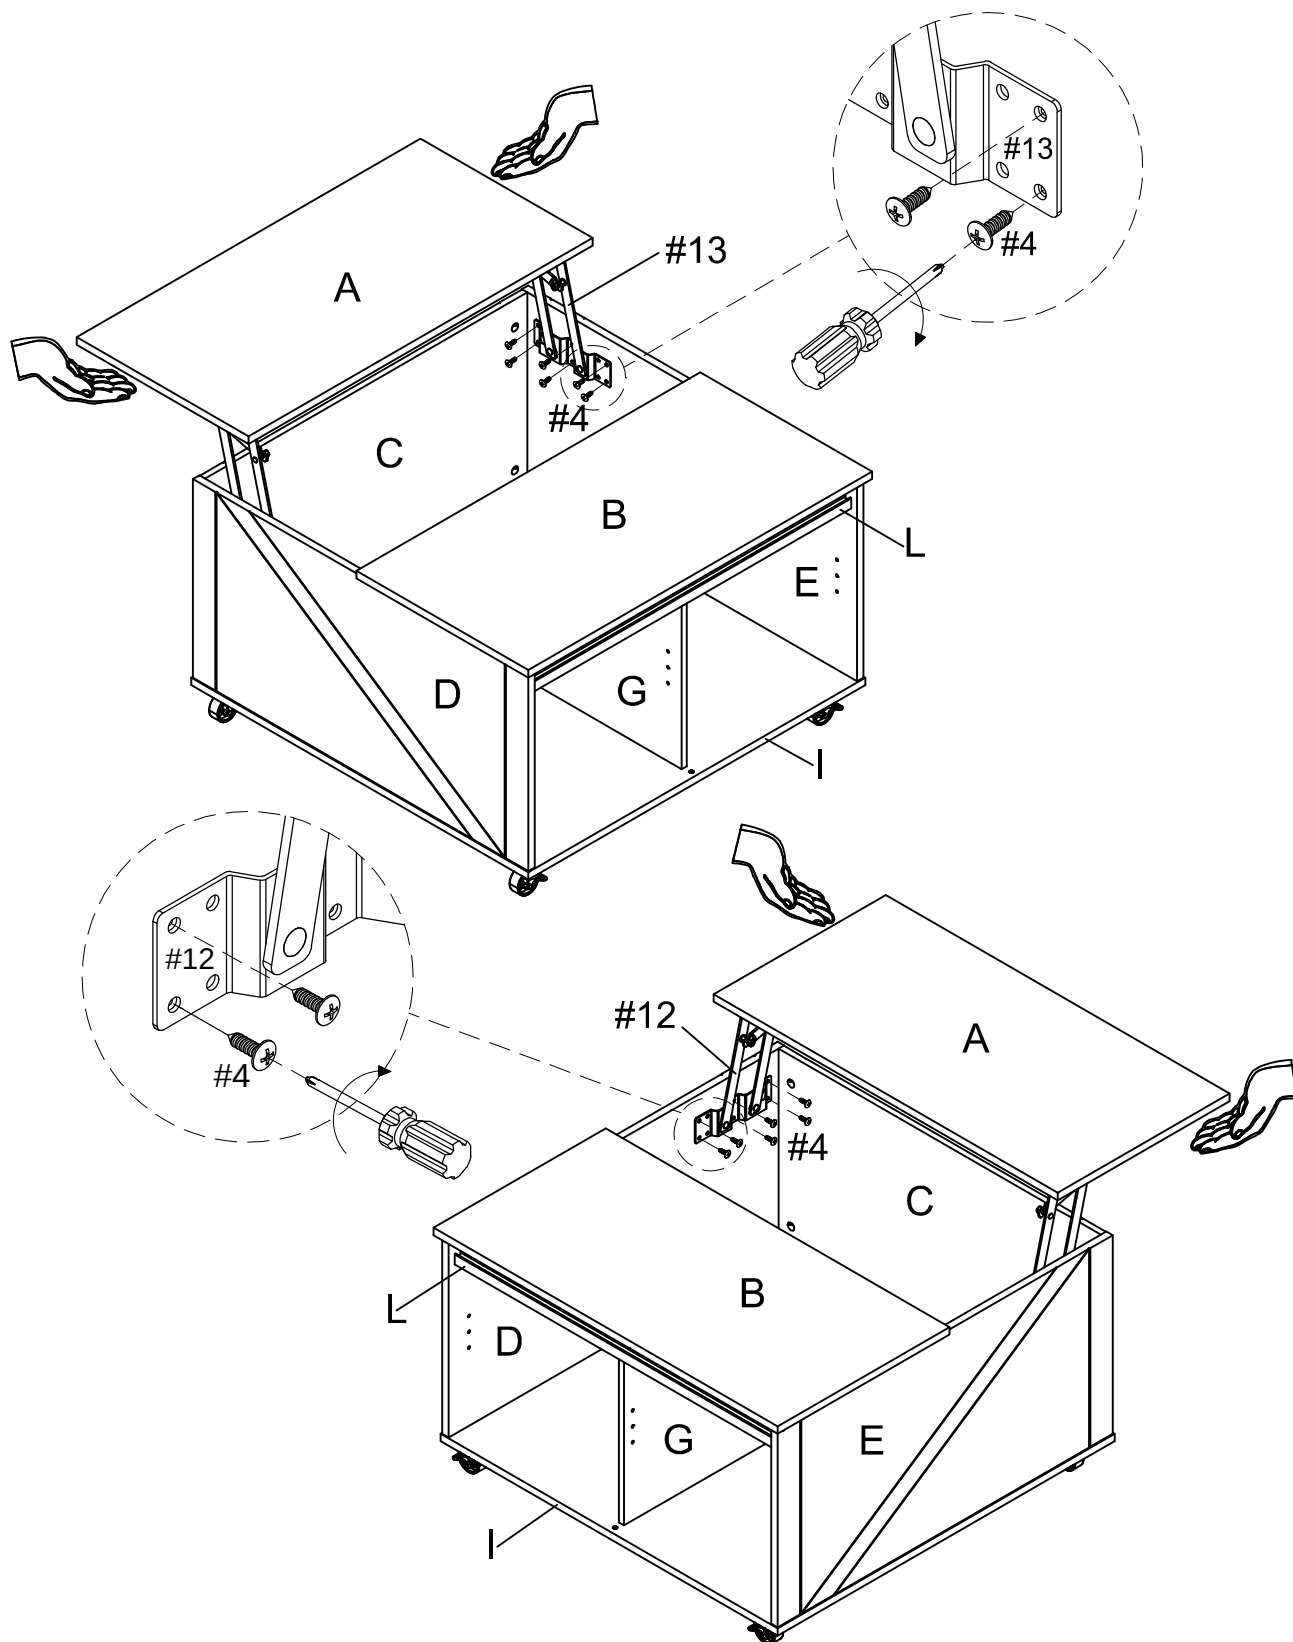



Step 17.




Hx2

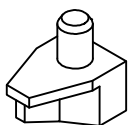

#11x8

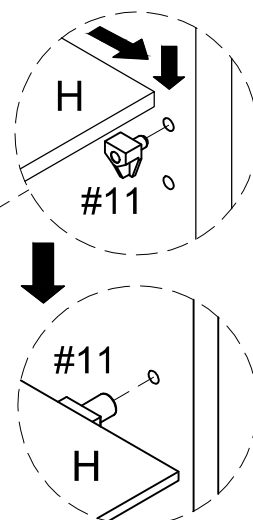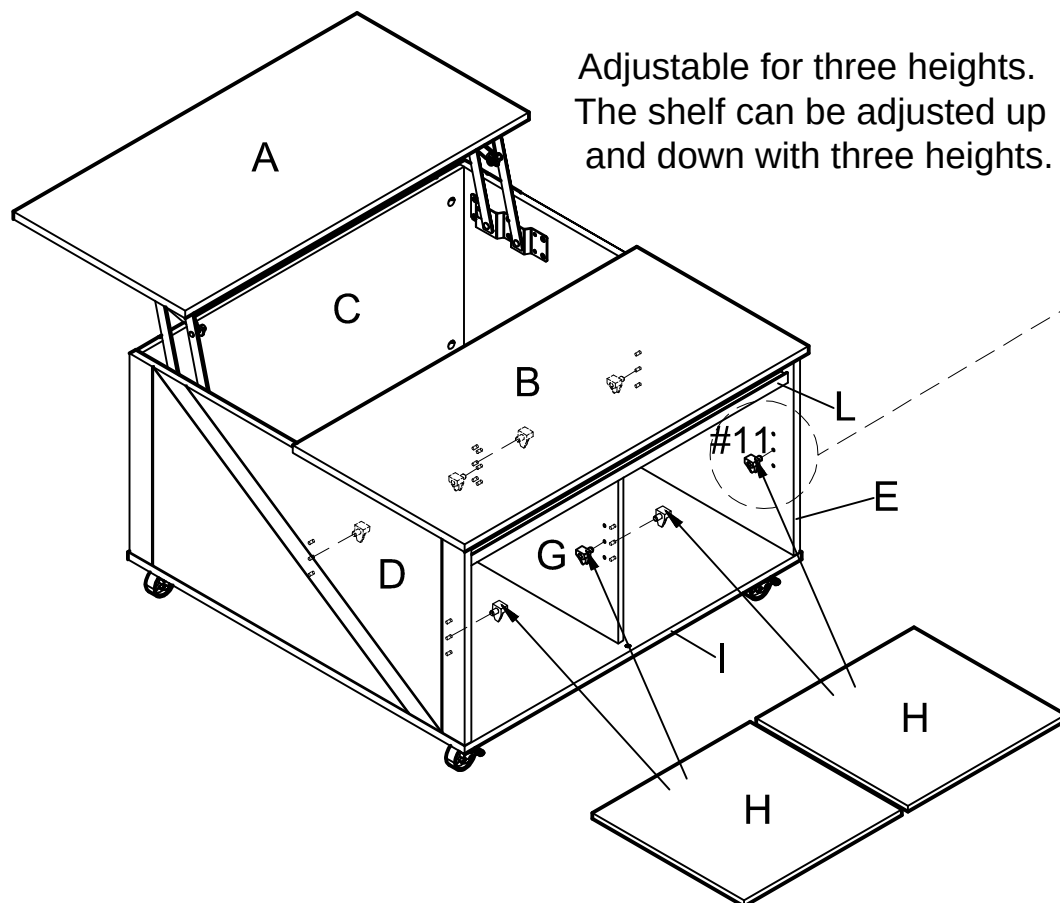

Step 18.




Jx1




#6x4





#8x1





#9x2

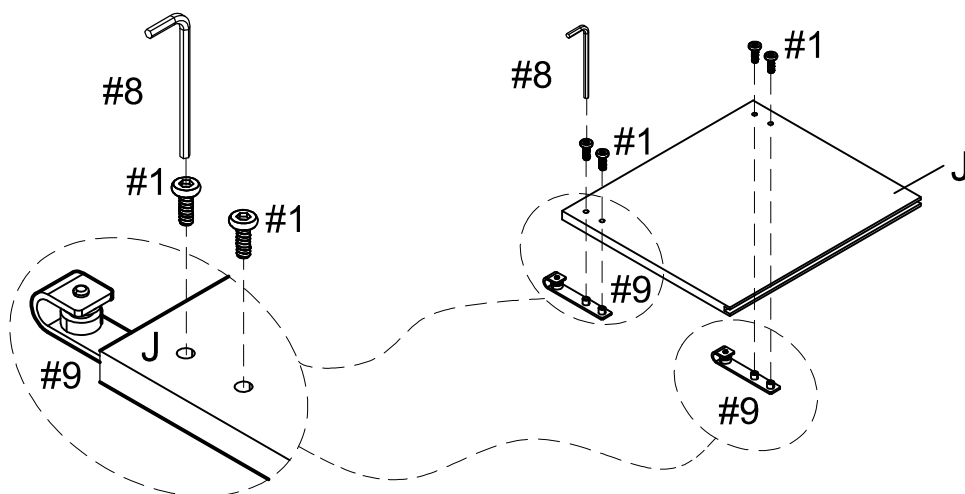



Step 19.

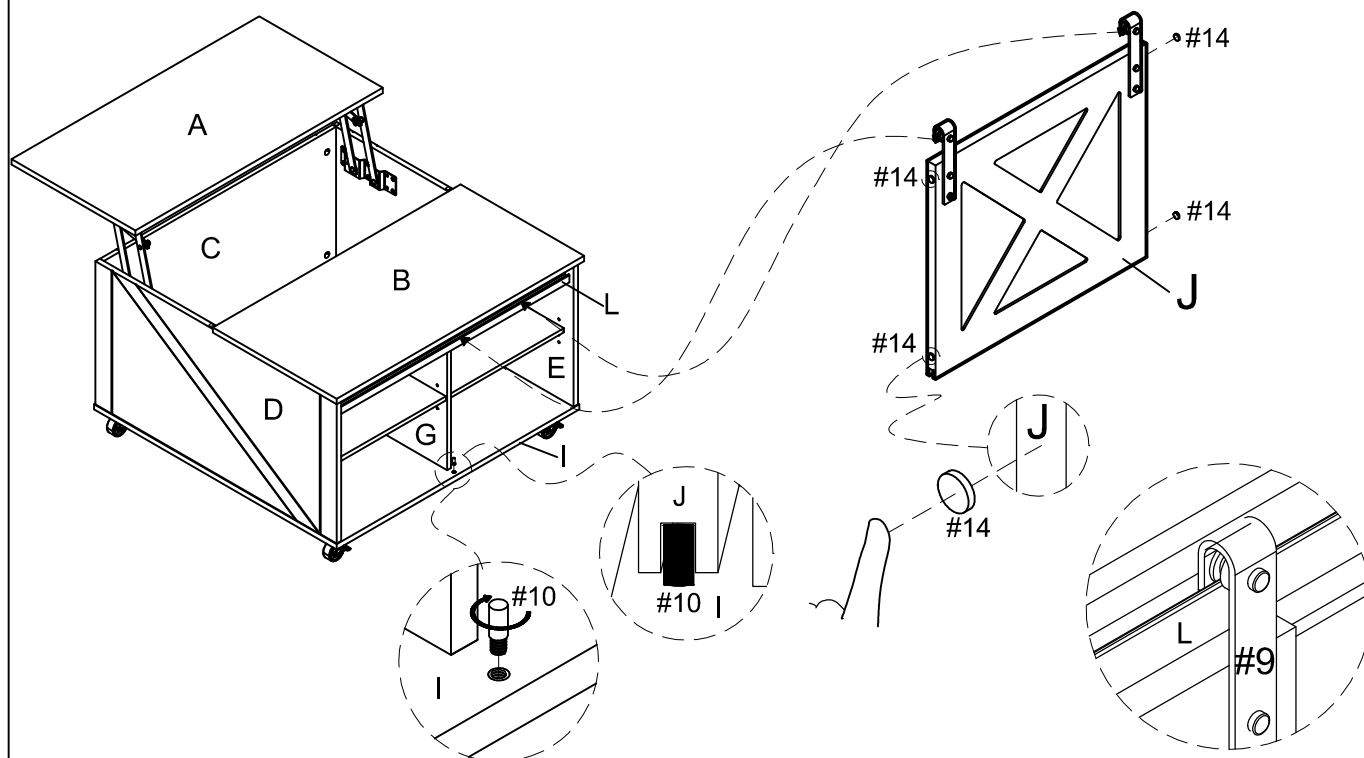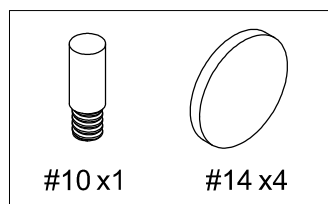

Step 20.

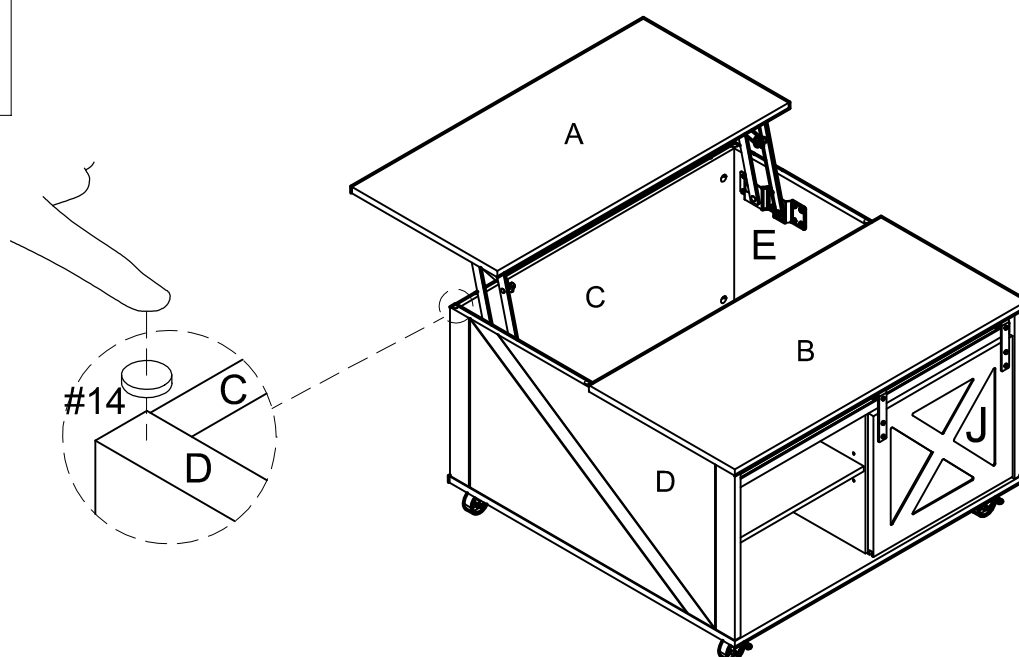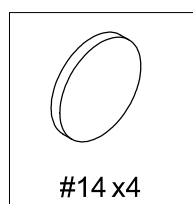

Step 21.

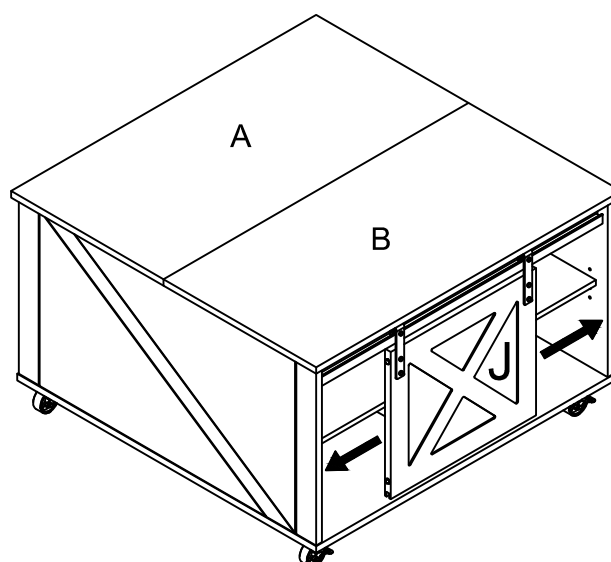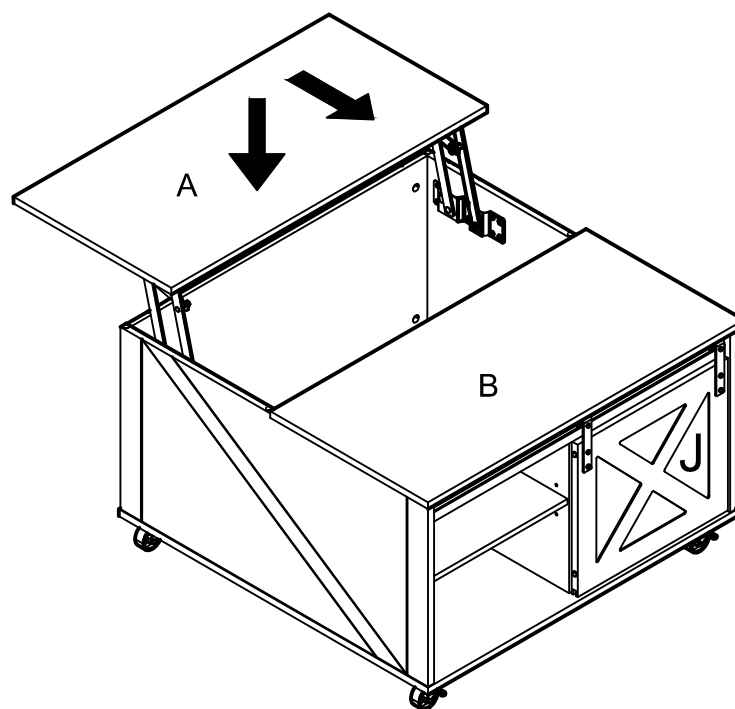

The assembly of the cabinet is complete.

CONTACT US:

Dear customer,thank you for purchasing our products! We are proud to present our customers with high quality products!



If you have any product quality or use problems,please contact our customer service by email,we will ensure your satisfaction.



If you are satisfied with our products,please share your amazing experience with us and other customers! It would be our honor to hear from you!



Customer Service Team: CSsince1987@hotmail.com!