


Assembly Instruction


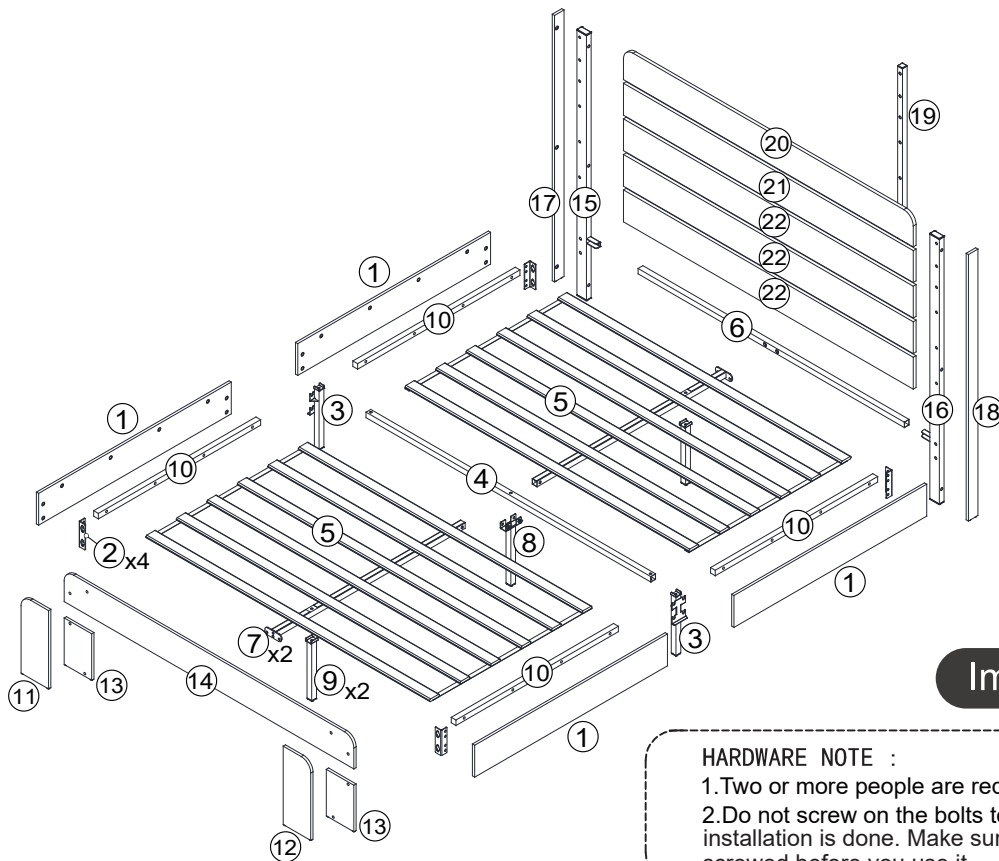


Important Note



HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

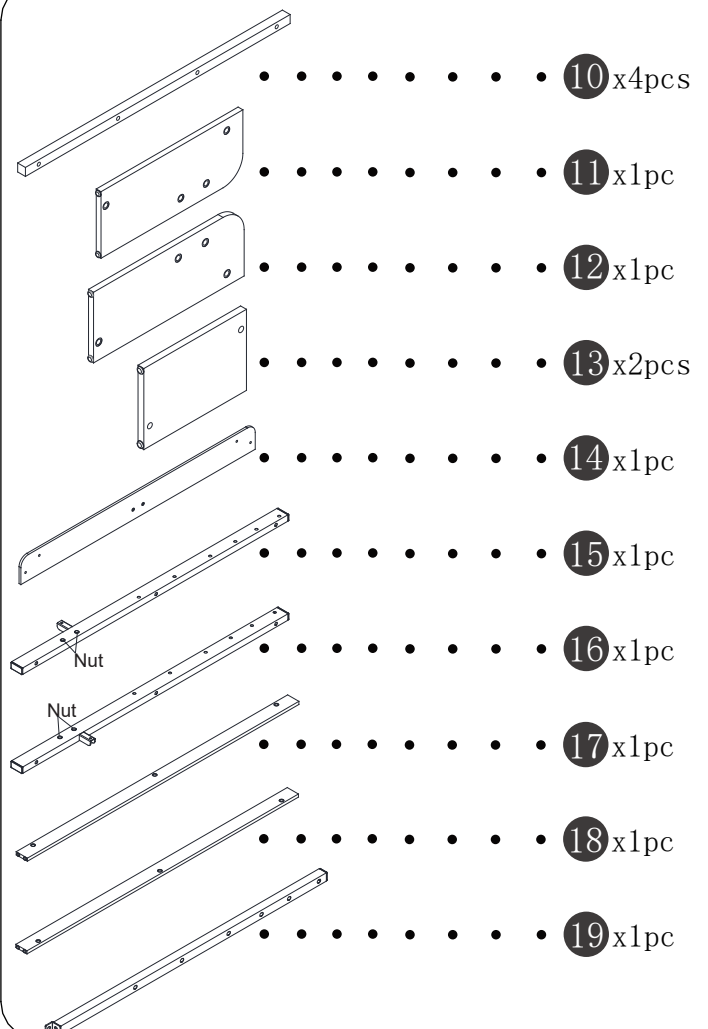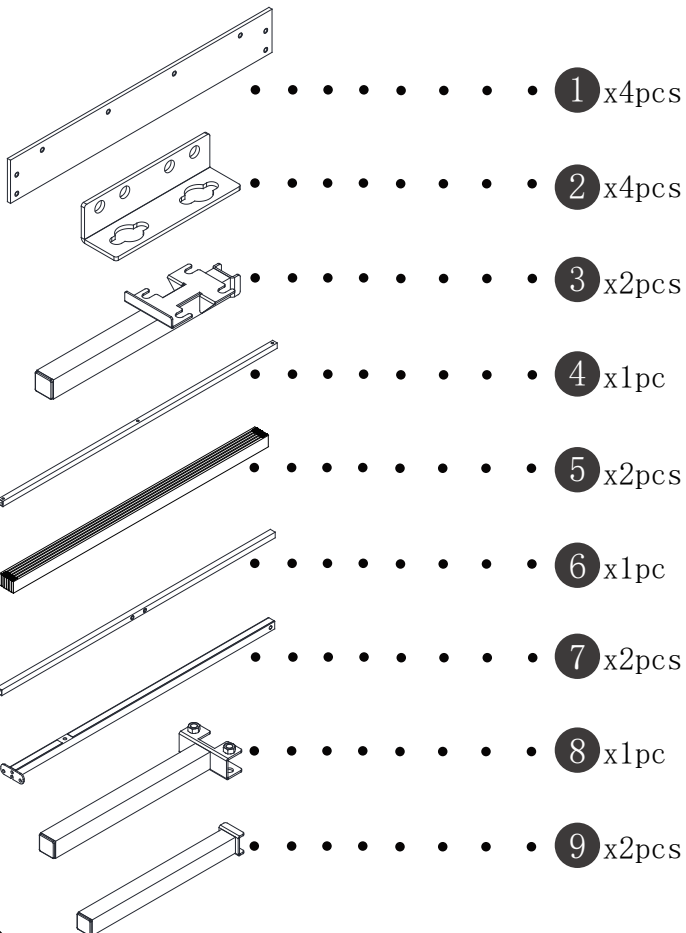


1

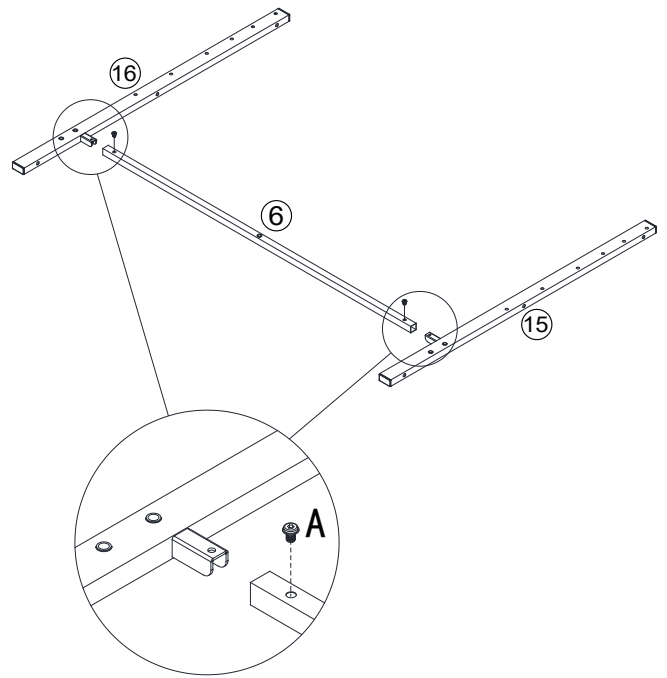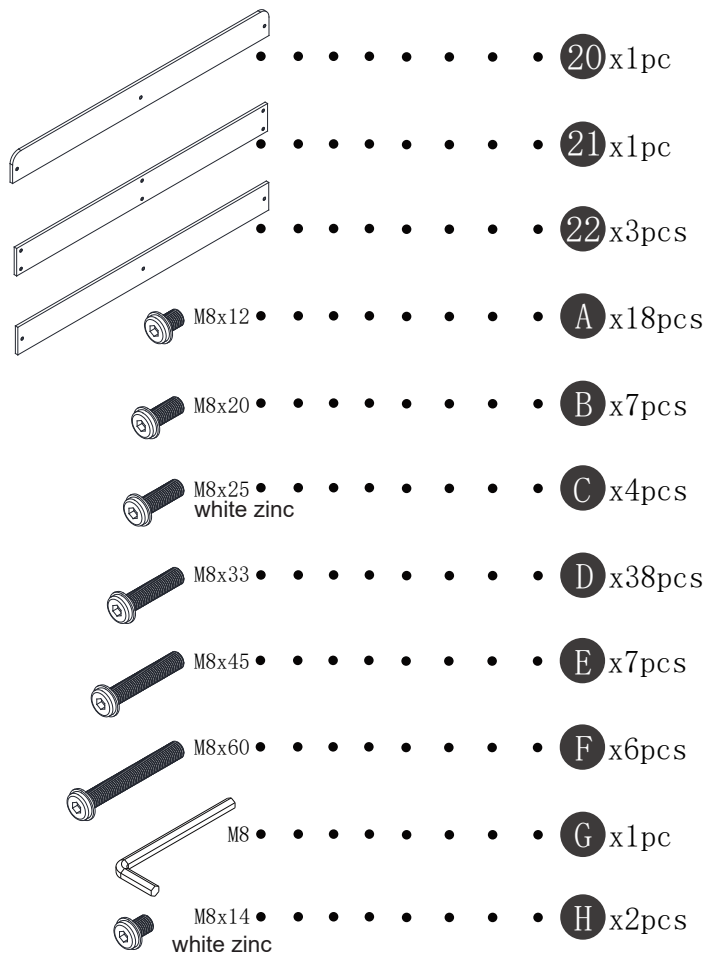

A	 M8x12	2 pcs
---	---	-------


2

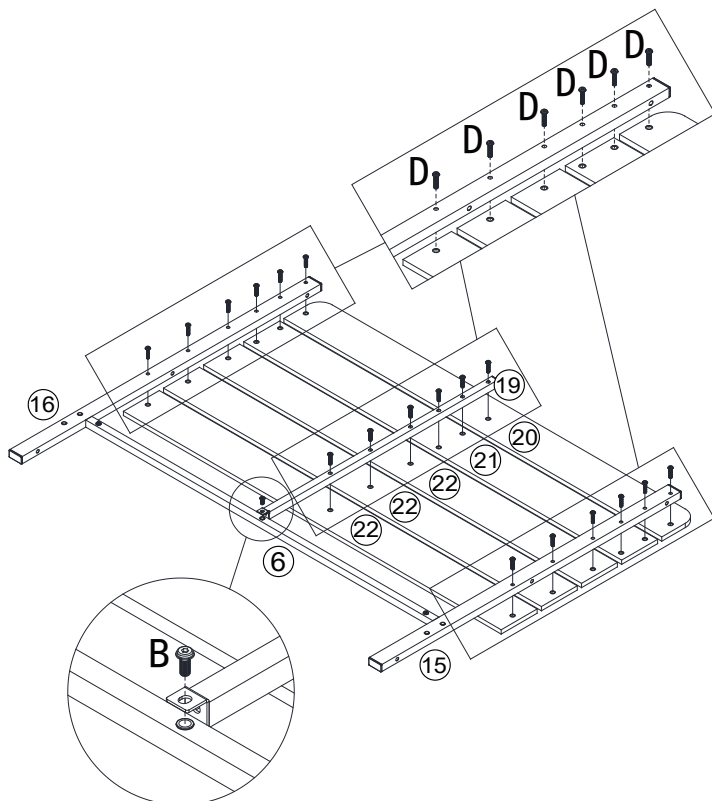

B	 M8x20	1 pc
D	 M8x33	18 pcs


3

x2

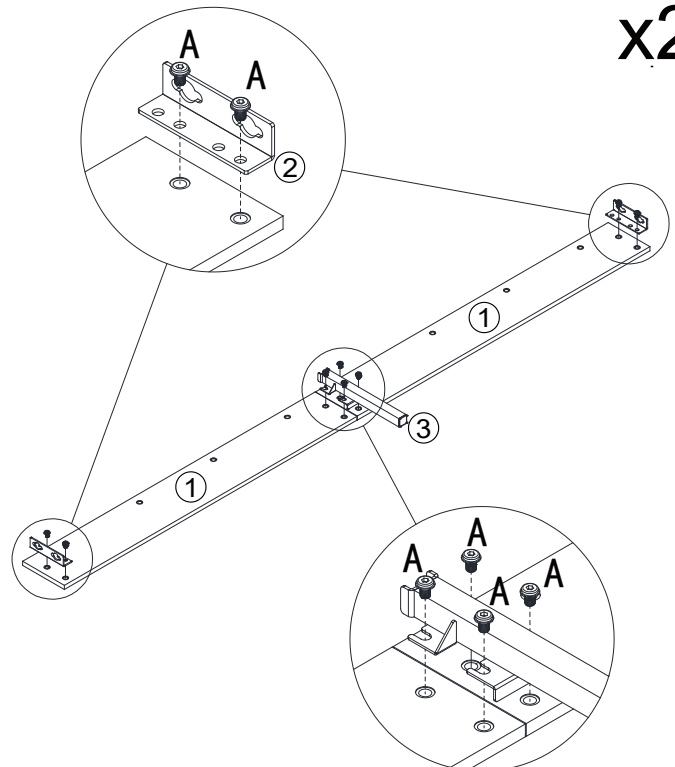


A	 M8x12	16 pcs
---	---	--------

4
x2

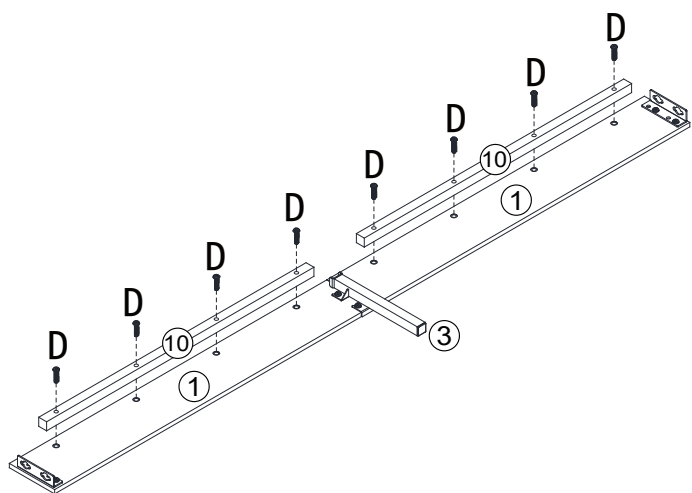

D		16pcs
	M8x33	


5

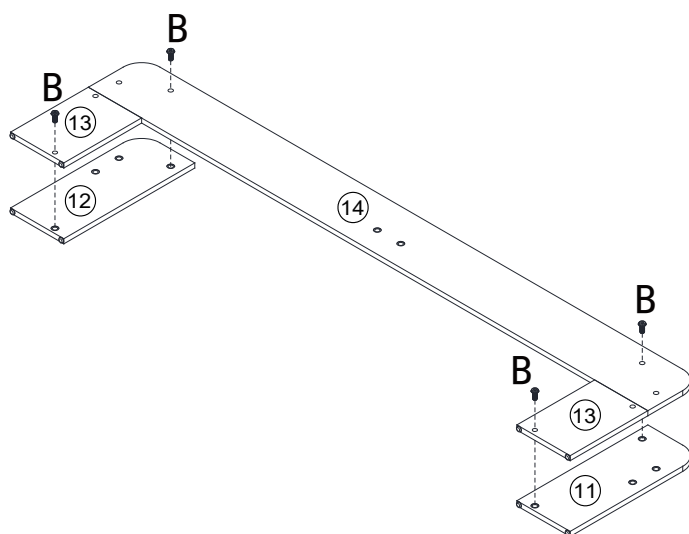

B		4pcs
	M8x20	


6

Tighten screws C

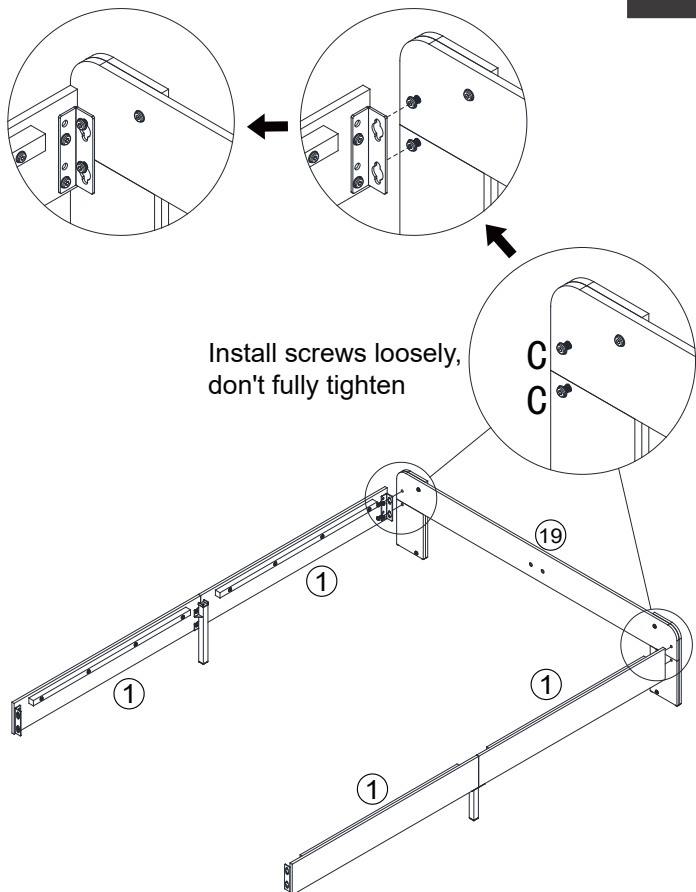


C		4pcs	white zinc
	M8x25		

7

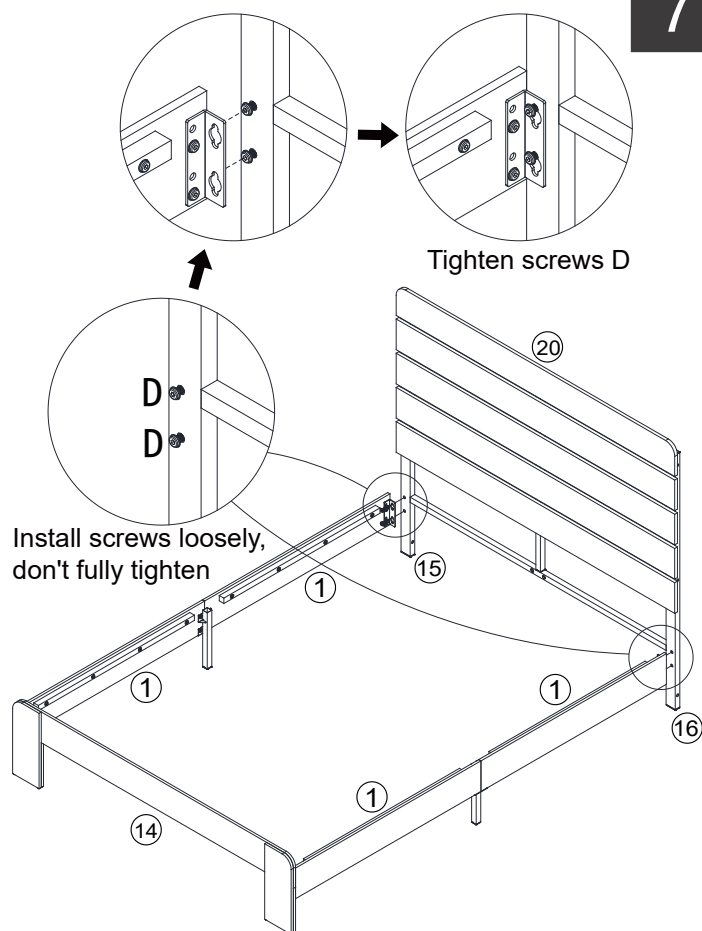

D		4pcs
	M8x33	


8

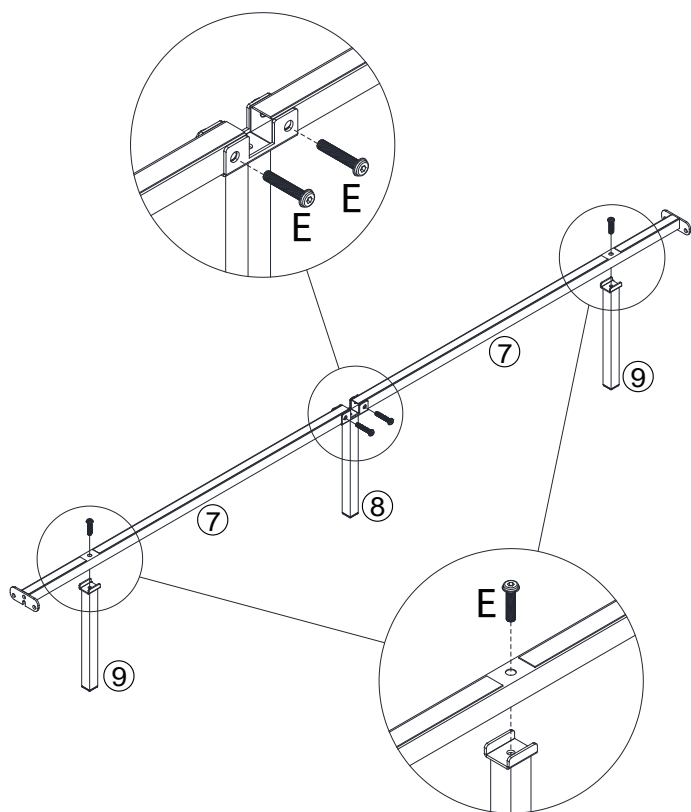

E		4pcs
M8x45		

Assemble second

9

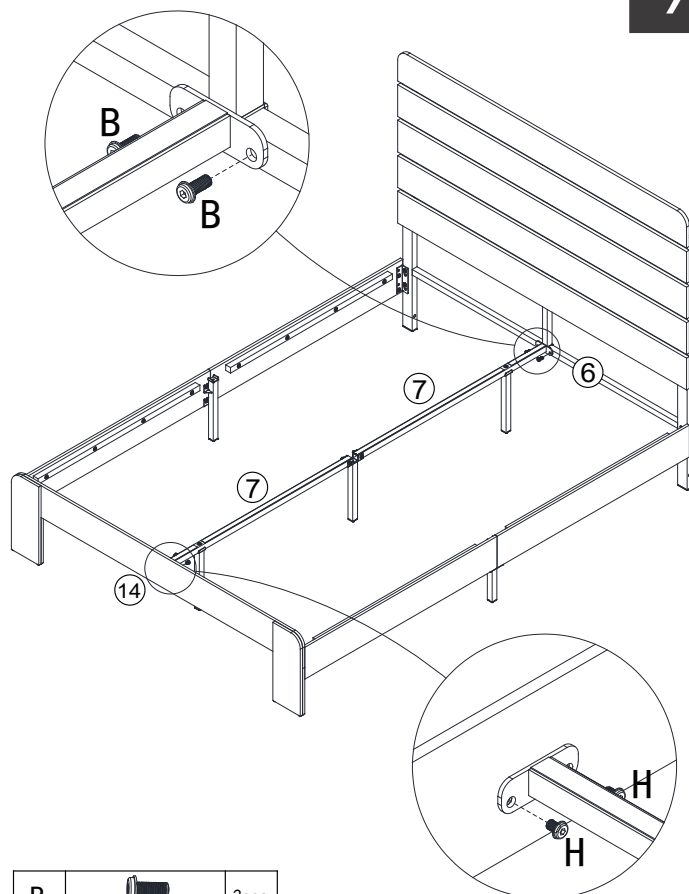


B		2pcs
M8x20		
H		2pcs
M8x14		

white zinc


to Assemble first

10

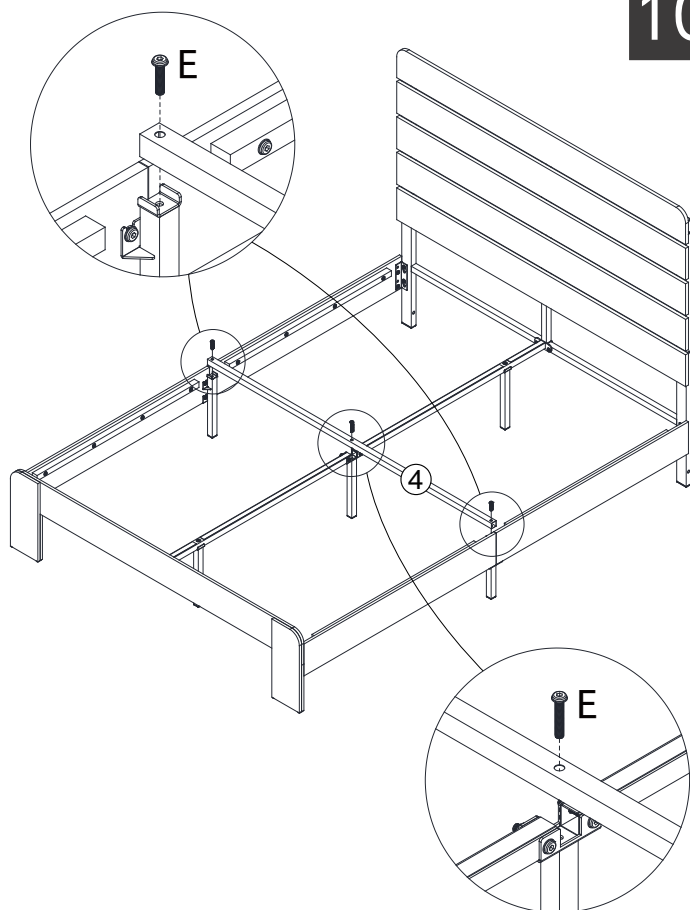


E		3pc
M8x45		


11

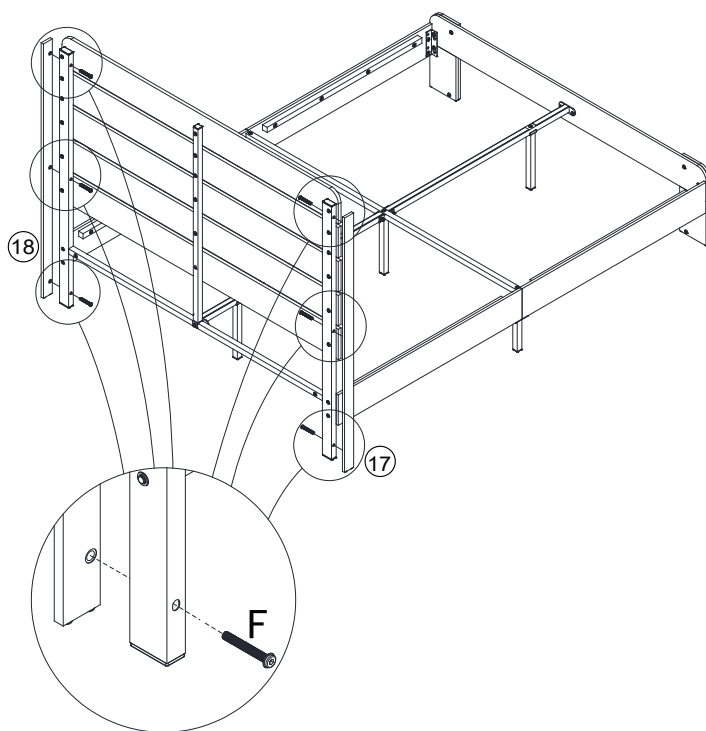

F		6pcs
M8x60		

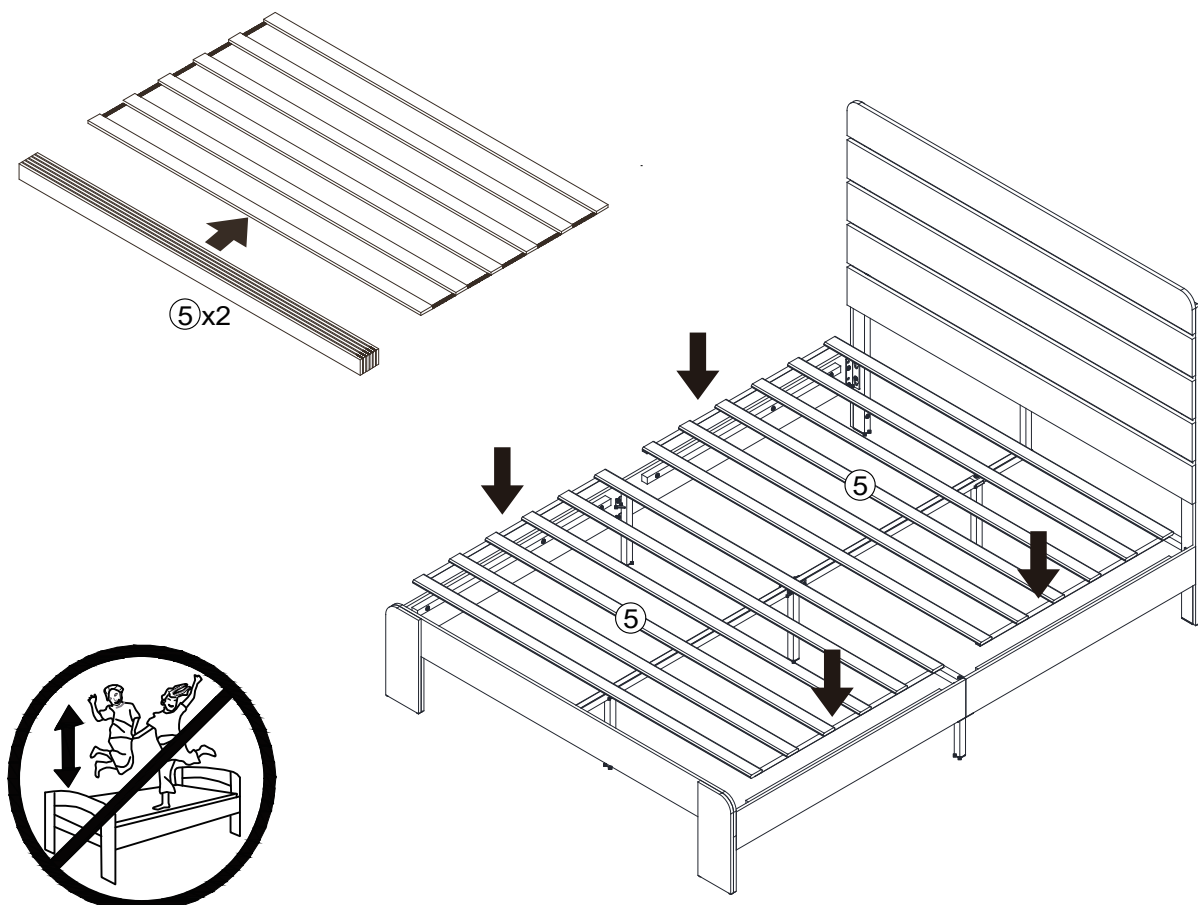

Finish

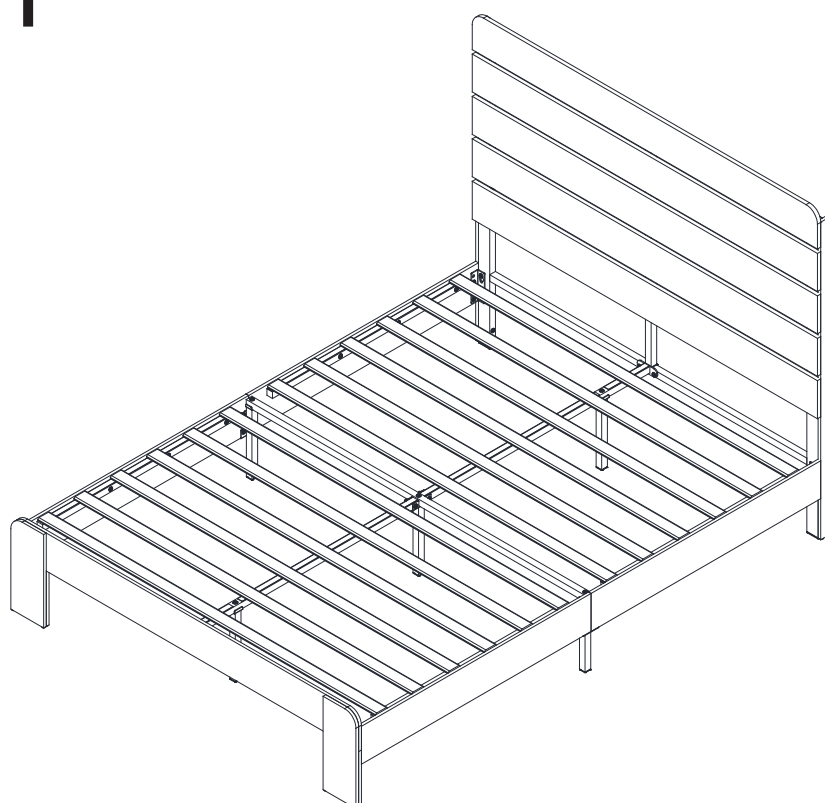

Note: Now you can tighten all the bolts.