

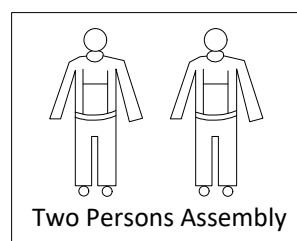
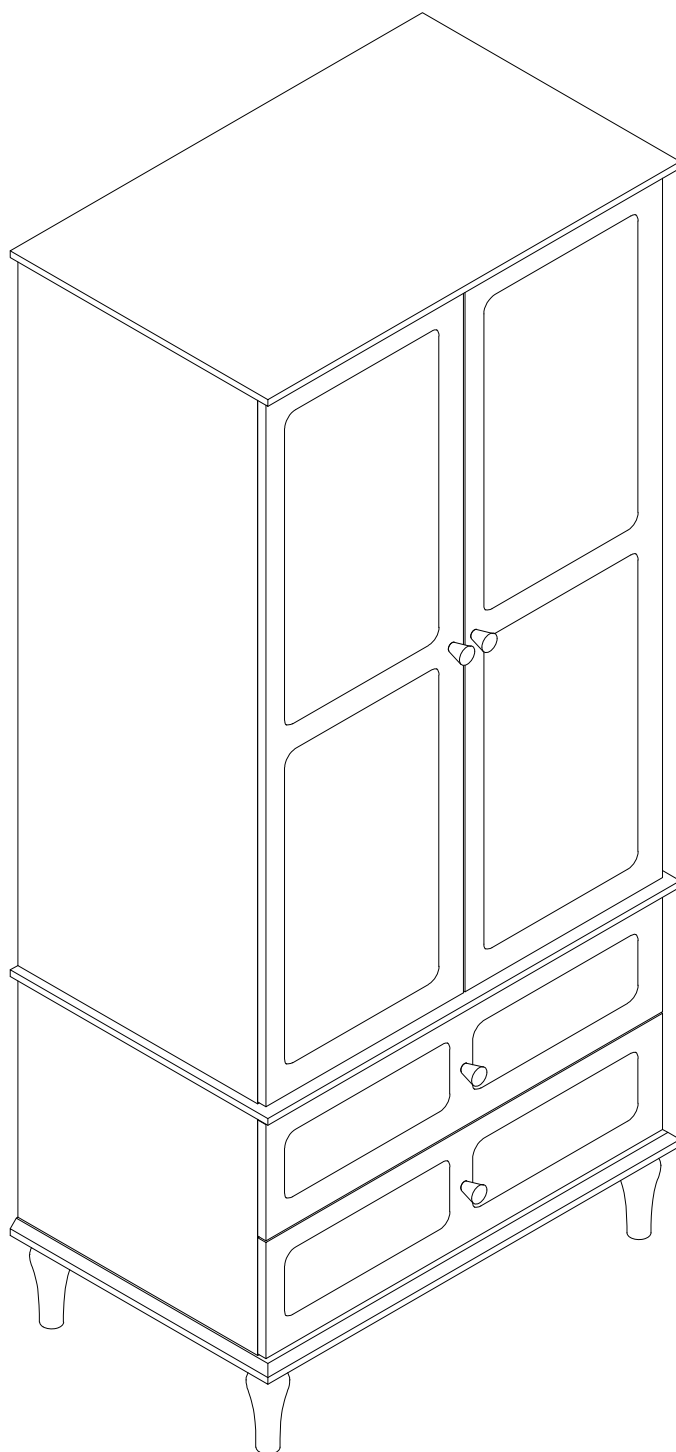
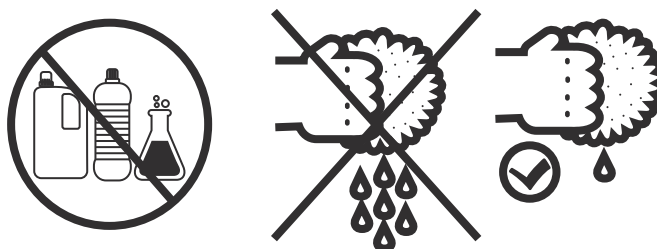
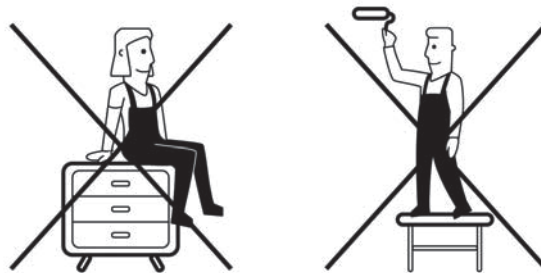



ASSEMBLY INSTRUCTIONS

Item NO.: YJJ240091

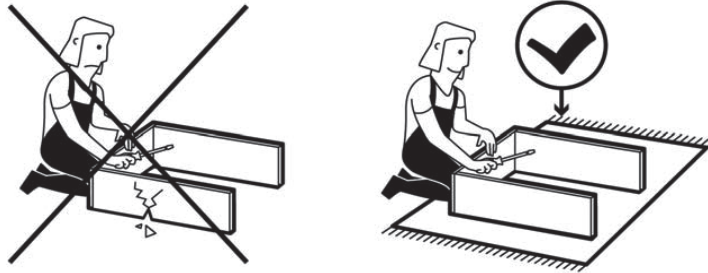

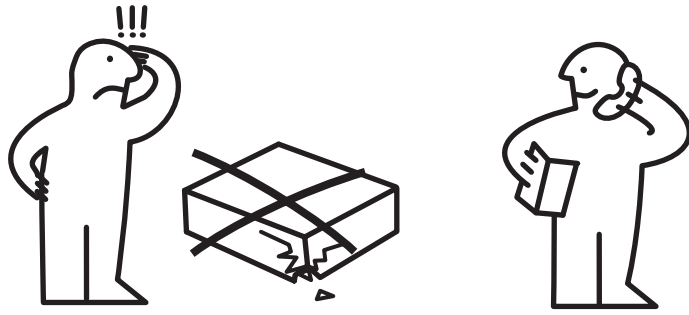


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

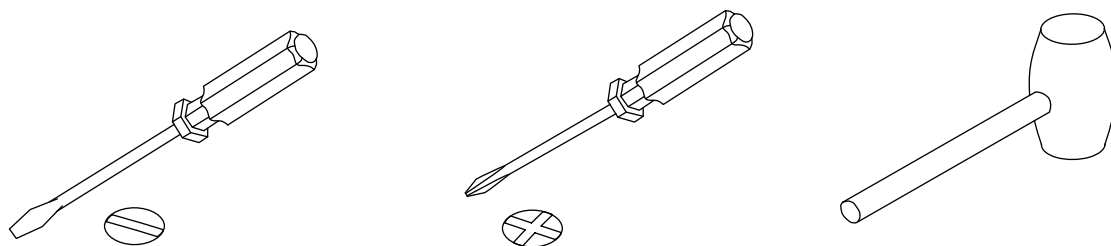

- * Before discarding packing materials, please check all parts and hardware are presented.
- * Please follow the instructions closely.
- * After few days of initial assembly, the product may have acclimated to new environment, please tighten all hardware again.




Dowel Installation

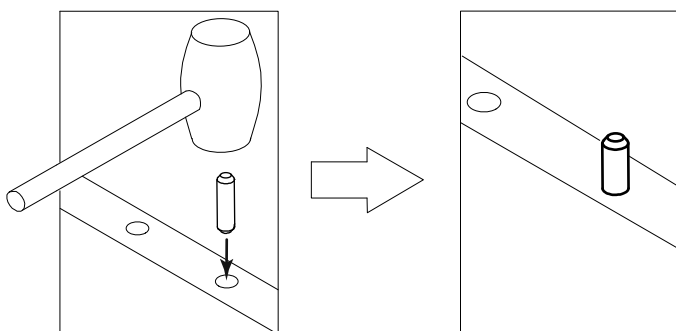

Gently tap dowel into hole with rubber mallet.





CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten

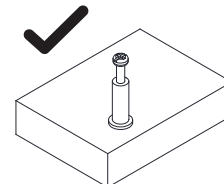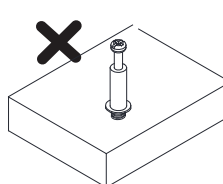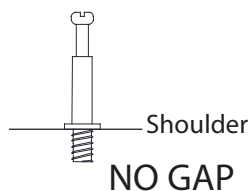


WHEN FITTING CAMS








ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-PILLAR
TURN CLOCKWISE UNTIL SECURE

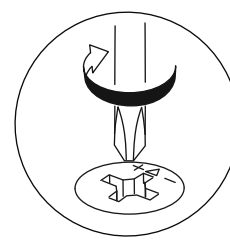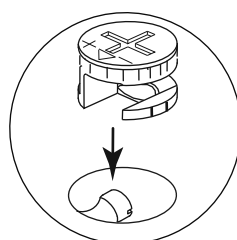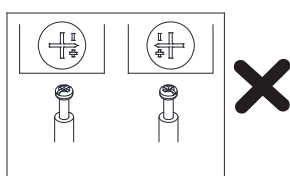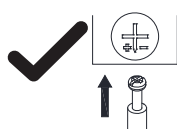



Laying out all the parts and hardware and identifying each part as shown below. It may help you when you assemble the item.

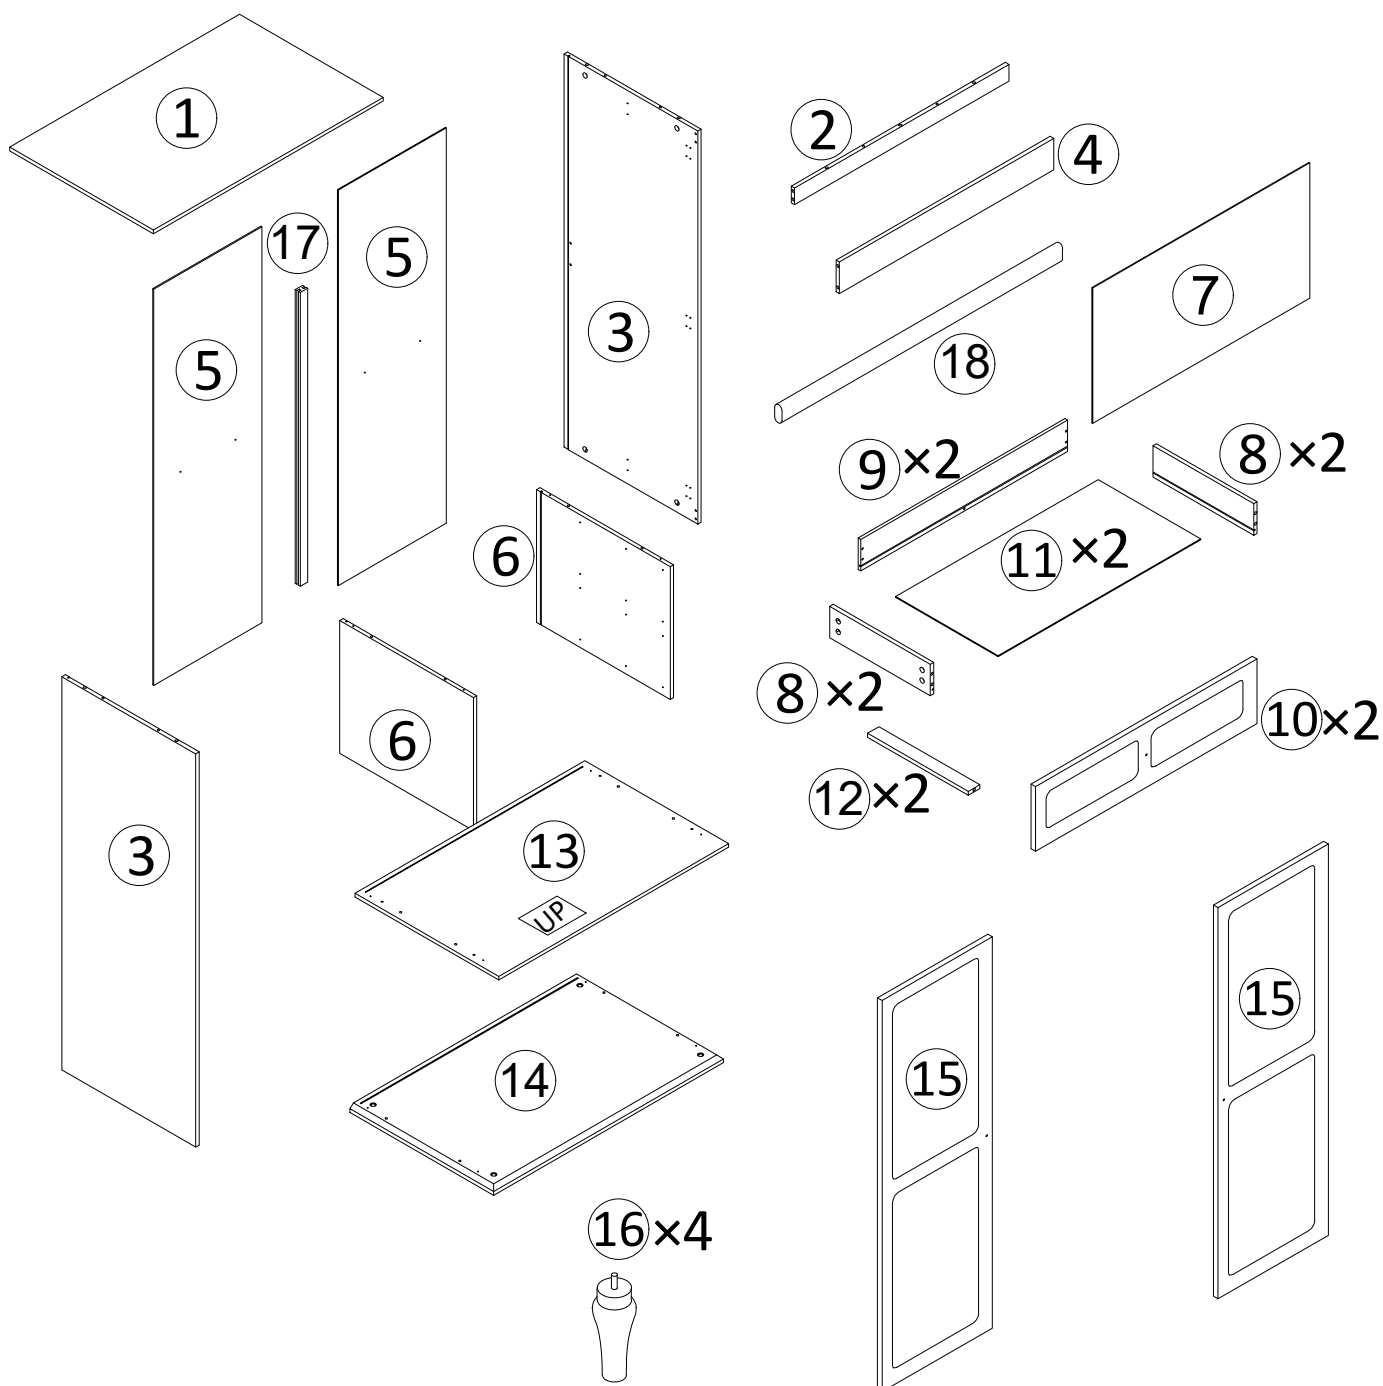



① ×1	② ×1	③ ×2	④ ×1	⑤ ×2	⑥ ×2
⑦ ×1	⑧ ×4	⑨ ×2	⑩ ×2	⑪ ×2	⑫ ×2
⑬ ×1	⑭ ×1	⑮ ×2	⑯ ×4	⑰ ×1	⑱ ×1

A ×39+2(Spare)  ø6×27mm	B ×39+2(Spare)  ø15×9.5mm	C ×18+2(Spare)  ø6×30mm	D ×8+1(Spare)  FA4×50mm	E ×24+2(Spare)  FA3×12mm
CL ×2  350mm	DL ×2  350mm	DR ×2  350mm	CR ×2  350mm	J ×40+2(Spare)  FA4×12mm
K ×2  42×14mm	L ×4  M6×15L-ø21×6T	M ×6  ø26mm	N ×4  D19.5×23mm	O ×4+1(Spare)  M4×20mm
P ×16+1(Spare)  FA3×16mm	Q ×4+1(Spare)  FA3×12mm	R ×1  FA3×10mm	S ×2  4×40mm/4×12mm	



1

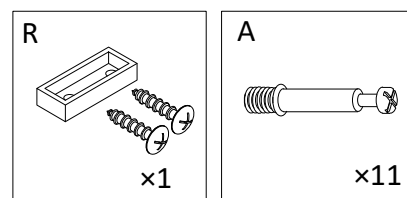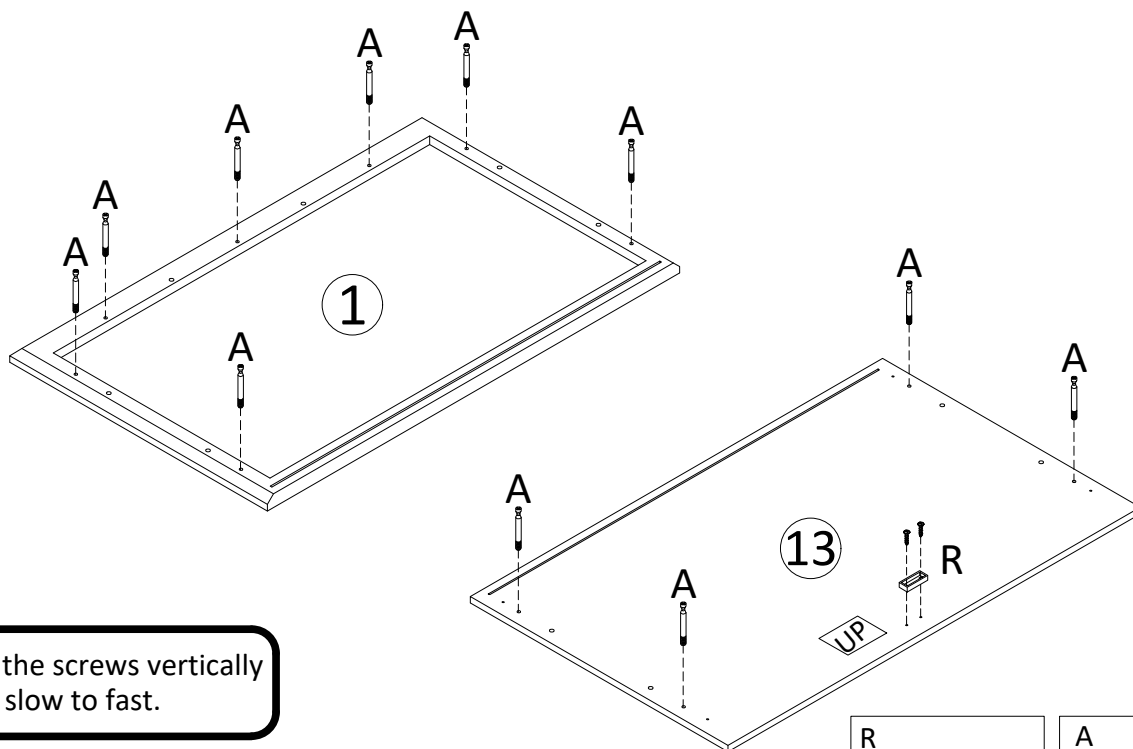



2

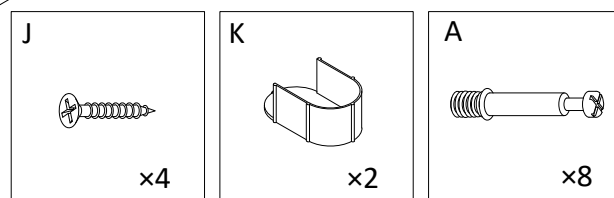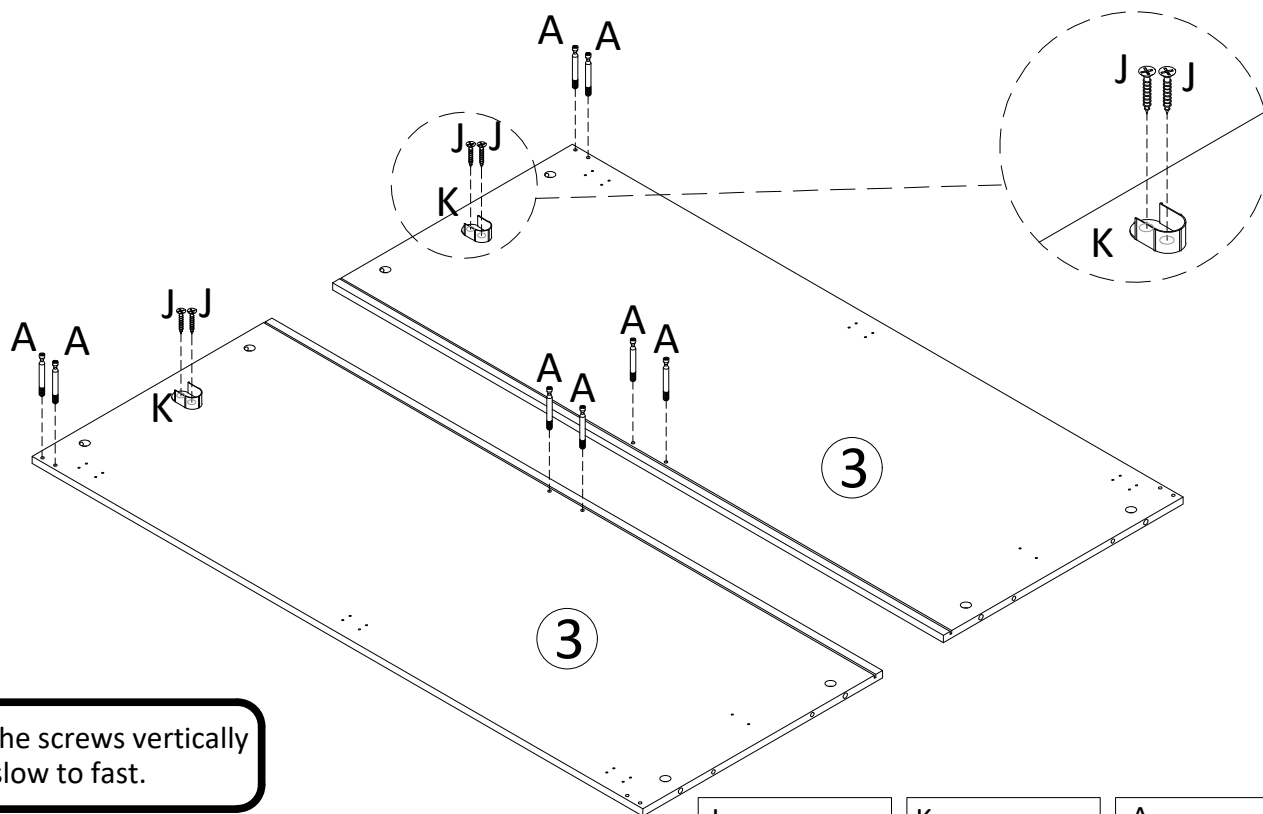





3

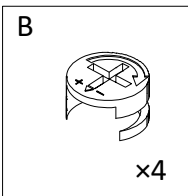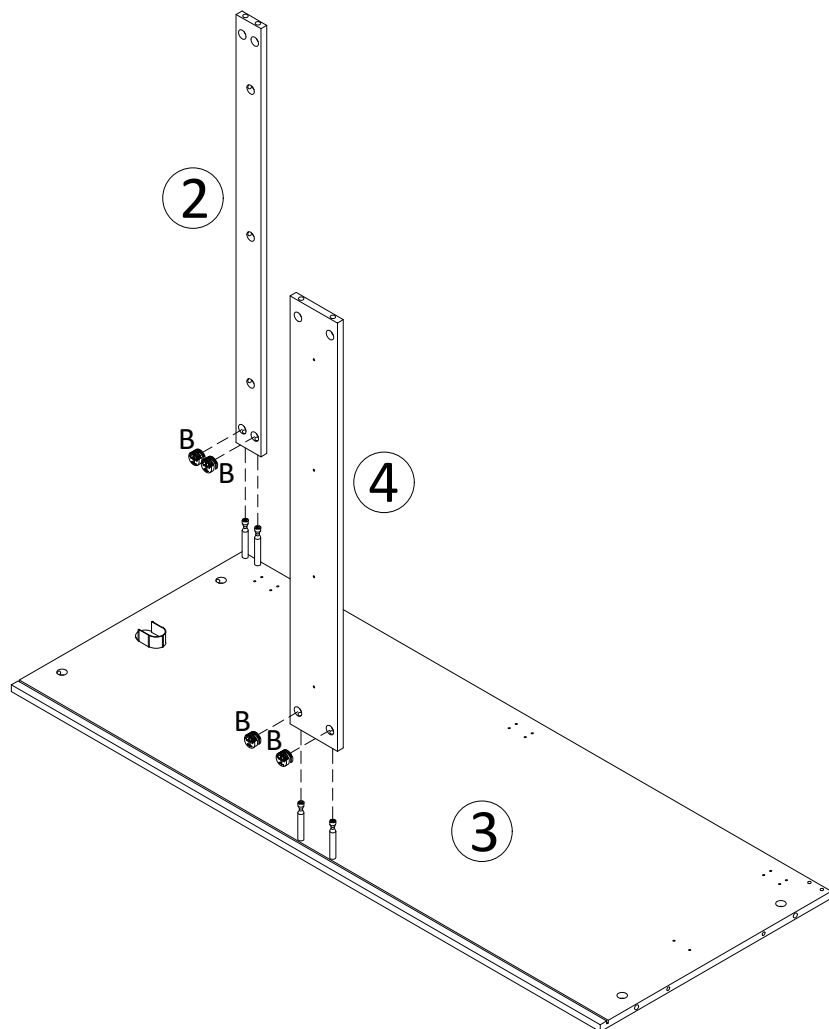


4

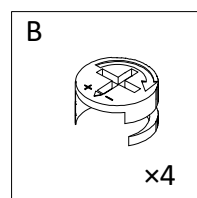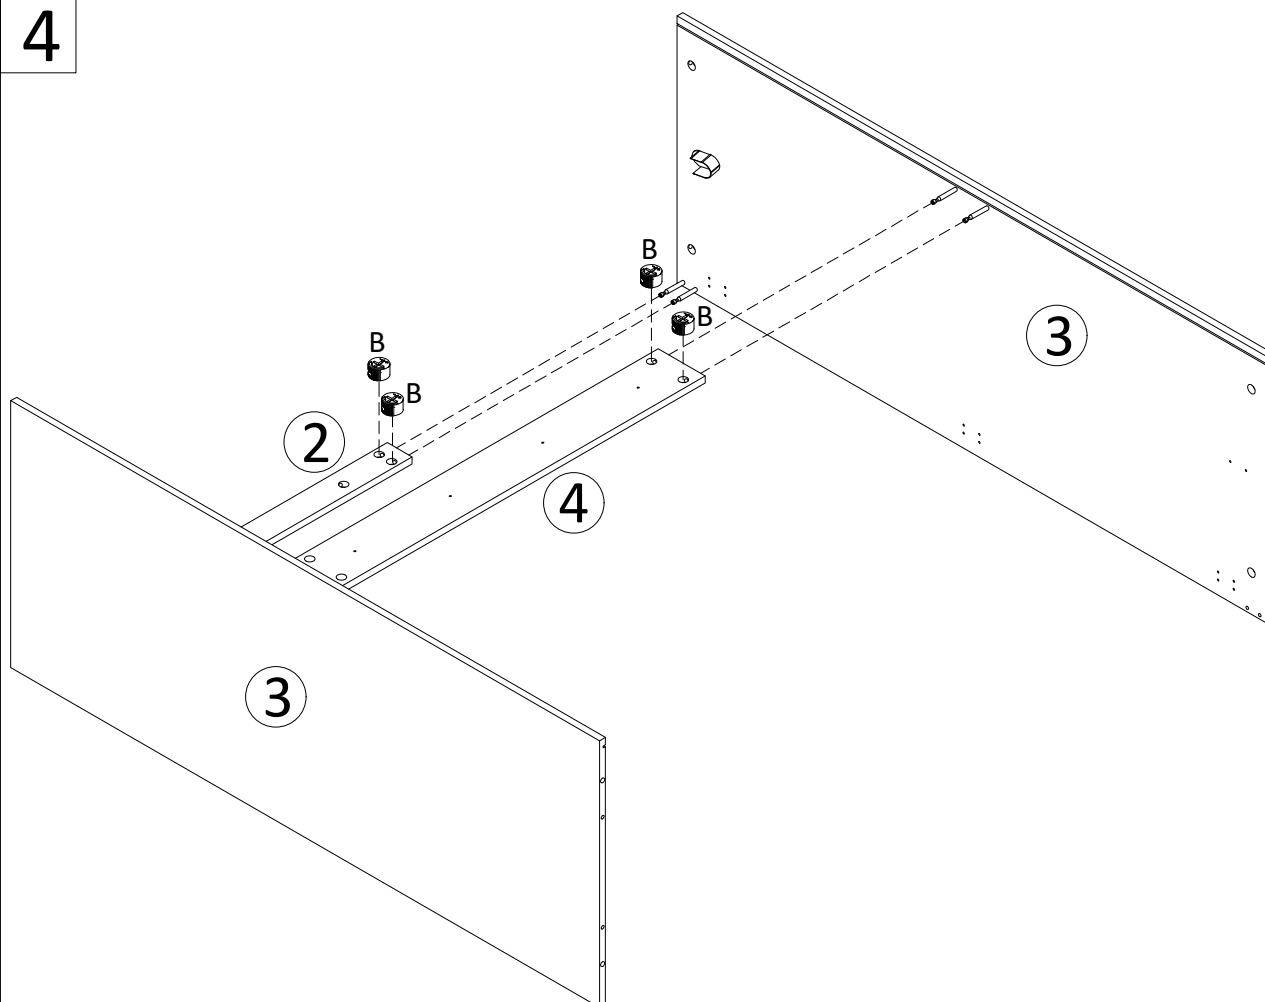


5




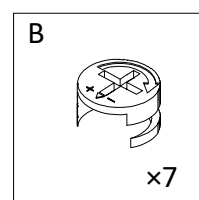
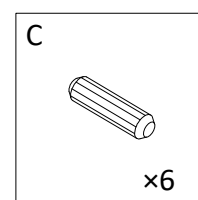
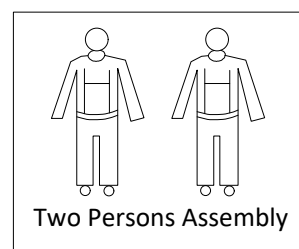
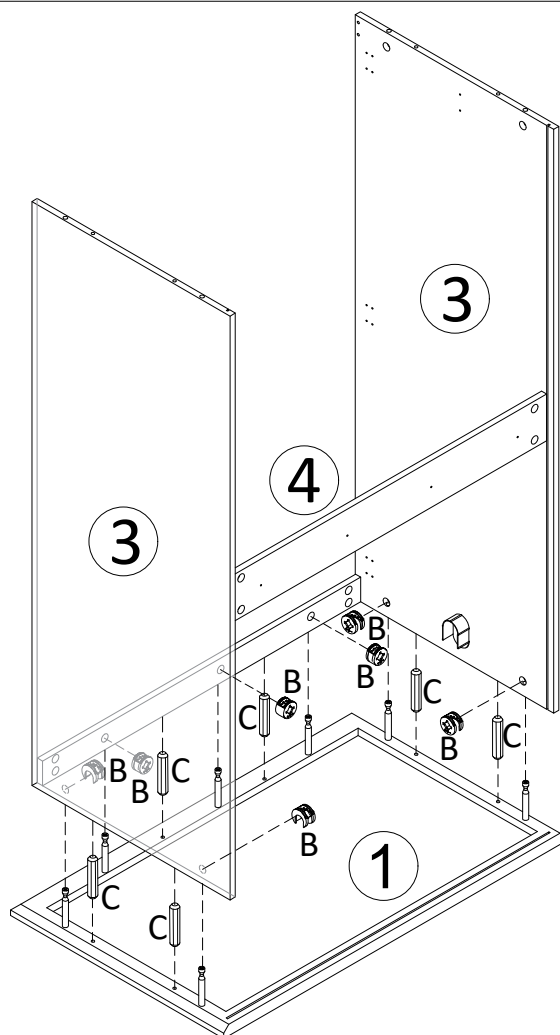


6

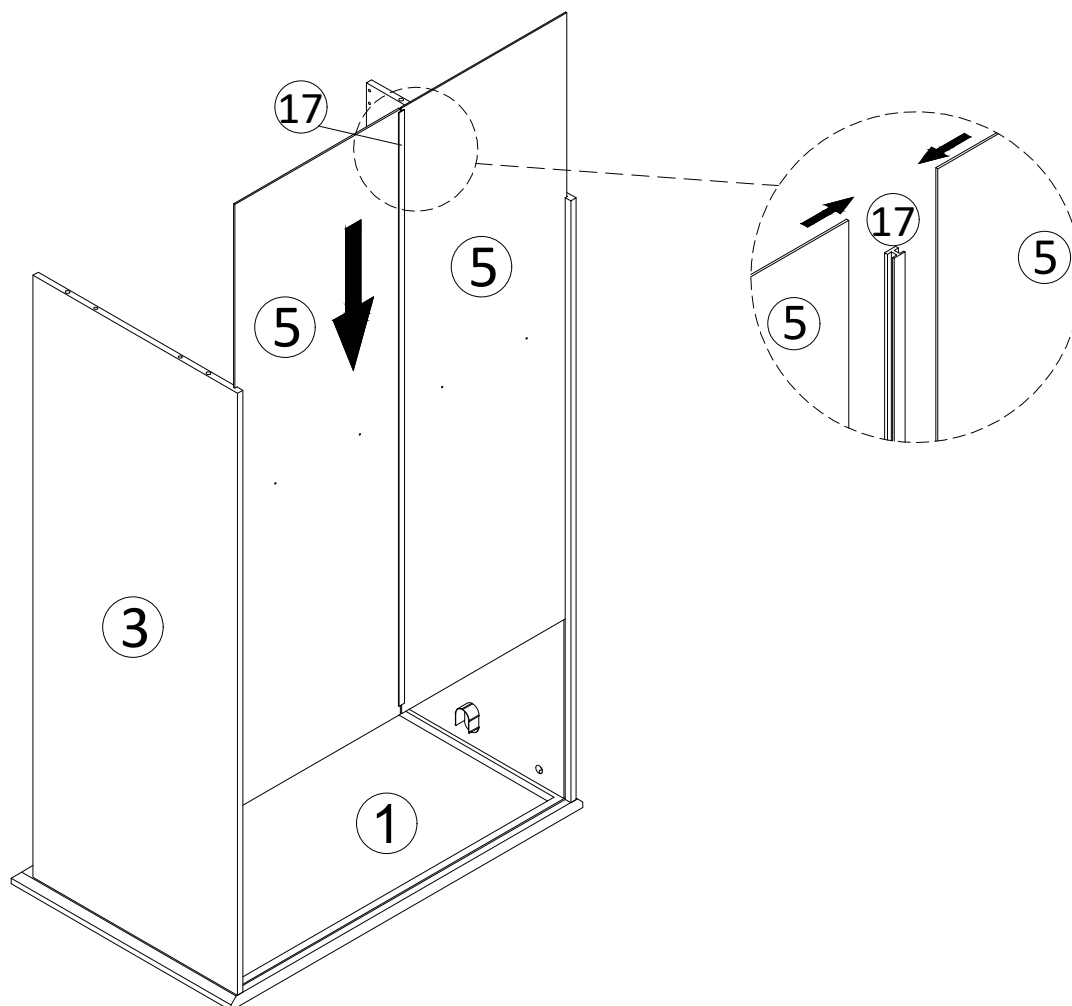

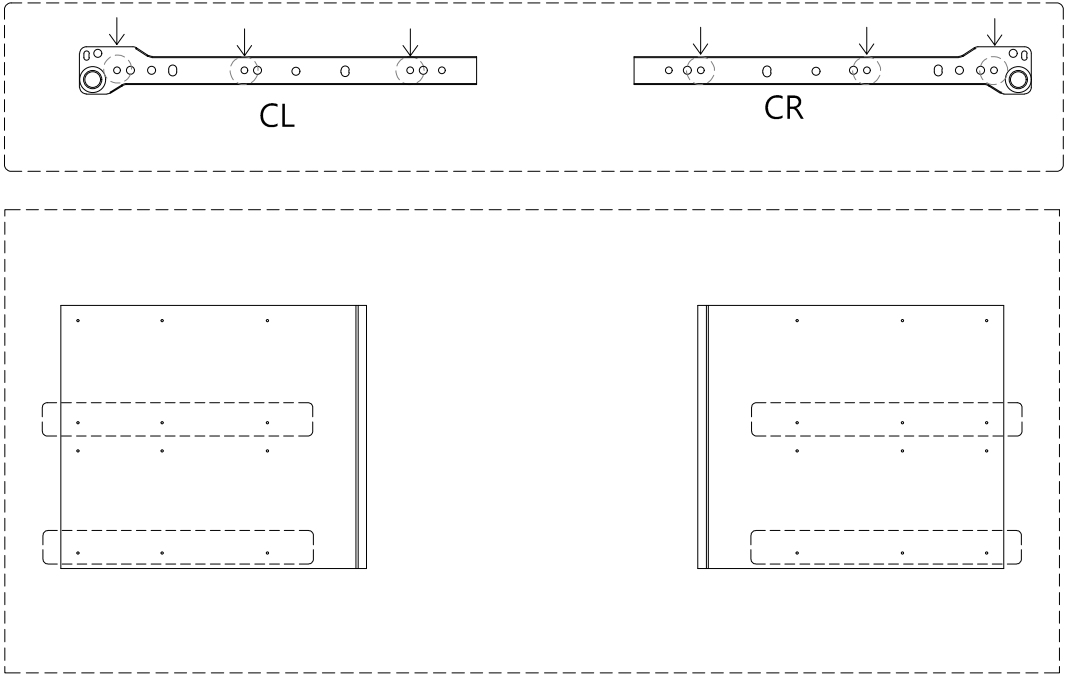


Turn the screws vertically
from slow to fast.

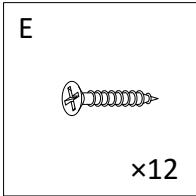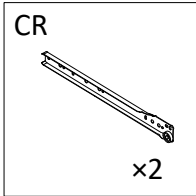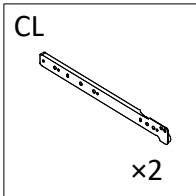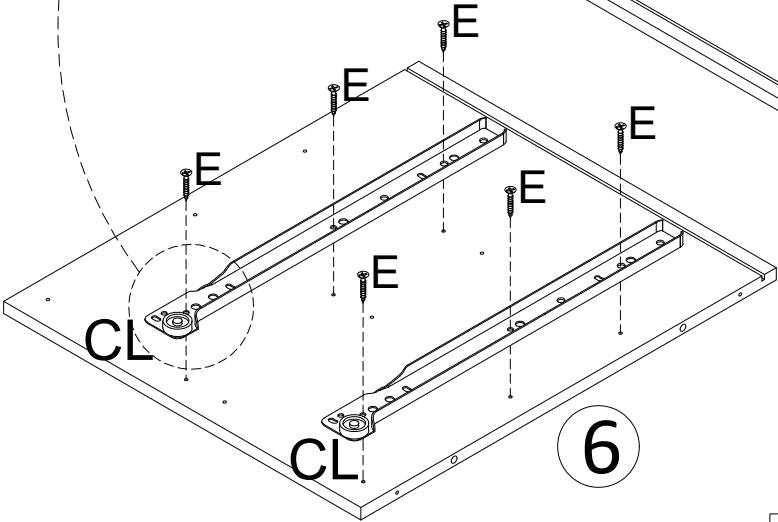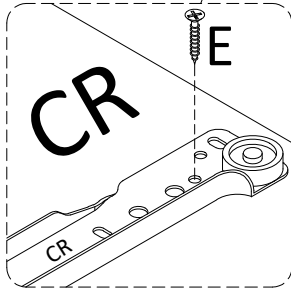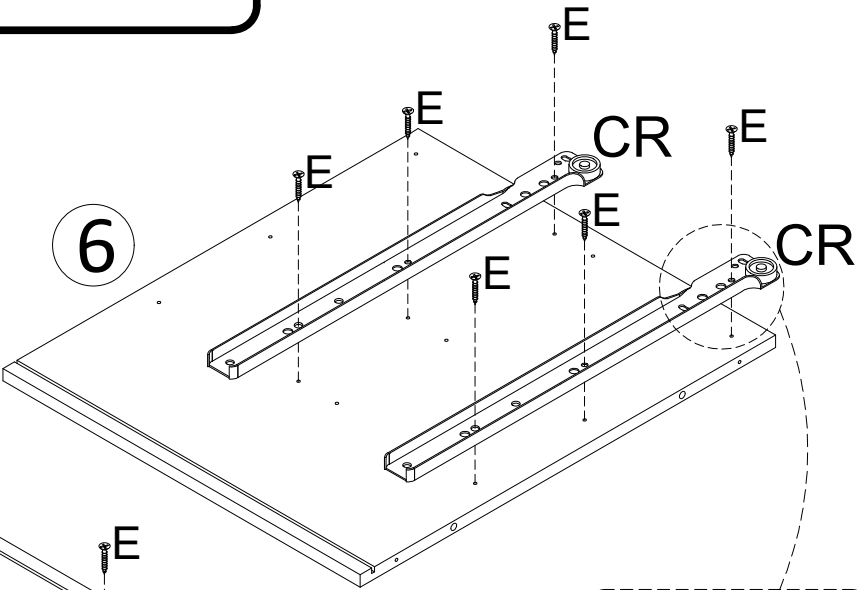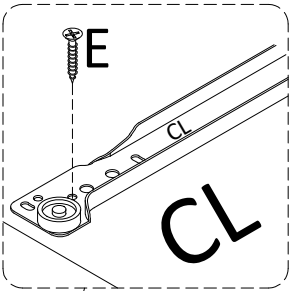


8


Turn the screws vertically
from slow to fast.

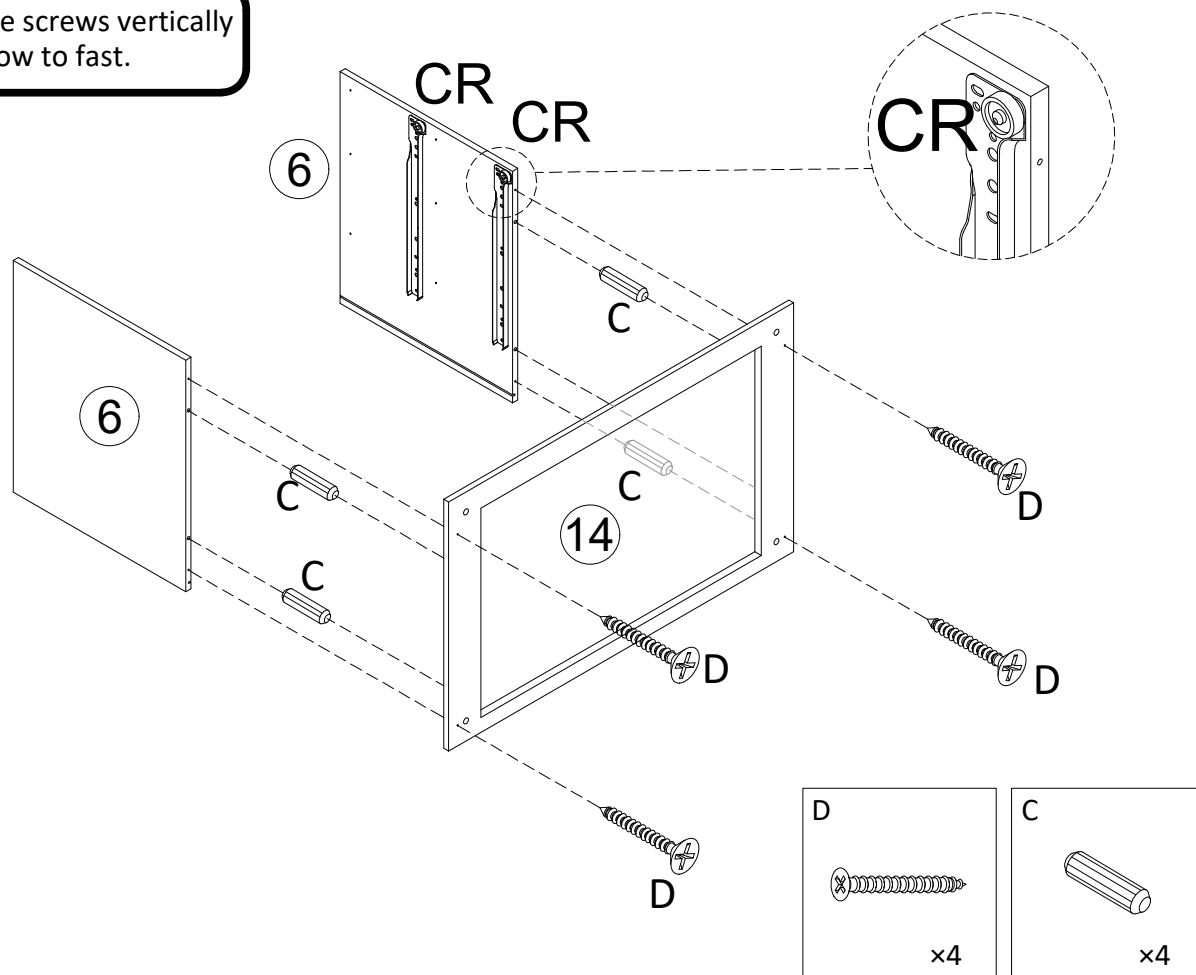

9



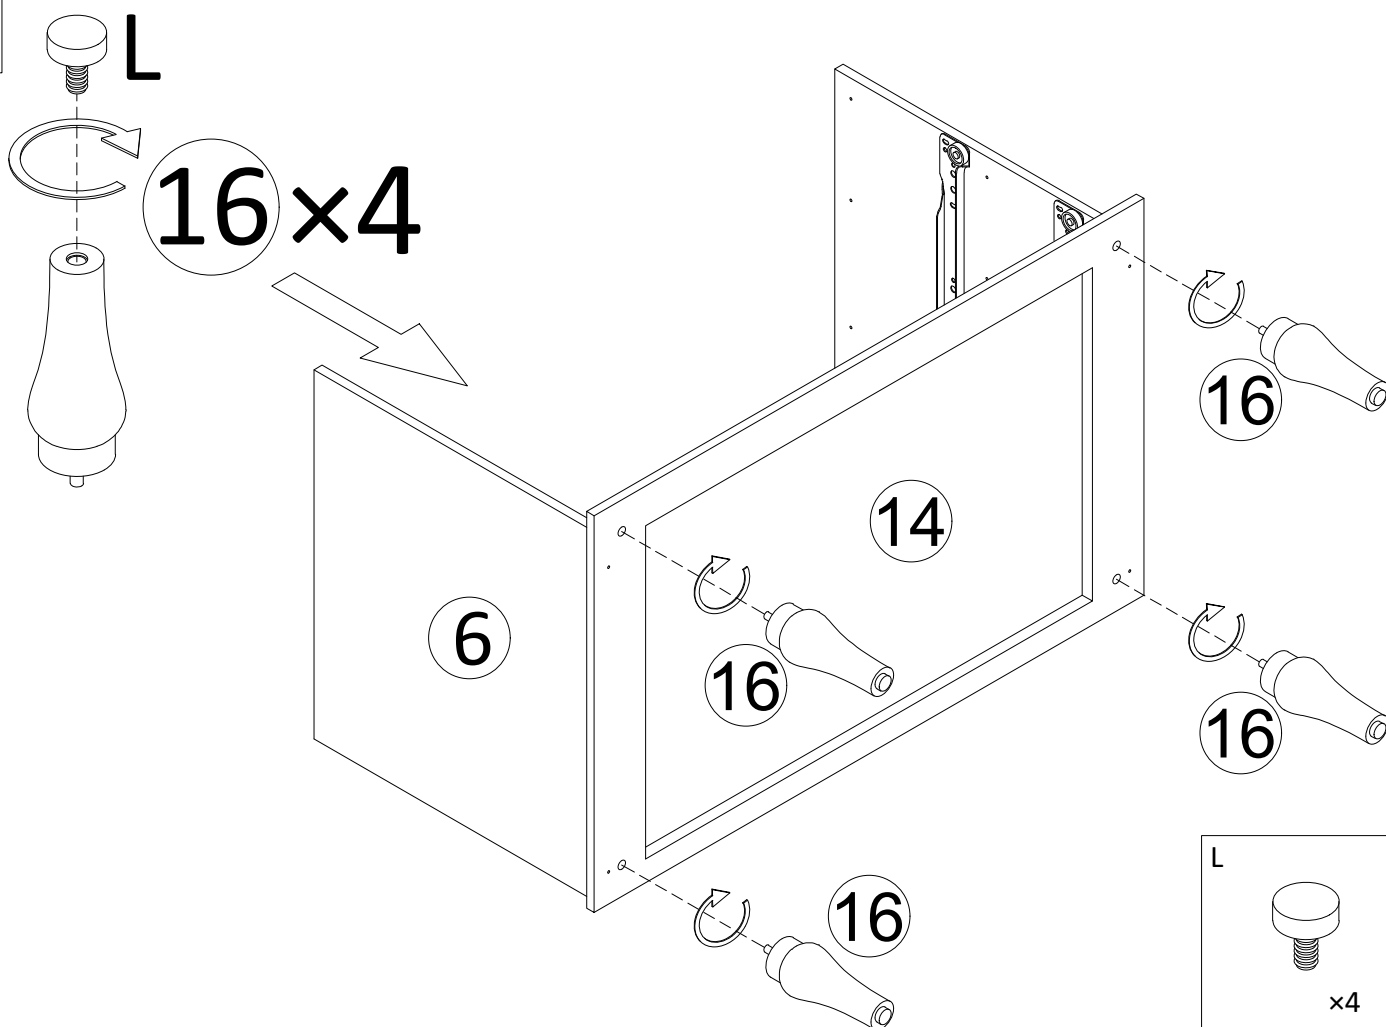


10



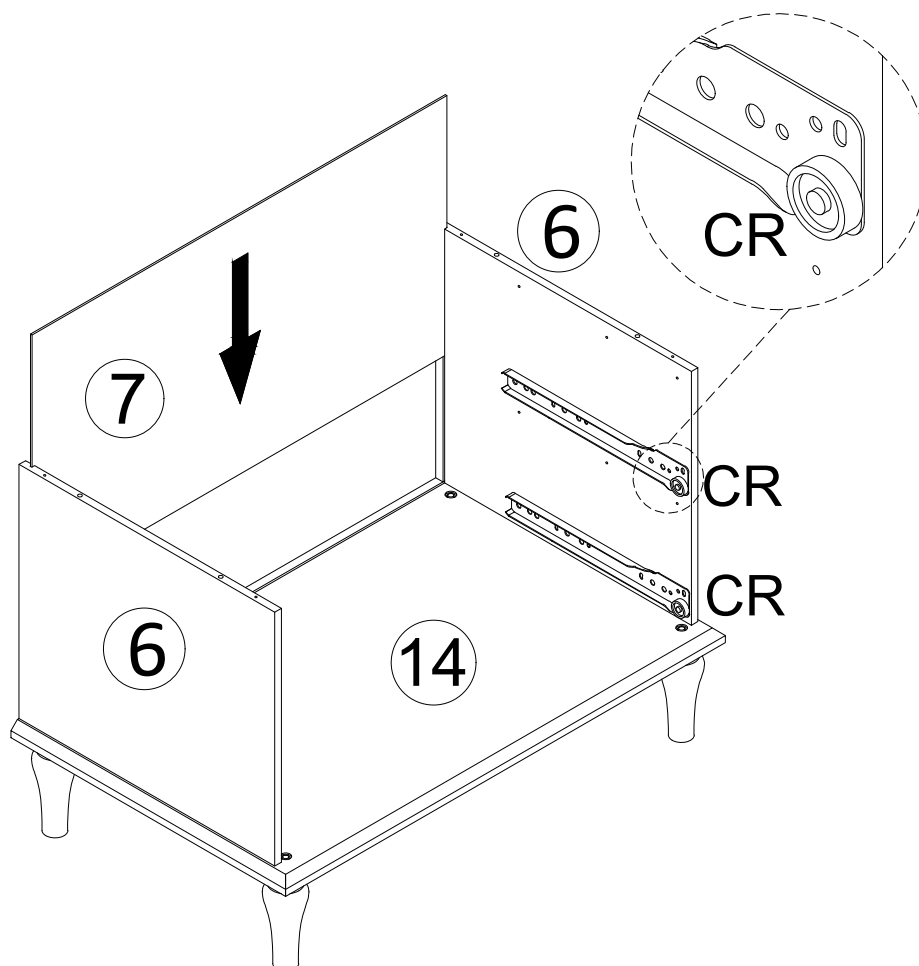


11


Turn the screws vertically from slow to fast.

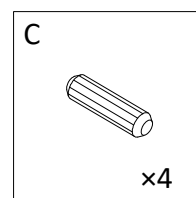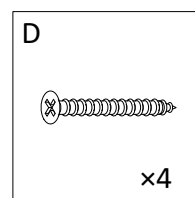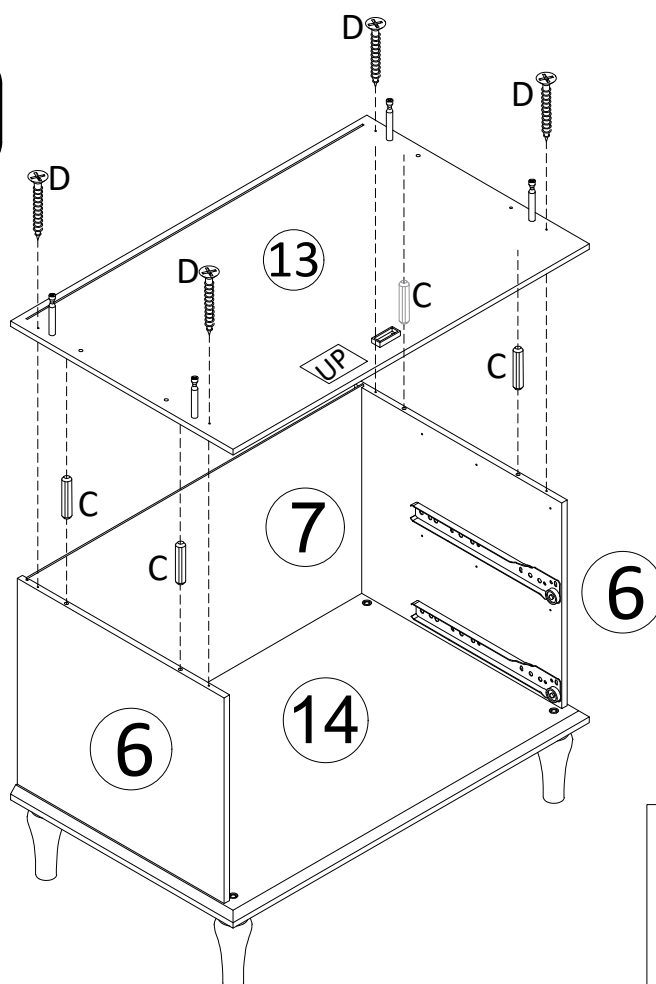




12

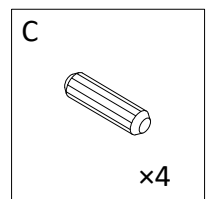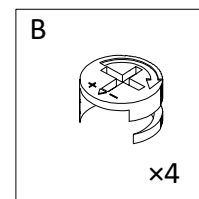
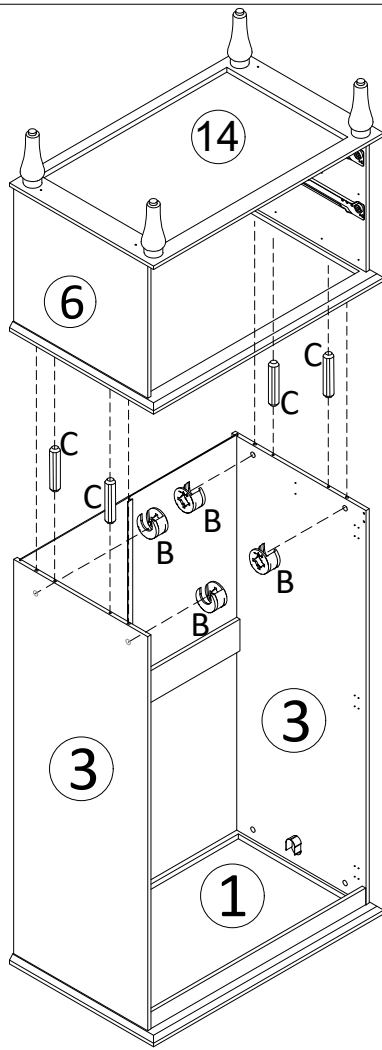


13


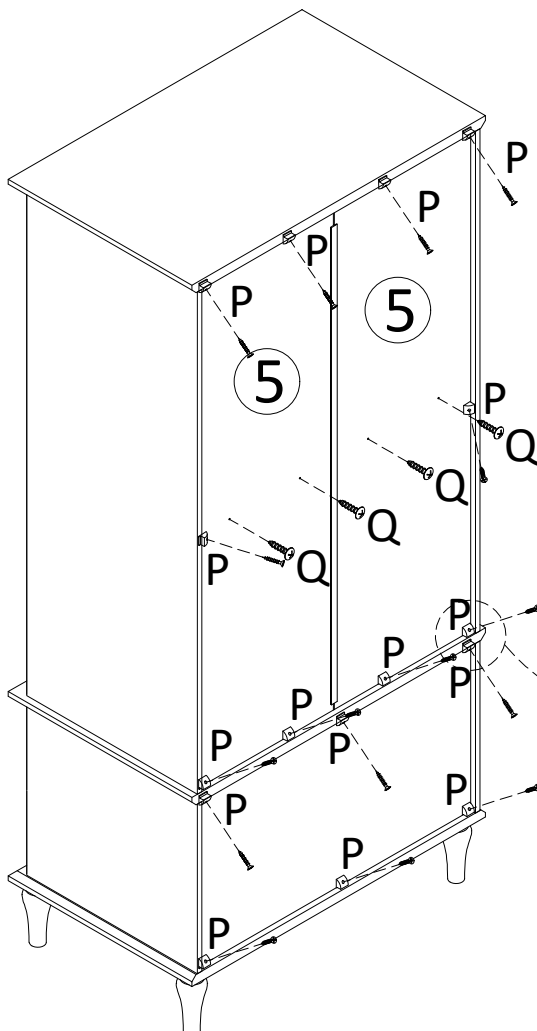


Turn the screws vertically from slow to fast.

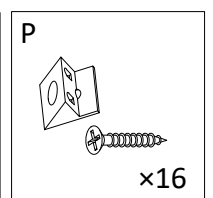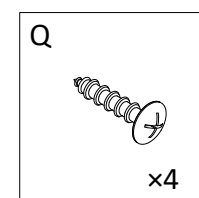
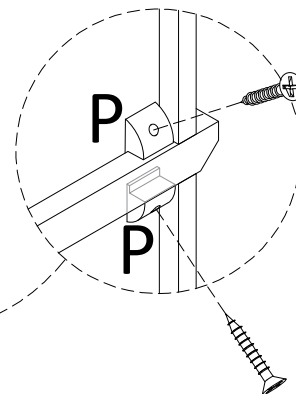


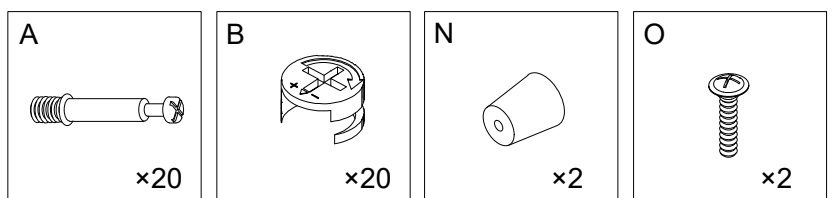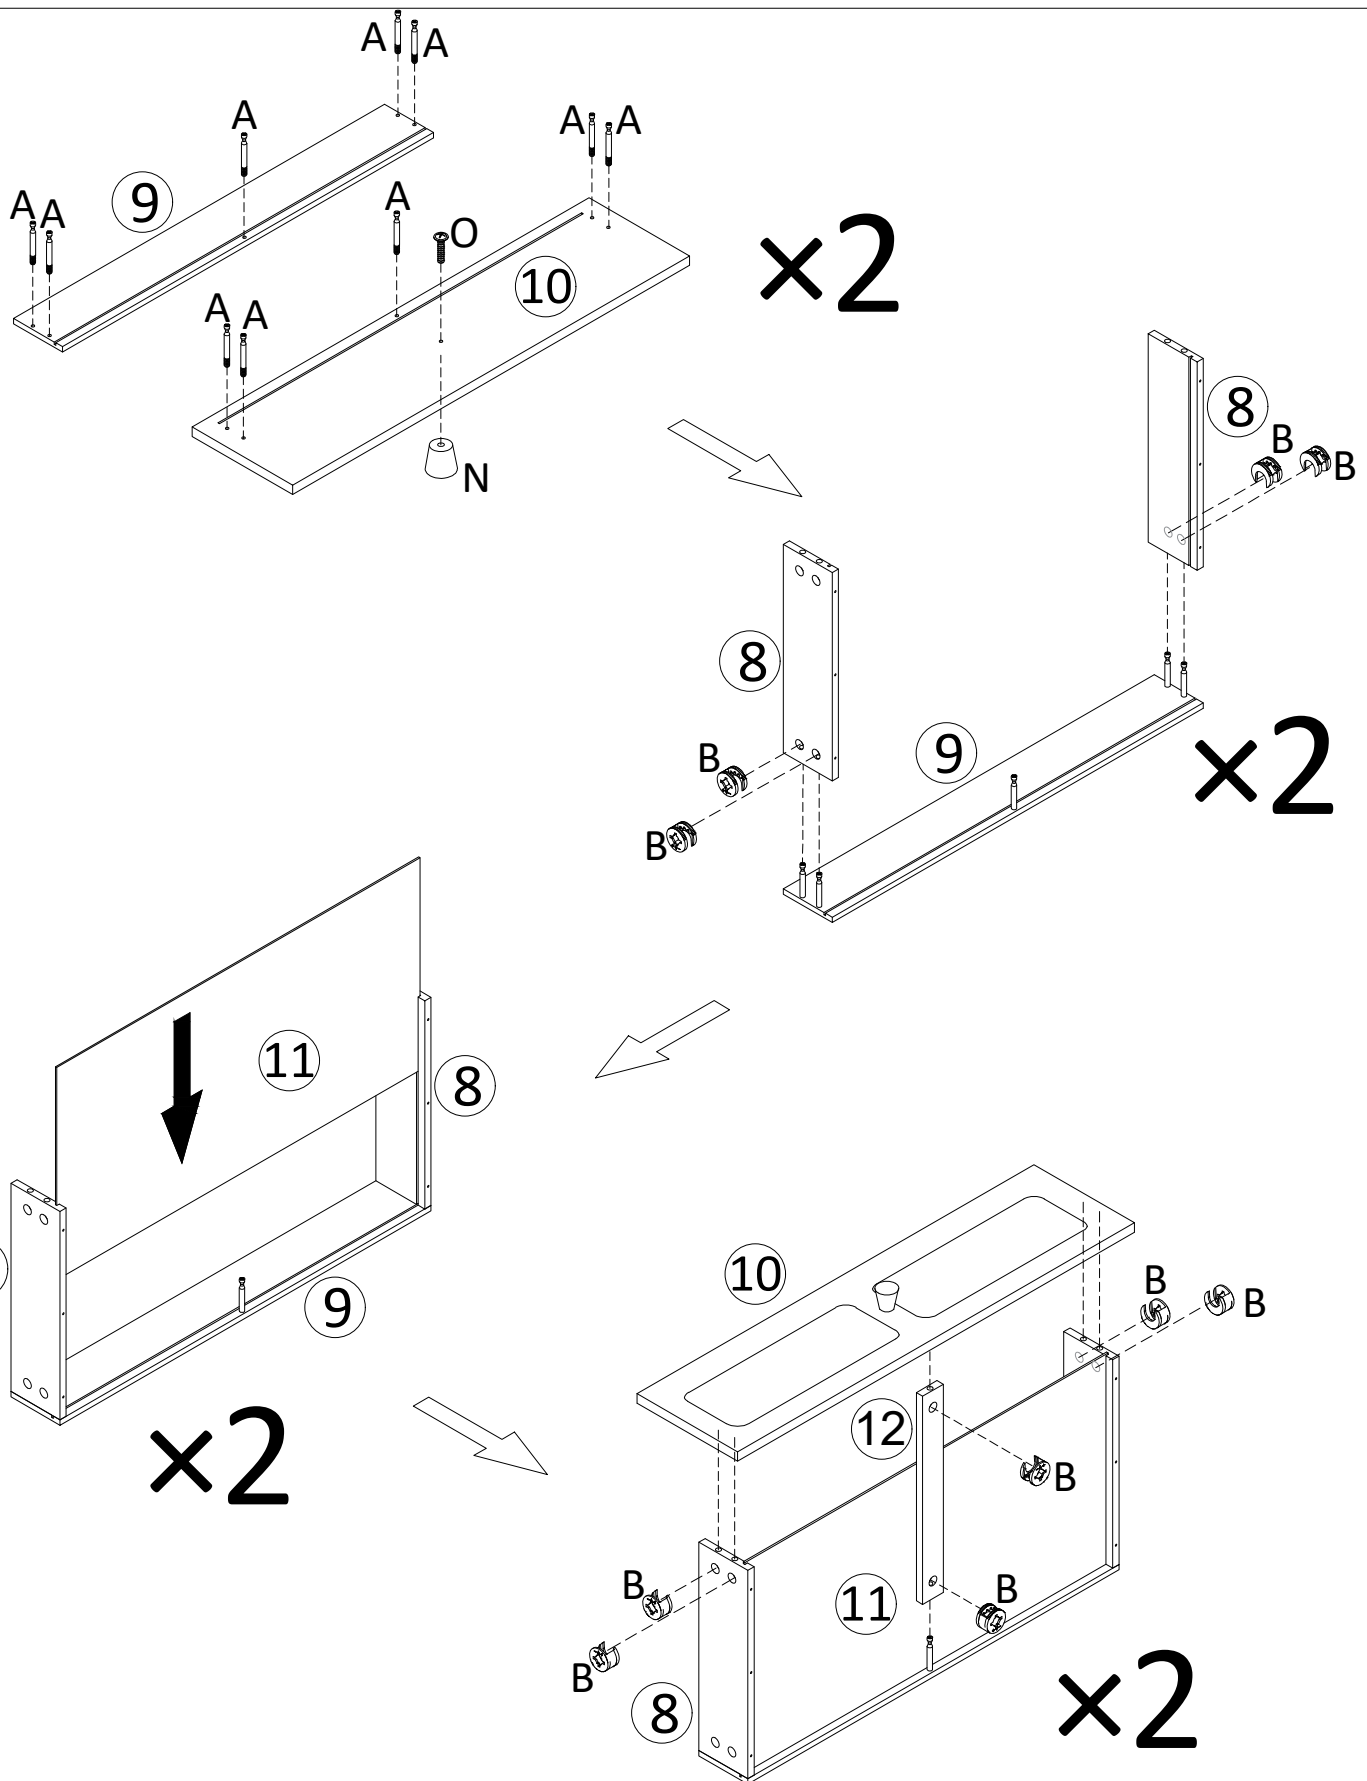



15

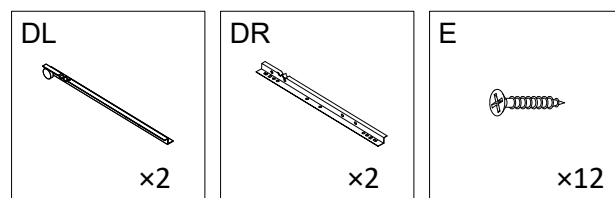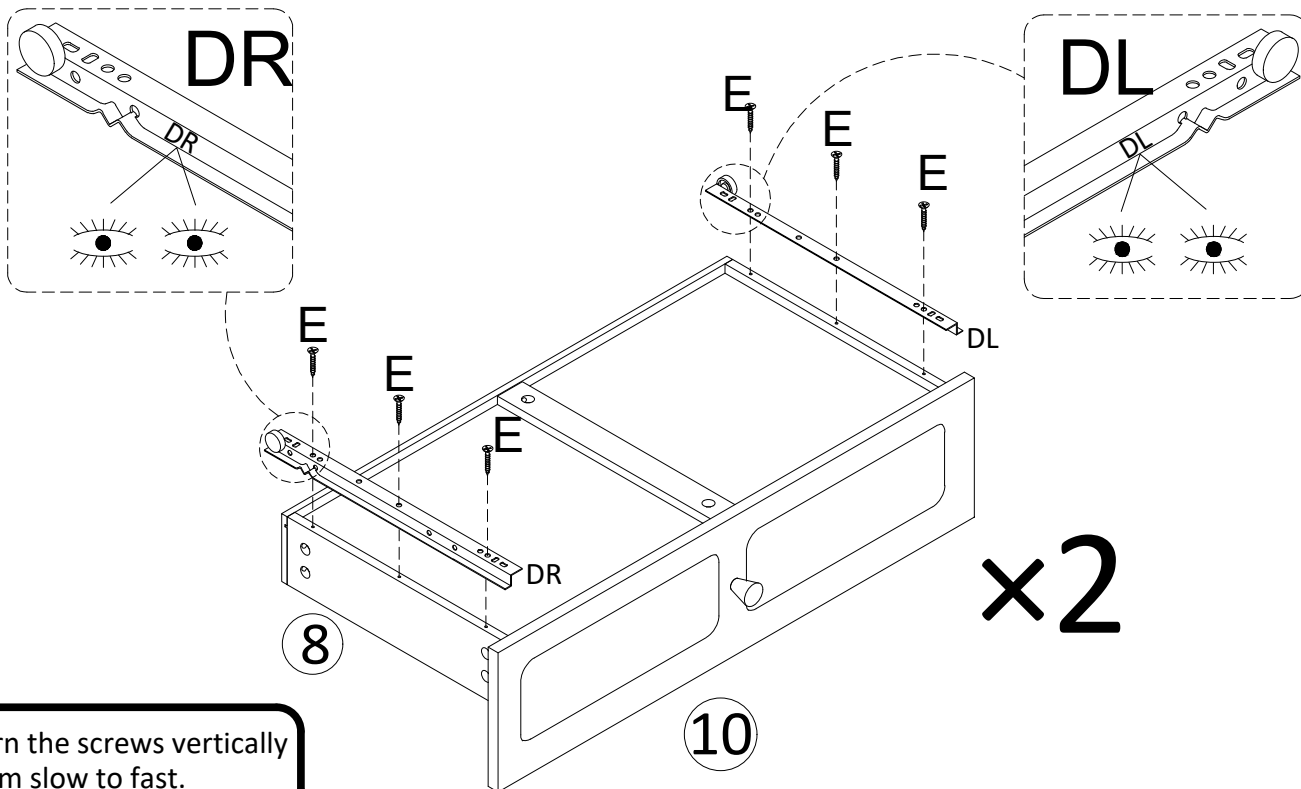


16

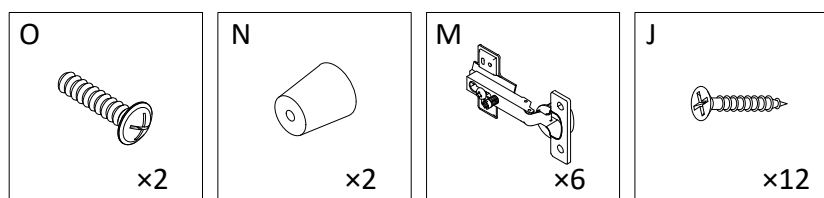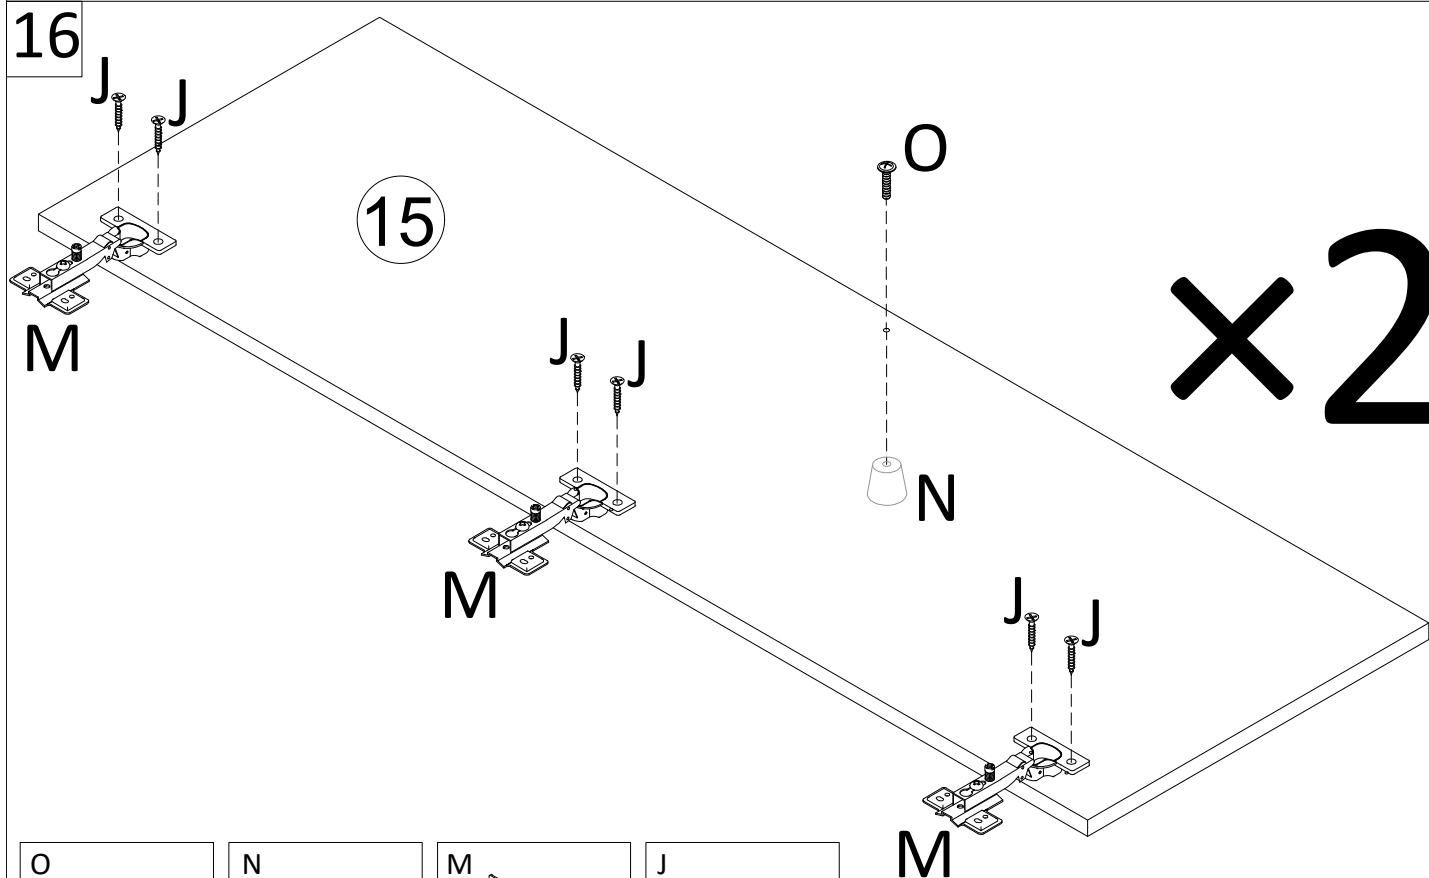


17

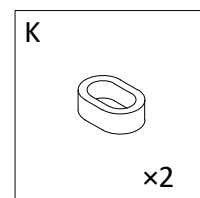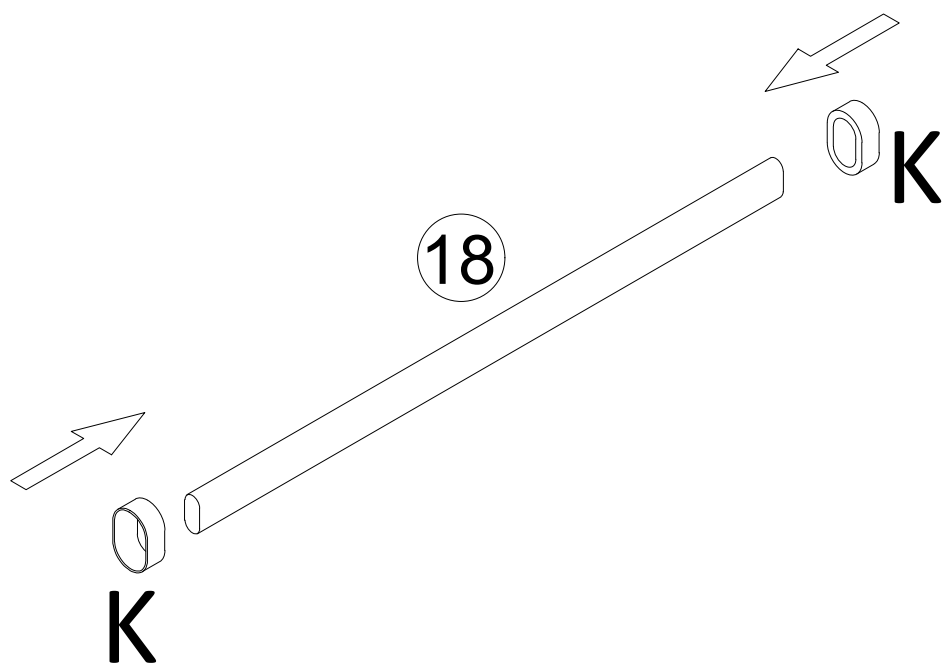

18

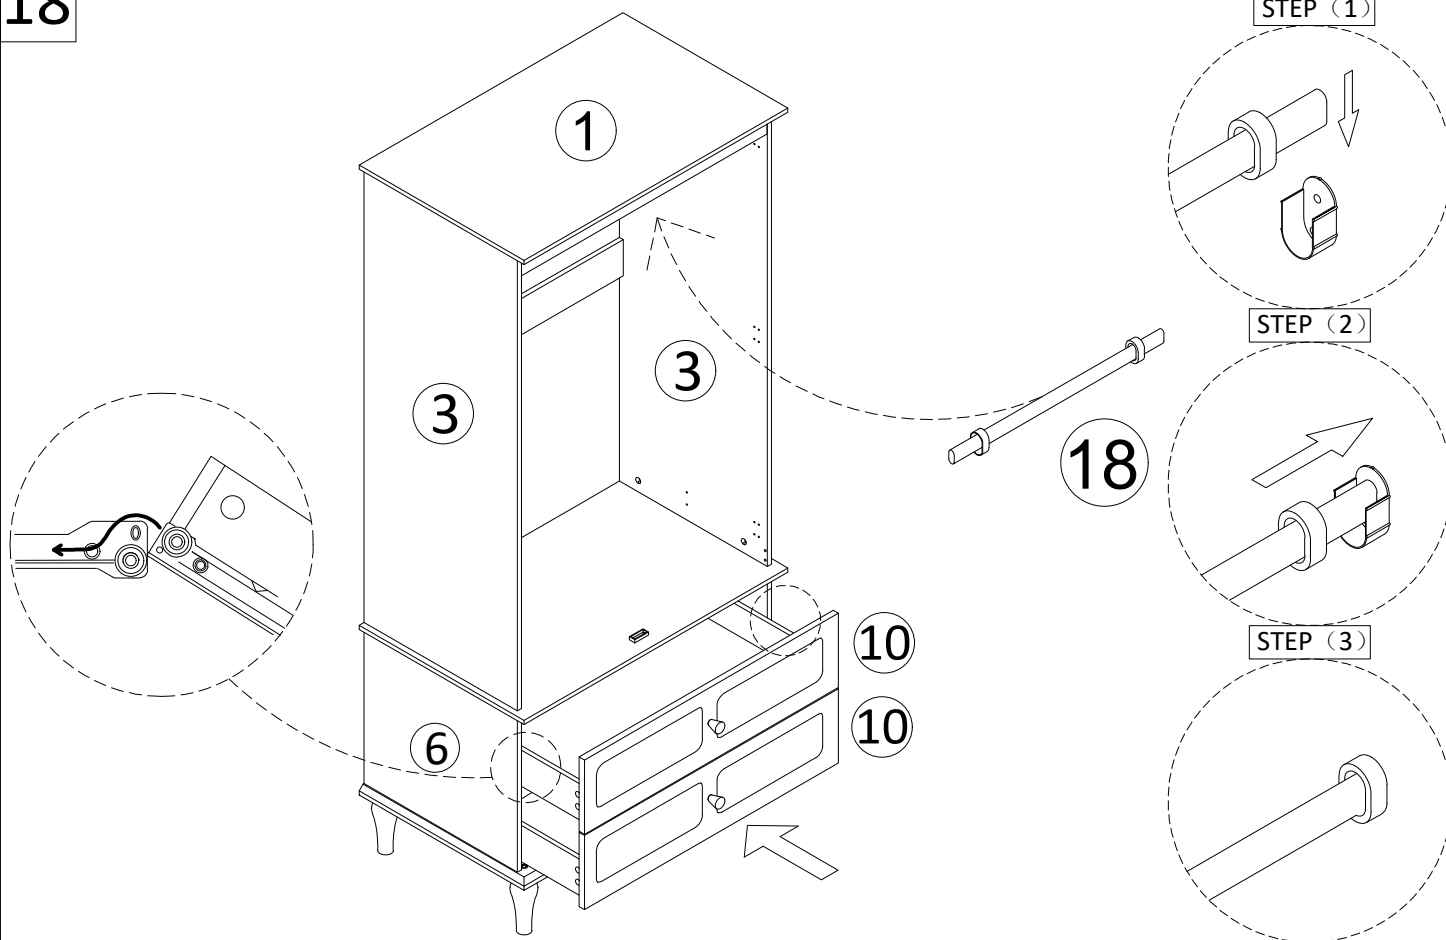


STEP (1)

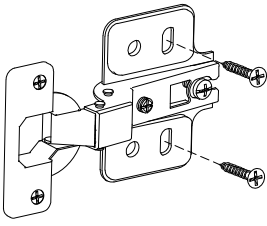


Tips: Turning the screw to approx 50% tightness, don't be fully tight.

STEP (2)

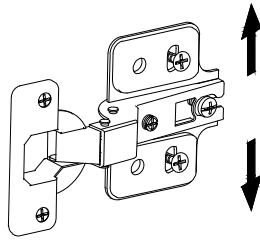


Tips: Moving the hinges up or down appropriately to adjust the gap between the door with the cabinet top and bottom.

STEP (3)

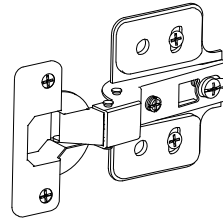






Tips: Tightening the screws completely.

STEP (4)

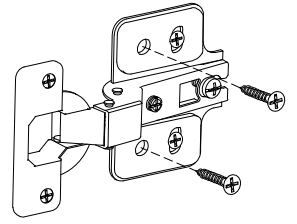

Tips: Tightening the other screws completely.

Turn the screws vertically from slow to fast.

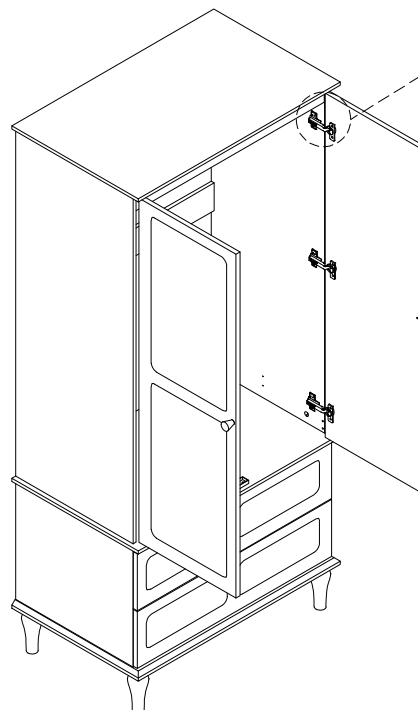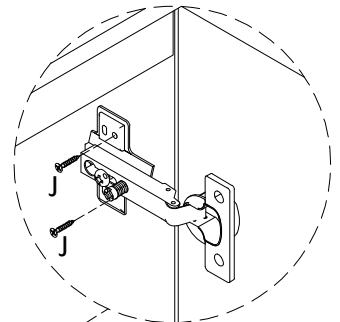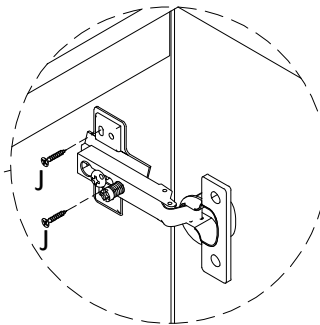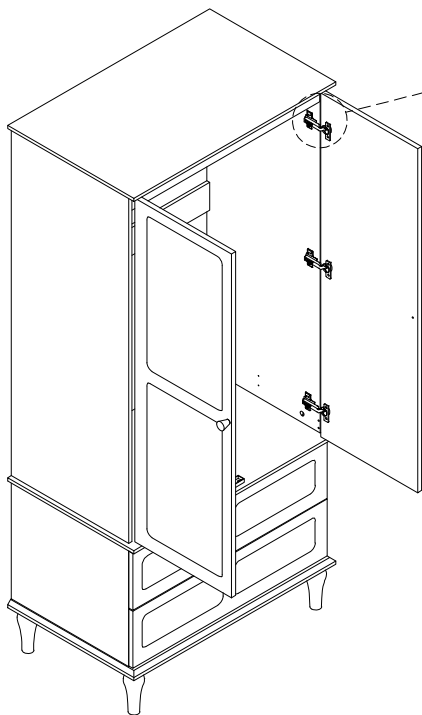




J






x24

20




Tips: If the gap between two doors is too far or close, please turning the screw as shown below.

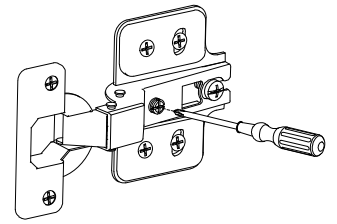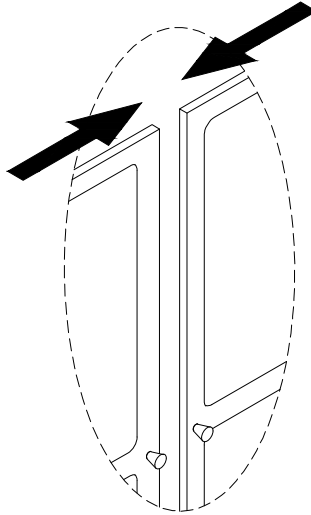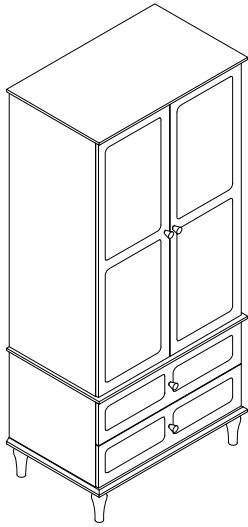


Tips: Adjusting the screw as shown in the following picture can make the door move forward or backward.

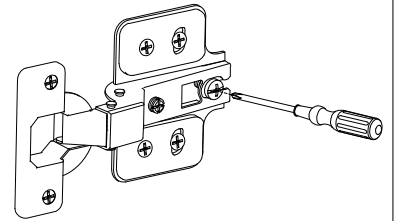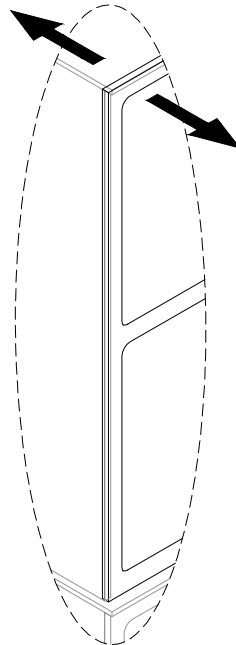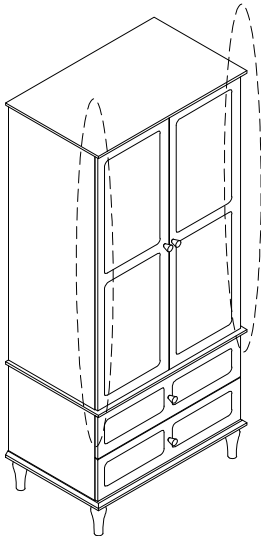

Tips: Adjusting the levelers appropriately underneath the bottom of the foot can make the gaps between the door and frames of cabinet even.

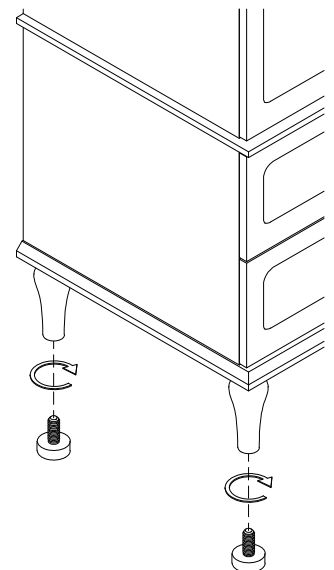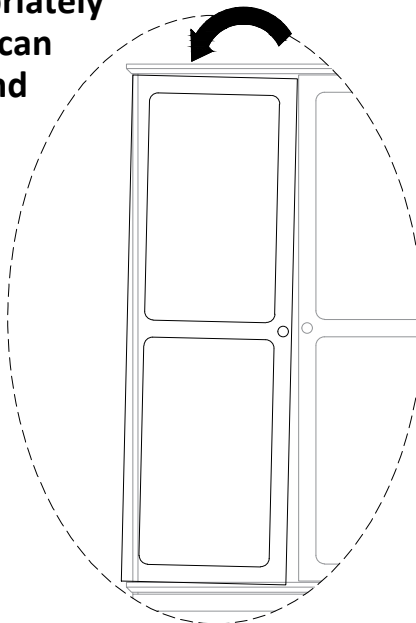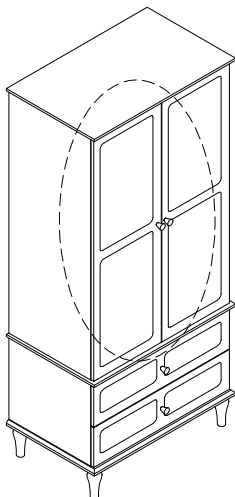

21

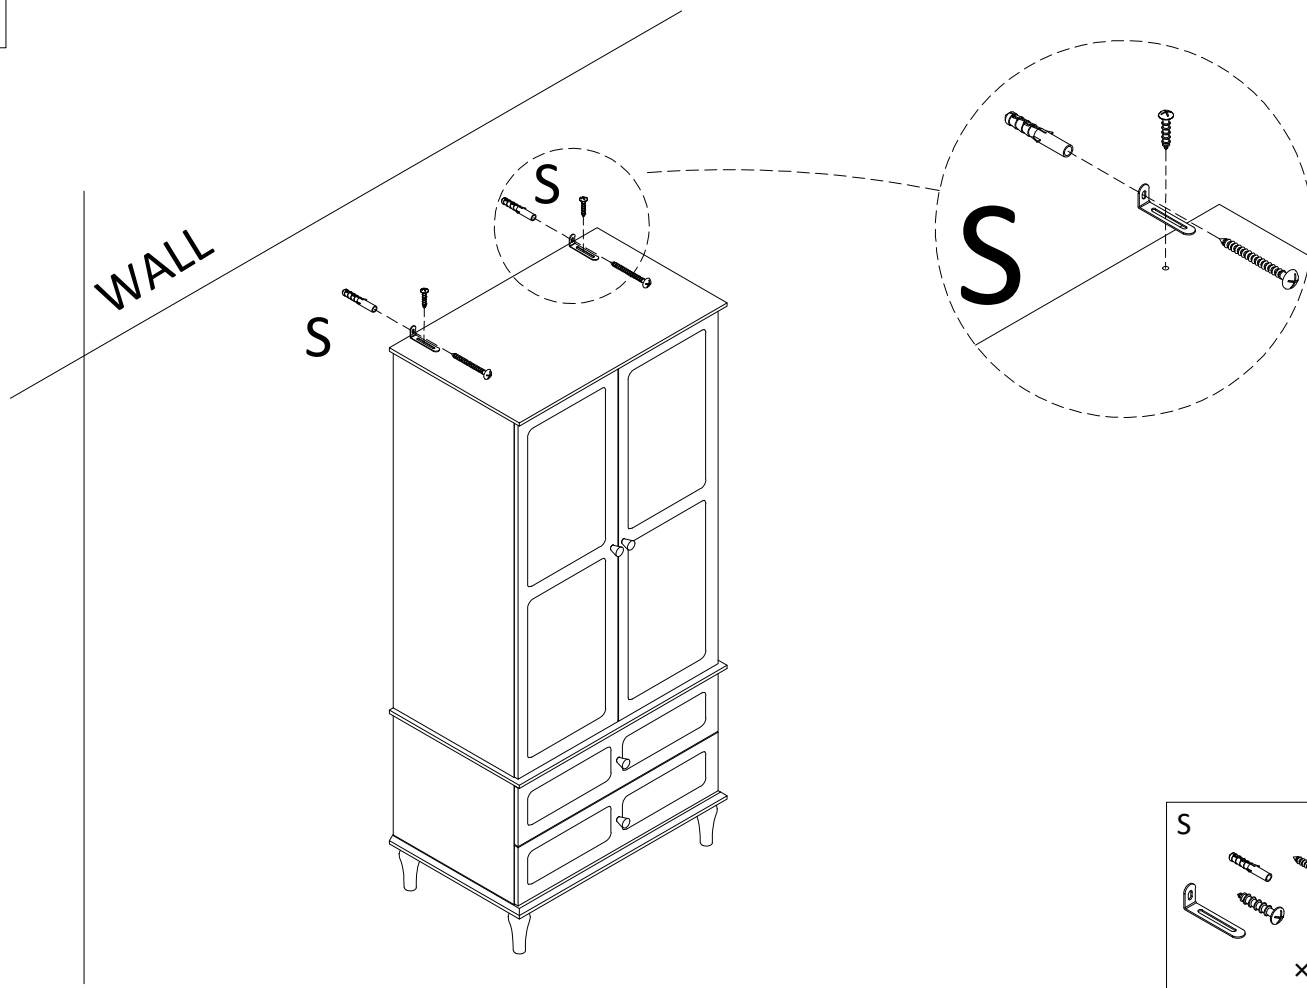

22

