



ASSEMBLY INSTRUCTIONS

DRESSER


(Box 1)
DRESSER

No.	Description	Drawing	Qty.
A	Dresser		1 Pc
B	Bun Foot*		4 Pcs
C	Wooden Support*		1 Pc

* Bun Foot And Wooden Support Packed
Inside Dresser Bottom Drawer

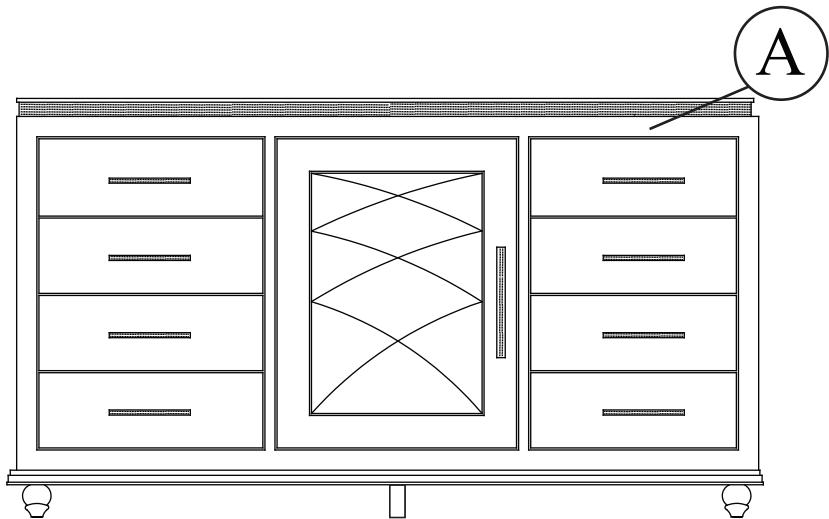

STEP 1:
Attach wooden support (C) and bun foot (B) to dresser (A).

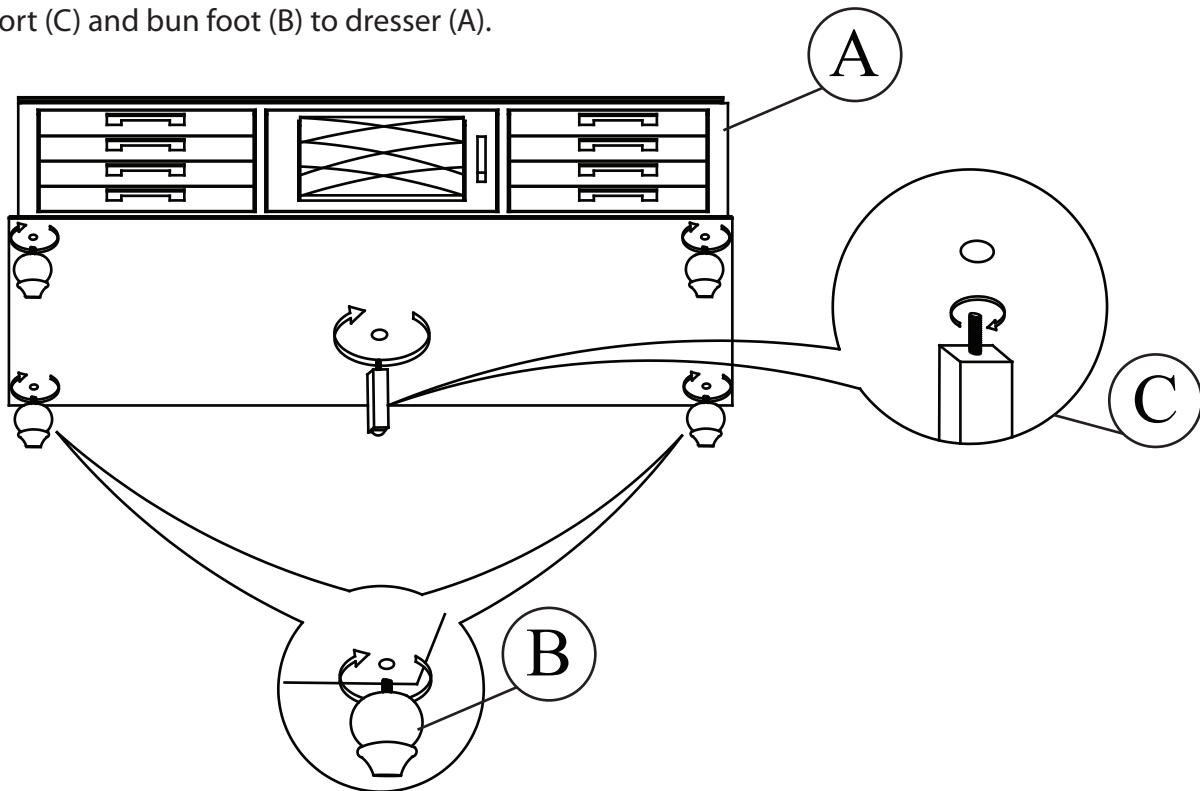

THE ANTI TIPPING HARDWARE IS LOCATED IN DRESSER 1ST RIGHT SIDE FRONT DRAWER
THE HARDWARE IS LOCATED IN THE PACKING ITEMS