



ASSEMBLY INSTRUCTION




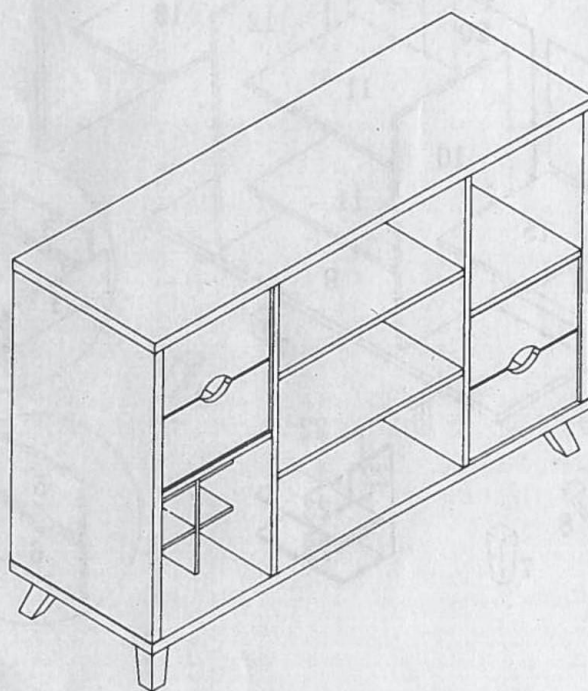


PARTS IDENTIFICATION

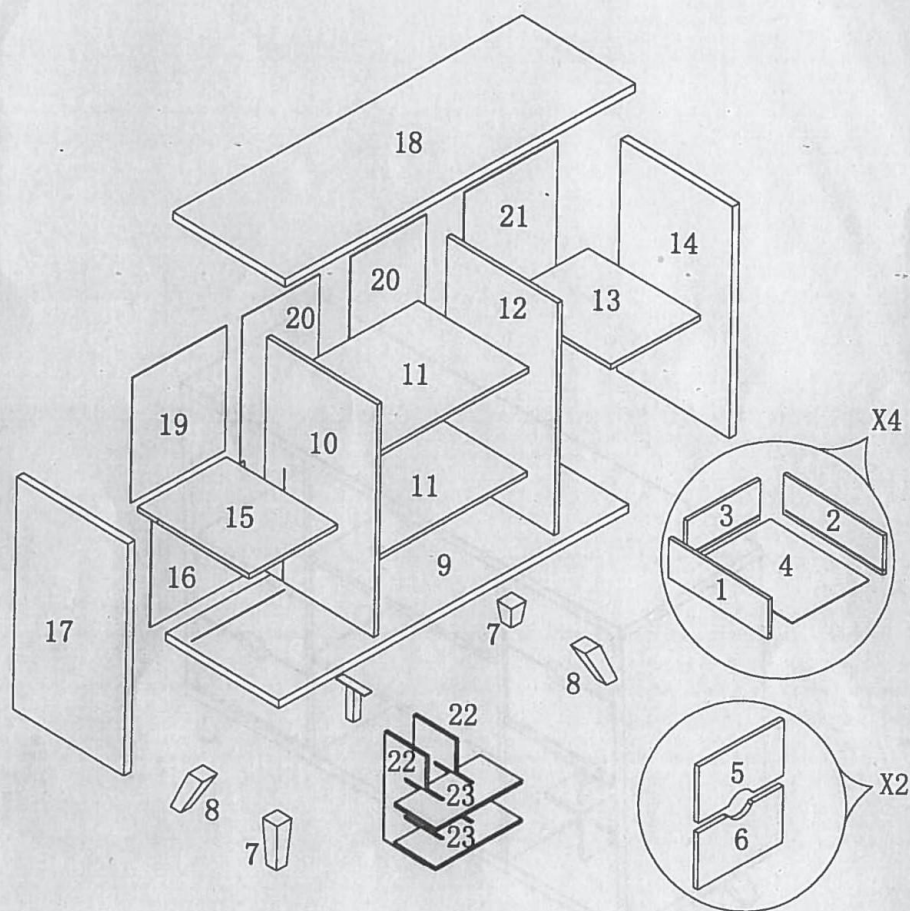


(1)	4pcs	(7)	2pcs	(13)	1pc	(19)	1pc
(2)	4pcs	(8)	2pcs	(14)	1pc	(20)	2pcs
(3)	4pcs	(9)	1pc	(15)	1pc	(21)	1pc
(4)	4pcs	(10)	1pc	(16)	1pc	(22)	2pcs
(5)	2pcs	(11)	2pcs	(17)	1pc	(23)	2pcs


HARDWARE IDENTIFICATION

A		L=29	24pcs
B		ø15	24pcs
C		ø8 x 25	24pcs
D		M7 x 48	4pcs
E		ø4 x 30	16pcs
F		ø4 x 35	4pcs
G		L20	16pcs
H		φ 12	16pcs
I		L340	2pcs
J		ø4 x 16	8pcs
K		Z1016	40pcs
L		M8 x 35	4pcs
M		M5	1pc
N		80x25x152	1pc
O		φ 16	4pcs
P		φ 20	5pcs
Q		ø8 x 16 x 2	8pcs
R		197 x 5 x 1	1pc
S		ø4 x 25	1pc
T		ø5 x 40	1pc
U		ø8 x 40	1pc
V		12 x 12 x 1	2pcs
W		Glue: For securing please apply to wood dowel first before inserting into	1pc

ASSEMBLY INSTRUCTION

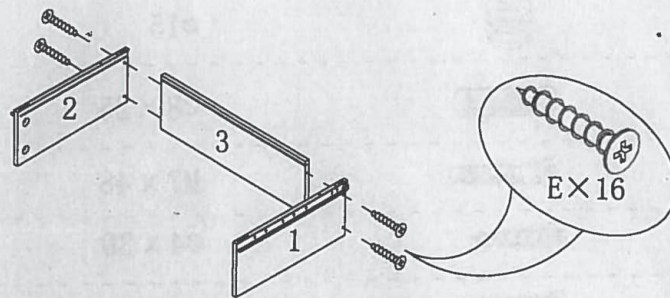


STETP 1

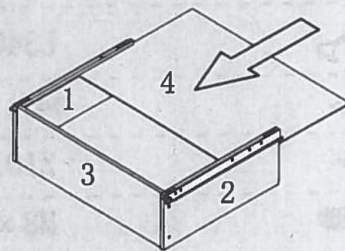


STETP 2

STETP 3

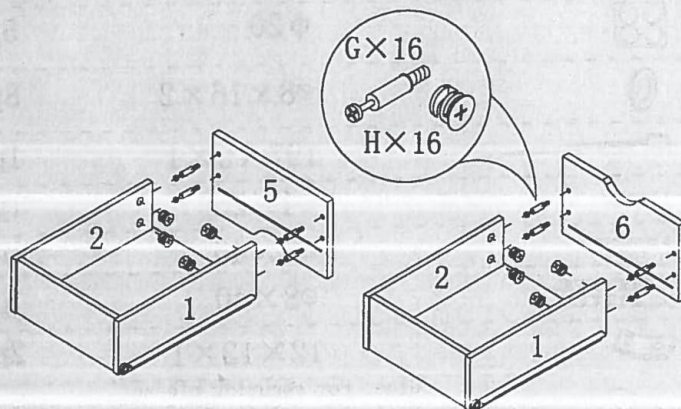


ASSEMBLY INSTRUCTION

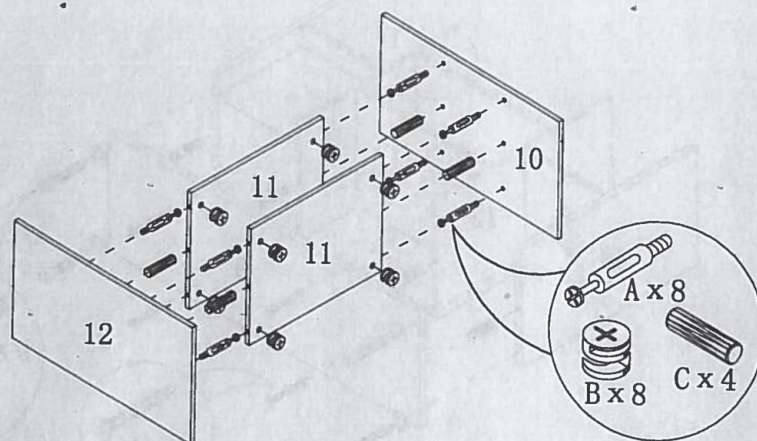


STETP 4

STETP 5

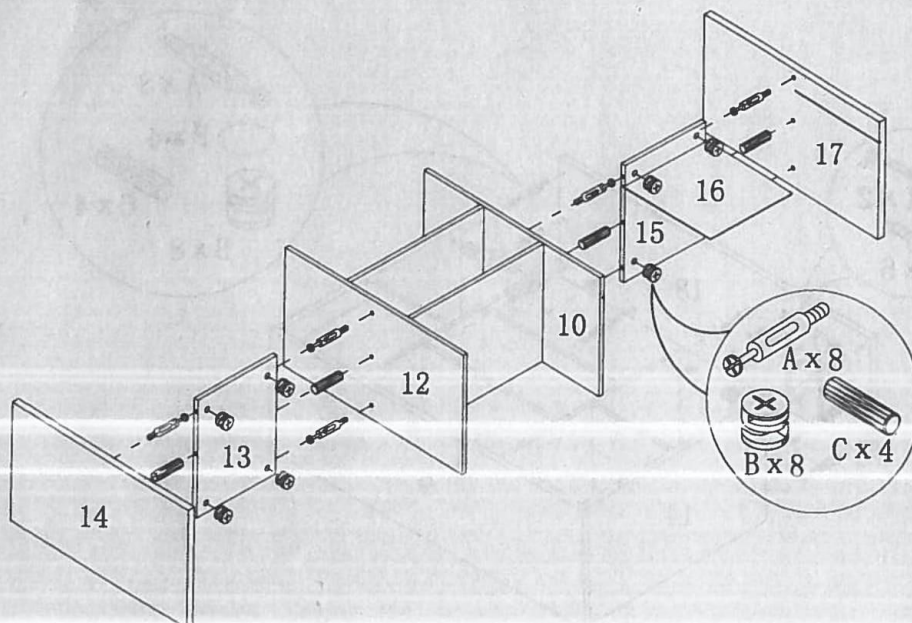


ASSEMBLY INSTRUCTION

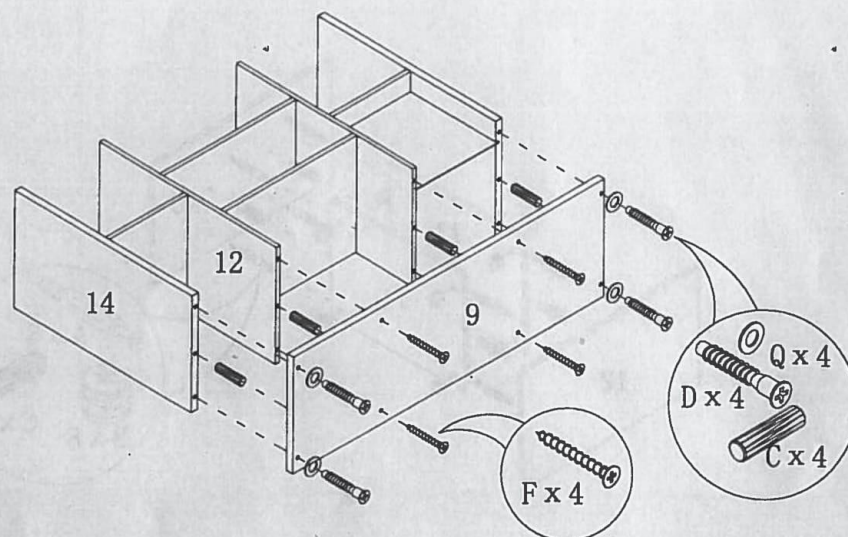


STETP 6

STETP 7

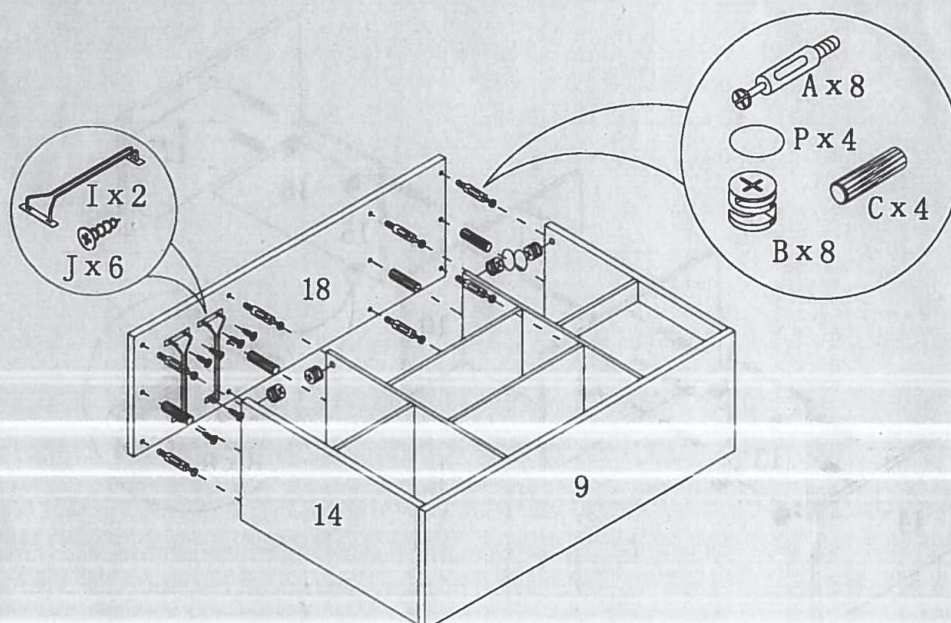


ASSEMBLY INSTRUCTION

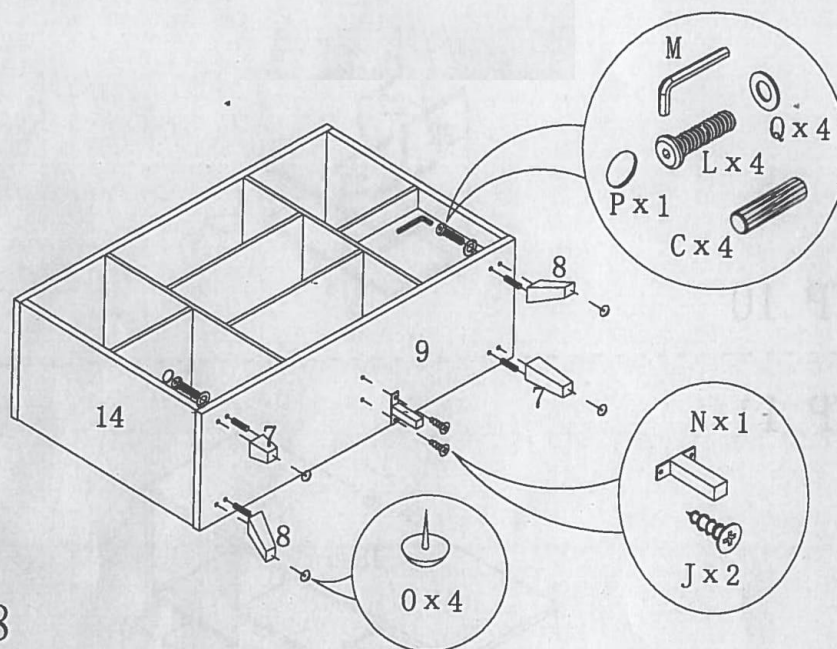


STETP 8

STETP 9

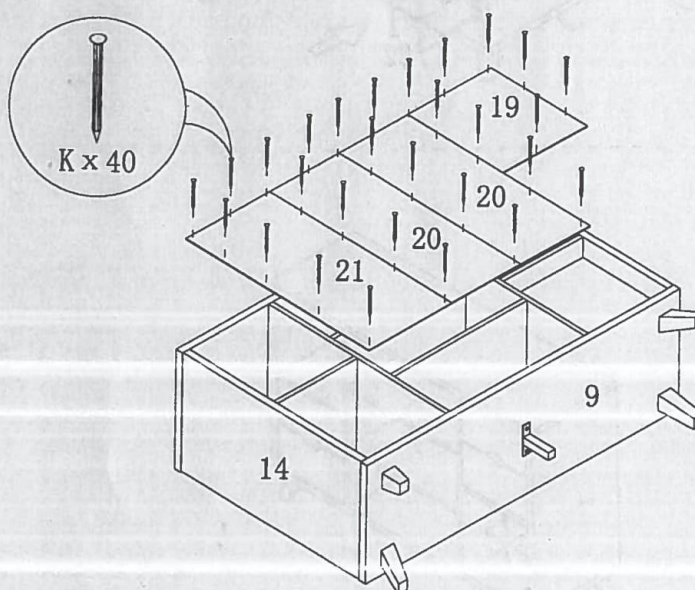


ASSEMBLY INSTRUCTION

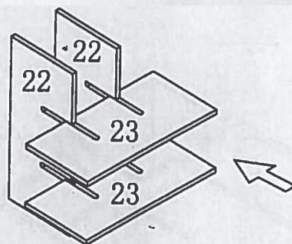


STETP 10

STETP 11

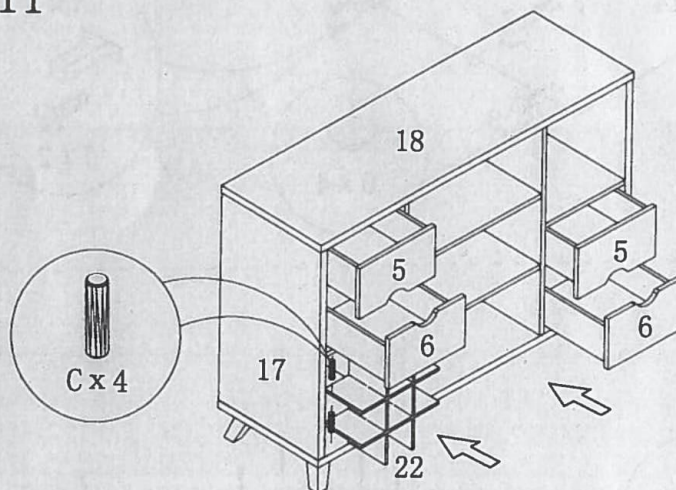

STETP 12

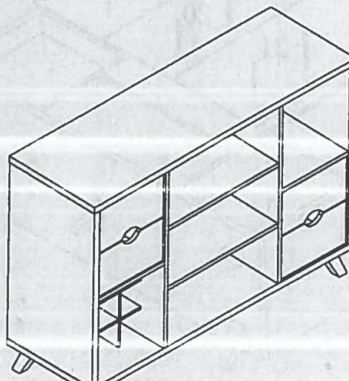


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDE

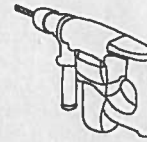


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

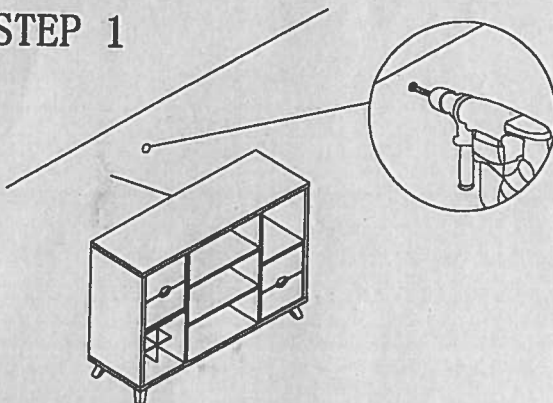


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

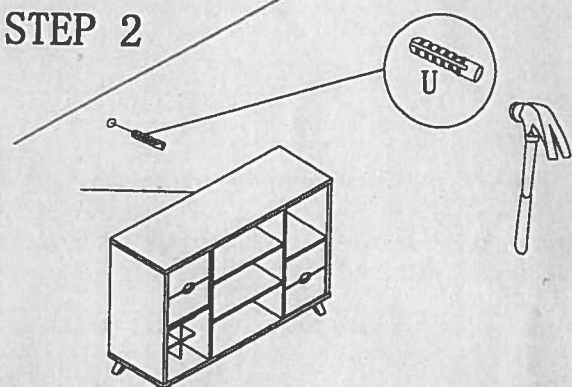


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

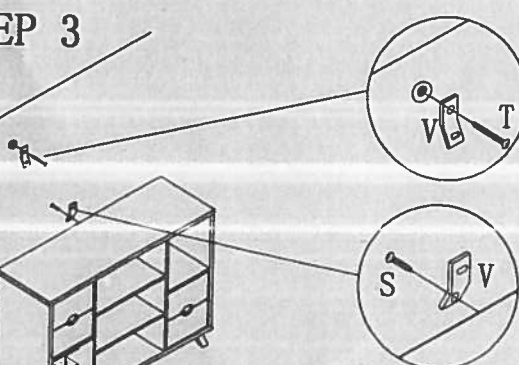

1. Insert drywall screw into metal bracket and into drywall anchor.

STEP 4

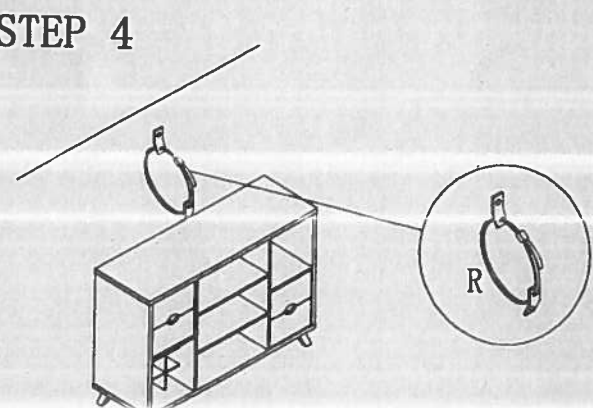

1. Insert strap thru bracket attached to wall, then thru bracket on item.