





Antique Concrete Buddha Relief

Installation Guide


Antique Concrete Buddha Relief

Wall Mounting

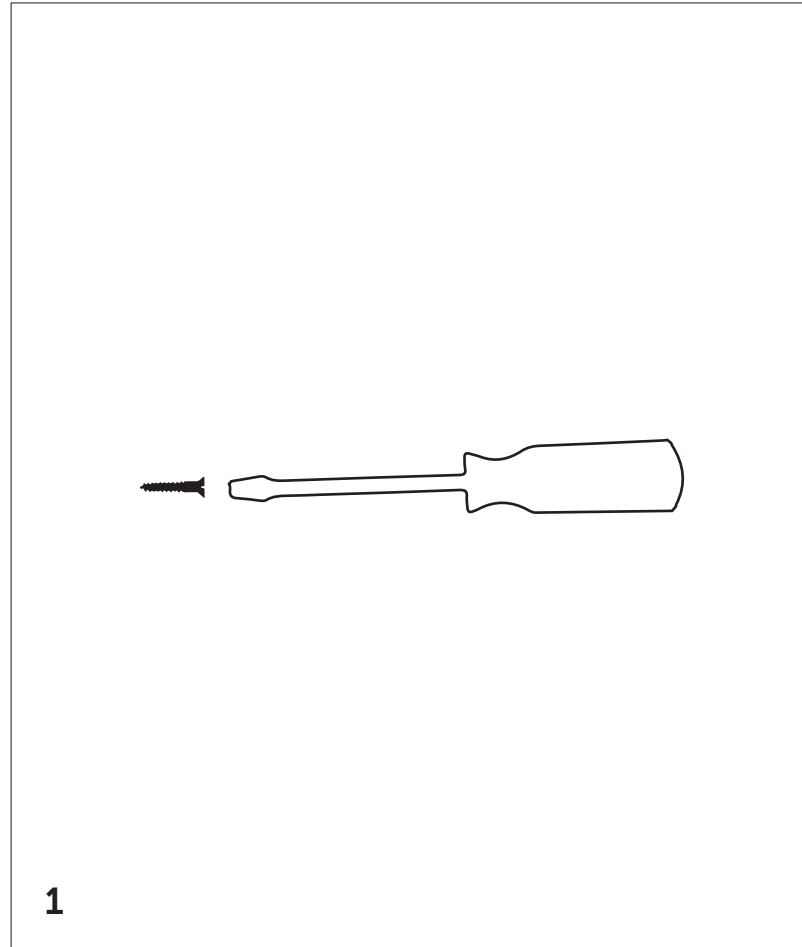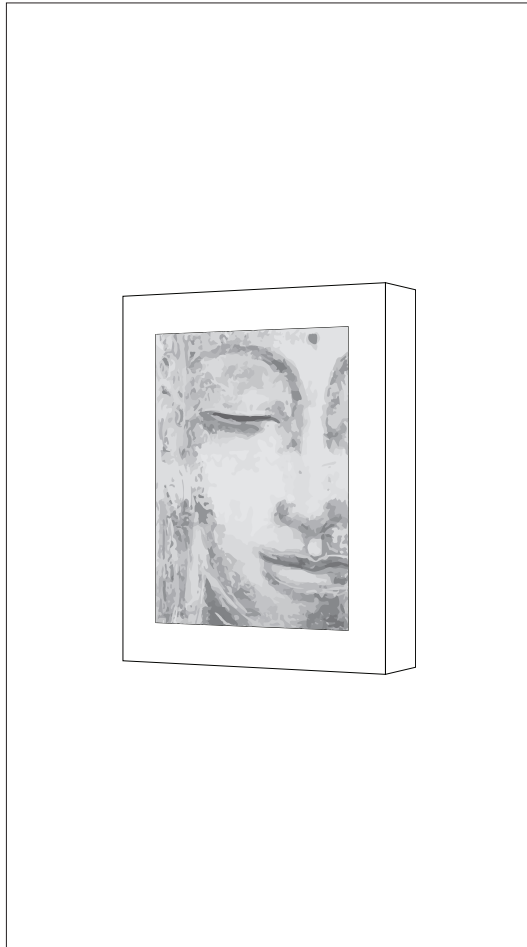

1

Place one screw into the wall surface.

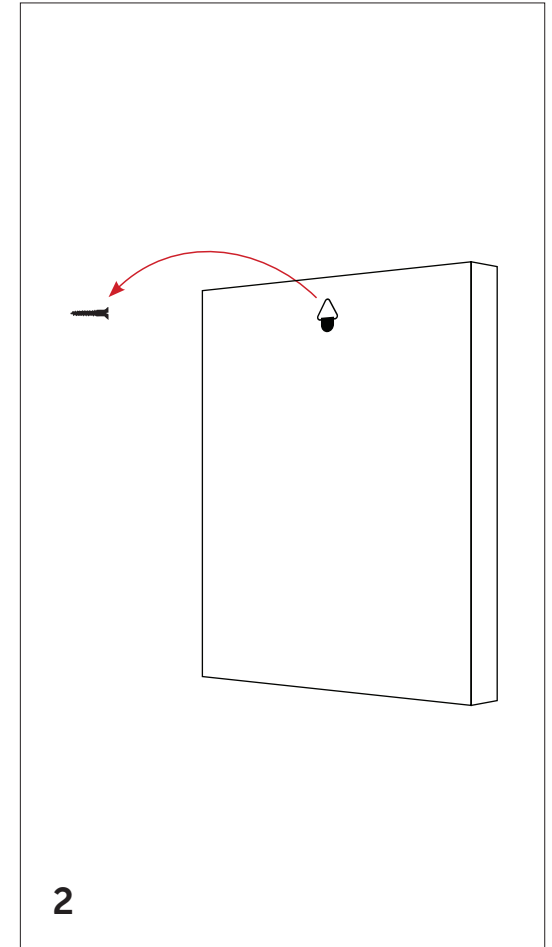

2

Place the hook on the back of Antique Concrete Buddha Relief onto the screw.

(screws not included)