


Desk

Assembly Instructions - Please keep for future reference

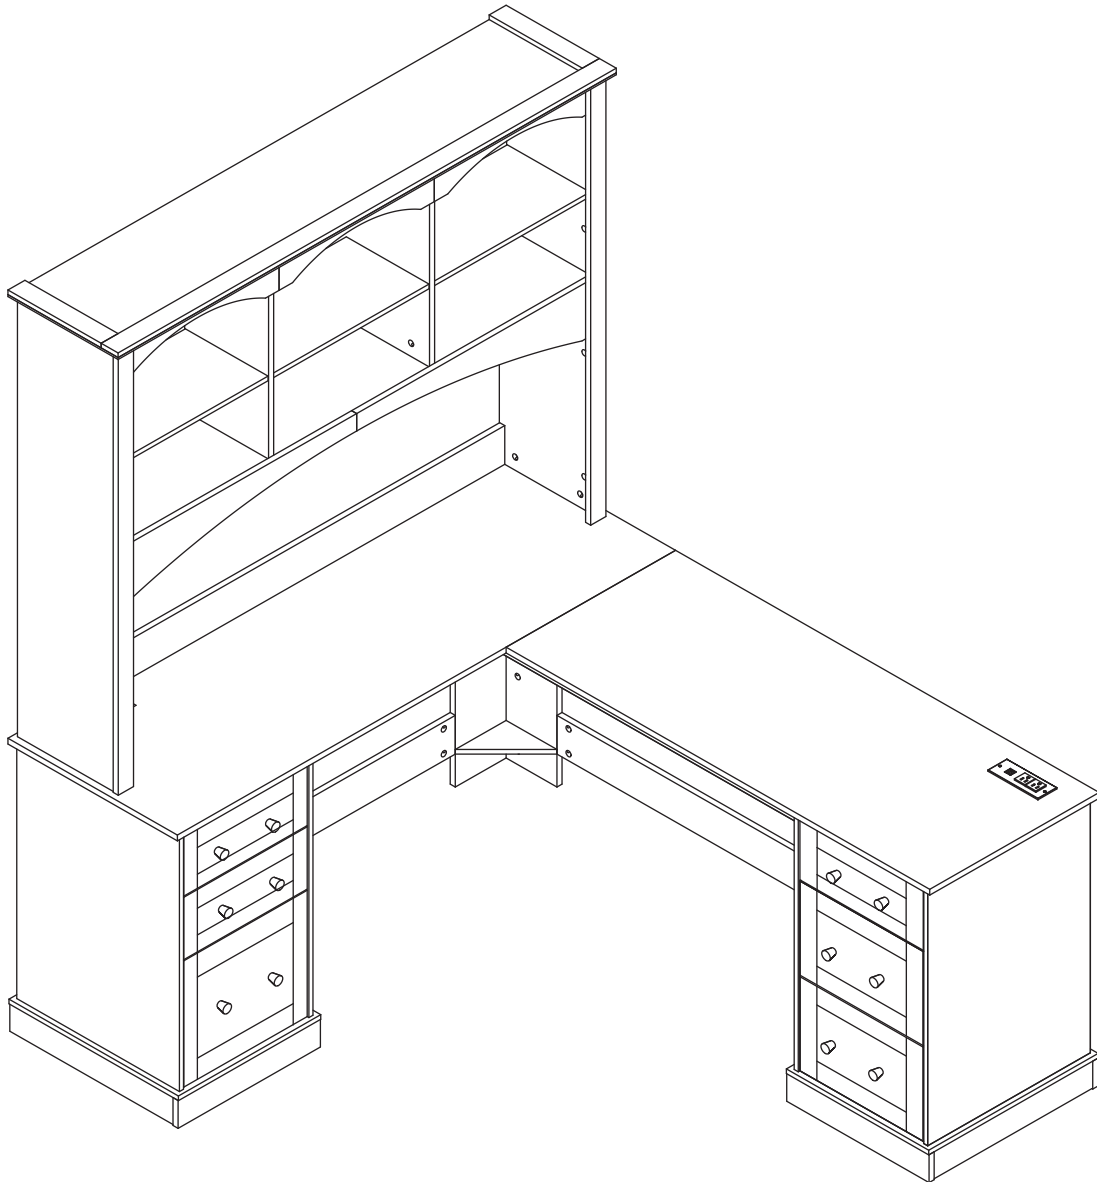

Dimensions

Width-68.9inch
Depth-57.9inch
Height-76.2inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

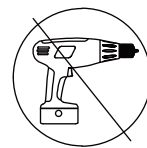

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

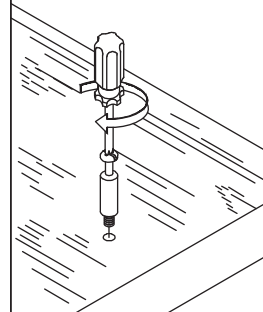

Step 2

Push the male camlock into the entry hole.

2

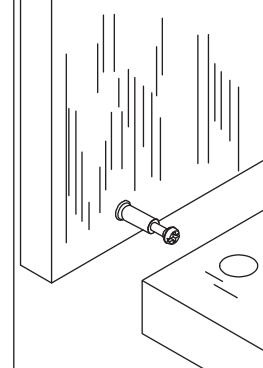


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

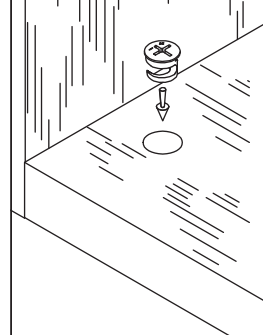


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

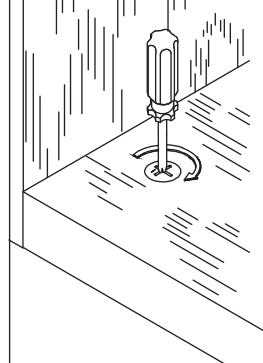













Assembly Instructions

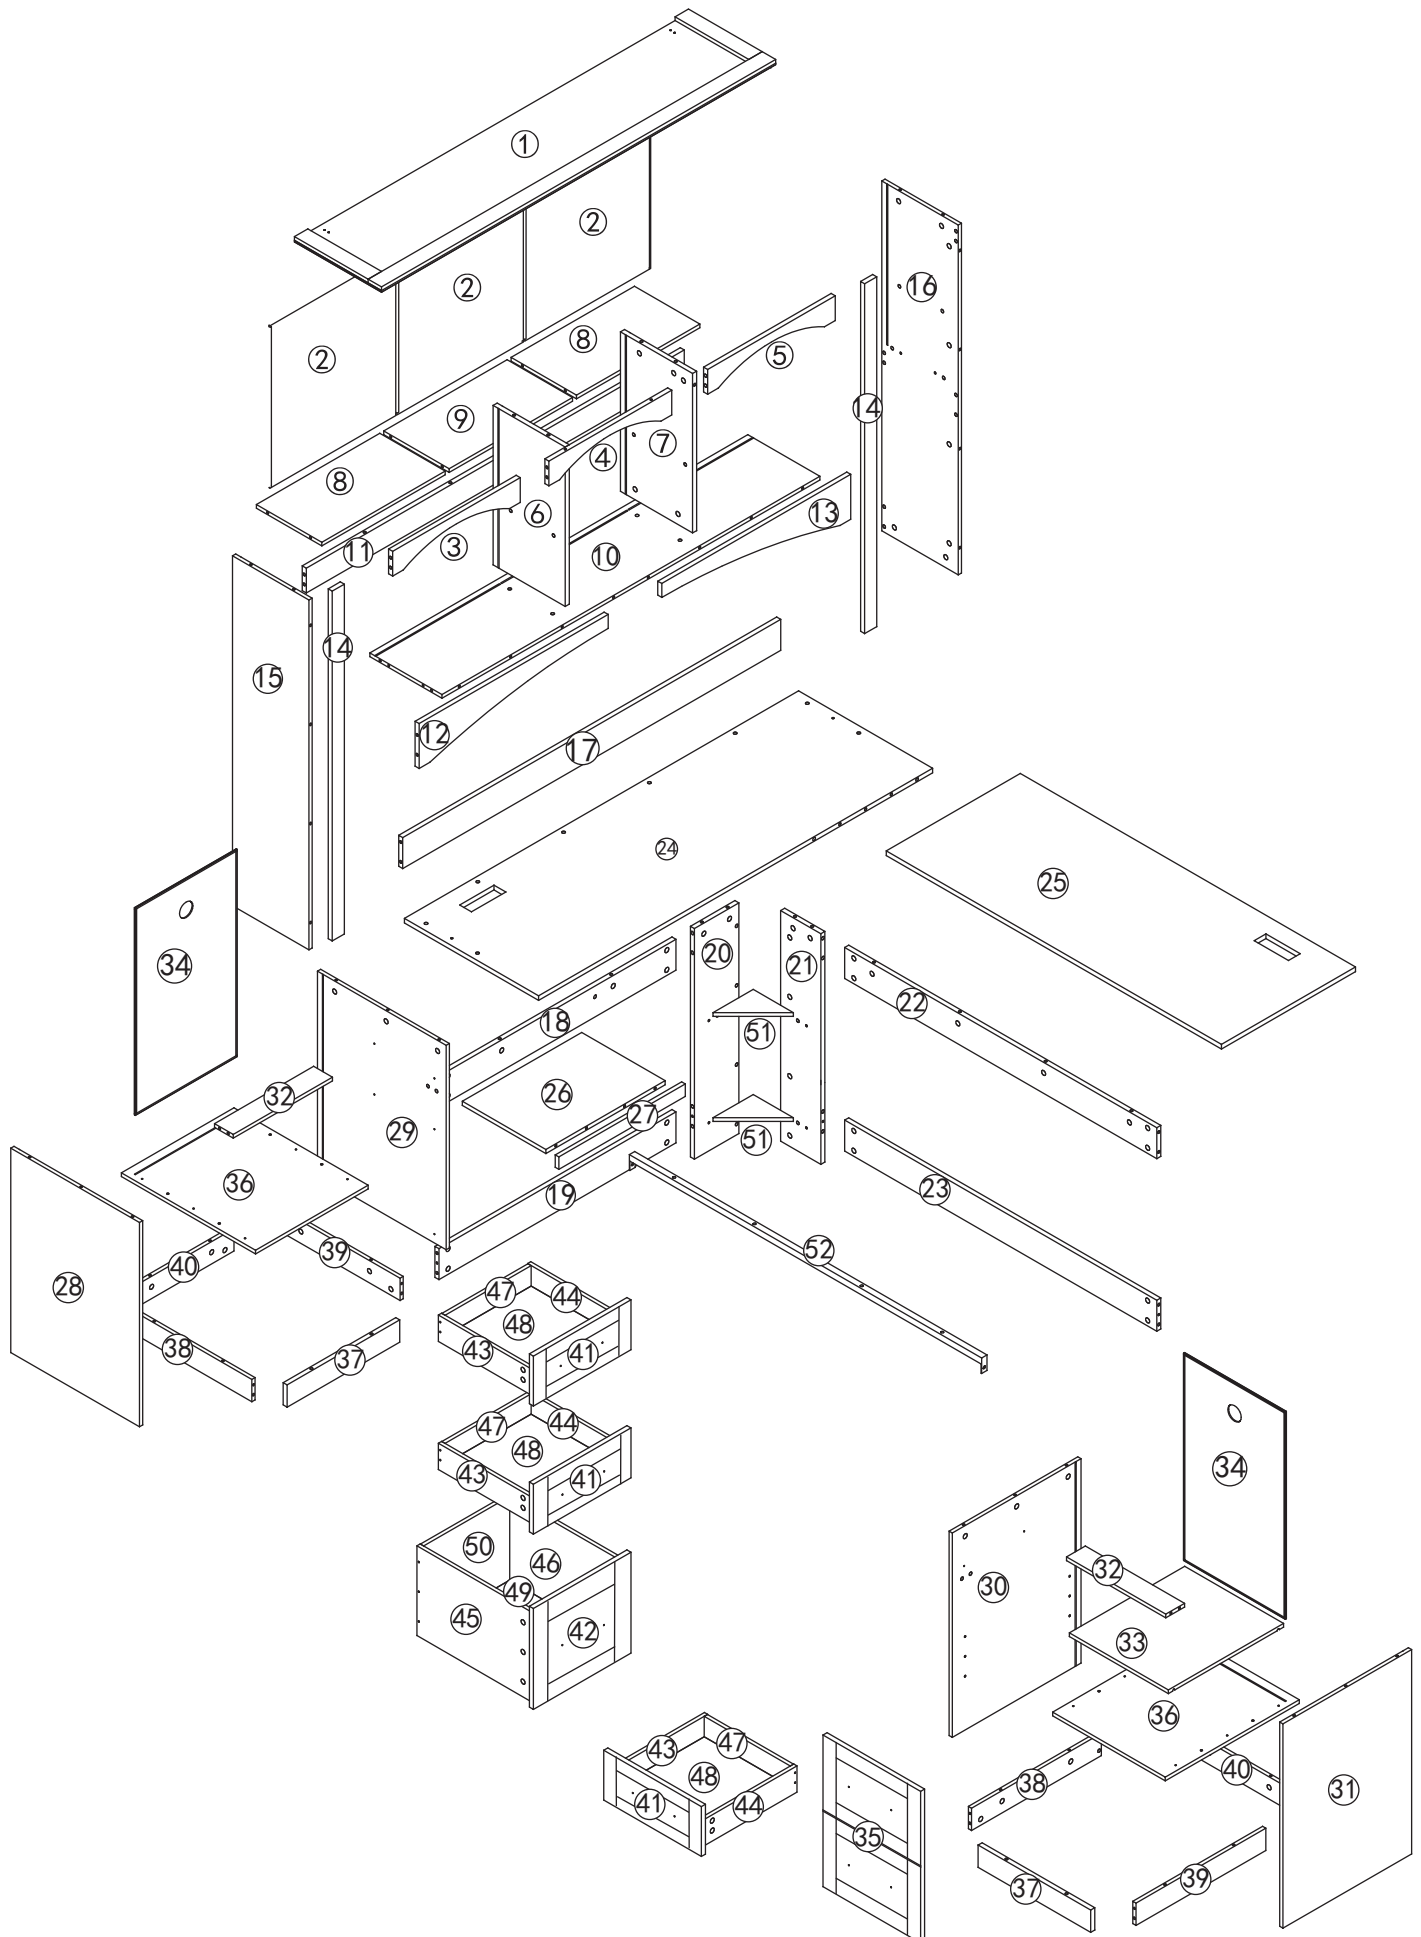

Assembly Instructions

There are 2 boxes of this product






























BOX-1: N721P473099

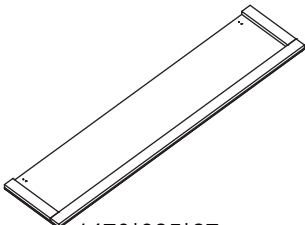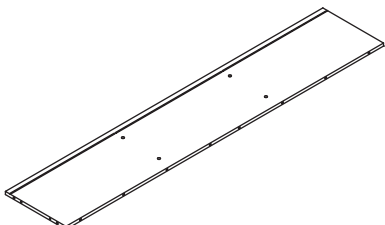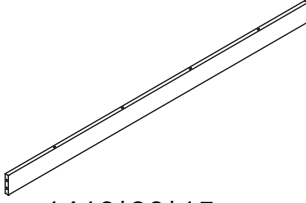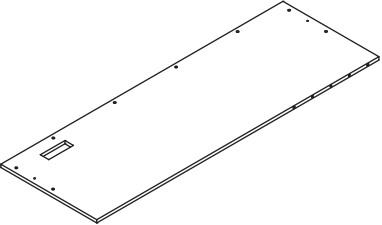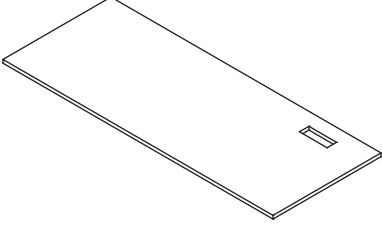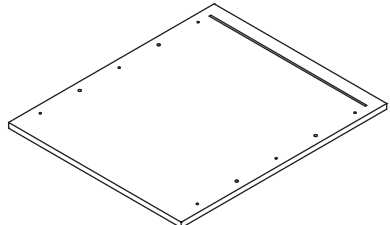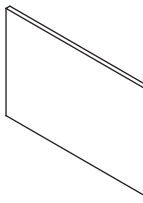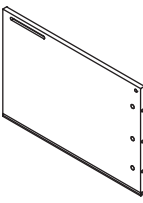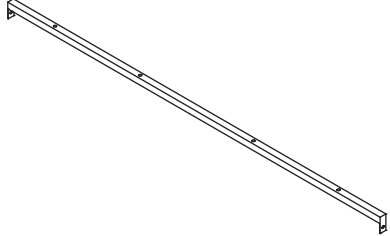 1470*325*27mm ① X 1	 524*469*3mm ② X 3	 1410*269*12mm ⑩ X 1
 1410*80*15mm ⑪ X 1	 1410*100*15mm ⑰ X 1	 1470*500*15mm ⑳ X 1
 1200*500*15mm ㉕ X 1	 660*480*12mm ㉘ X 1	 660*480*12mm ㉙ X 1
 660*480*12mm ㉚ X 1	 660*480*12mm ㉛ X 1	 500*420*12mm ㉜ X 1
 430*290*12mm ㉝ X 1	 430*290*12mm ㉞ X 1	 ㉟ X 1

Assembly Instructions

There are 2 boxes of this product

















BOX-2: N721P473100

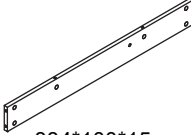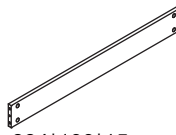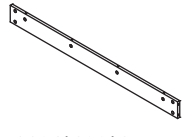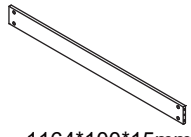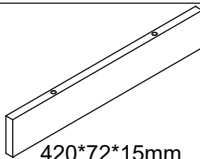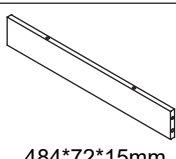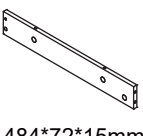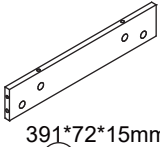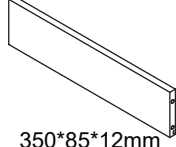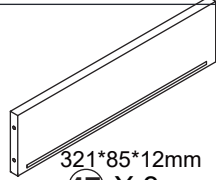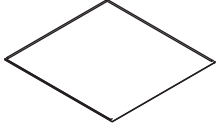 476*80*15mm ③ X 1	 458*80*15mm ④ X 1	 476*80*15mm ⑤ X 1	 515*269*15mm ⑥ X 1	 515*269*15mm ⑦ X 1
 460*244*15mm ⑧ X 2	 460*244*15mm ⑨ X 1	 665*145*15mm ⑫ X 1	 665*145*15mm ⑬ X 1	 1130*45*15mm ⑭ X 2
 1130*282*12mm ⑮ X 1	 1130*282*12mm ⑯ X 1	 884*100*15mm ⑱ X 1	 884*100*15mm ⑲ X 1	 745*166*15mm ⑳ X 1
 745*150*15mm ㉑ X 1	 1164*100*15mm ㉒ X 1	 1164*100*15mm ㉓ X 1	 480*350*15mm ㉔ X 1	 510*45*15mm ㉕ X 1
 370*70*12mm ㉖ X 2	 430*369*12mm ㉗ X 1	 669*379*3mm ㉘ X 2	 496*364*15mm ㉙ X 1	 500*420*12mm ㉚ X 1
 420*72*15mm ㉛ X 2	 484*72*15mm ㉜ X 2	 484*72*15mm ㉝ X 2	 391*72*15mm ㉞ X 2	 364*161*15mm ㉟ X 3
 364*326*15mm ㊱ X 1	 350*85*12mm ㊲ X 3	 350*85*12mm ㊳ X 3	 321*85*12mm ㊴ X 3	 346*330*3mm ㊵ X 3
 426*330*3mm ㊶ X 1	 321*290*12mm ㊷ X 1	 150*150*12mm ㊸ X 2	 Hardware Pack X1	

Components-Fittings



Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

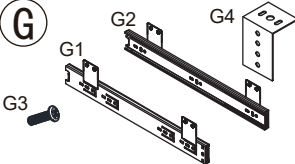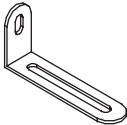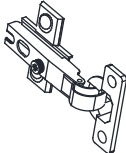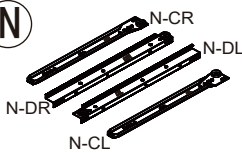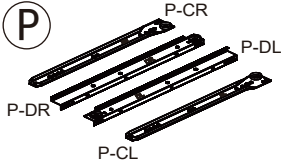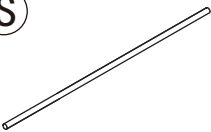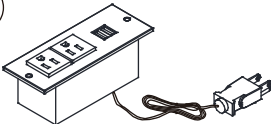(A)  Cam Bolt x 180	(B)  Cam Lock x 180	(C)  4*35mm Screw x 30	(D)  8*40mm Dowel x 3
(E)  6*30mm Dowel x 30	(F)  3.5*12mm Screw x114	(G)  Keyboard slide rail x 1	(H)  Anti overturning part x 2
(J)  expansion bolt x 2	(K)  hinge x 2	(L)  M6*30 Screw x 4	(M)  M6*10 Screw x 2
(N)  350mm sliding rail x 3	(P)  400mm sliding rail x 1	(Q)  Shake hands x 12+1	(R)  8-hole iron sheet x 3
(S)  metal rod x 2	(T)  shelf bracket x 4	(U)  4-hole angle iron x 1	(V)  Backboard pin x 20
(W)  socket x 2	(Y)  Perfect Fit x 50	(Z)  Screwdriver x 1	



Step 1 StepX3

N—350mm

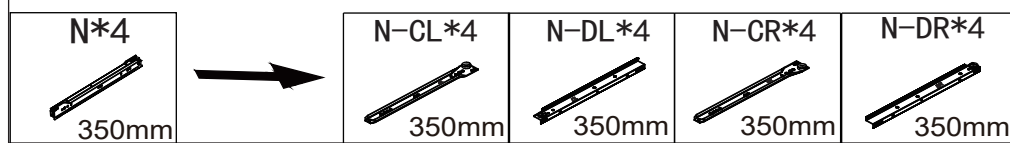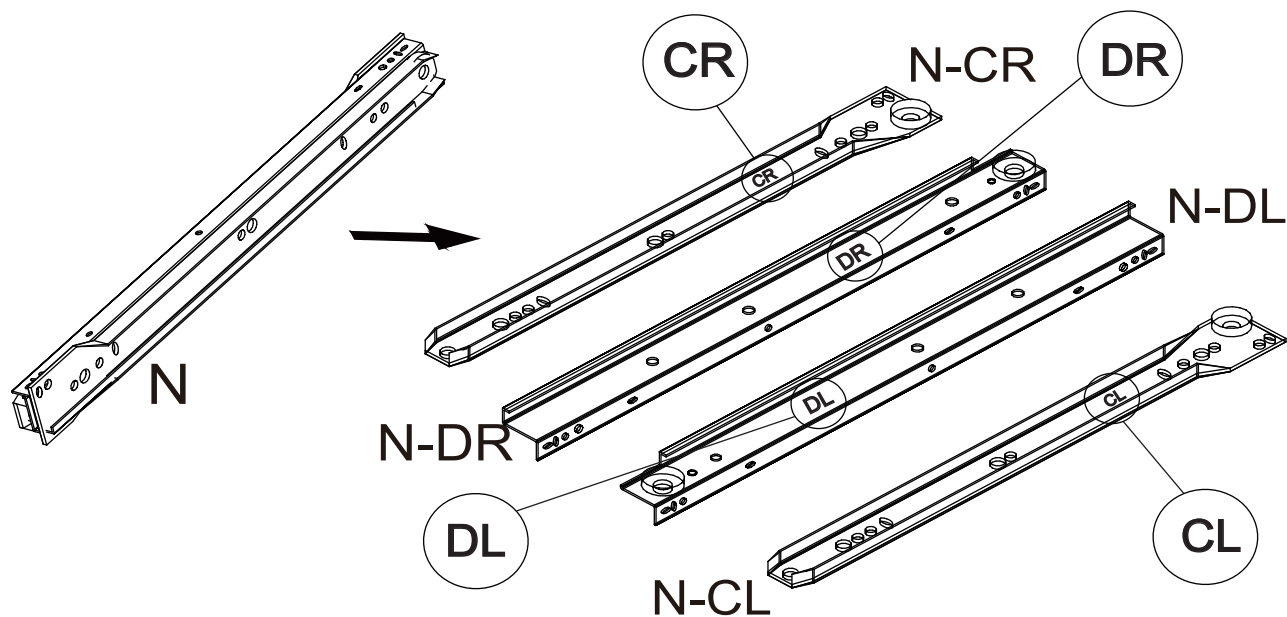


Step 2

P—400mm

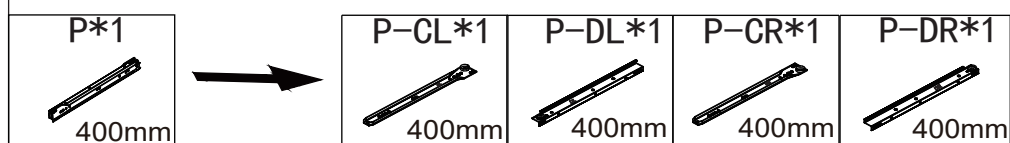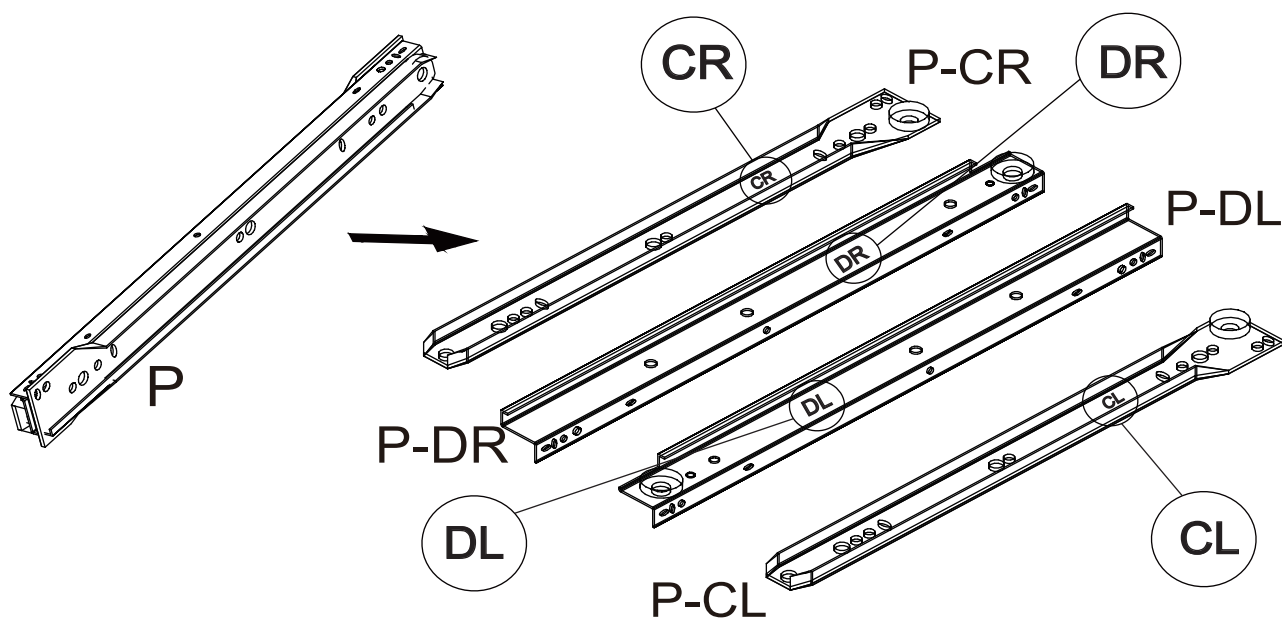


Step 3 StepX3

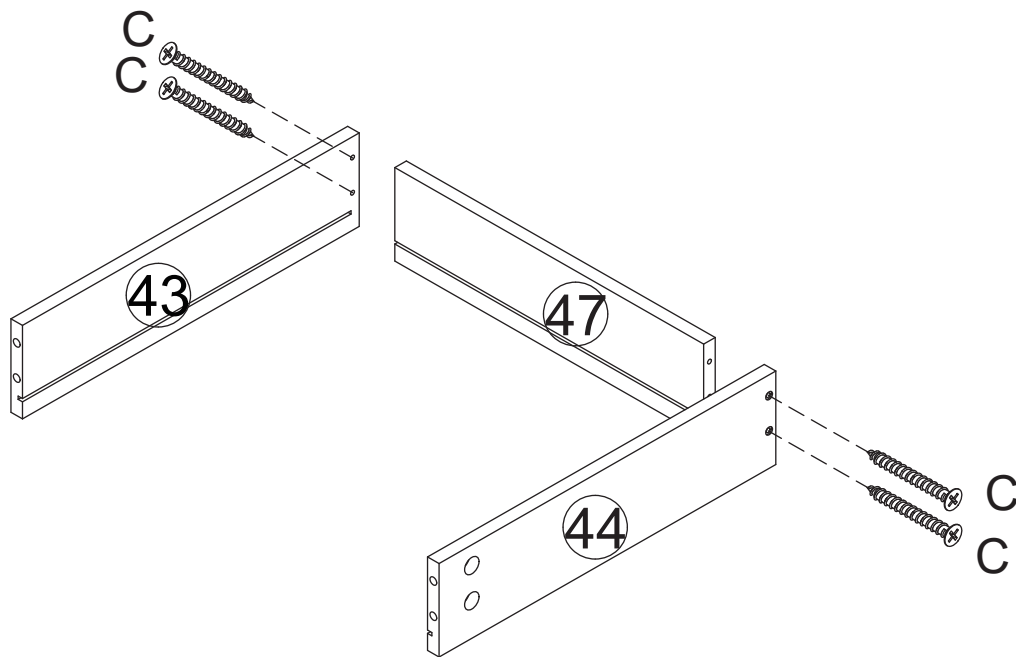



C*12




Step 4 StepX3

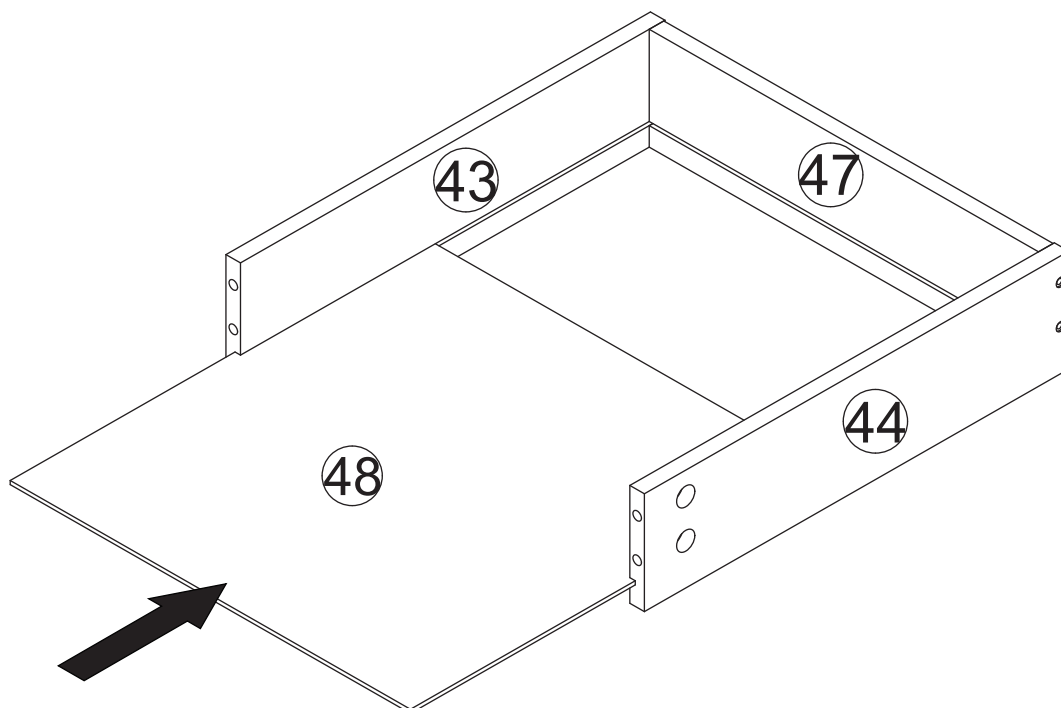


Step 5 StepX3

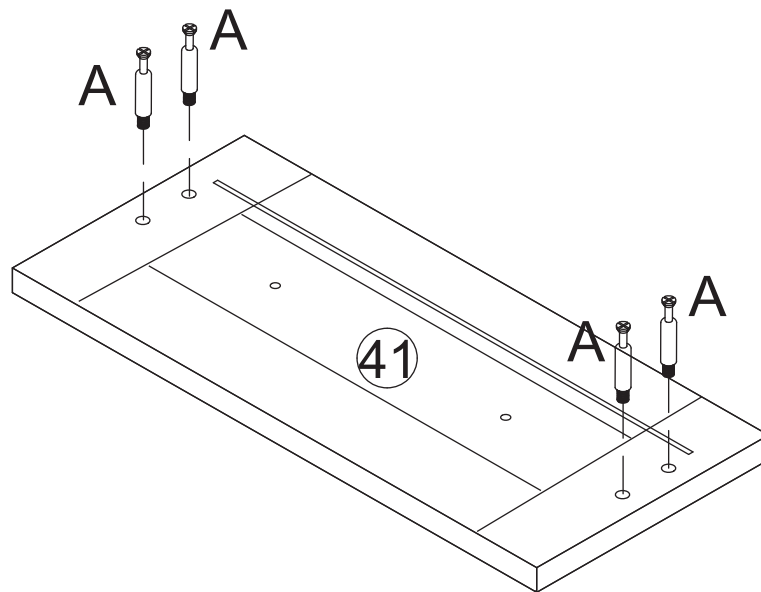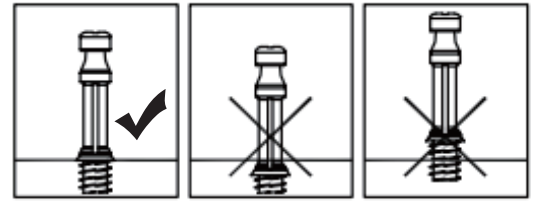

A*12




Step 6 StepX3

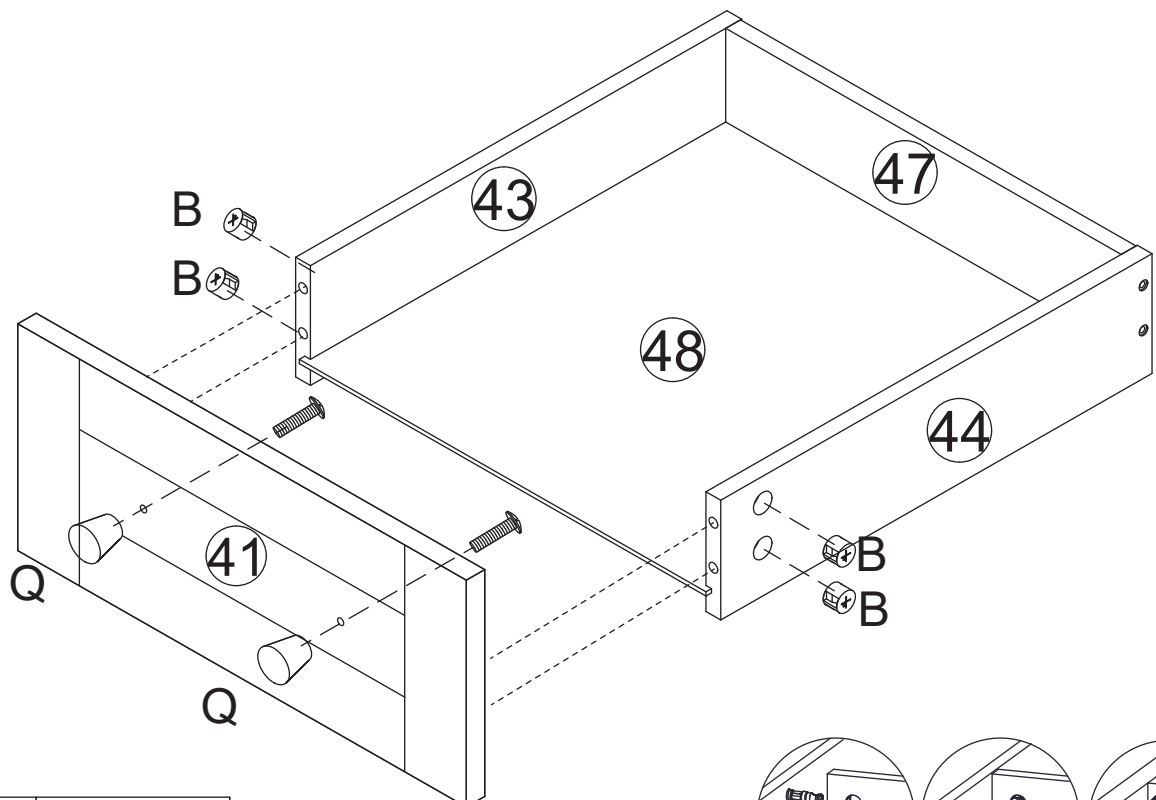





B*12





Q*6

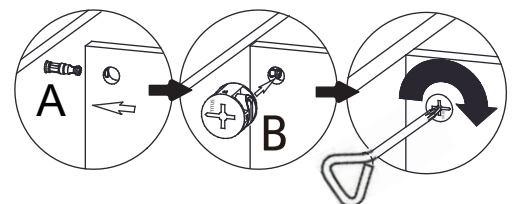


Step 7 StepX3

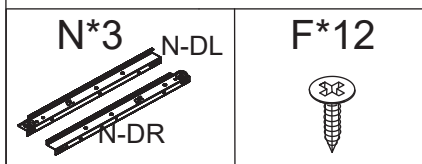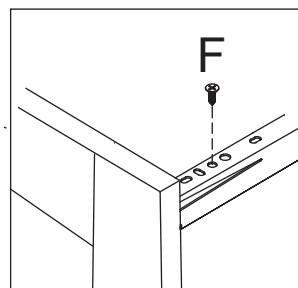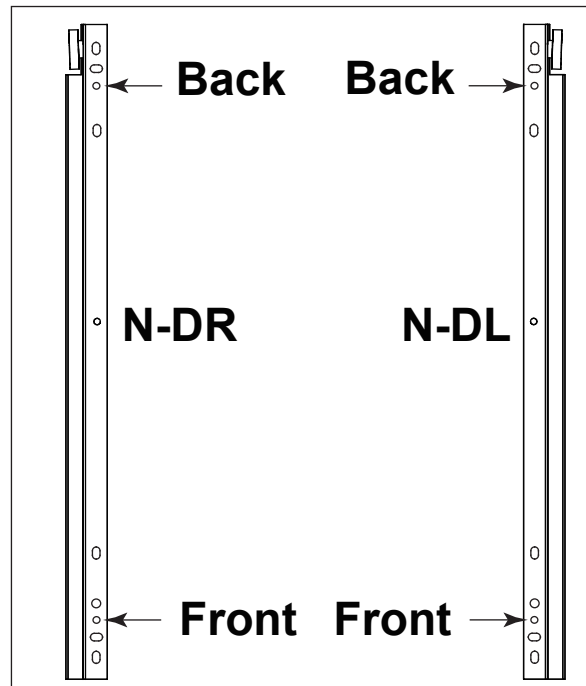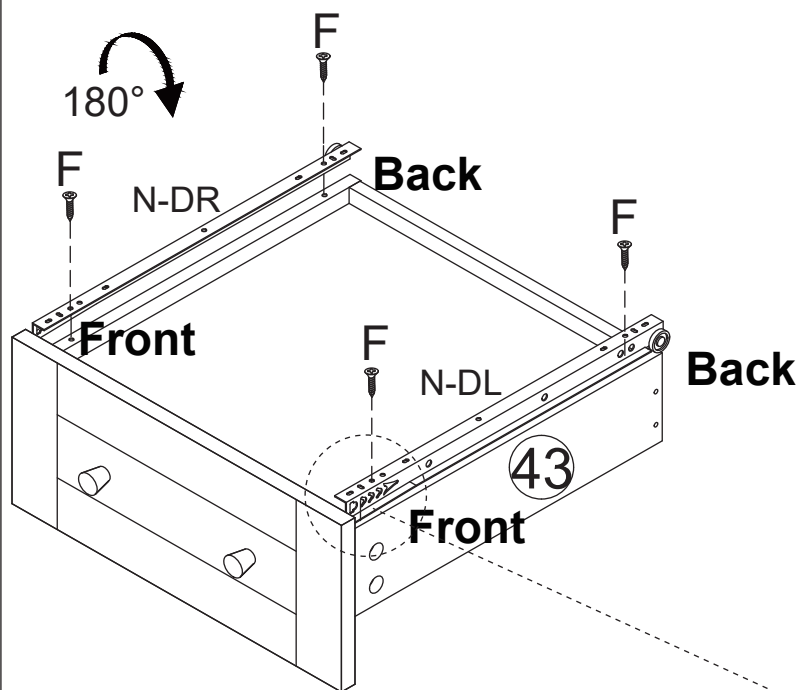



Step 8

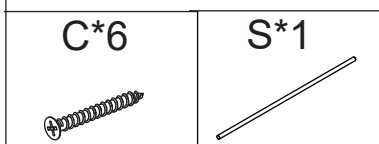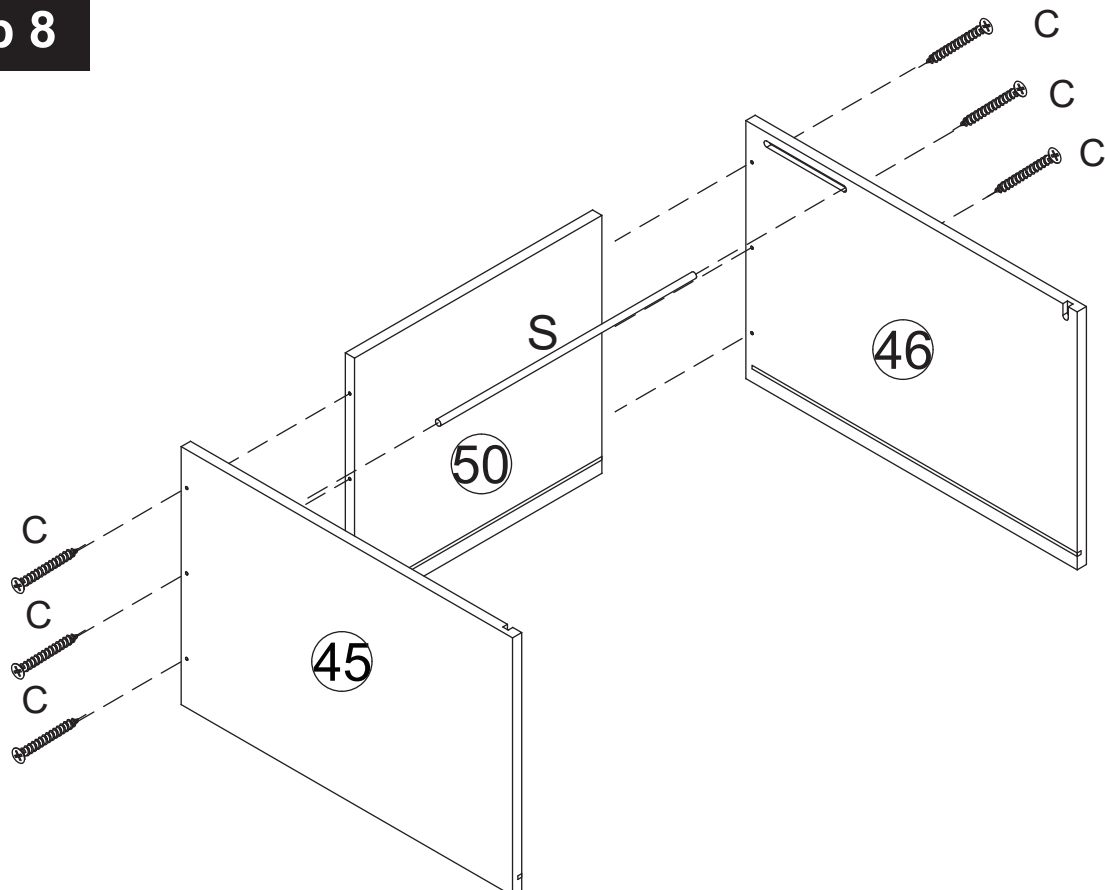


Step 9

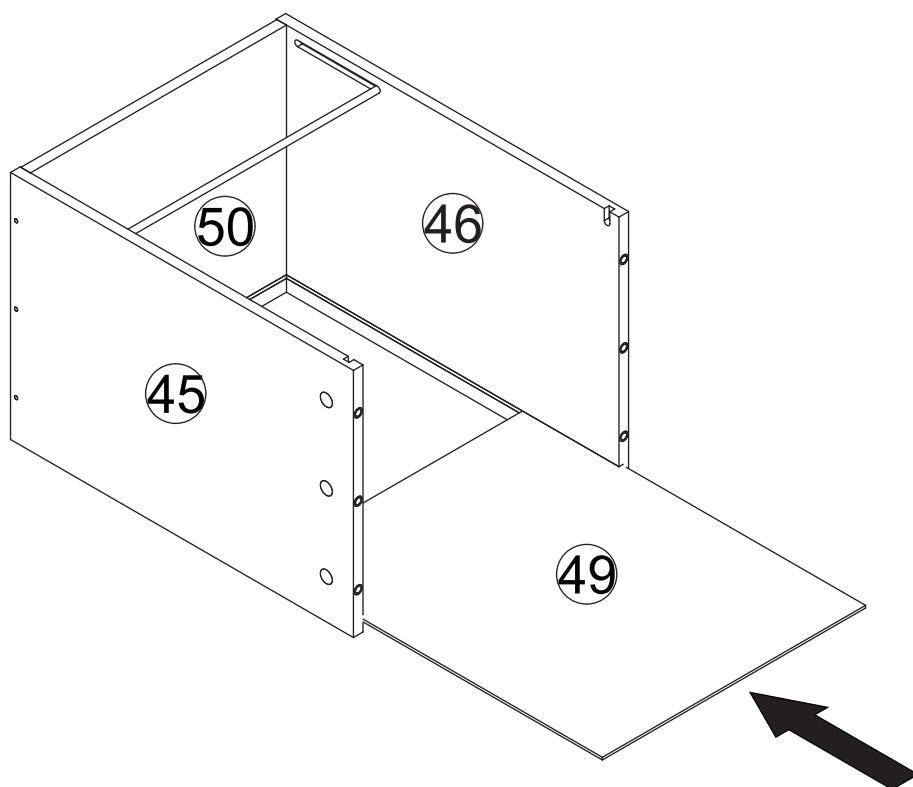



Step 10

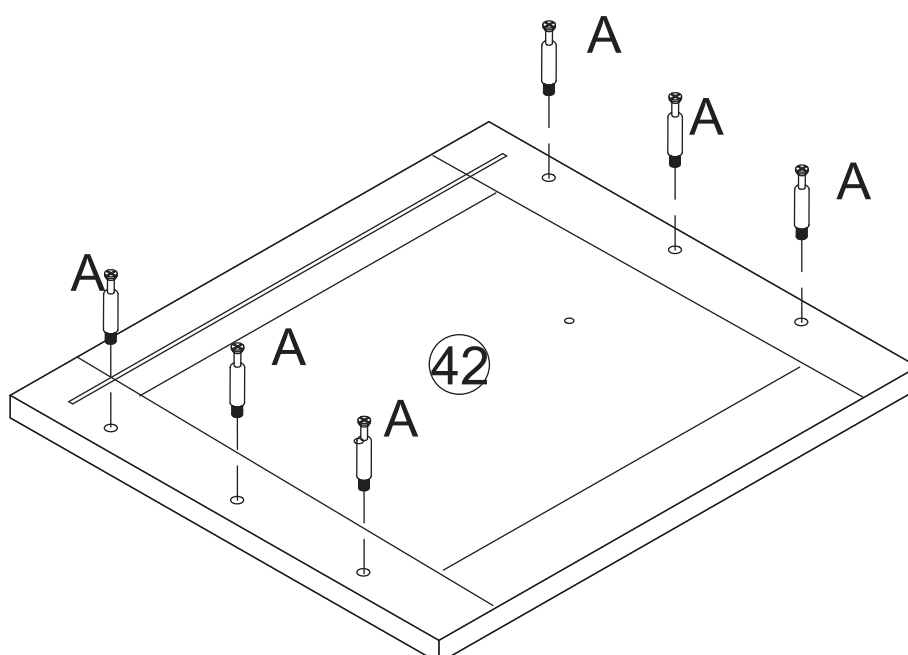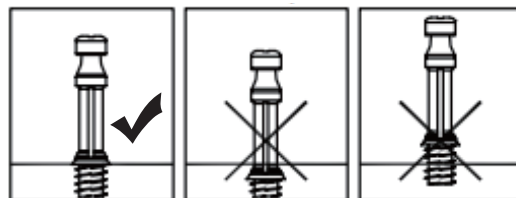

A*6



Step 11

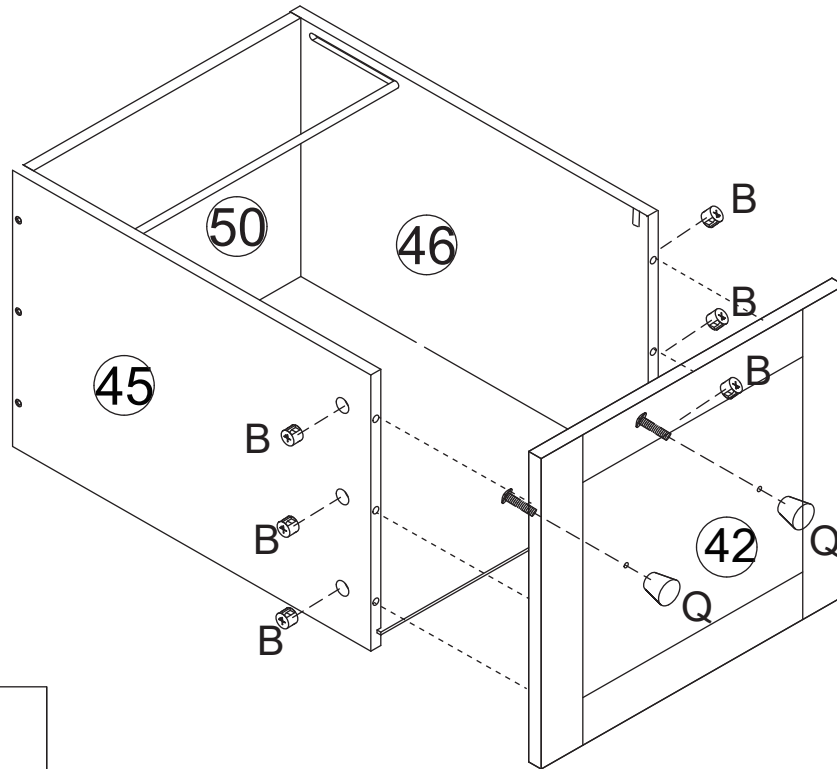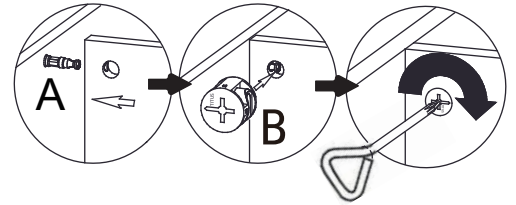




B*6



Q*2



Step 12

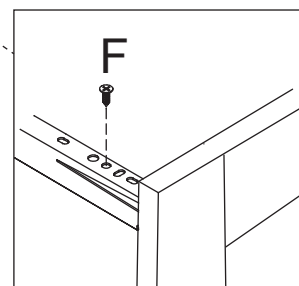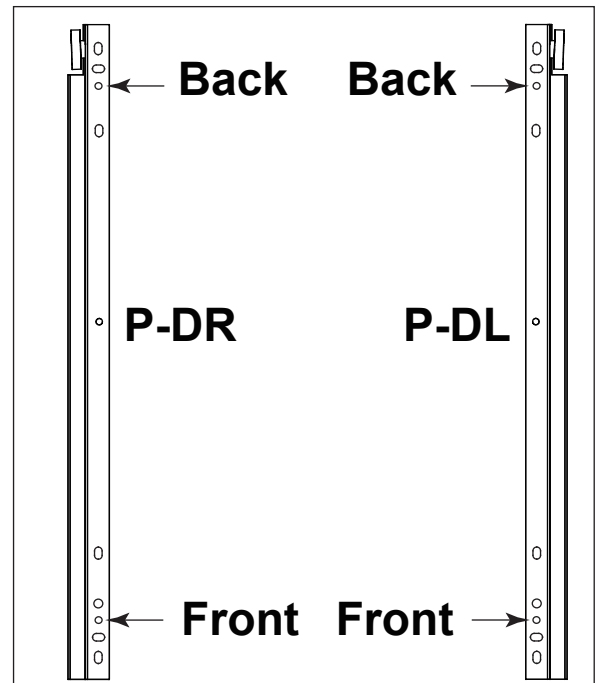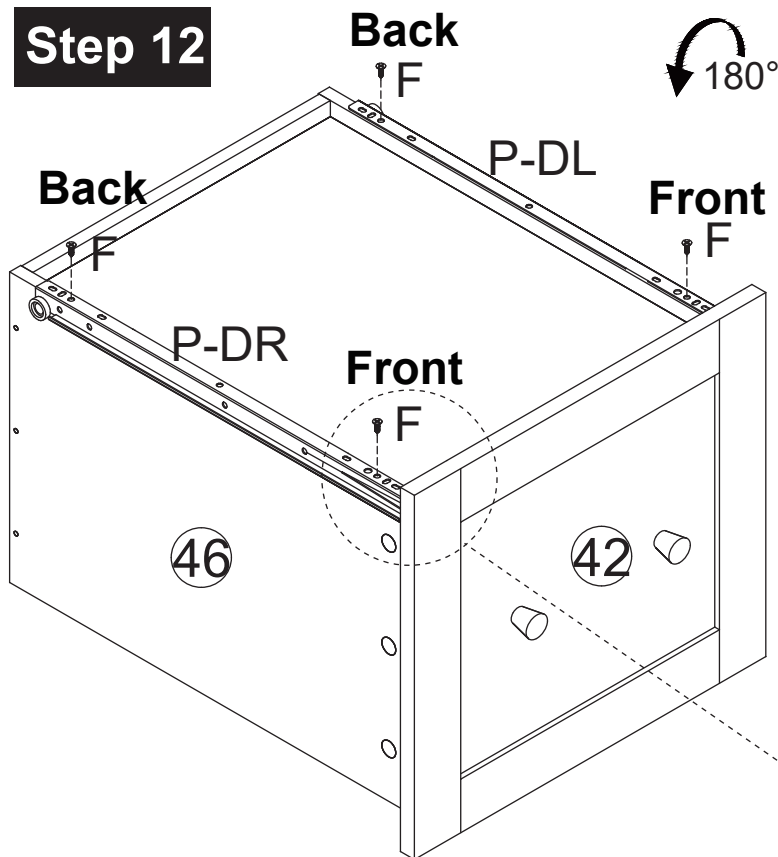


F*4



P*1
P-DL
P-DR




Step 13

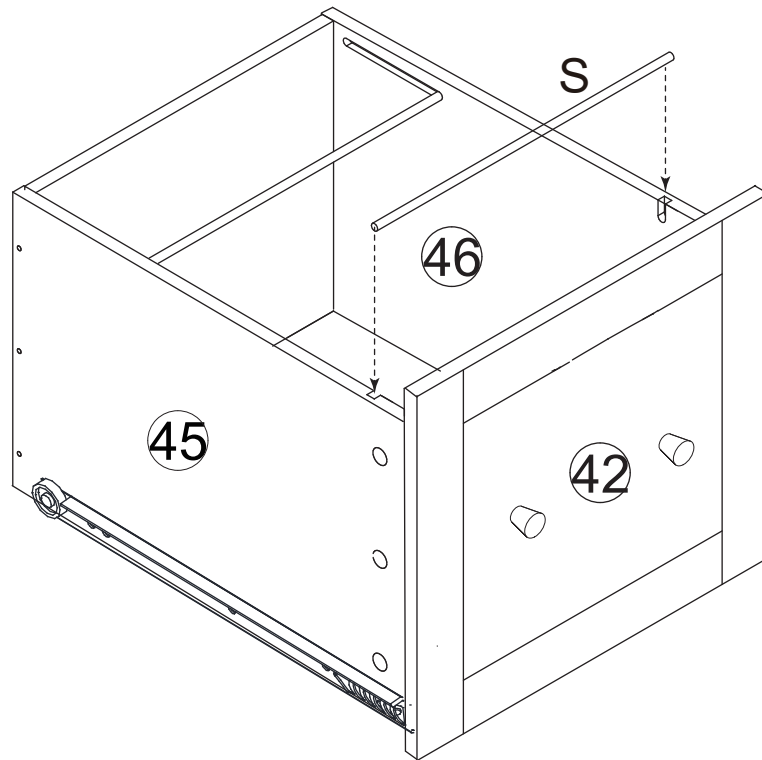

S*1





Step 14 StepX2

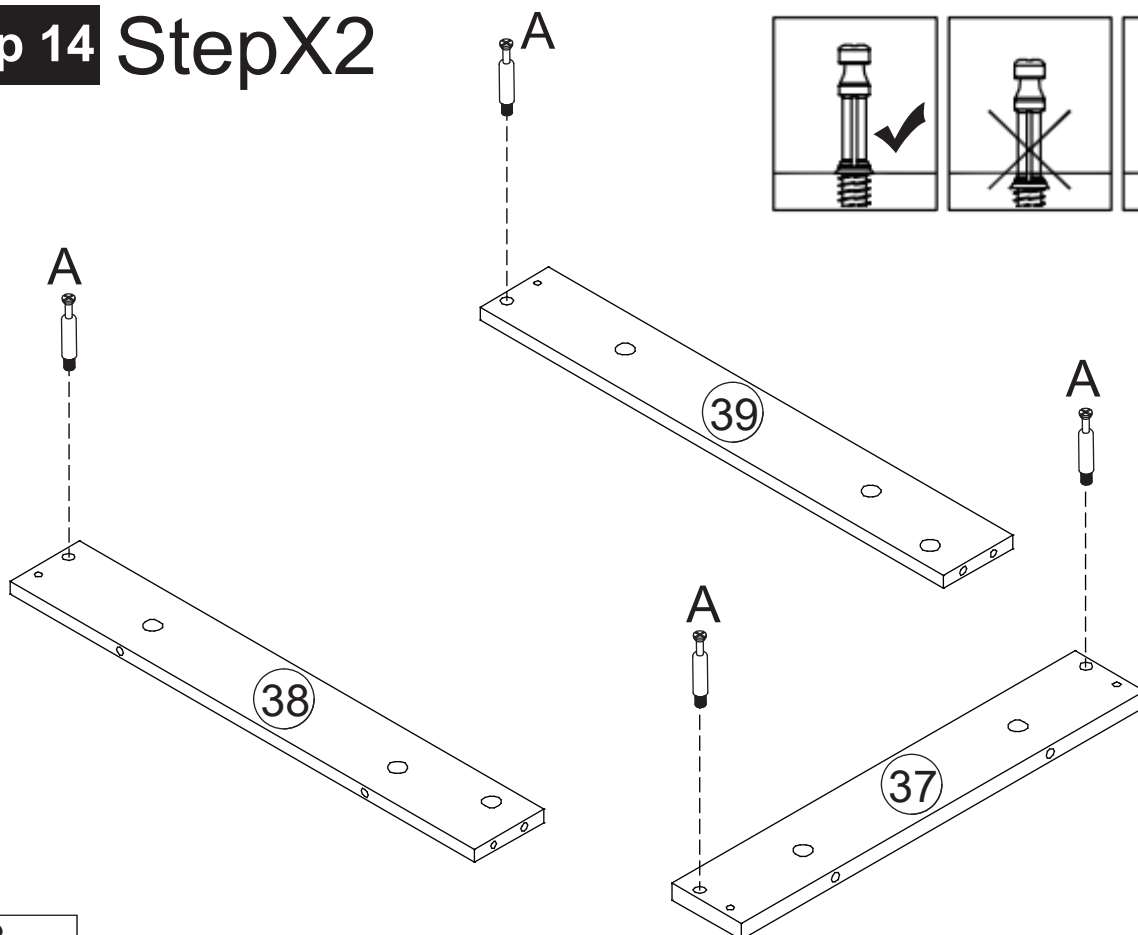

A*8



Step 15 StepX2

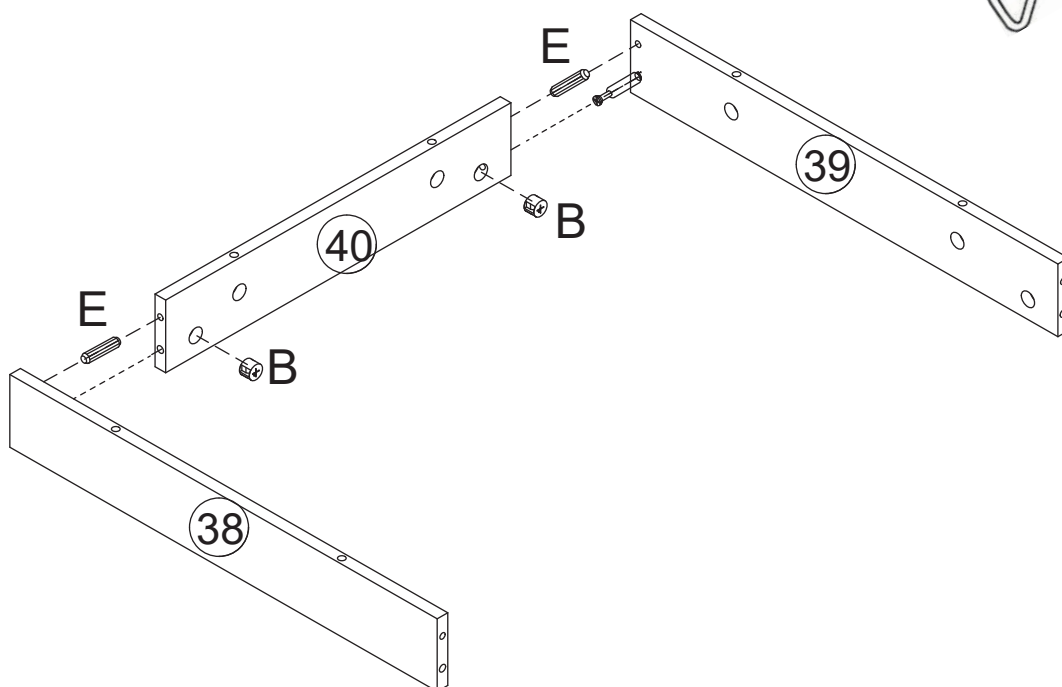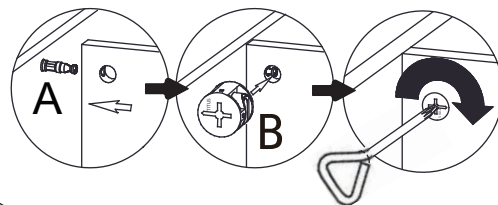



B*4



E*4



Step 16 StepX2

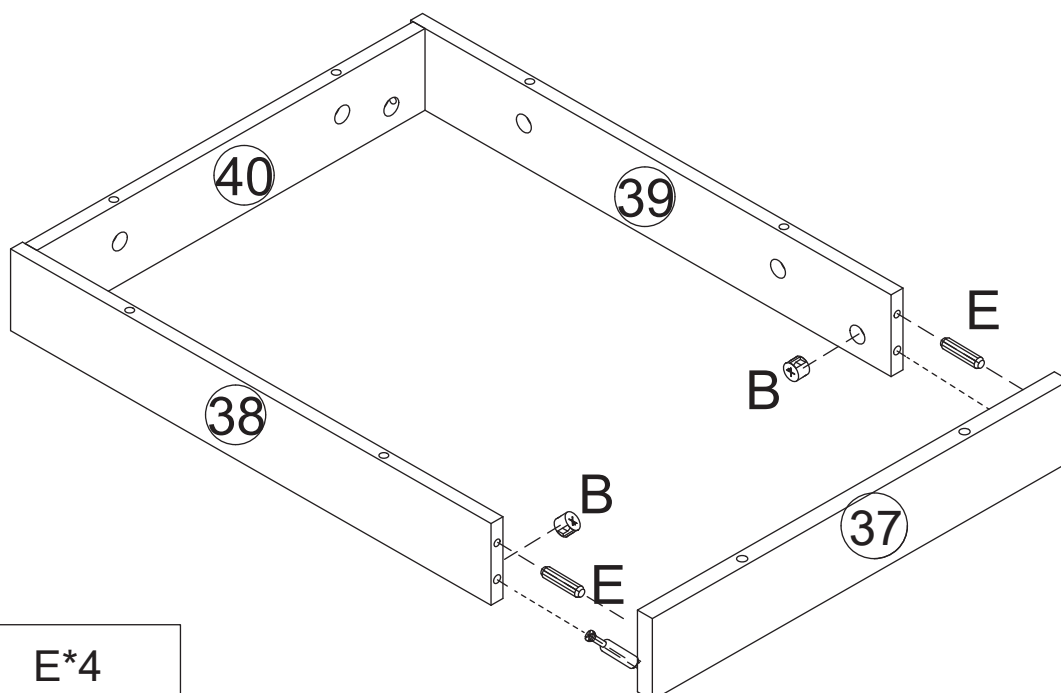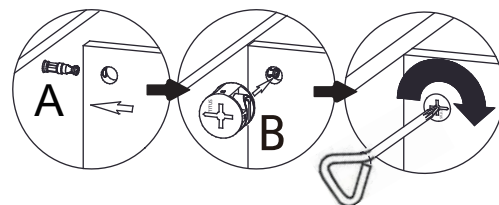




B*4






E*4




Step 17

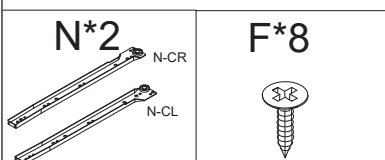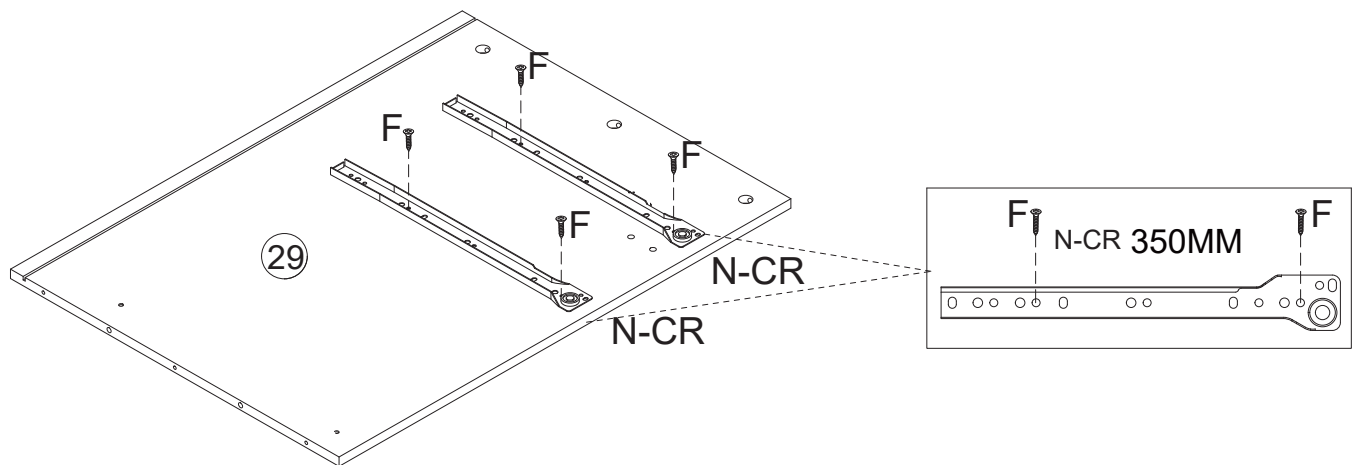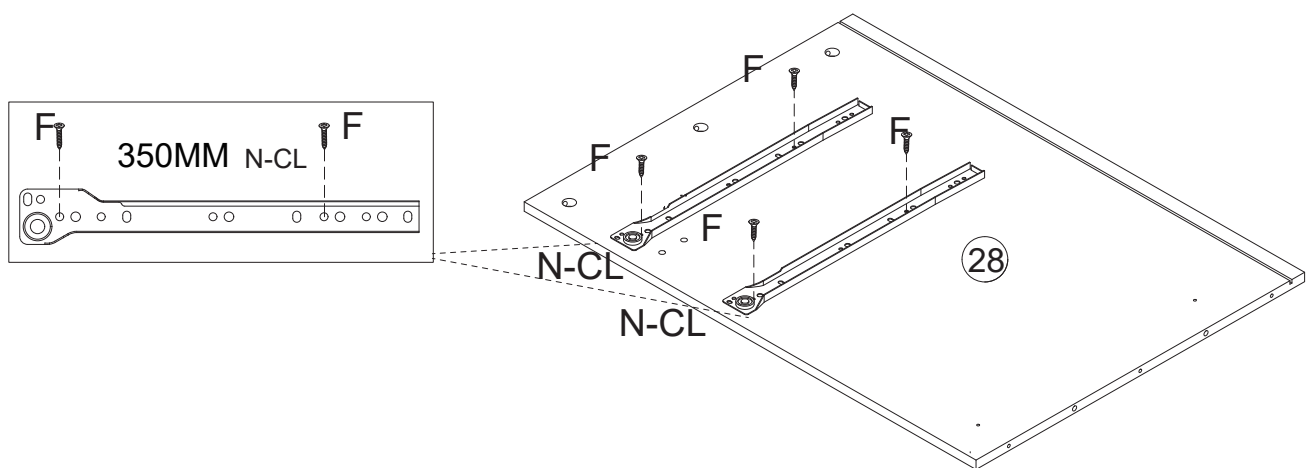

Step 18

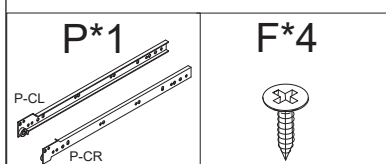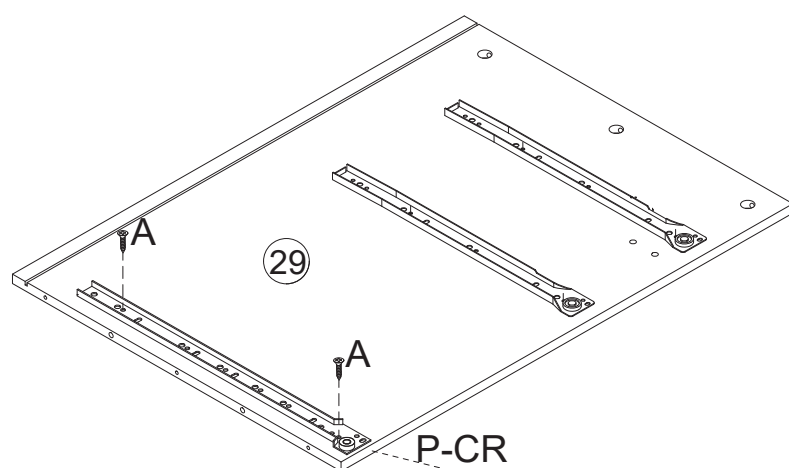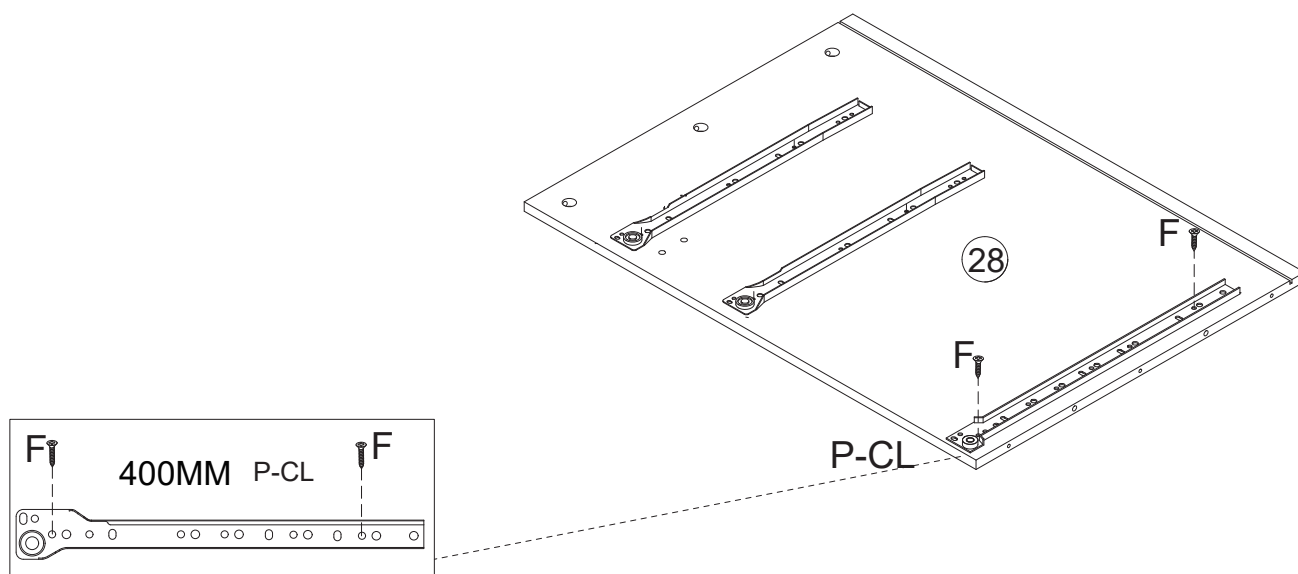


Step 19

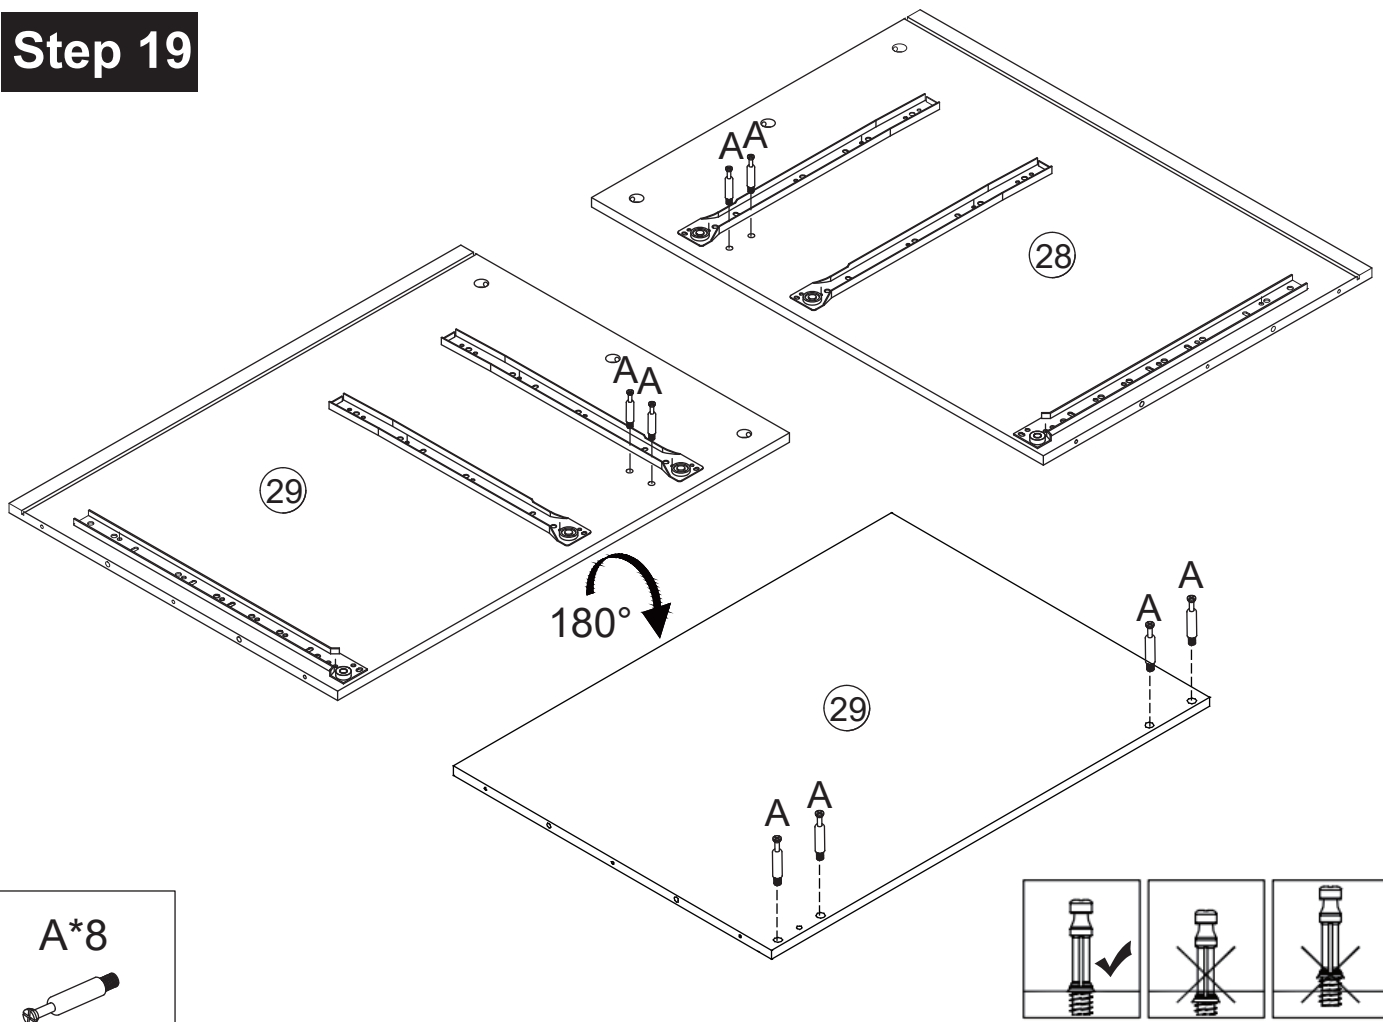

A*8




Step 20

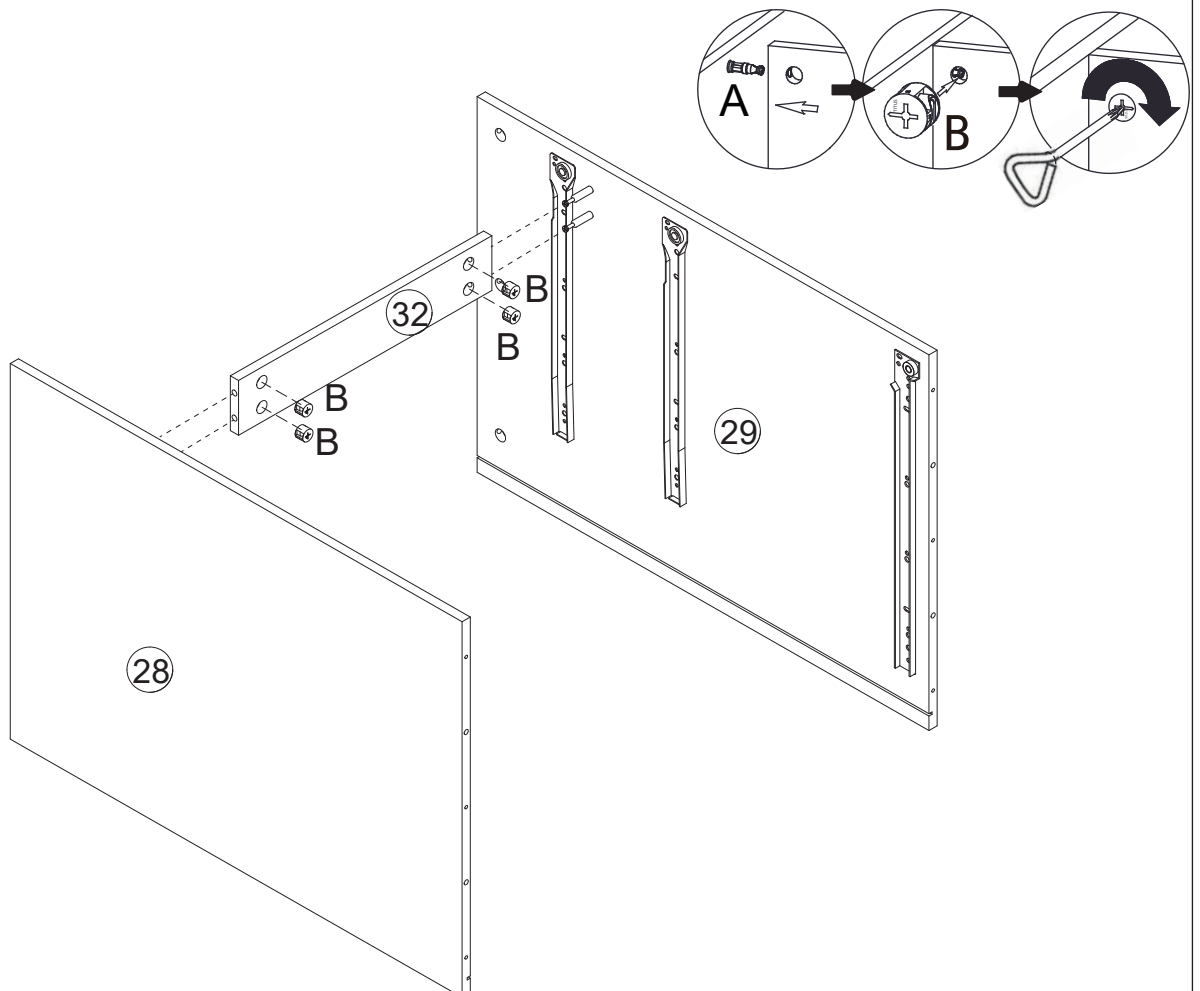

B*4



Step 21

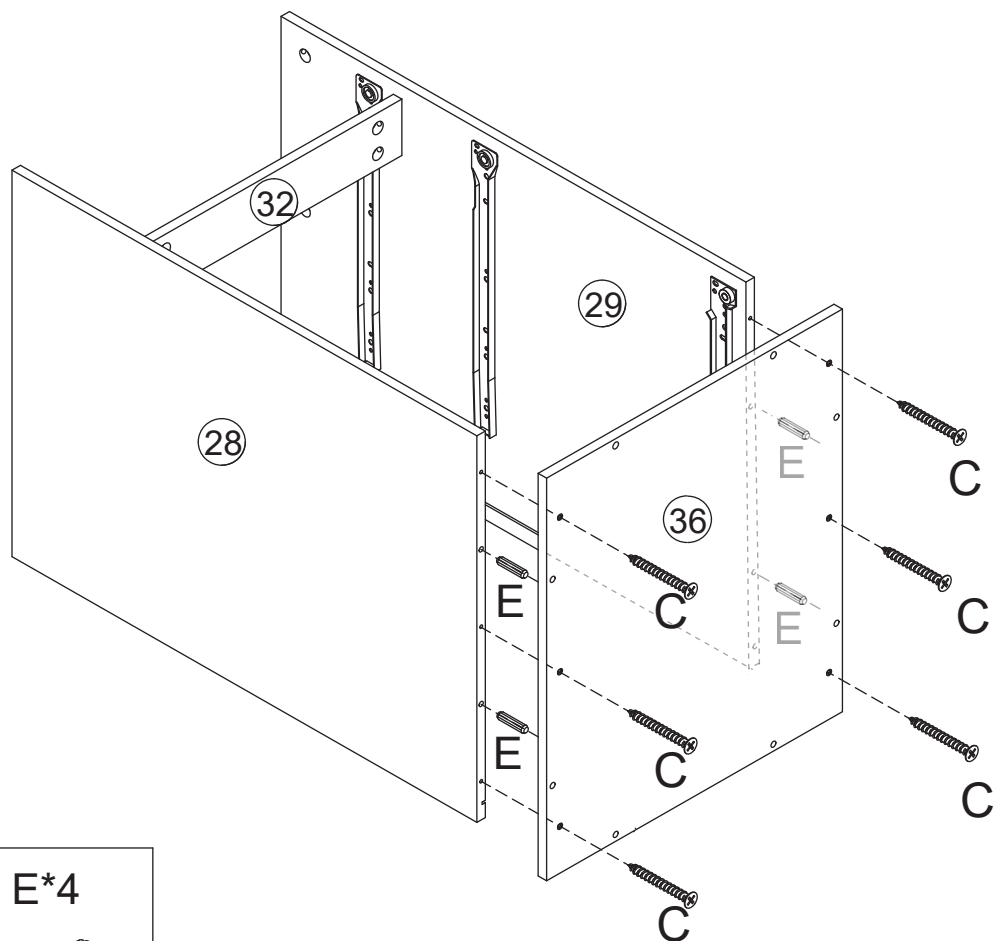



C*6




E*4




Step 22

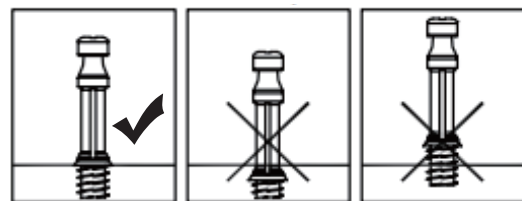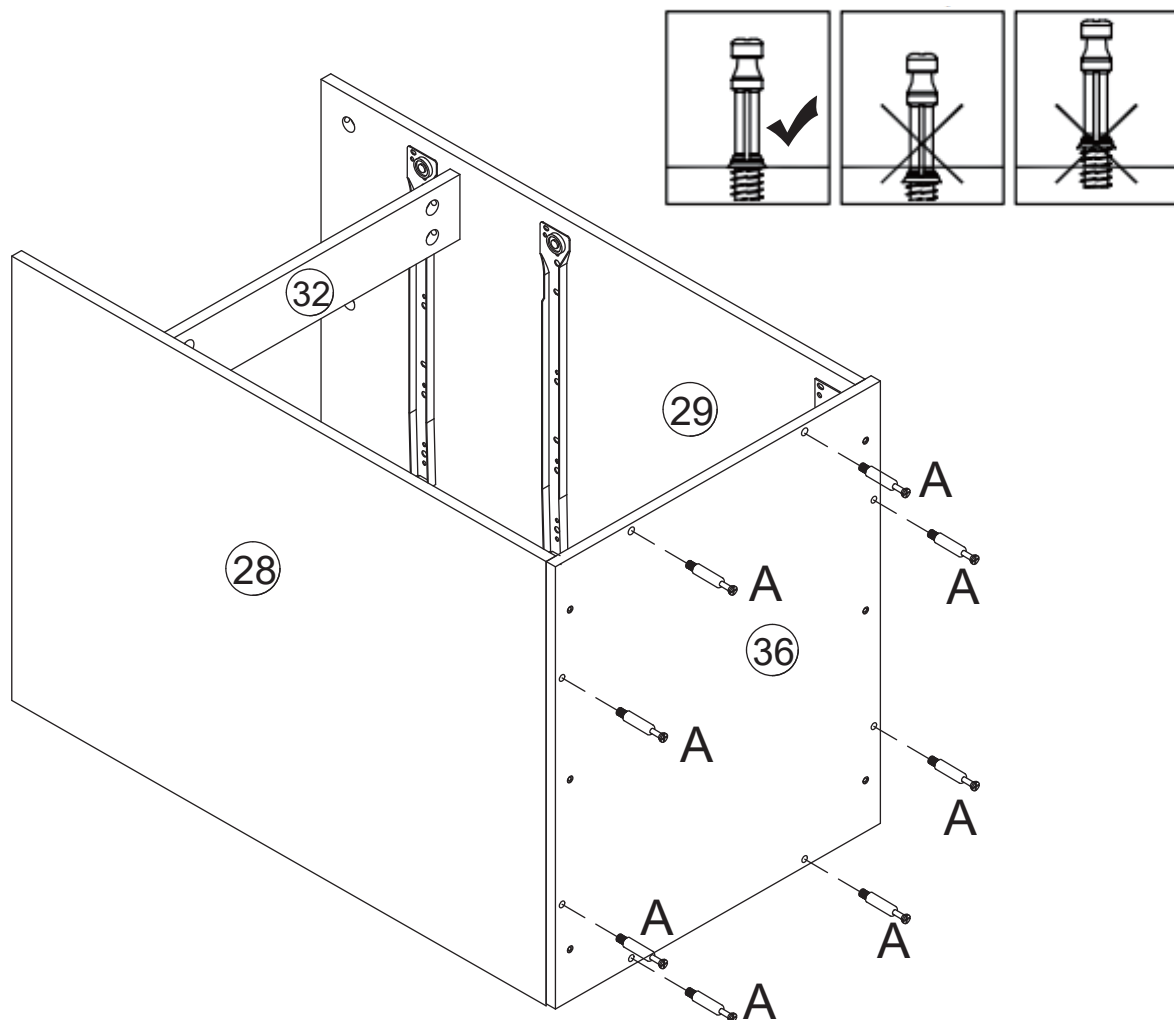

A*8




Step 23

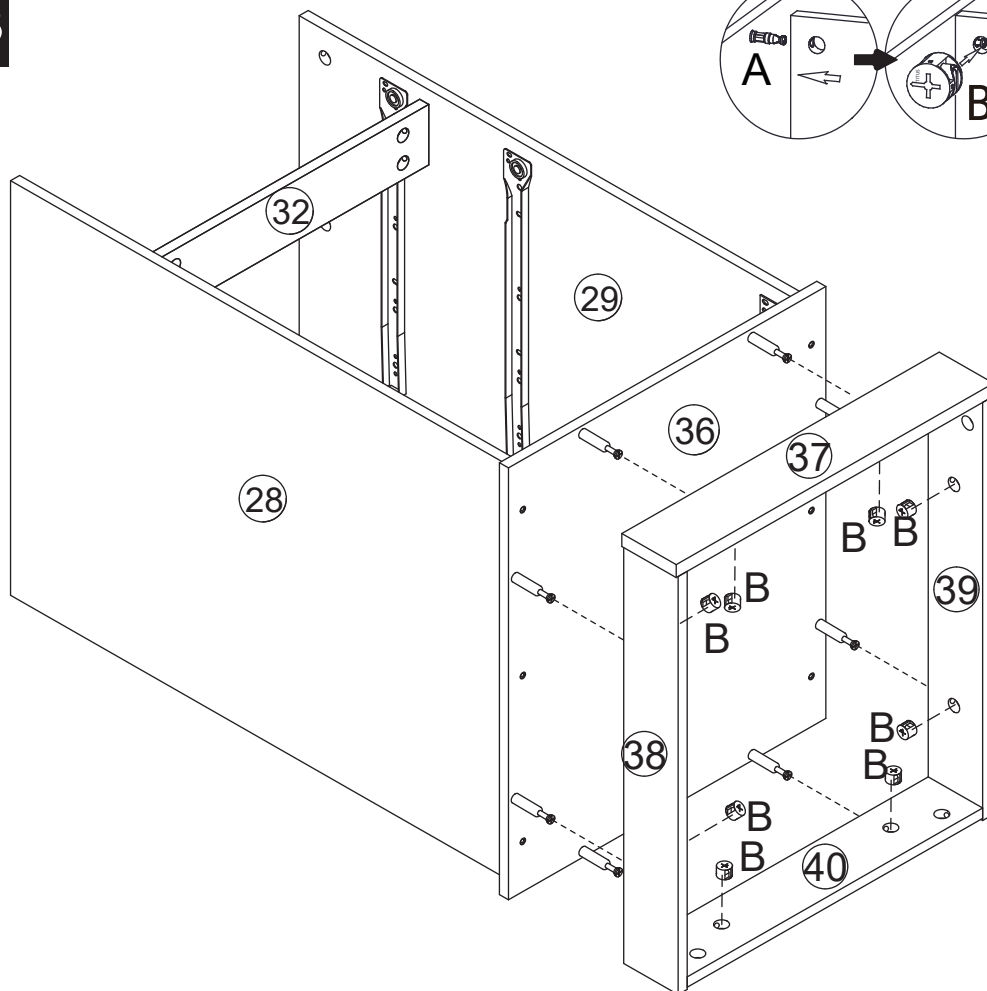




B*8



Step 24

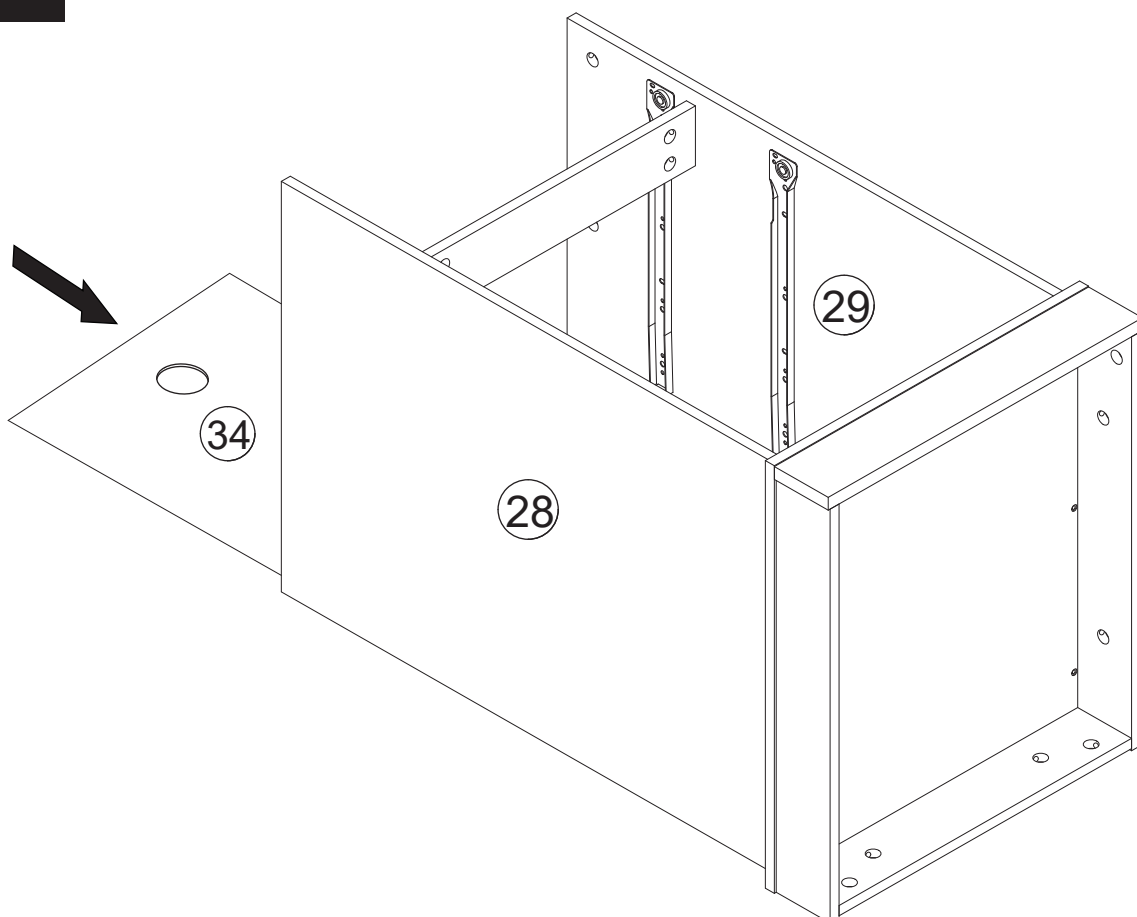


Step 25

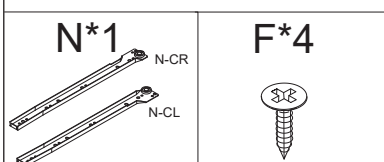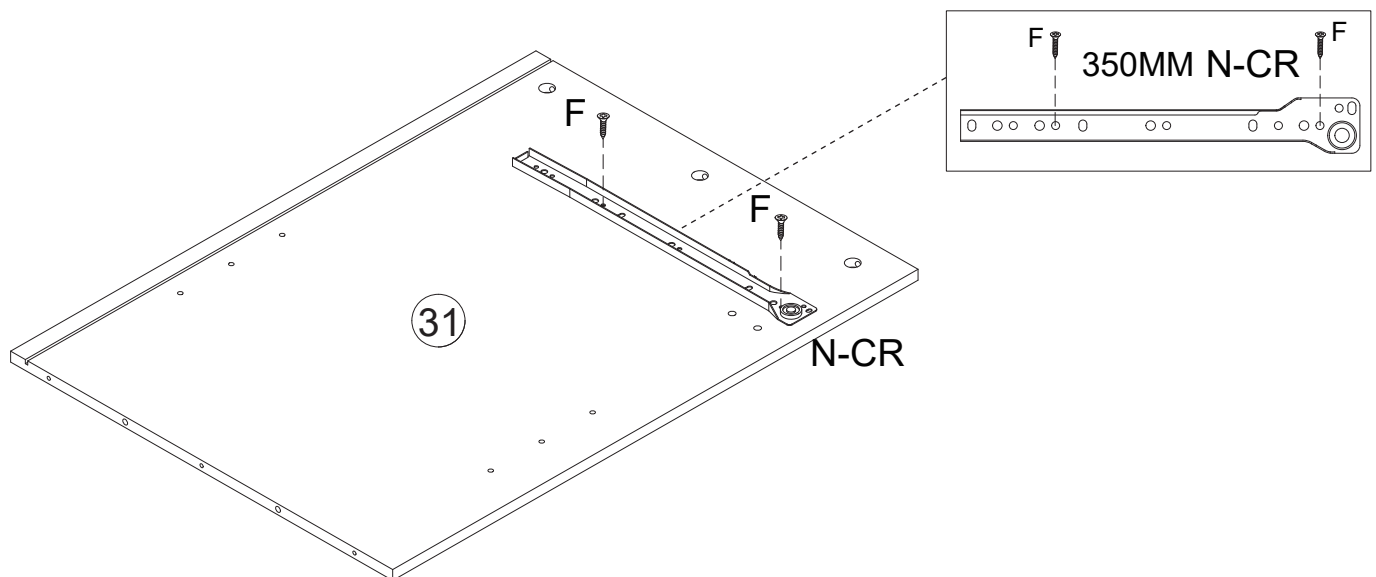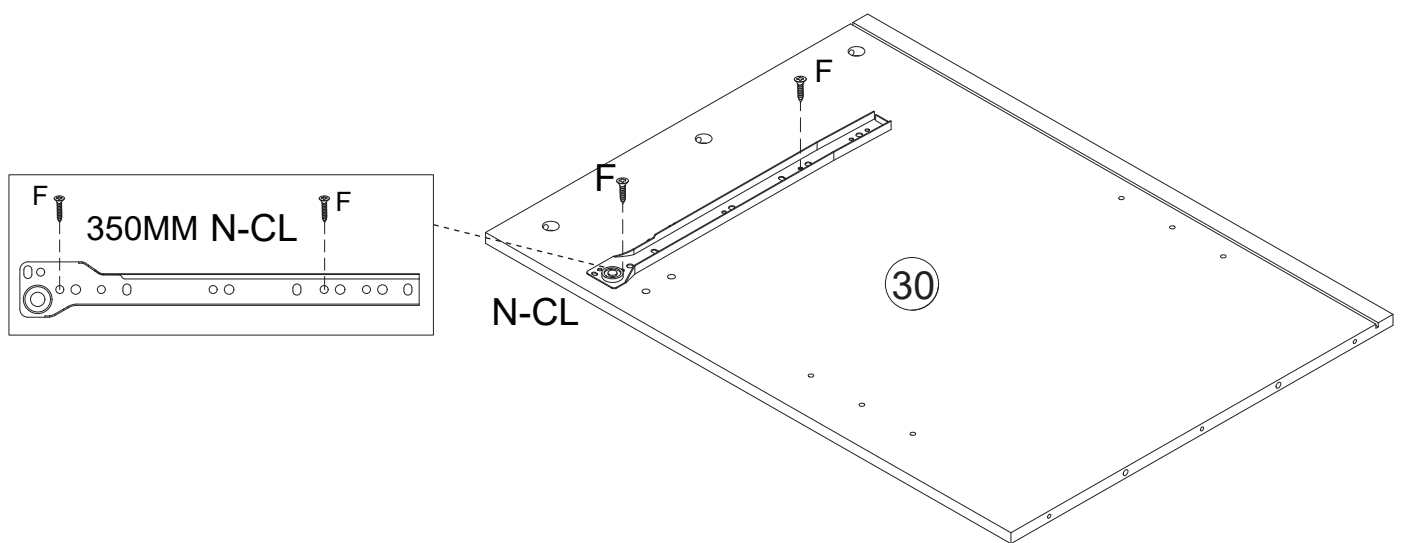


Step 26

Attention:


The 1 hole are not for Part A installation

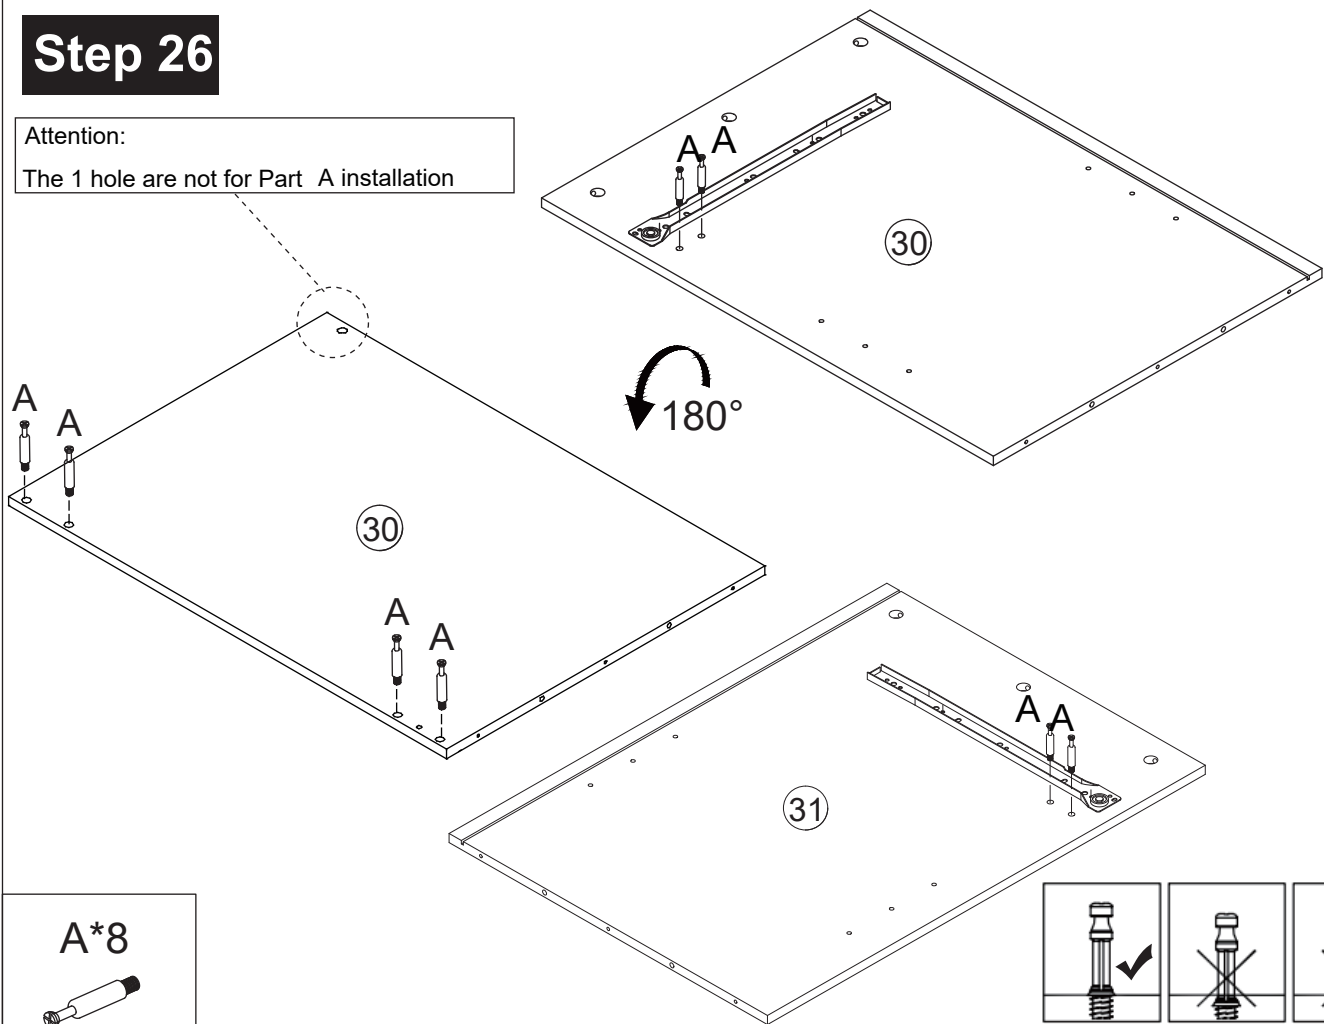

Step 27

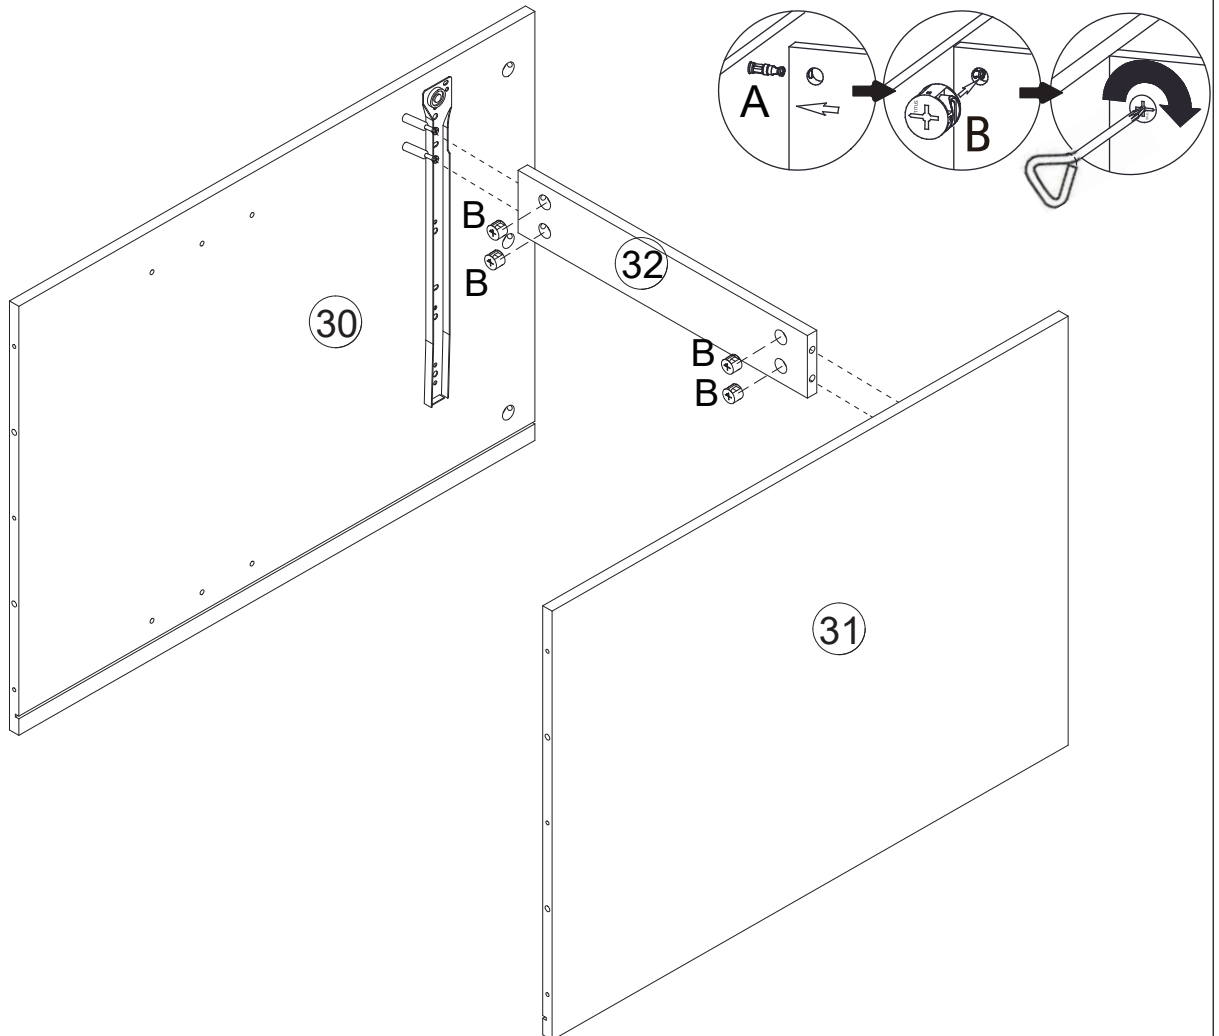

Step 28

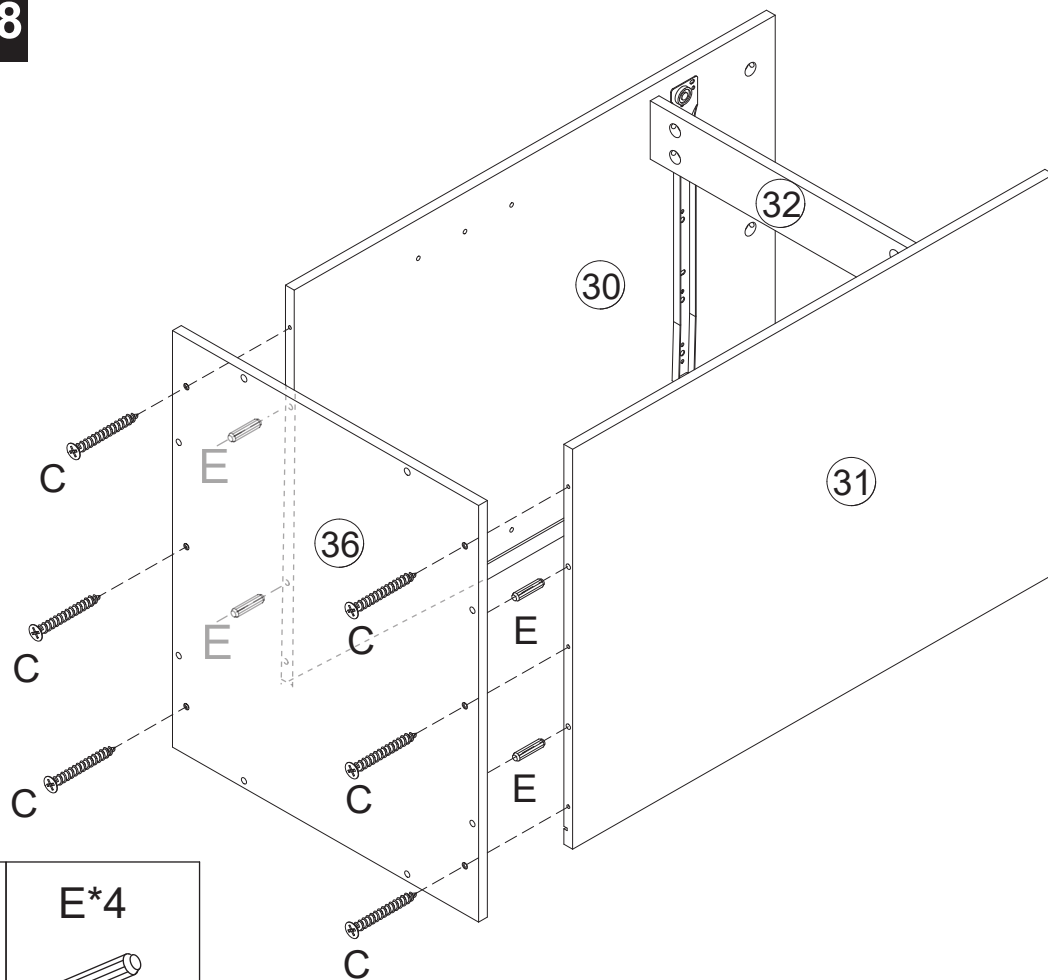



C*6




E*4




Step 29

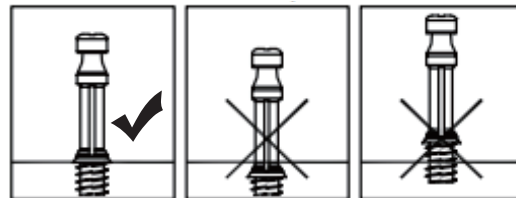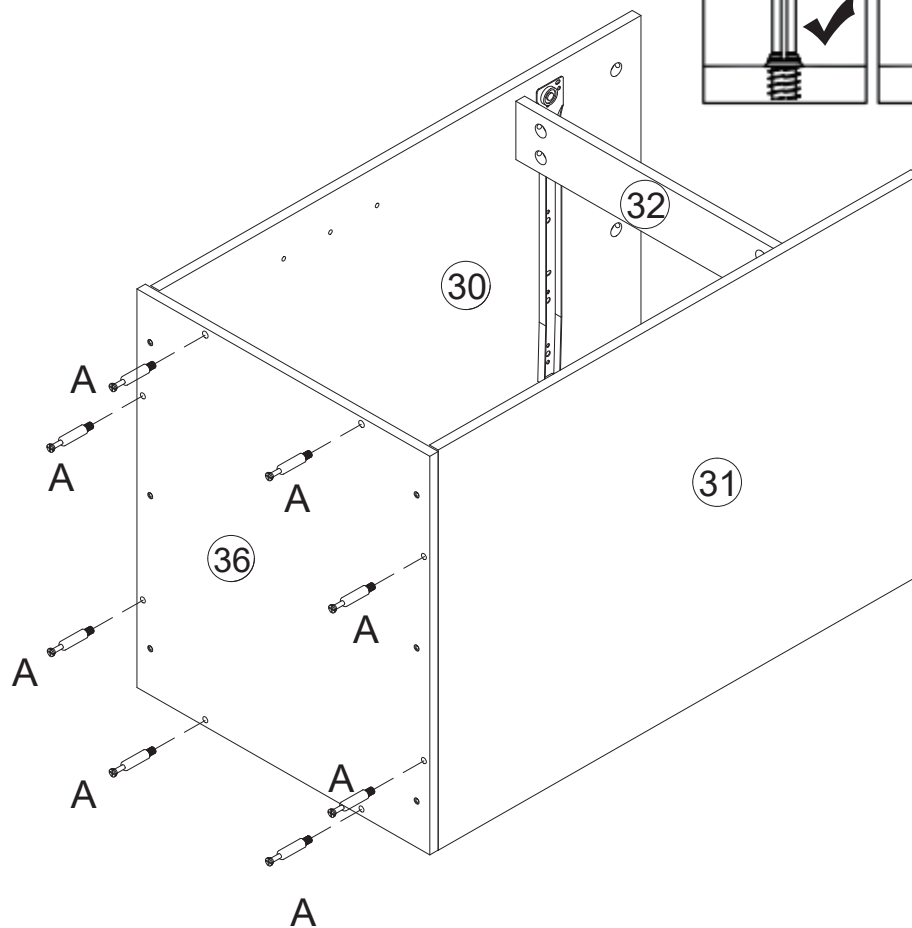

A*8




Step 30

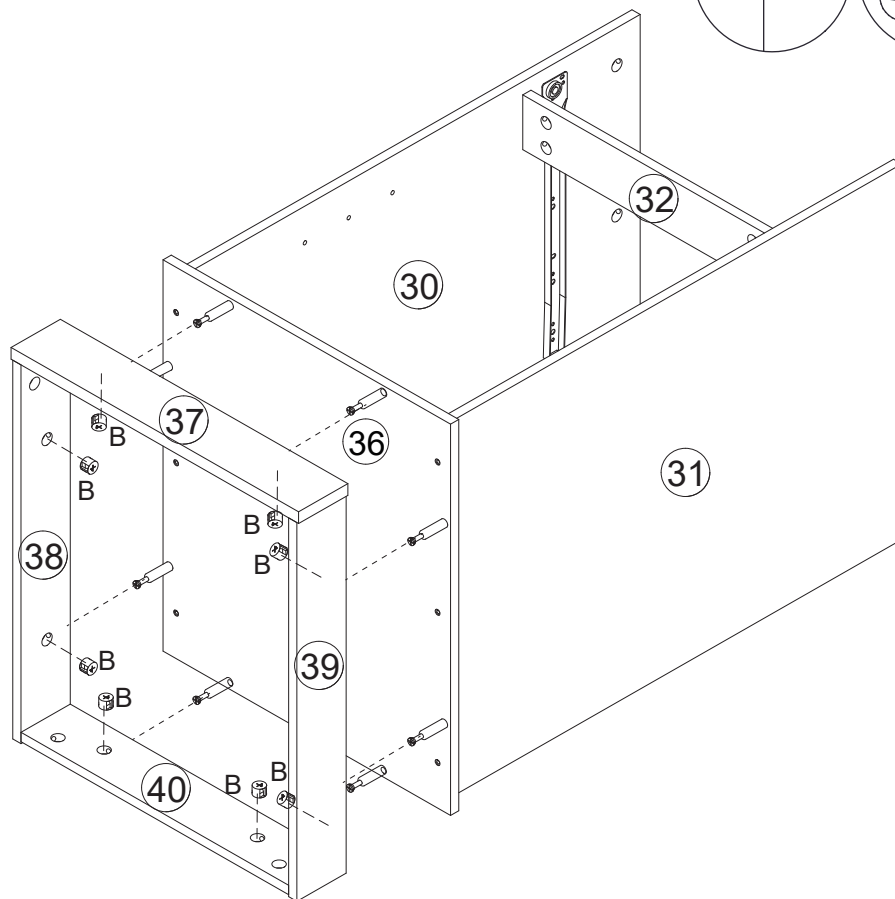

B*8




Step 31


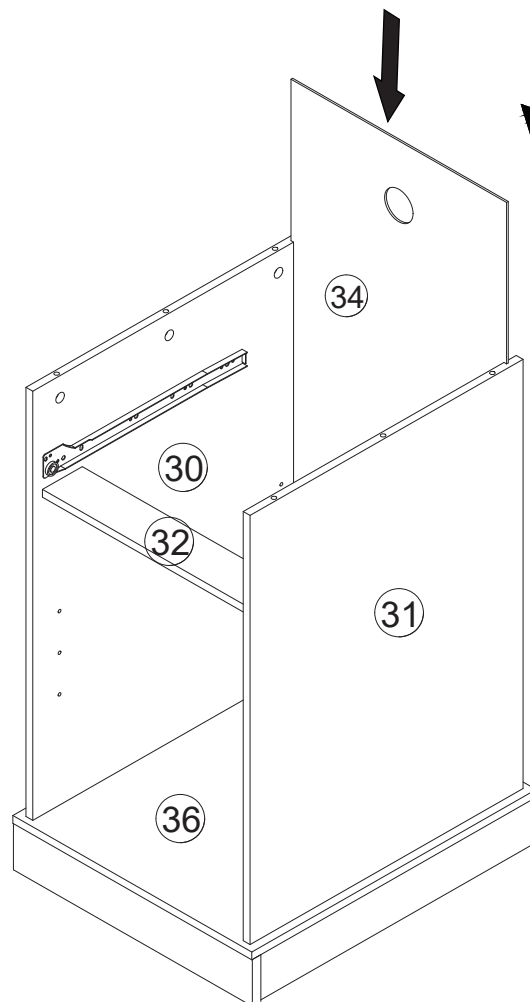


Please flip carefully!


Step 32

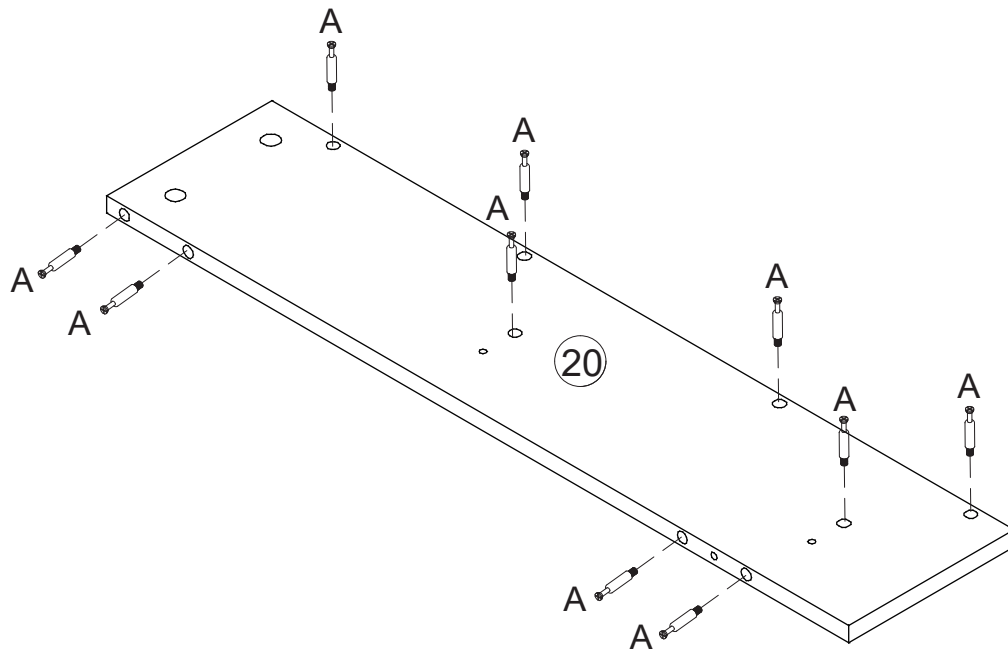



A*10

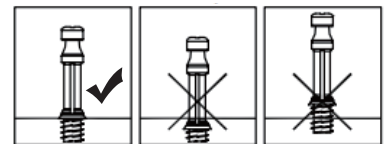


Step 33

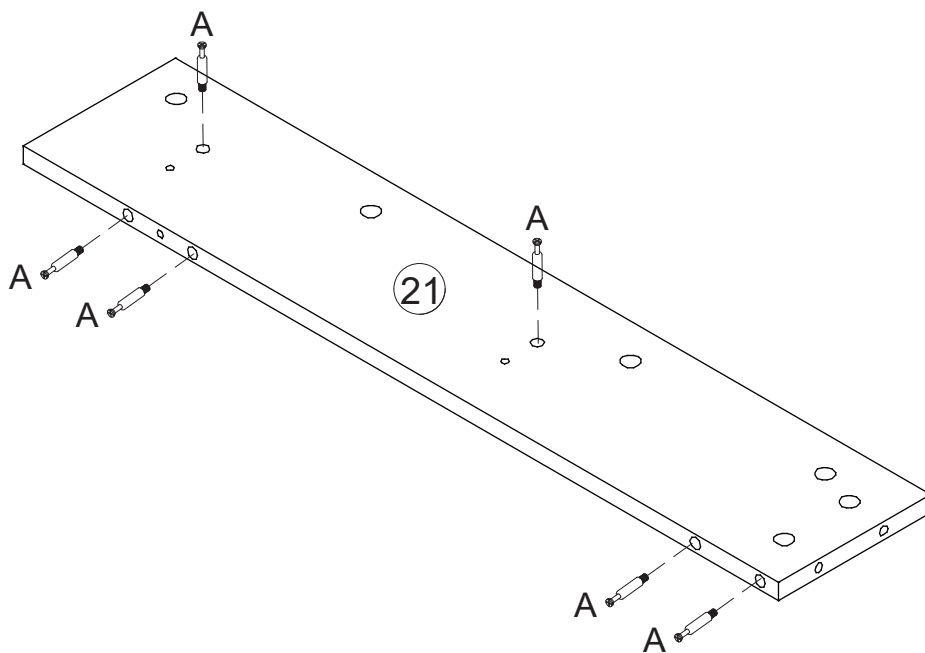

A*6

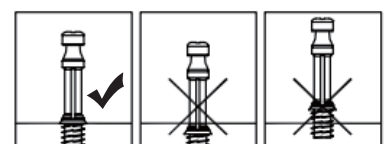

Step 34

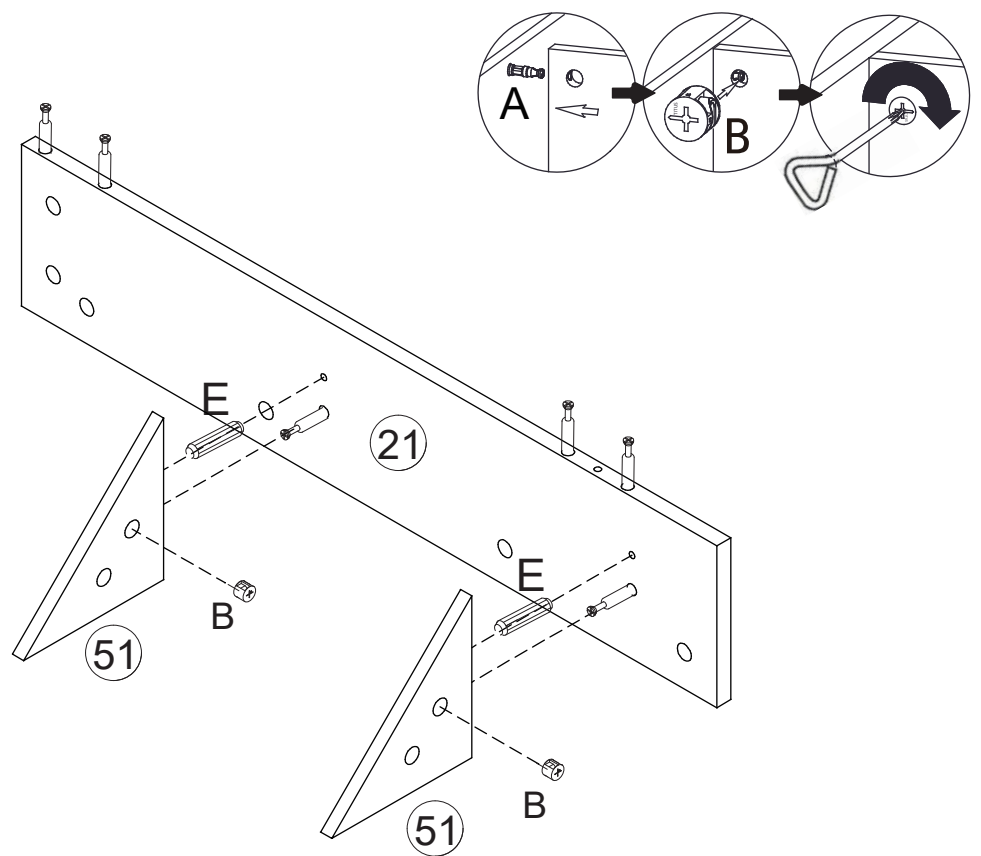


B*2



E*2



Step 35

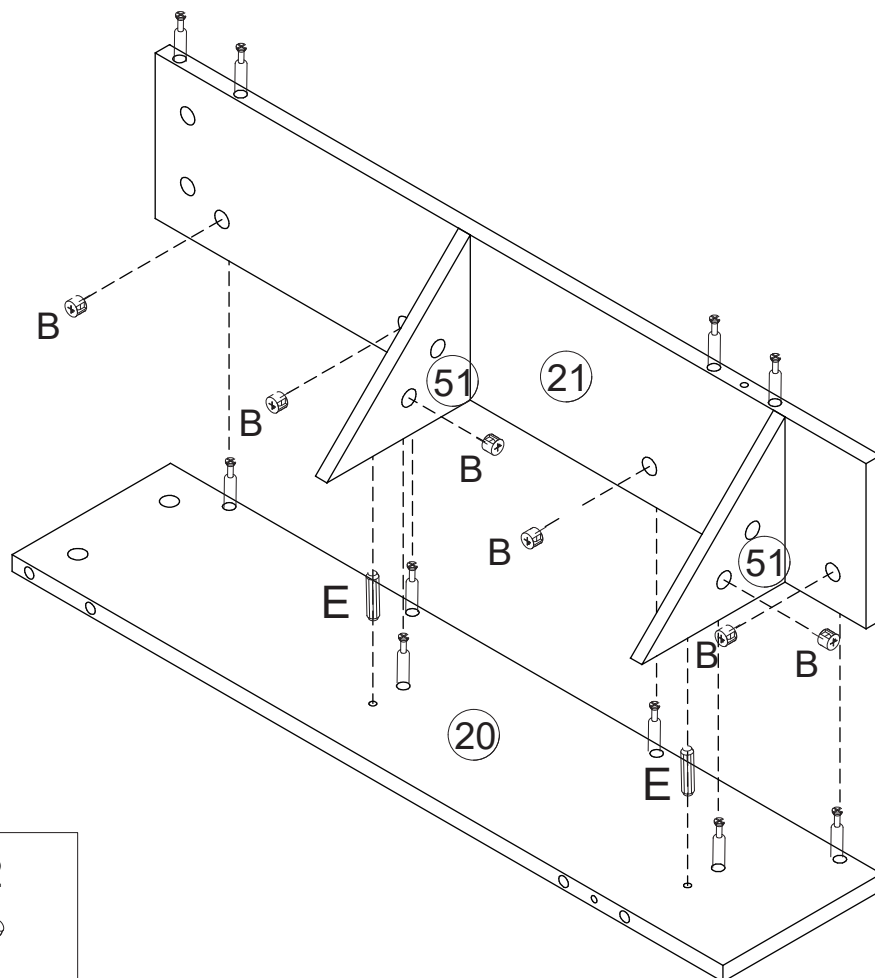


B*6



E*2




Step 36

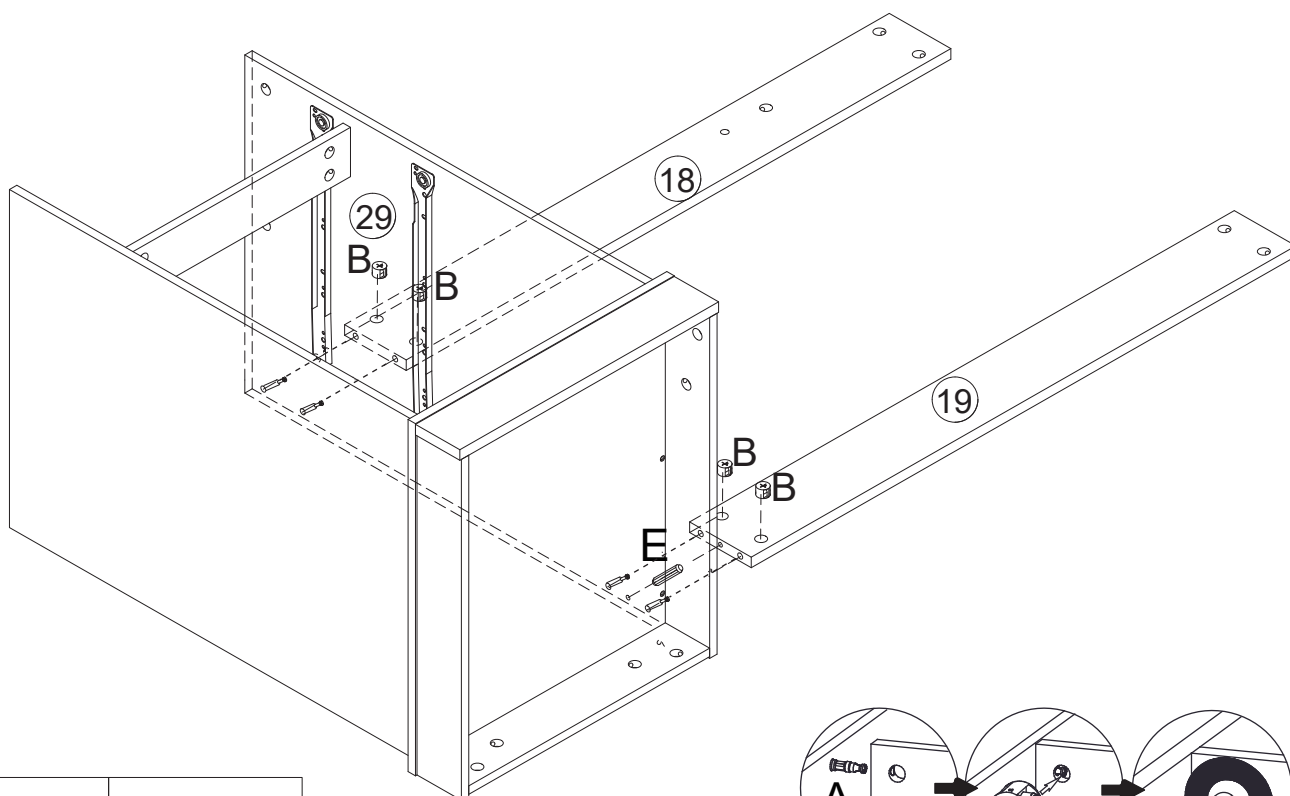


E*1



B*4

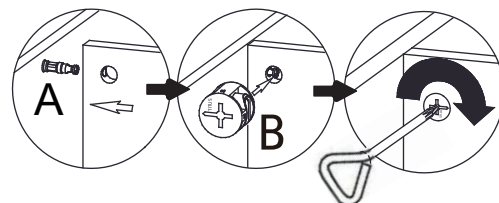


Step 37

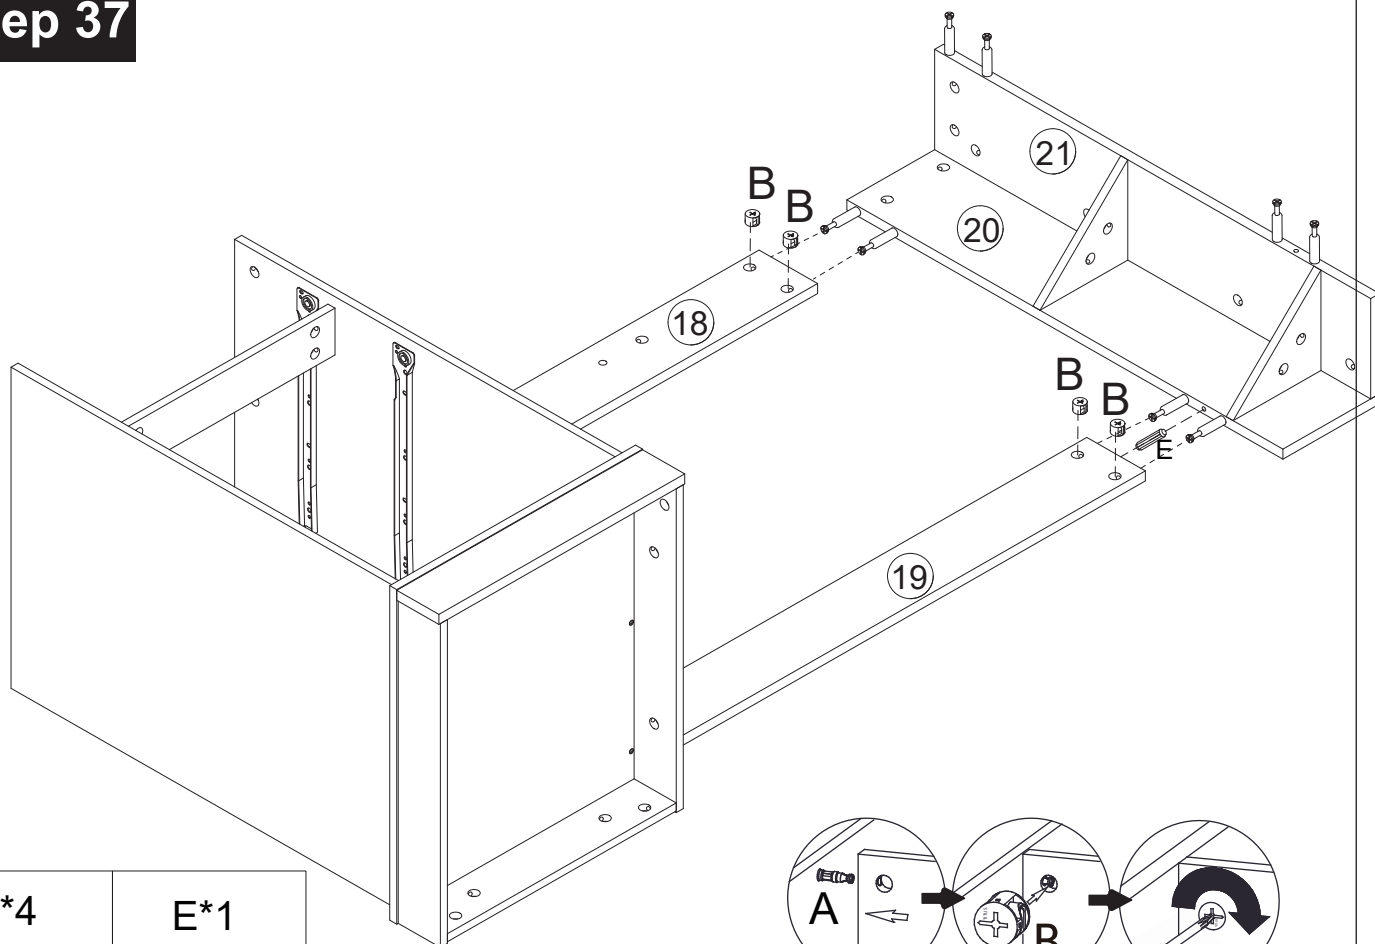


B*4



E*1

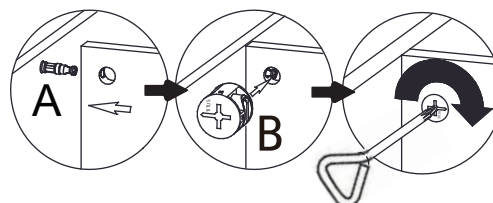

Step 38

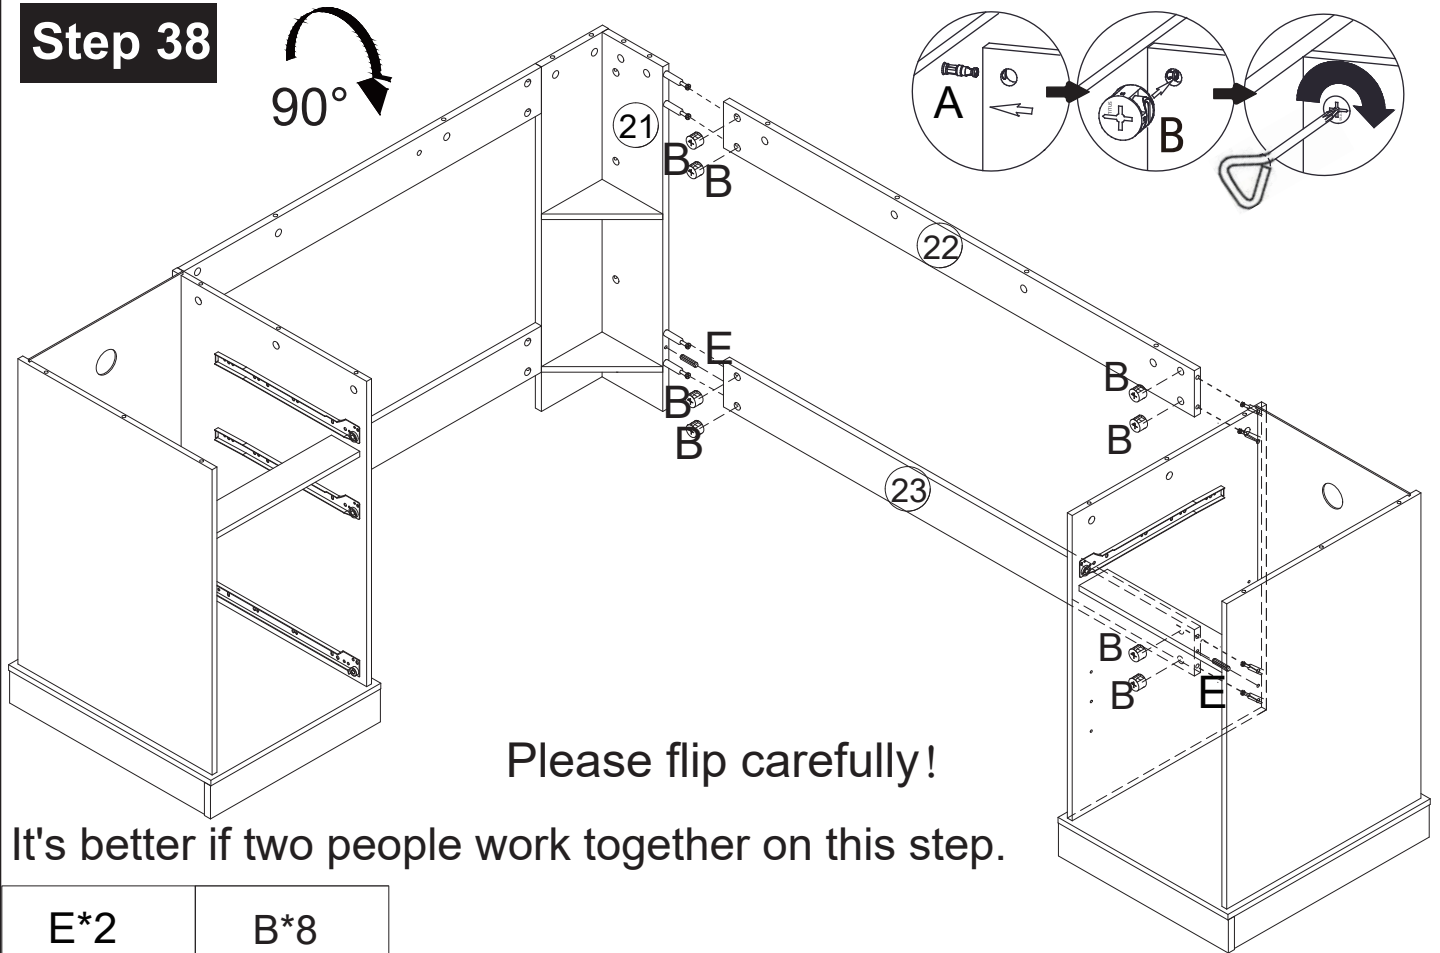

Please flip carefully!

It's better if two people work together on this step.



E*2



B*8




Step 39

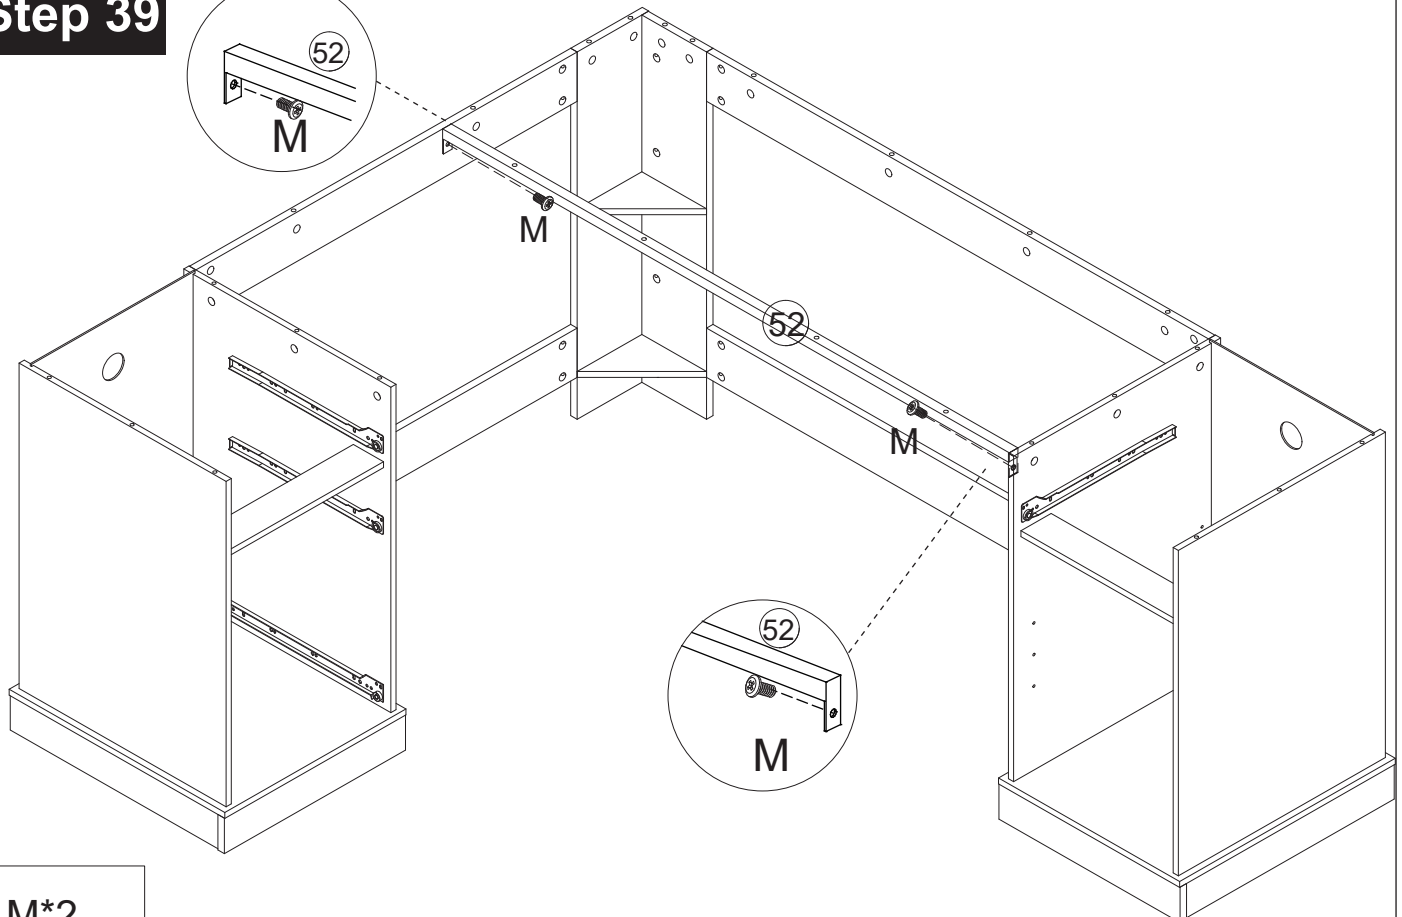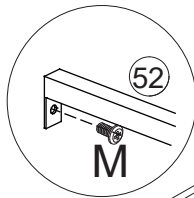


M*2




Step 40

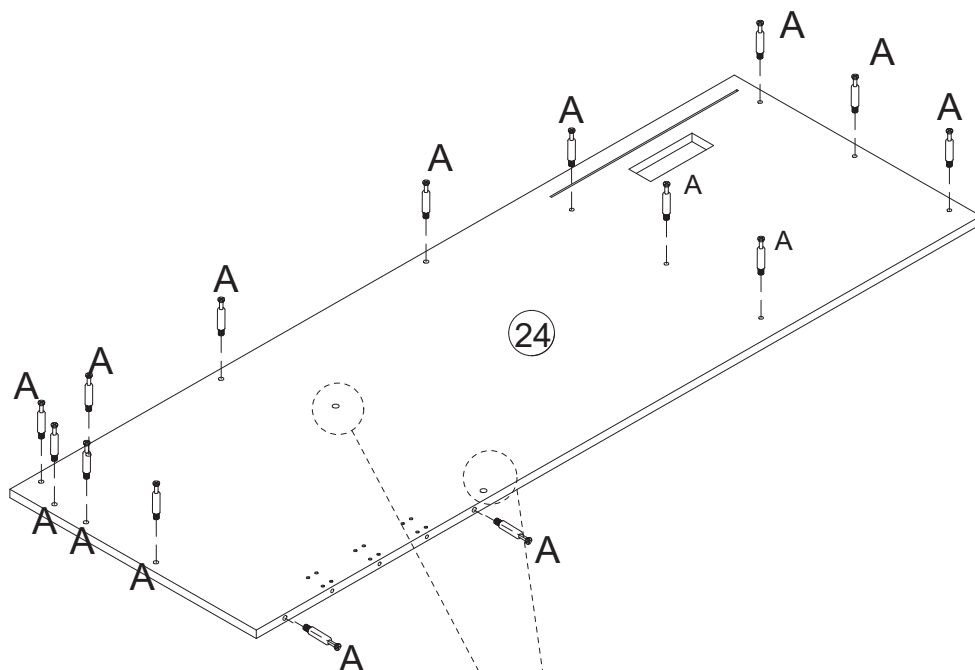


Attention: These four holes are not for Part A installation

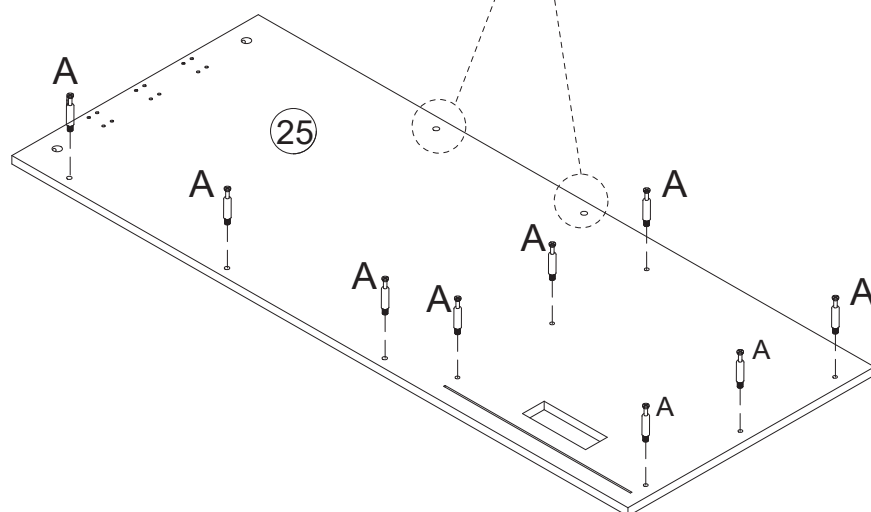

A*24



Step 41

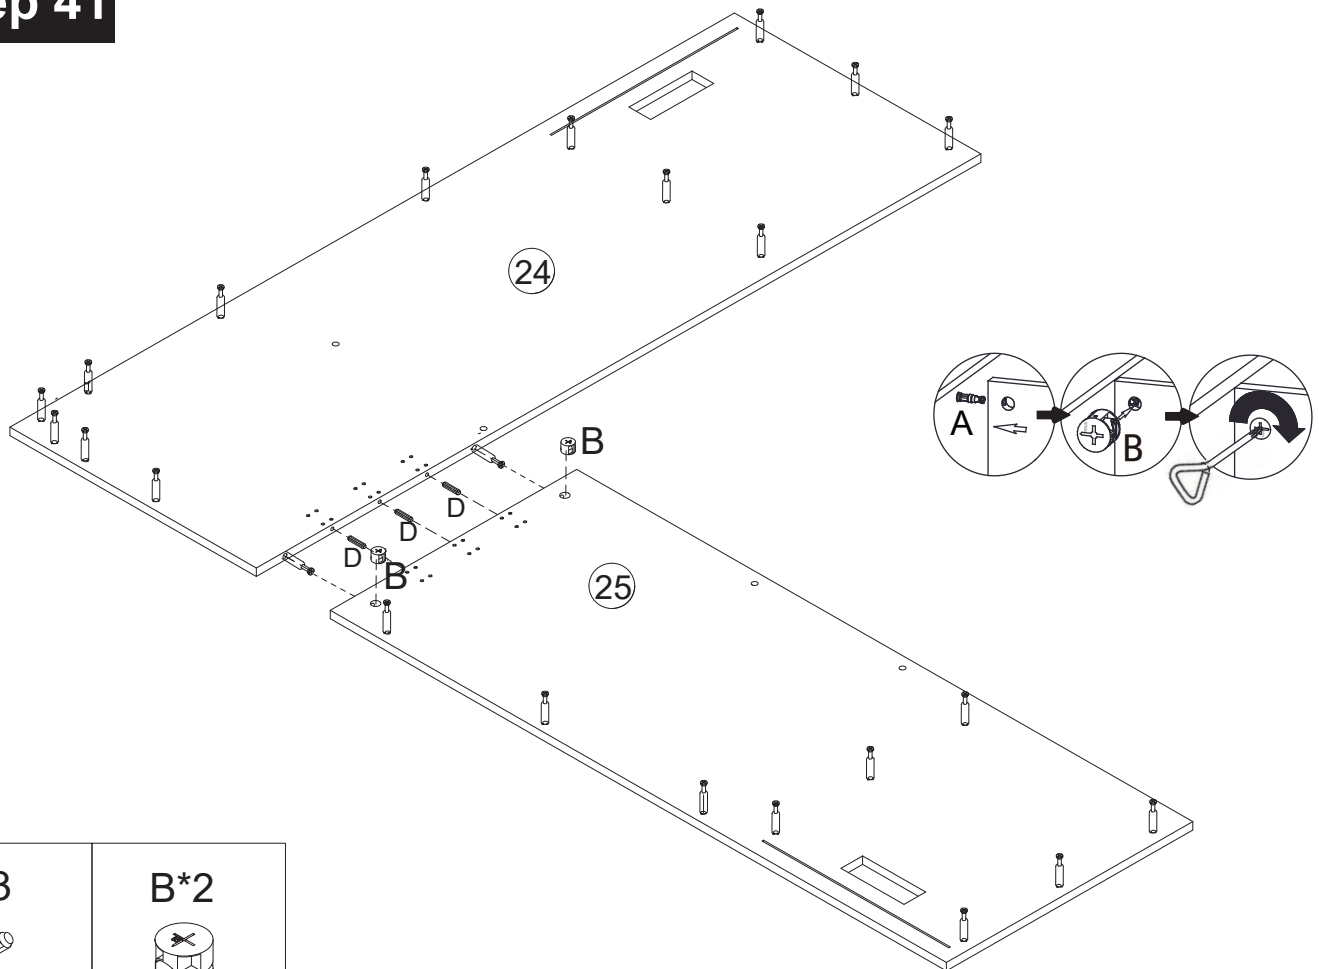


D*3




B*2



Step 42

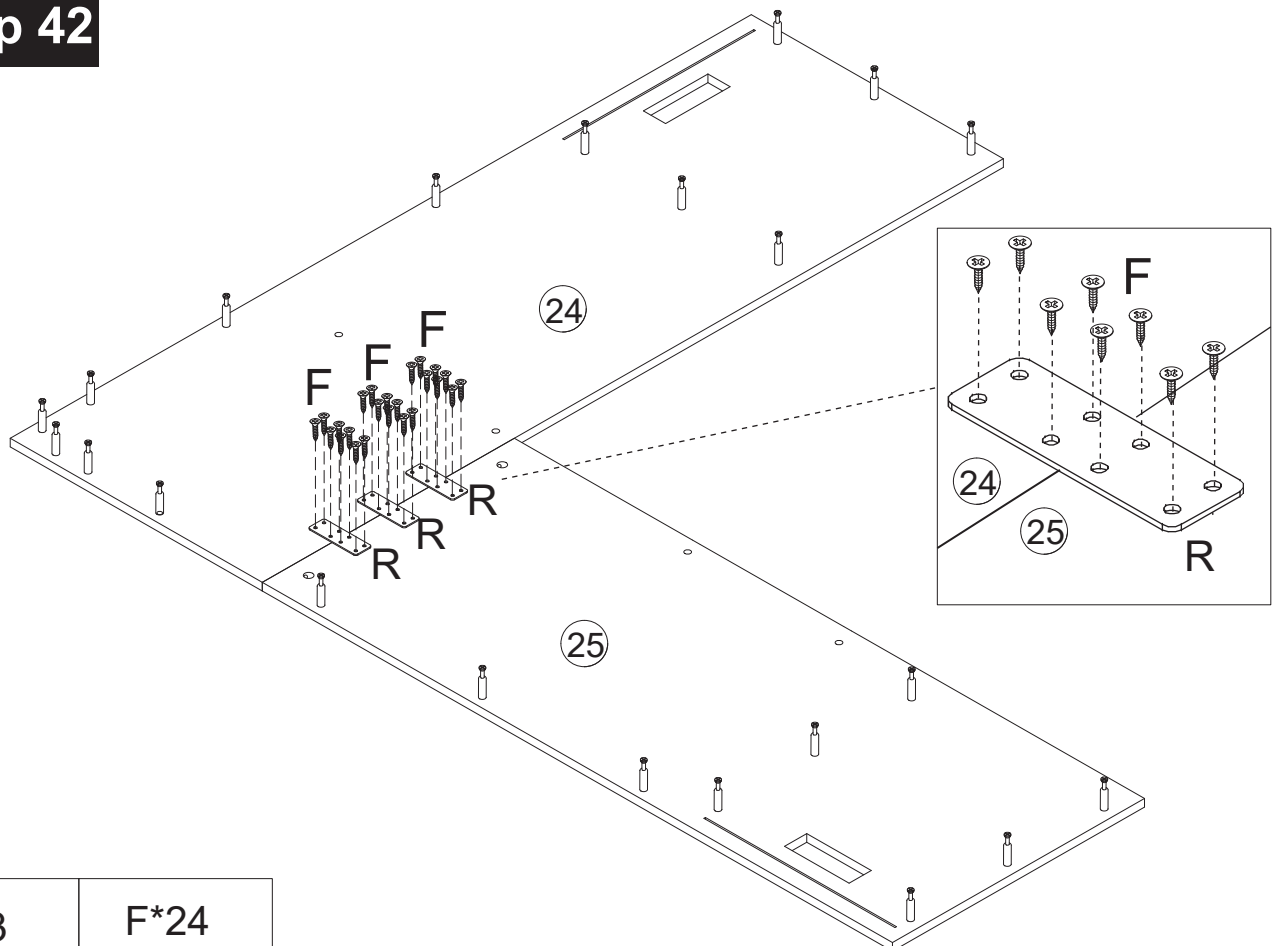

R*3




F*24



Step 43

Please flip carefully !


It's better if three people work together on this step.

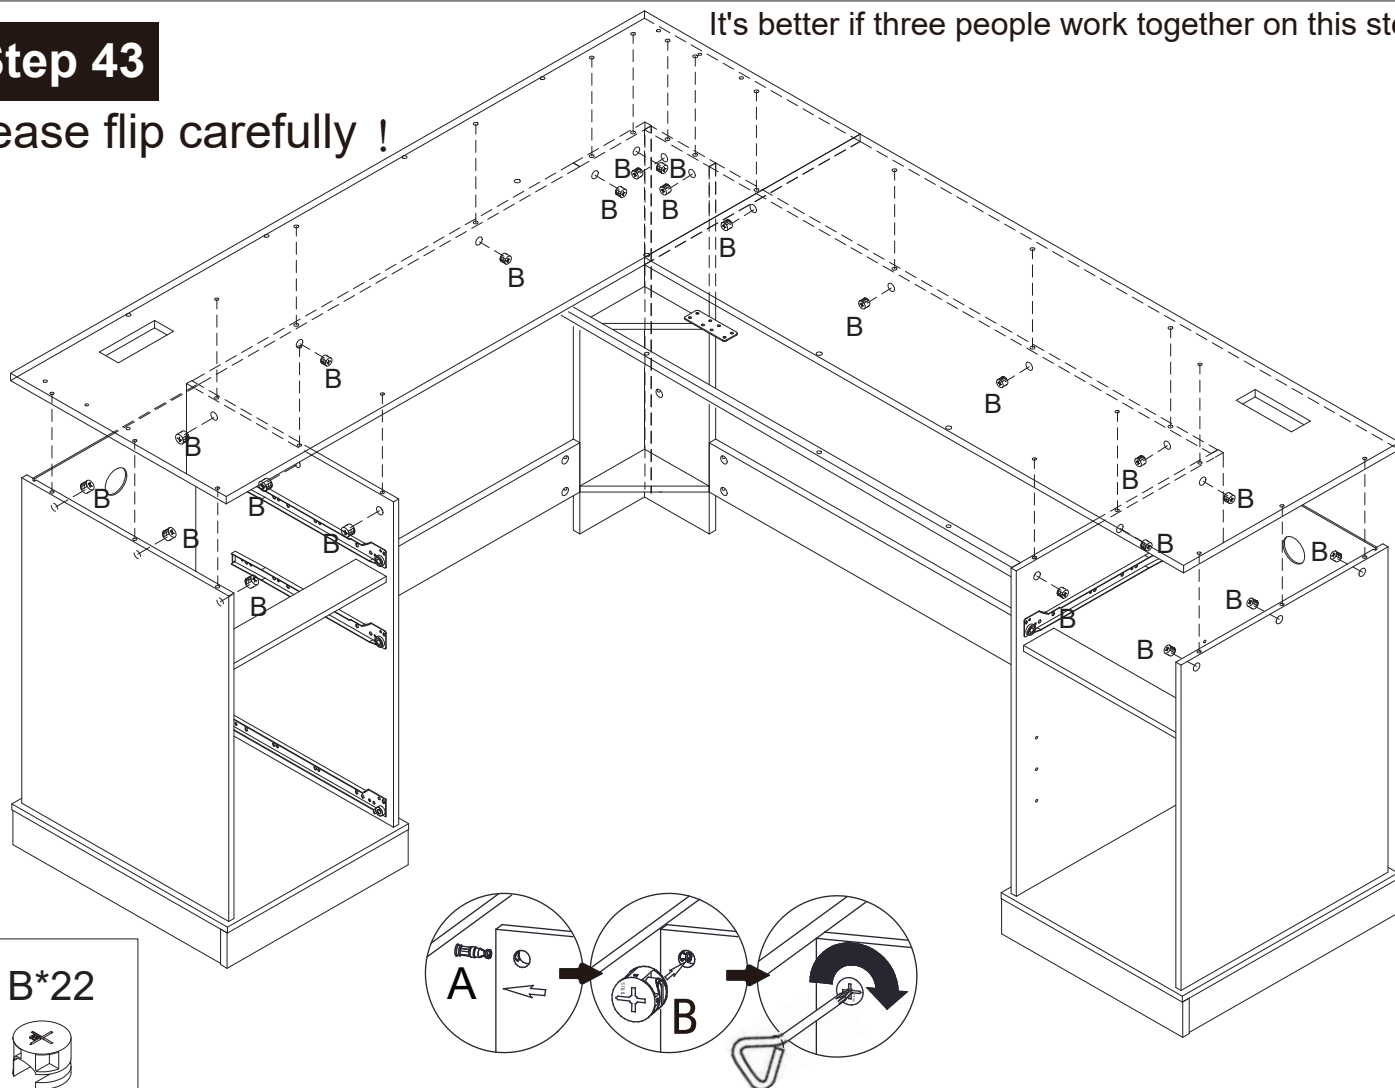

B*22




Step 44

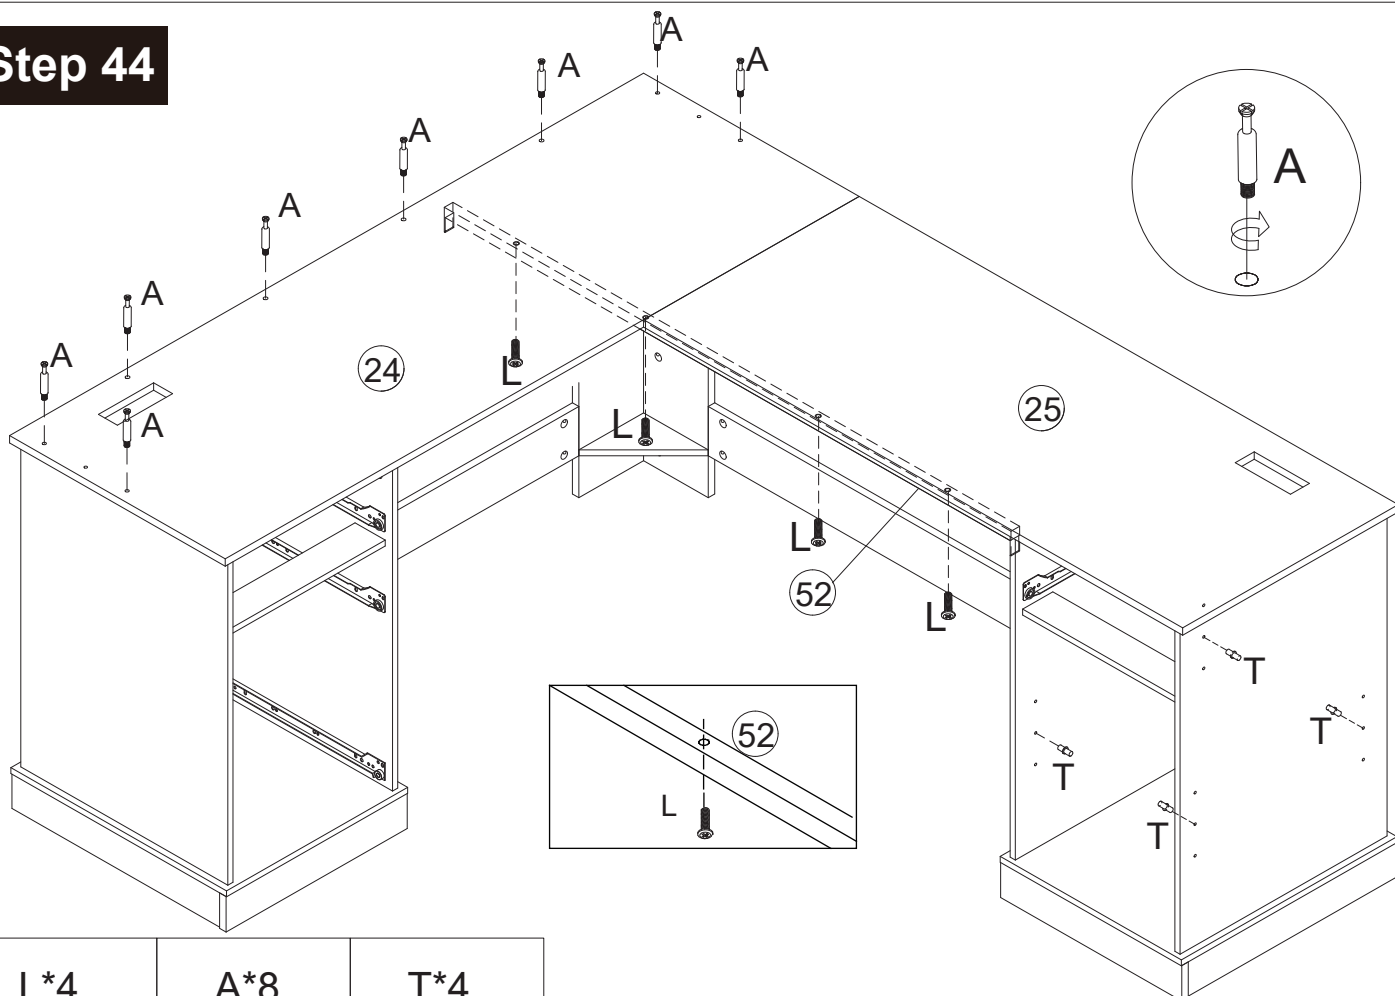

L*4







A*8




T*4



Step 45

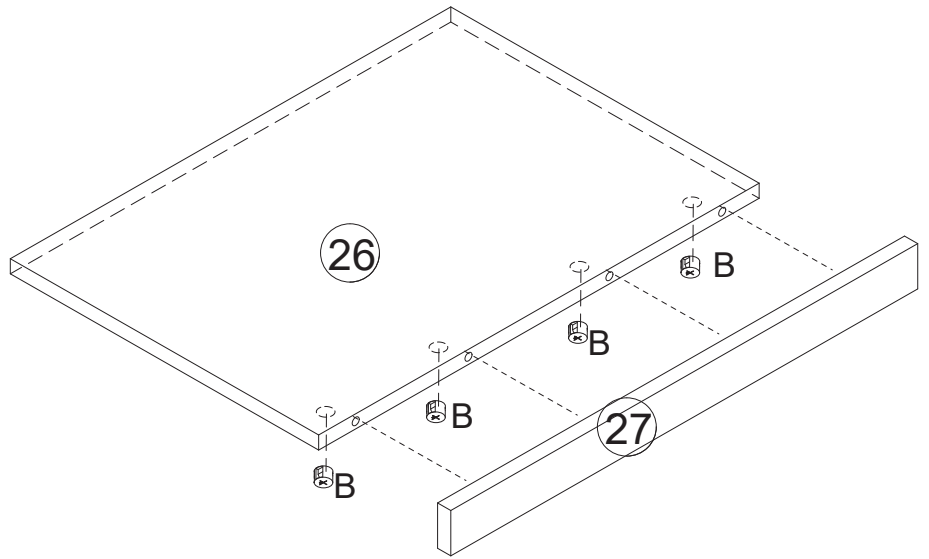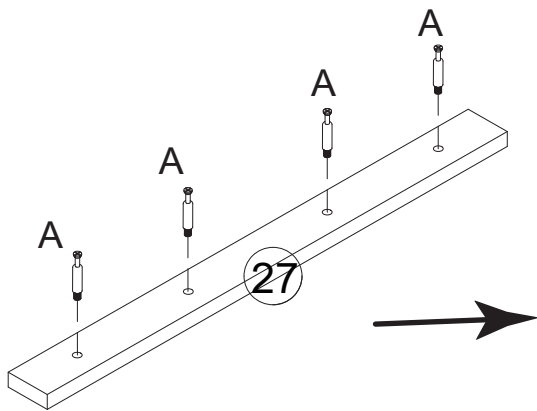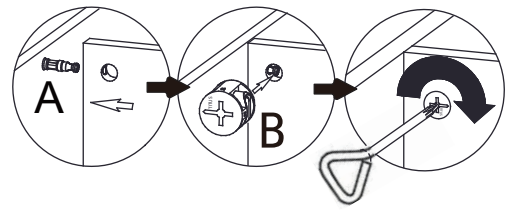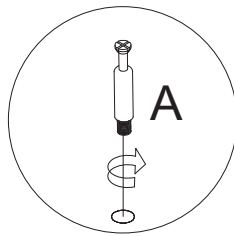


A*4




B*4




Step 46

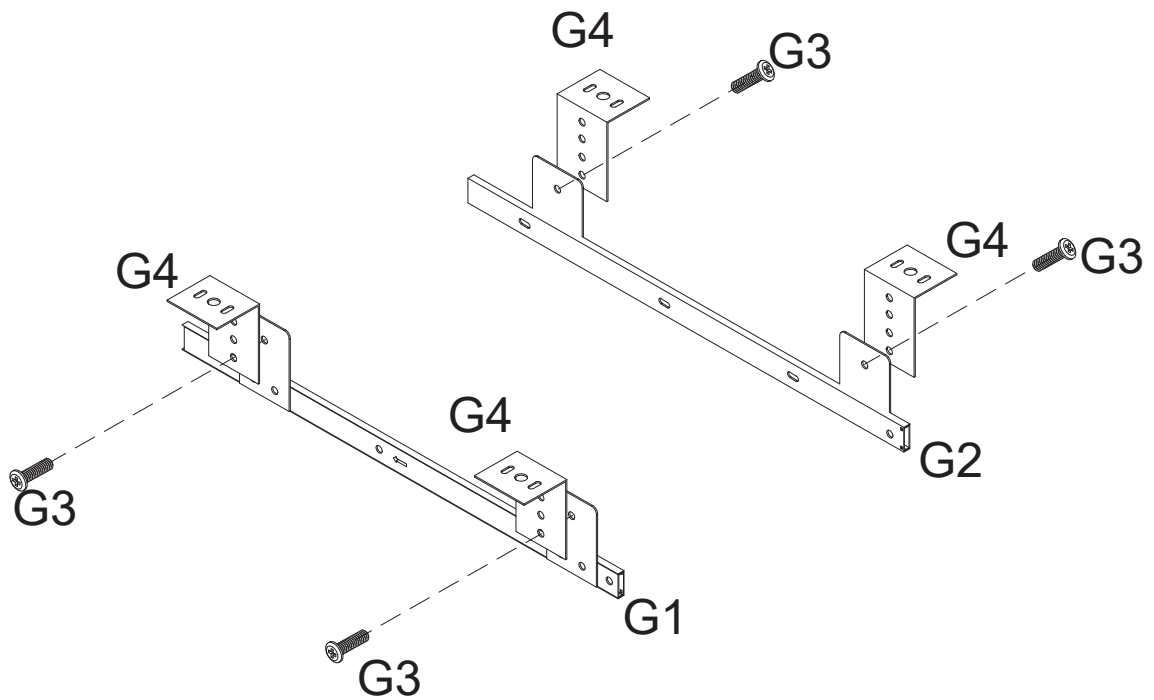

G*1




Step 47

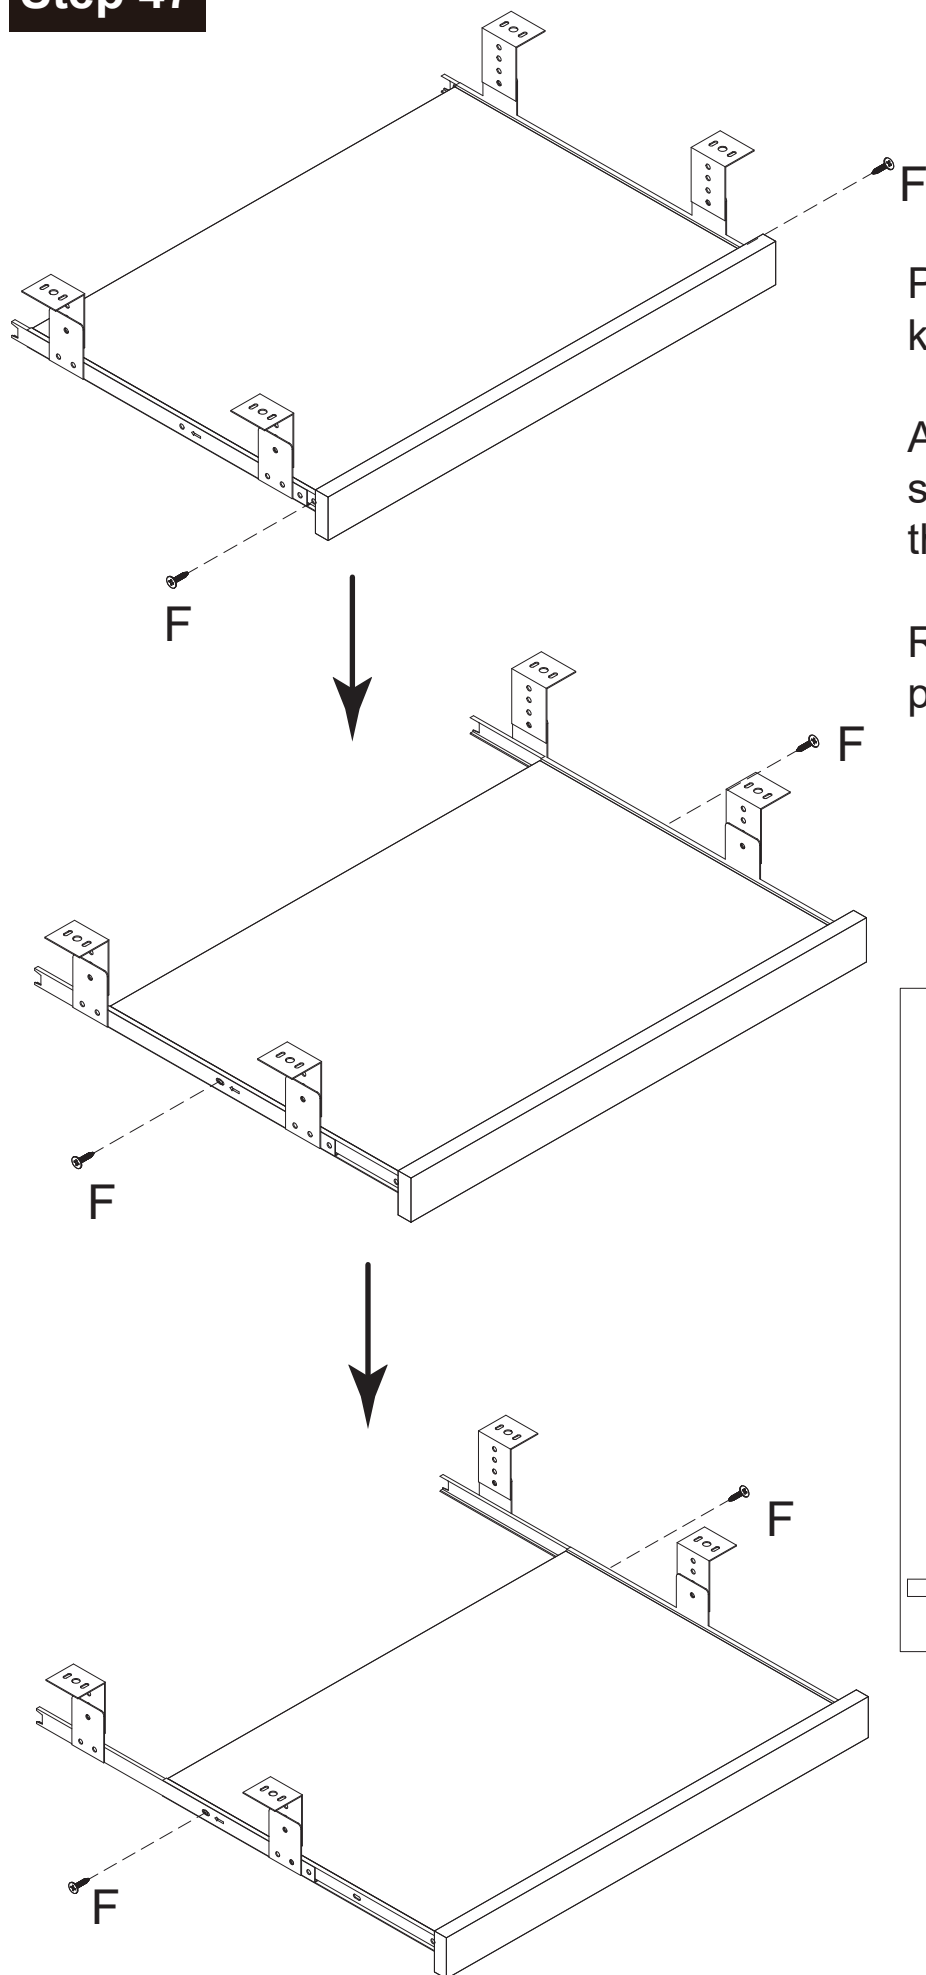

Pay attention to installing the keyboard slide rail.

Align the mounting holes and secure the screws while sliding the rail in and out.


Refer to the pattern on this page for detailed instructions.

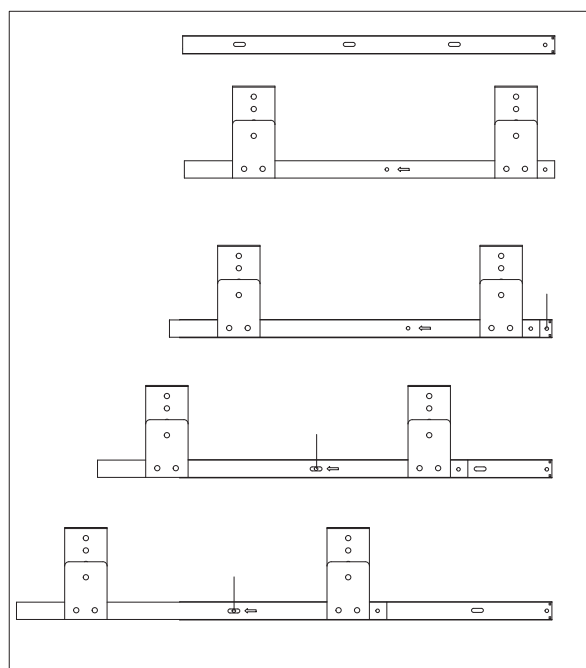

F*6




Step 48

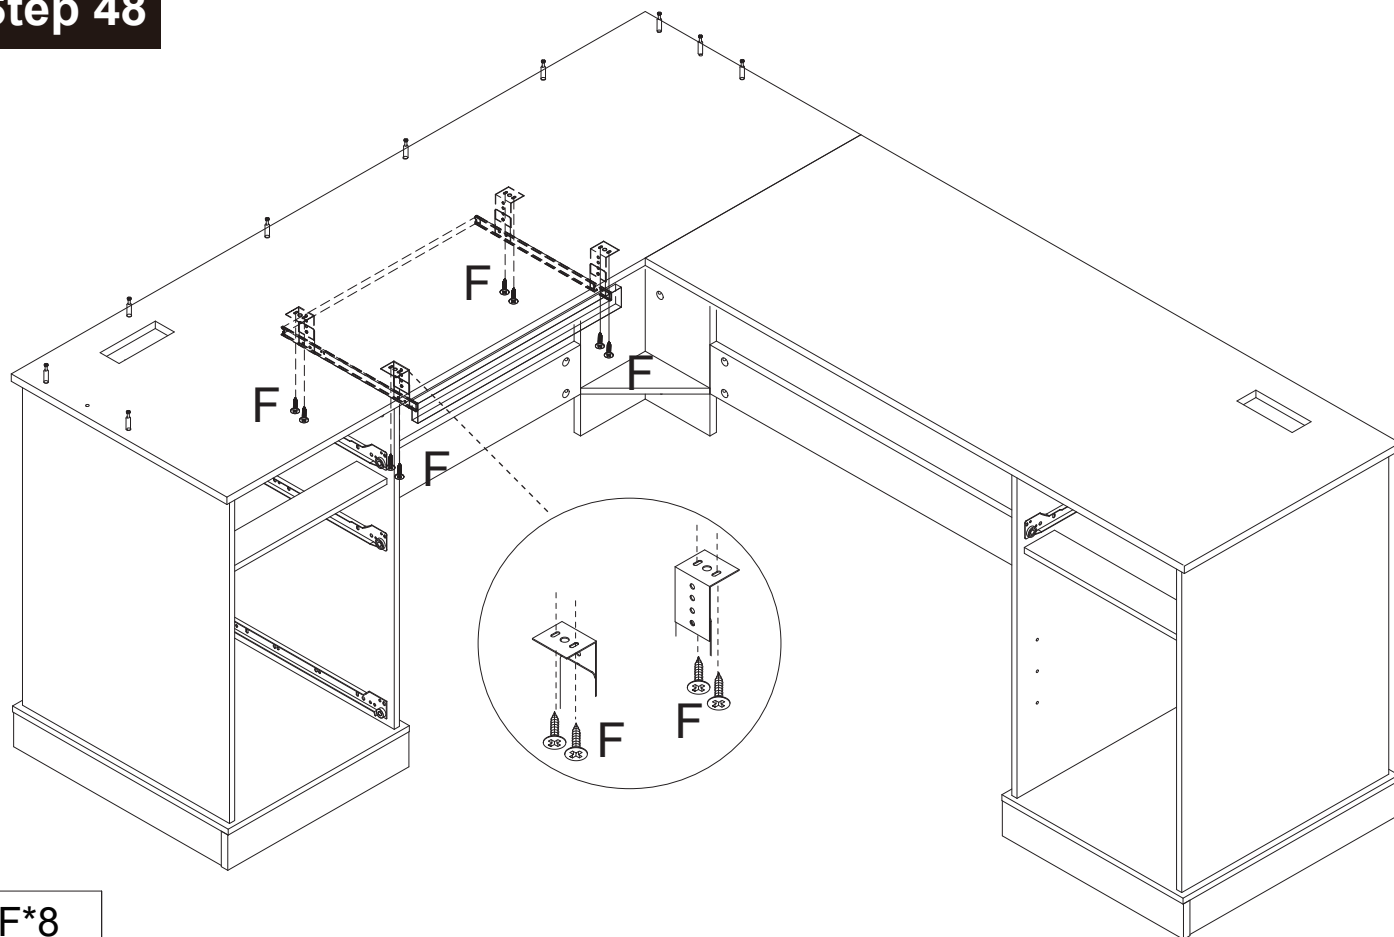


F*8




Step 49

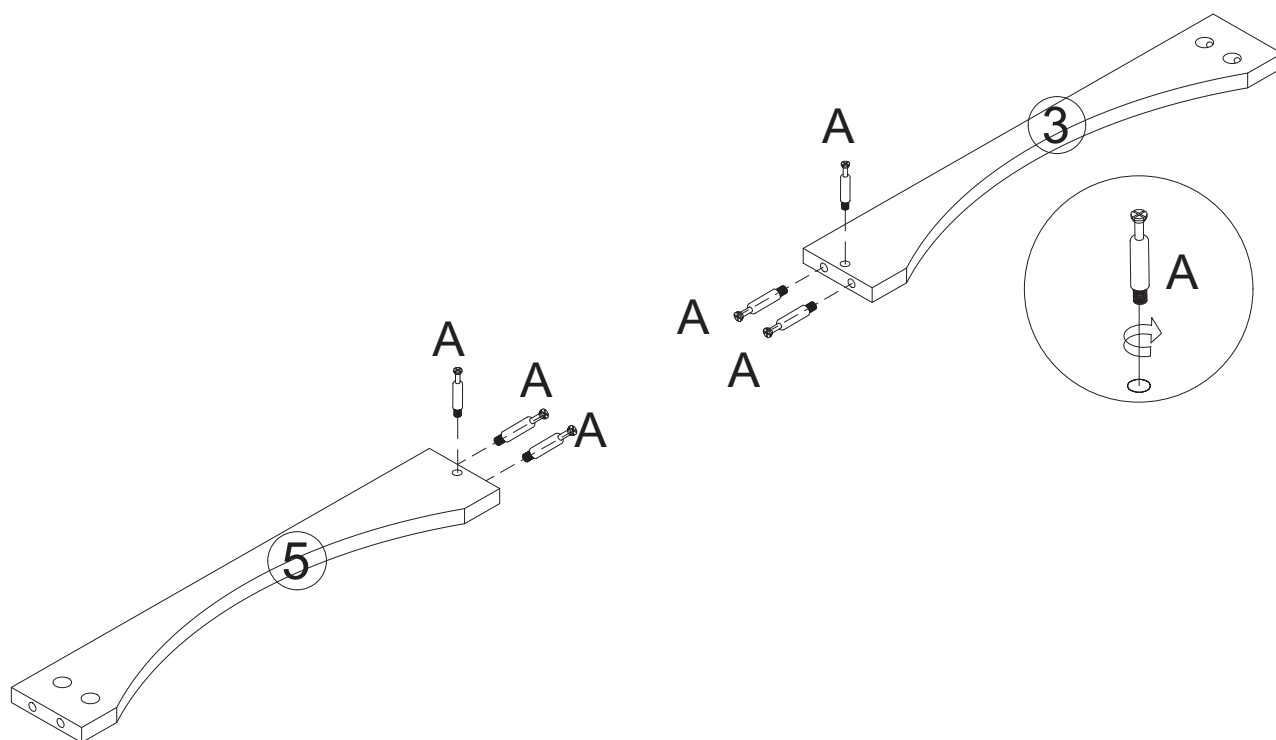

A*6




Step 50

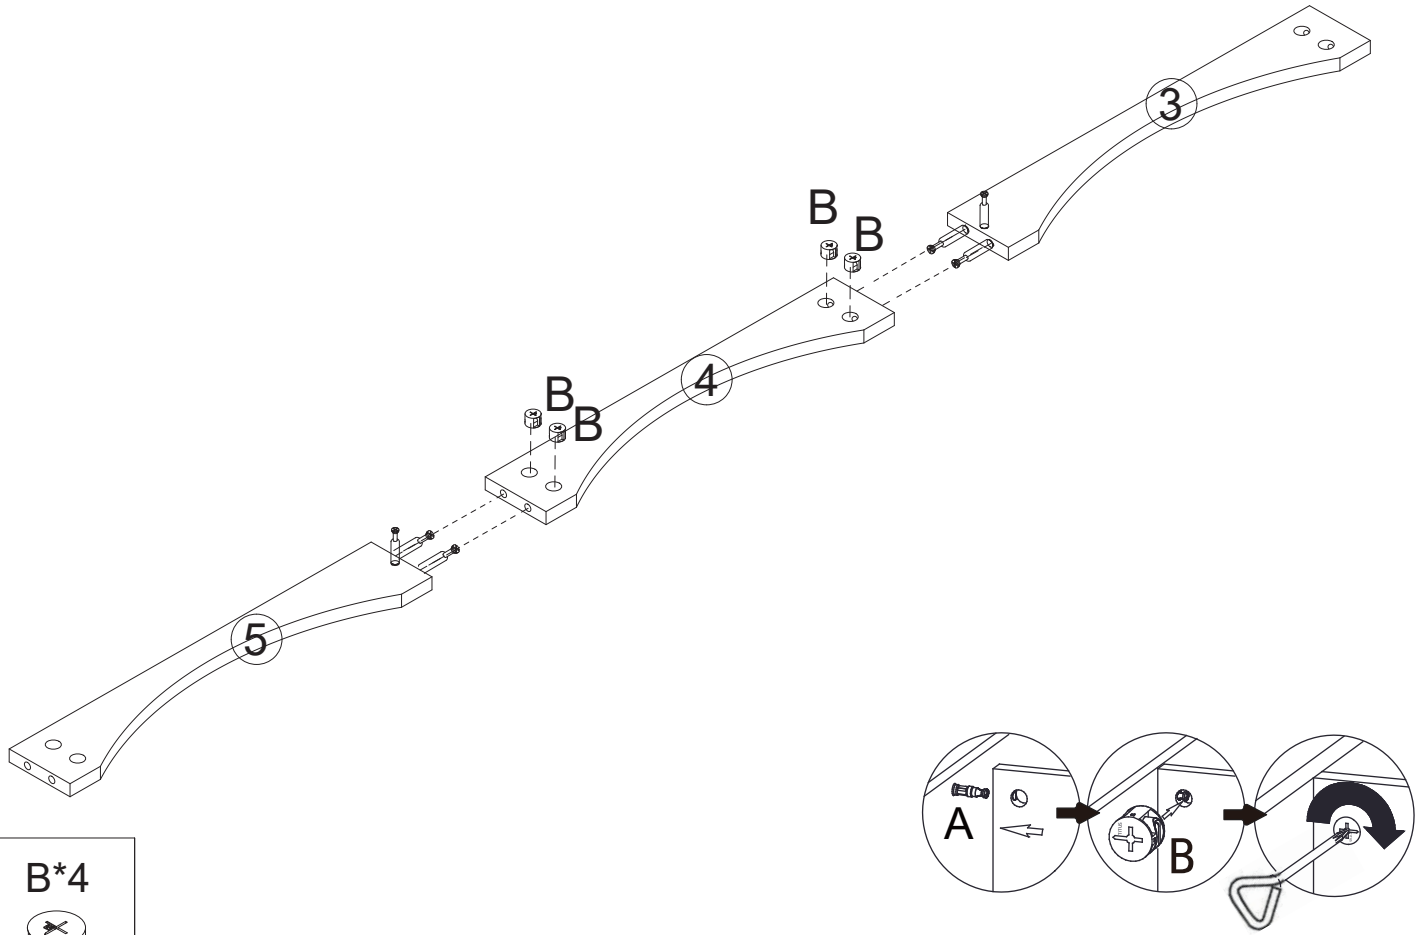


B*4




Step 51

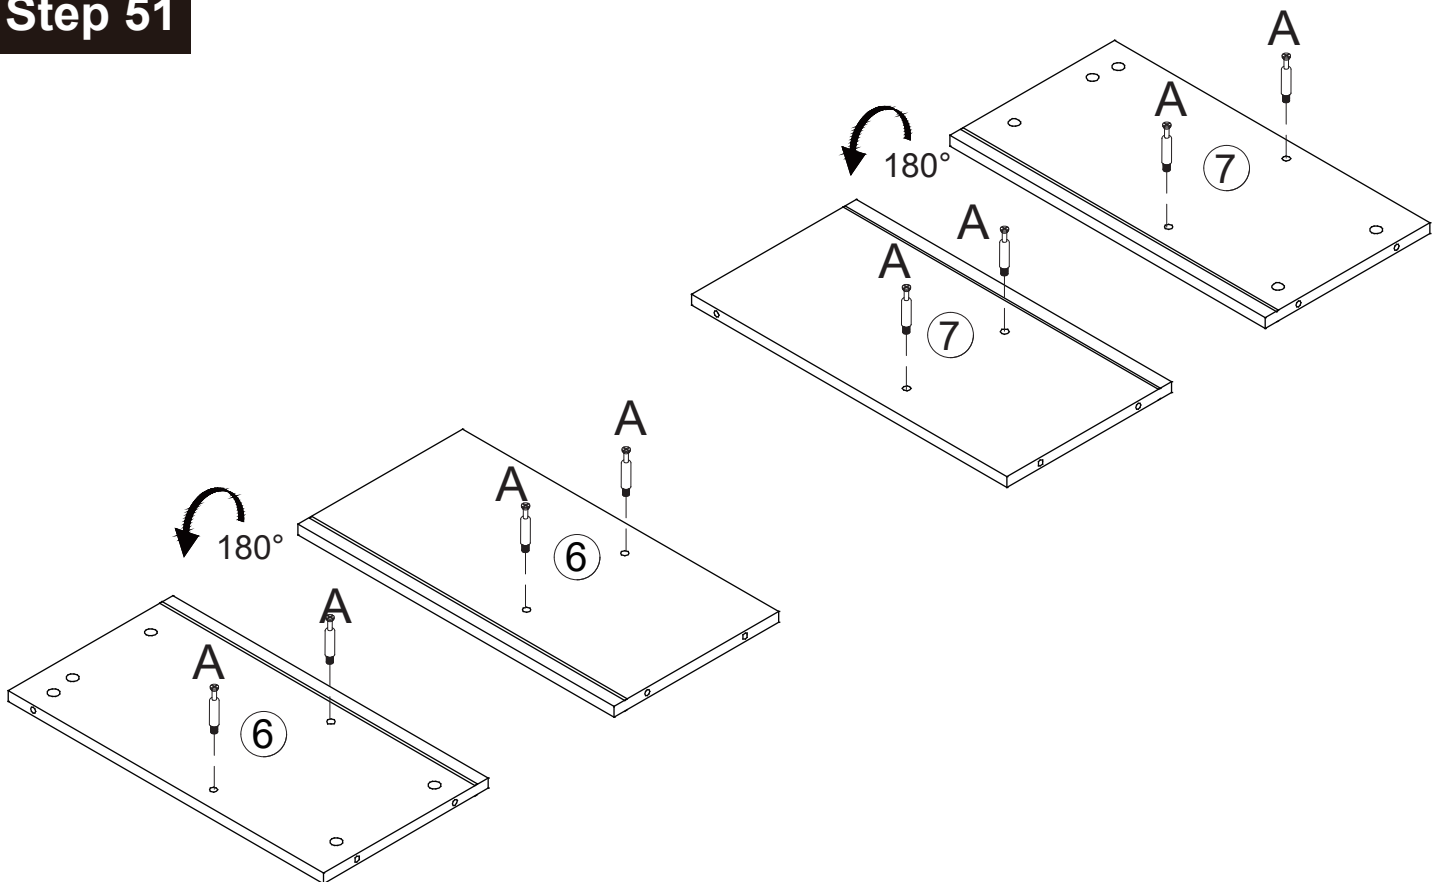


A*8




Step 52

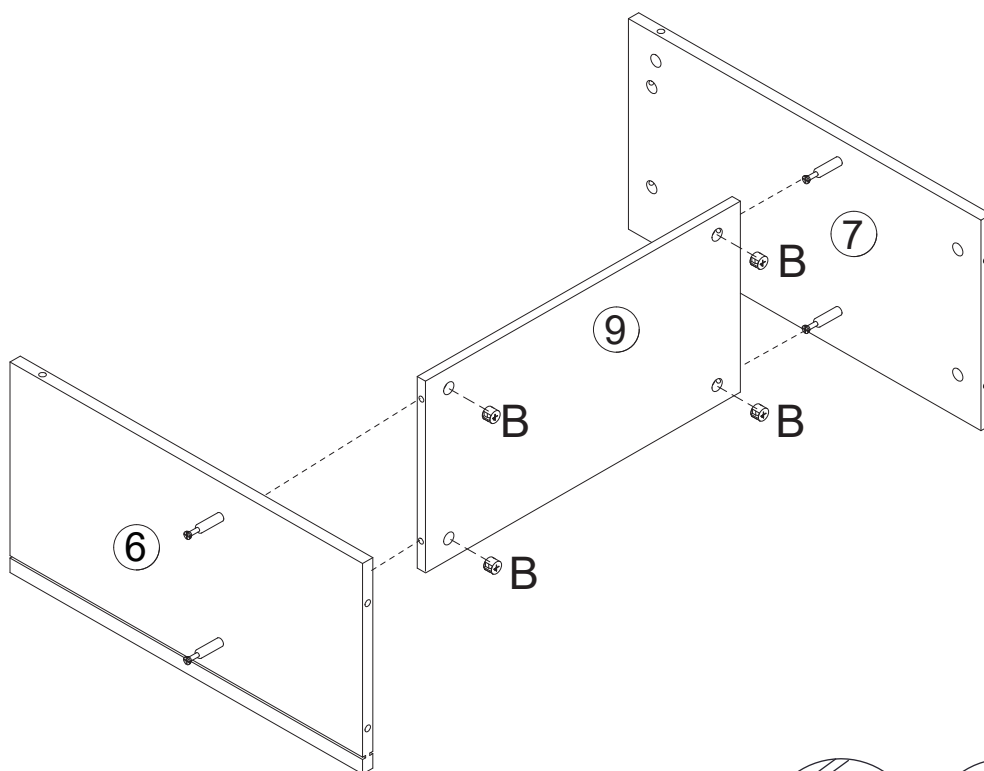


B*4

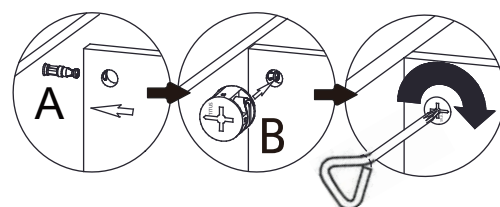


Step 53

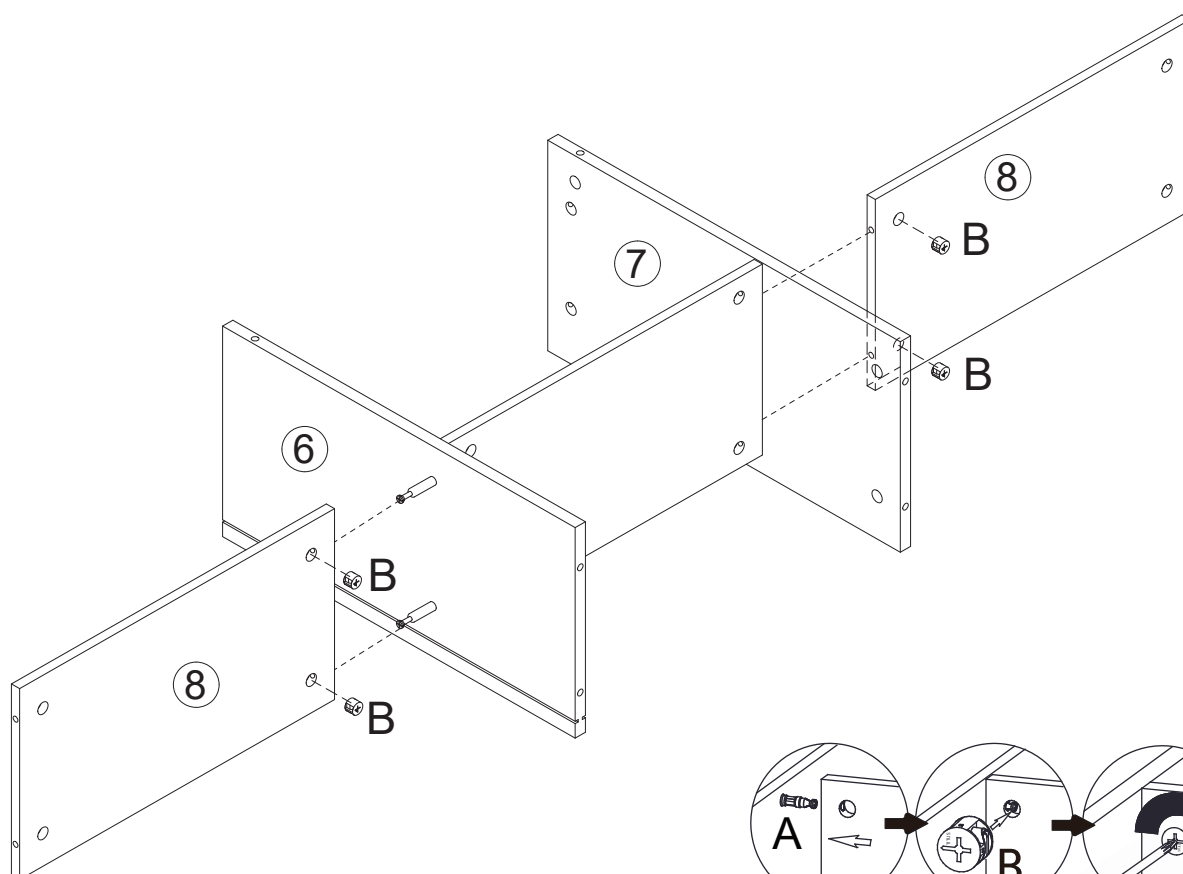


B*4

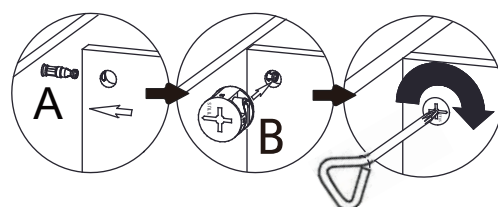


Step 54

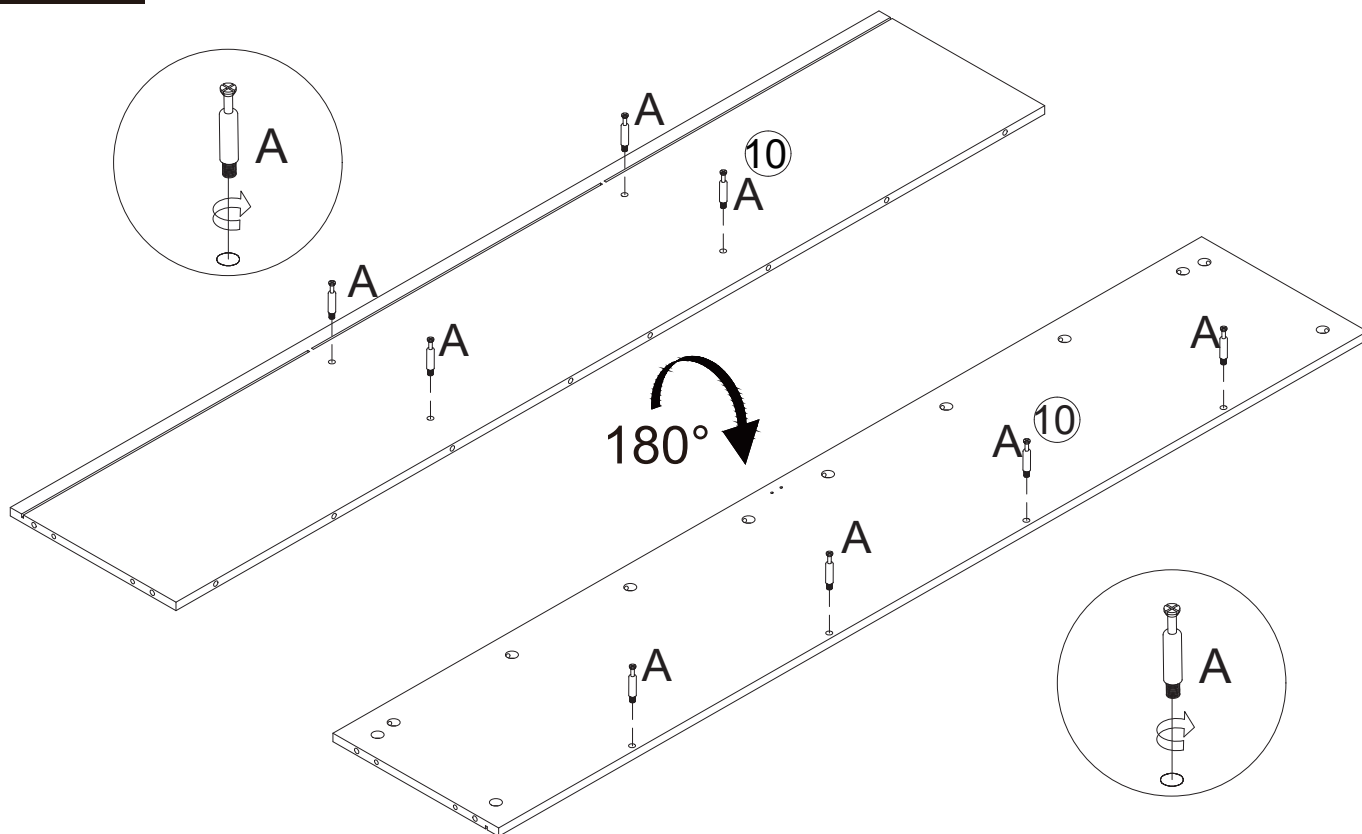


A*8




Step 55

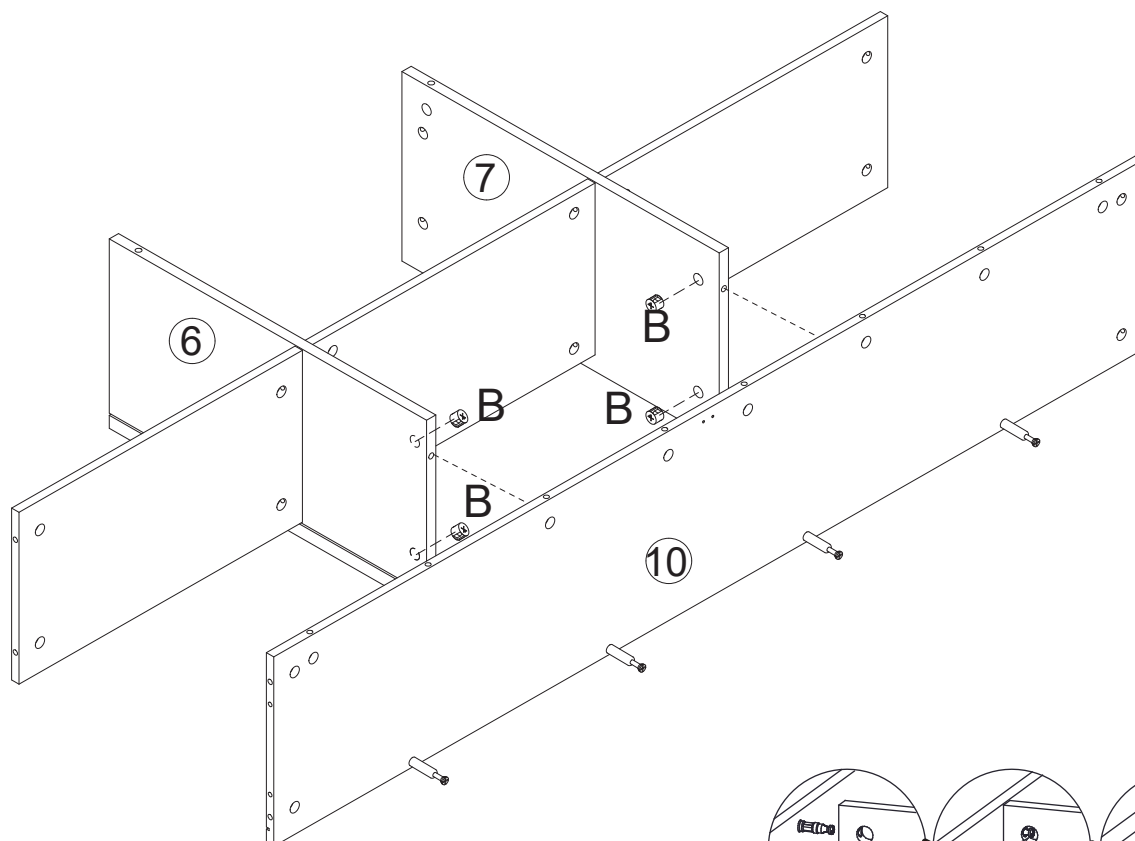


B*4

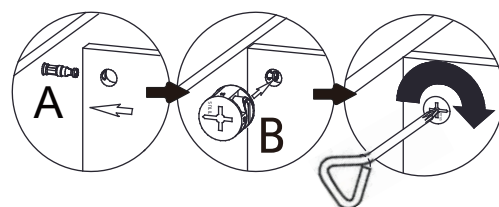


Step 56

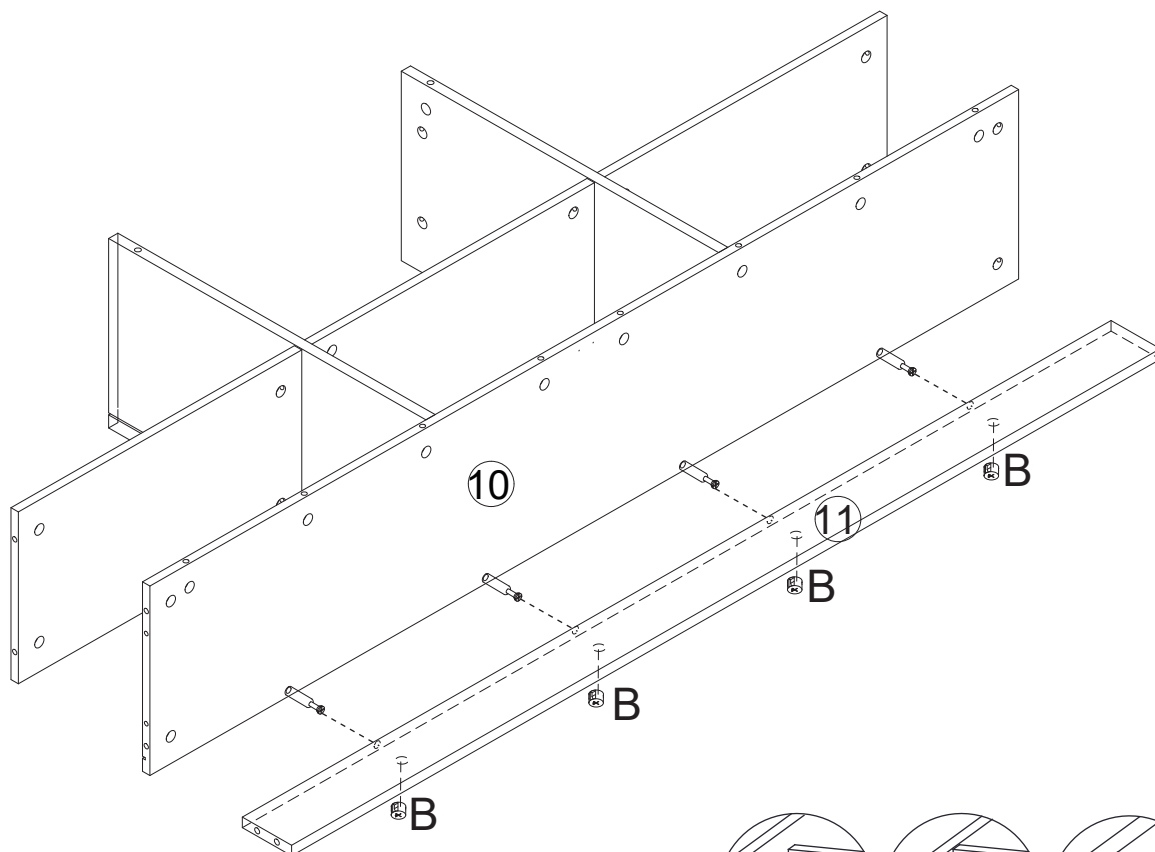

B*4

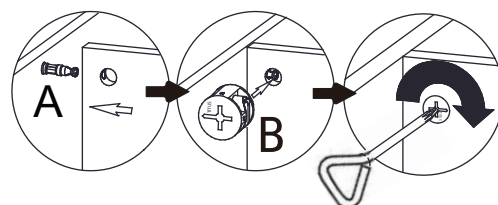

Step 57

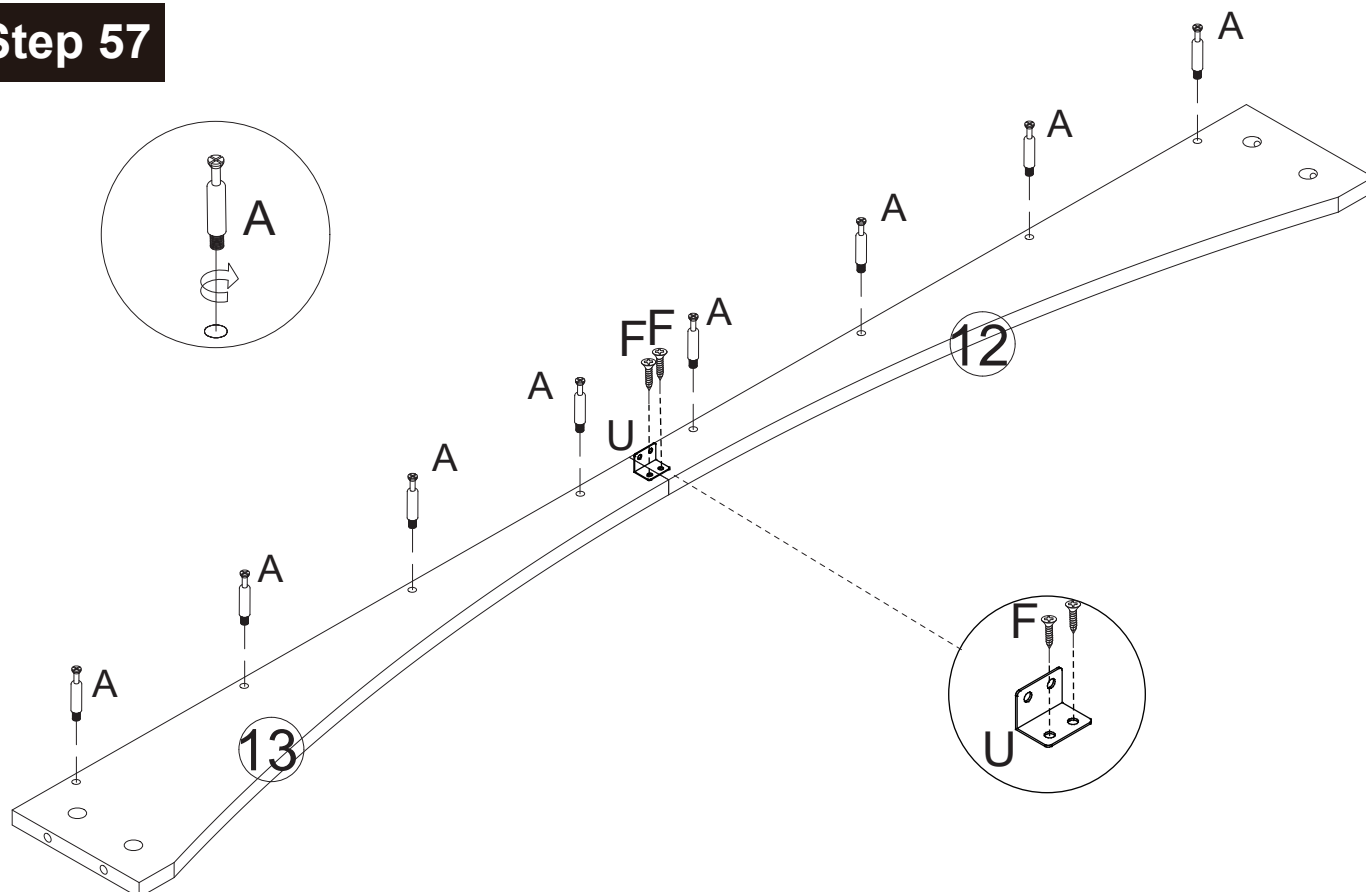


U*1




F*2



A*8




Step 58

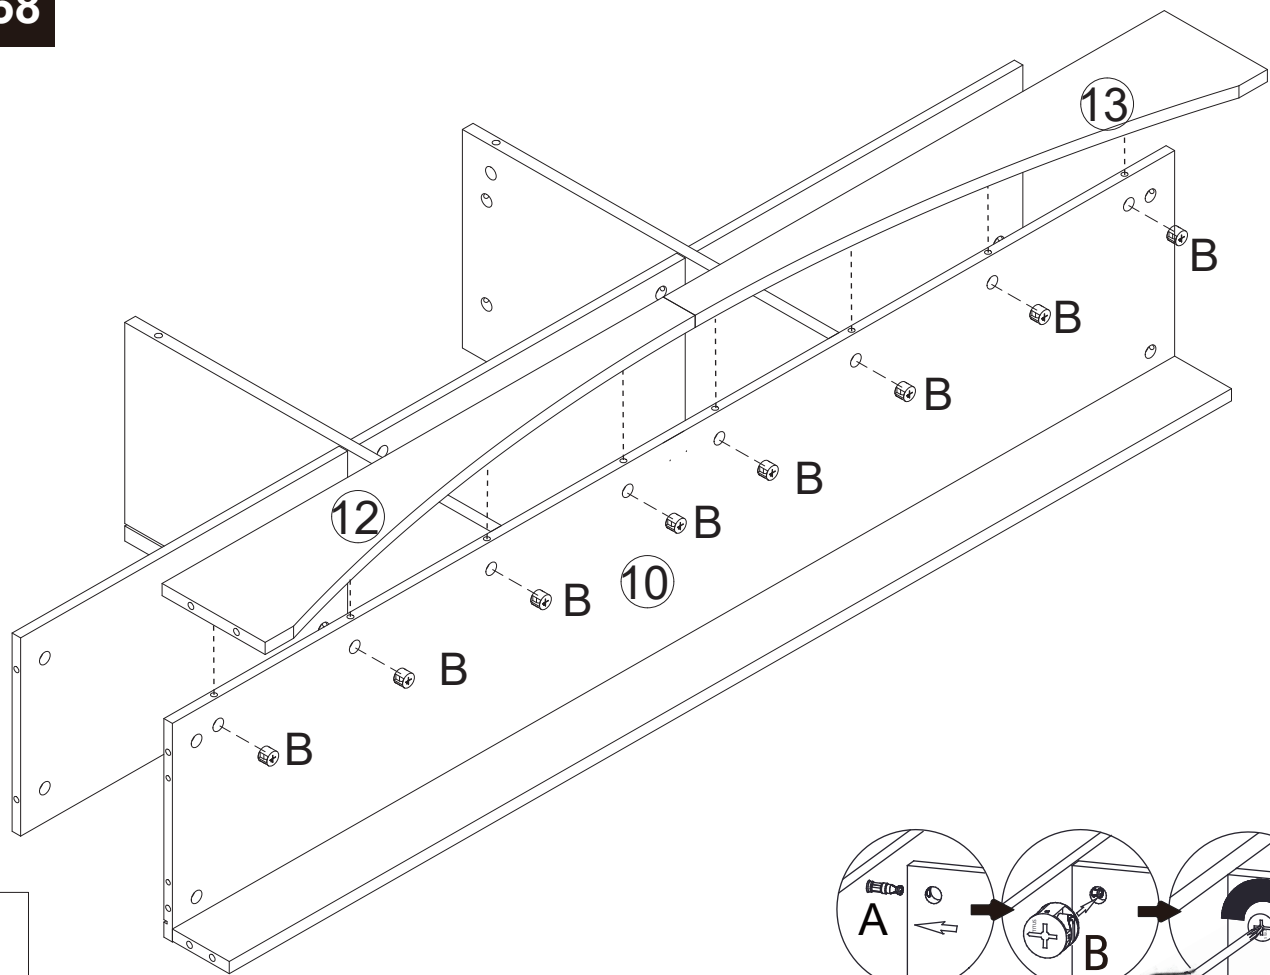

B*8



Step 59

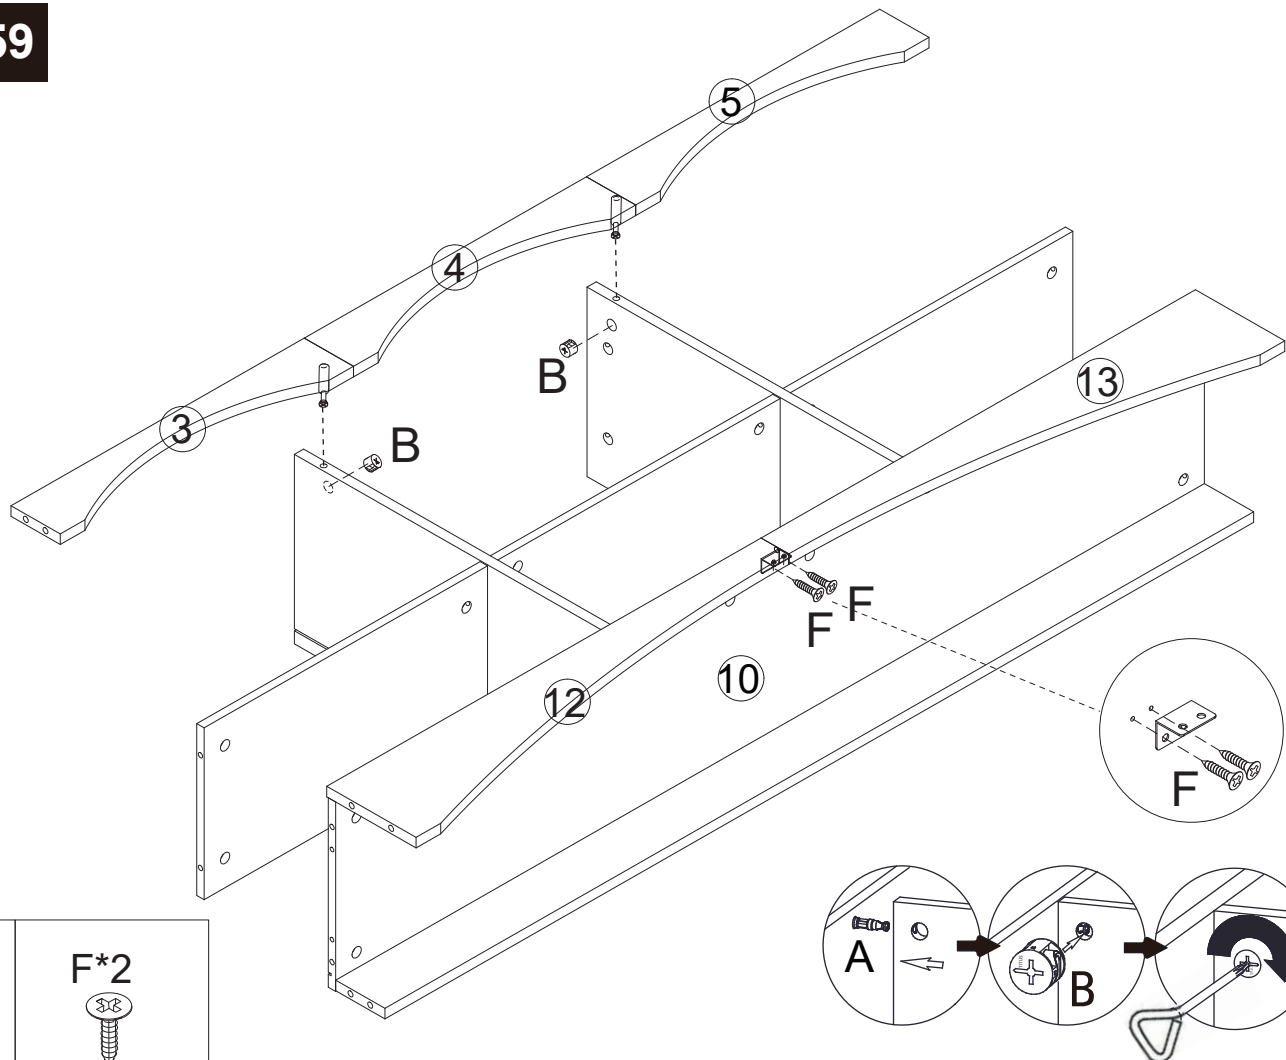


B*2




F*2



Step 60

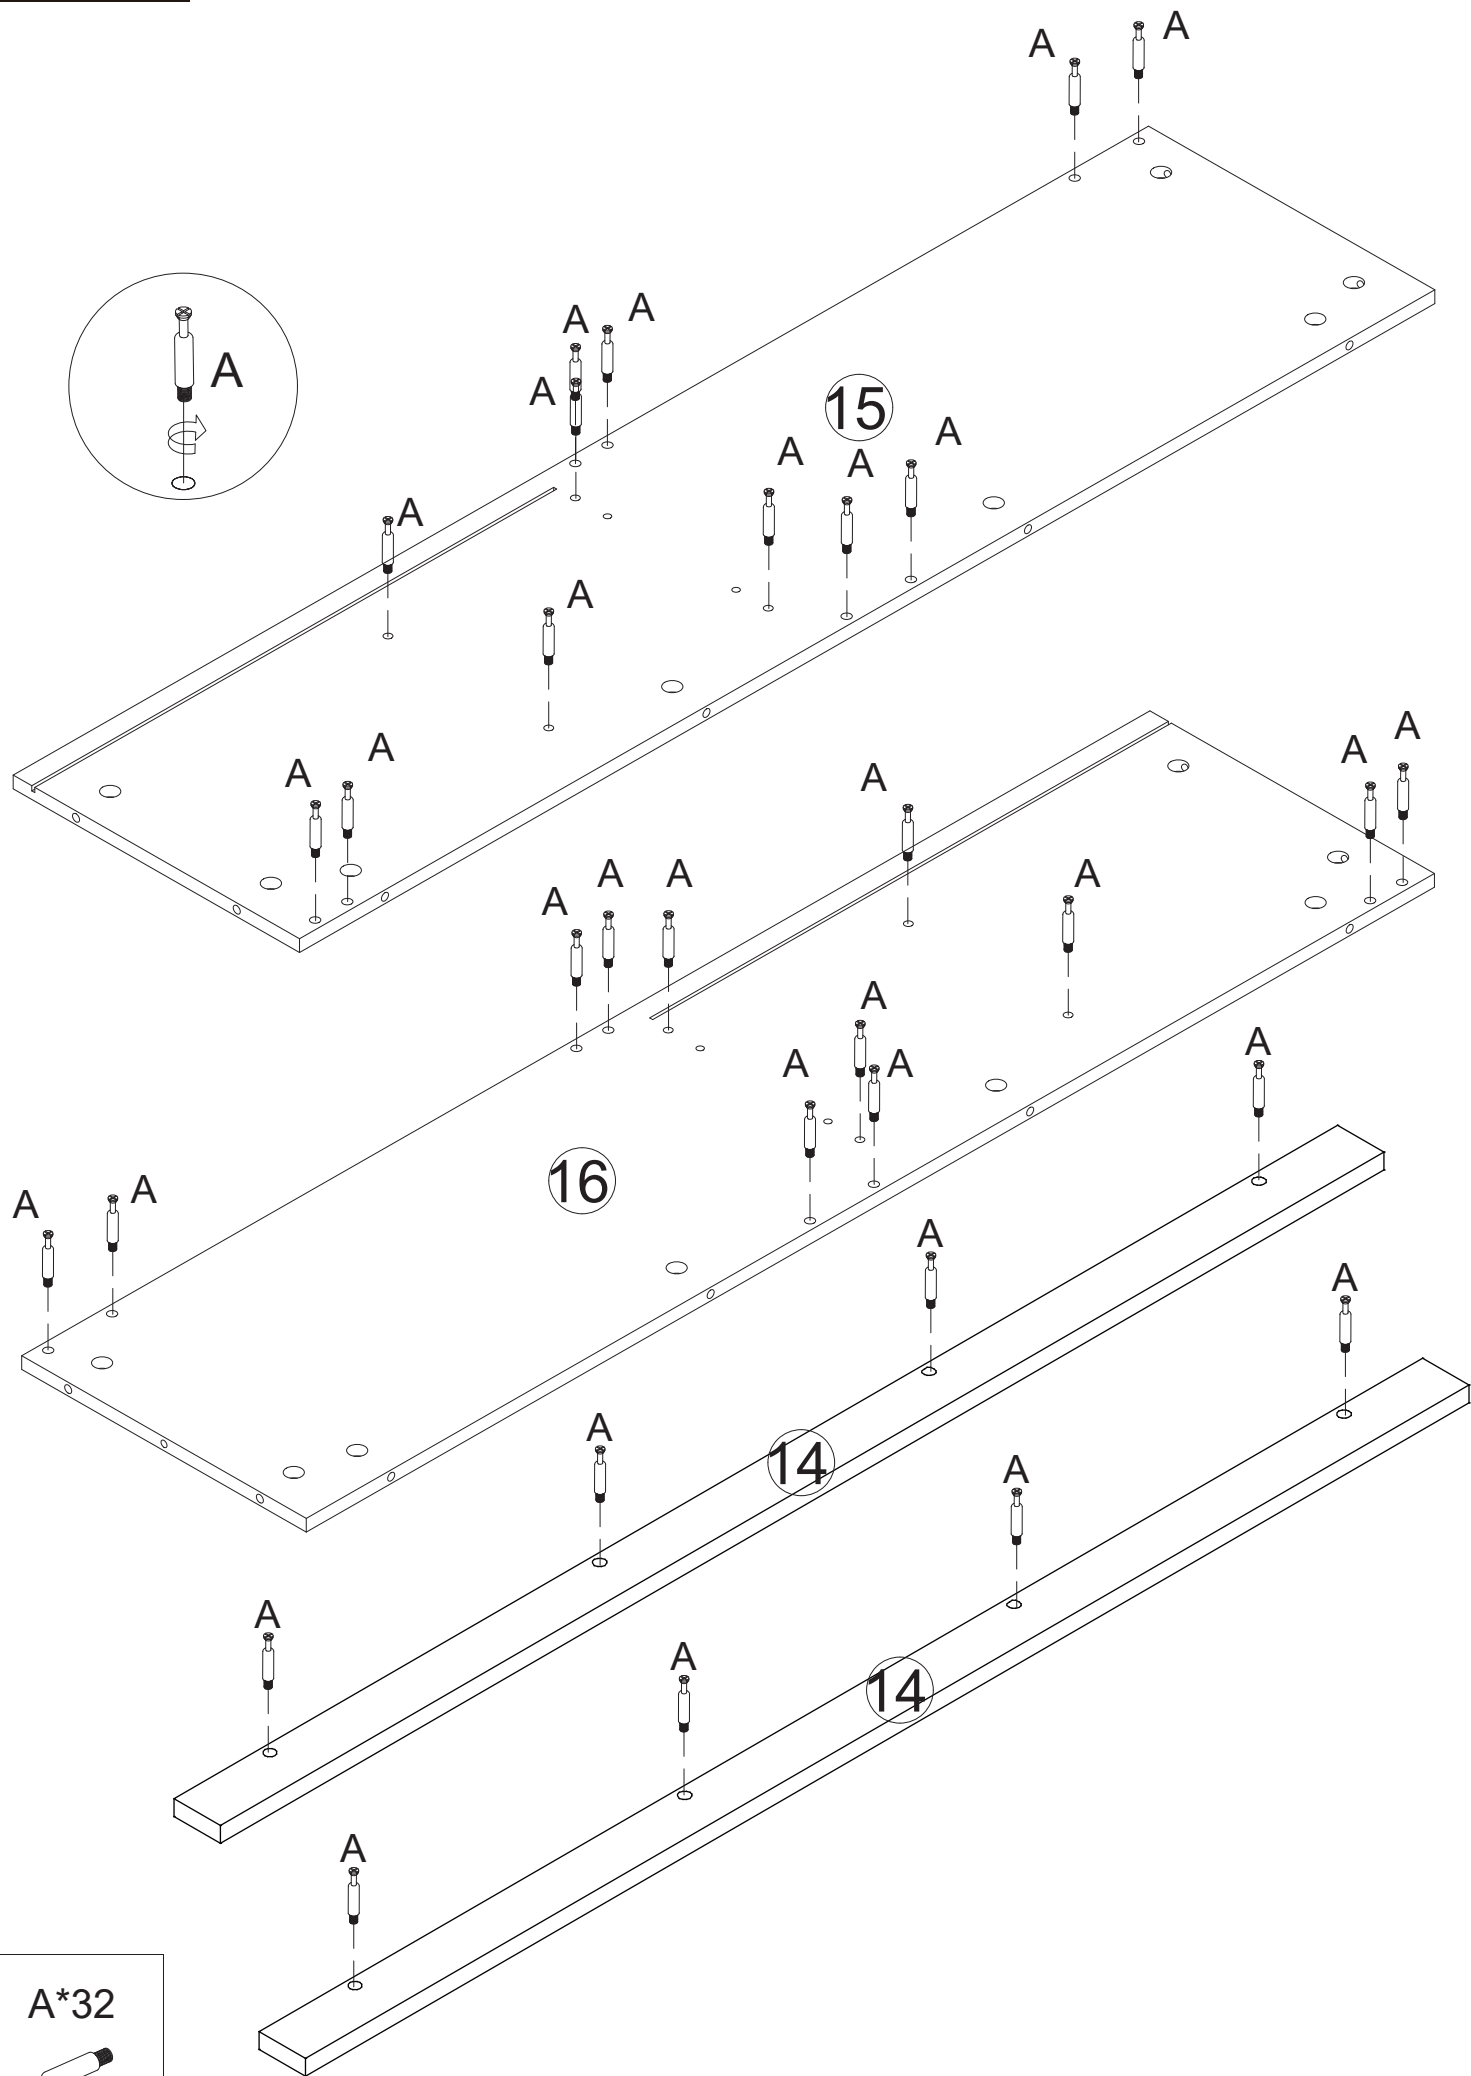


Step 61

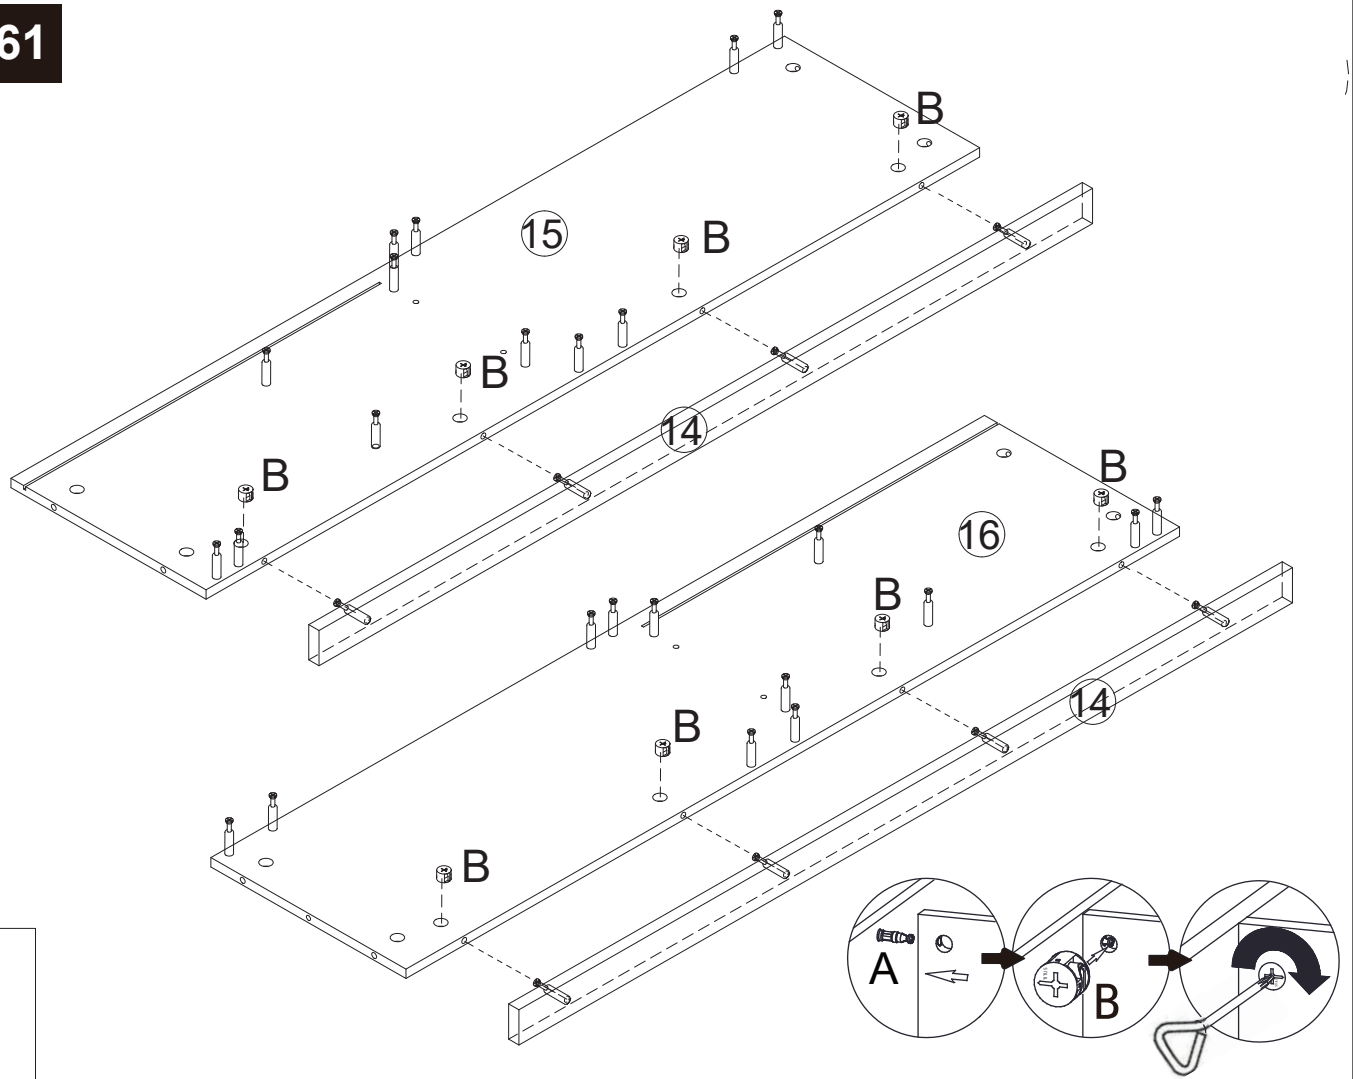

B*8




Step 62

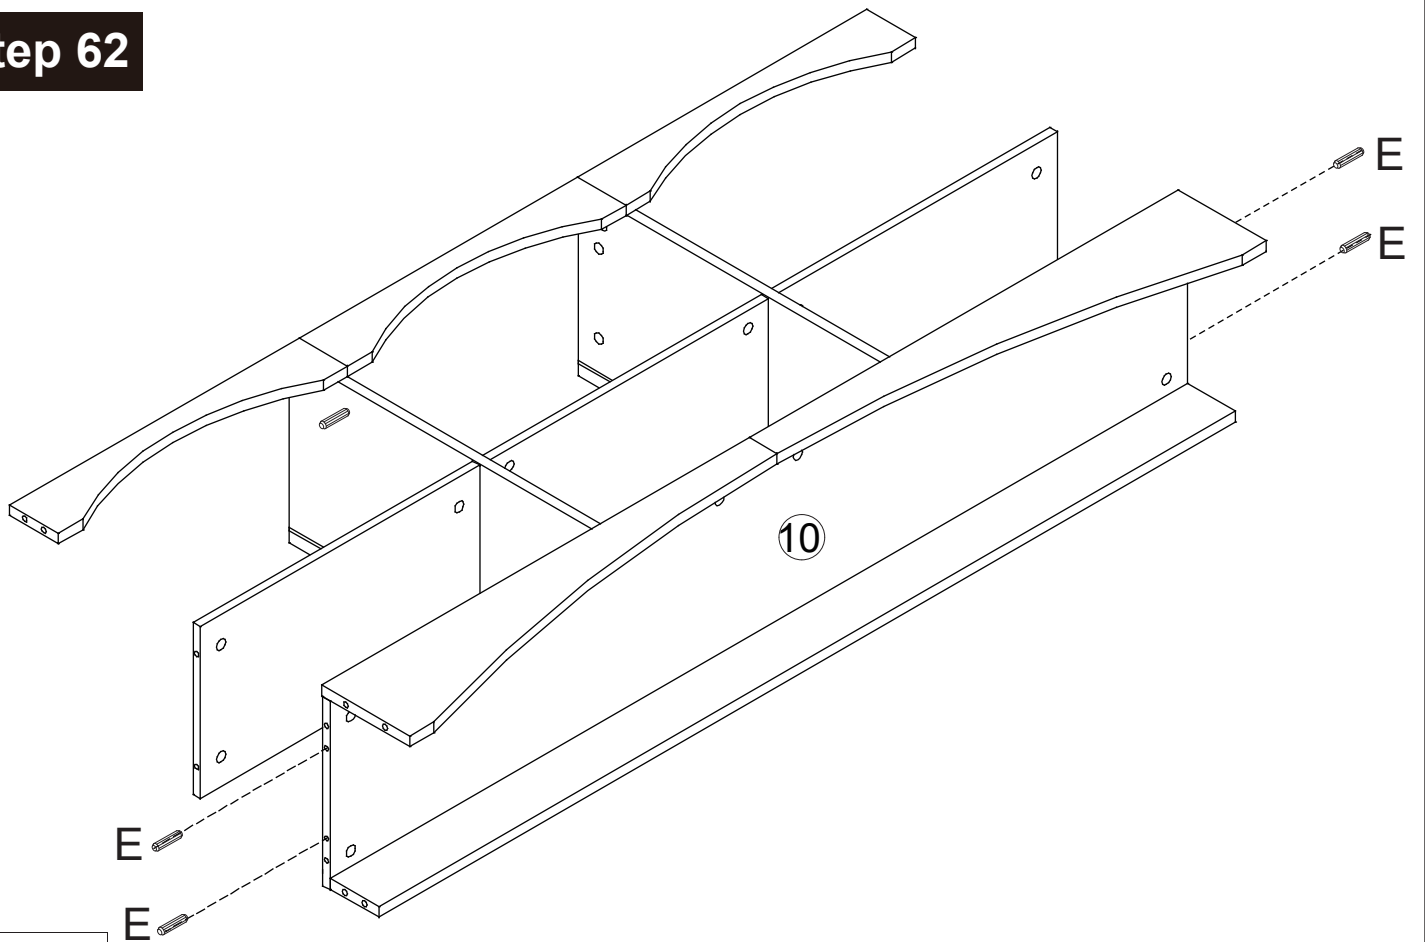

E*4




Step 63

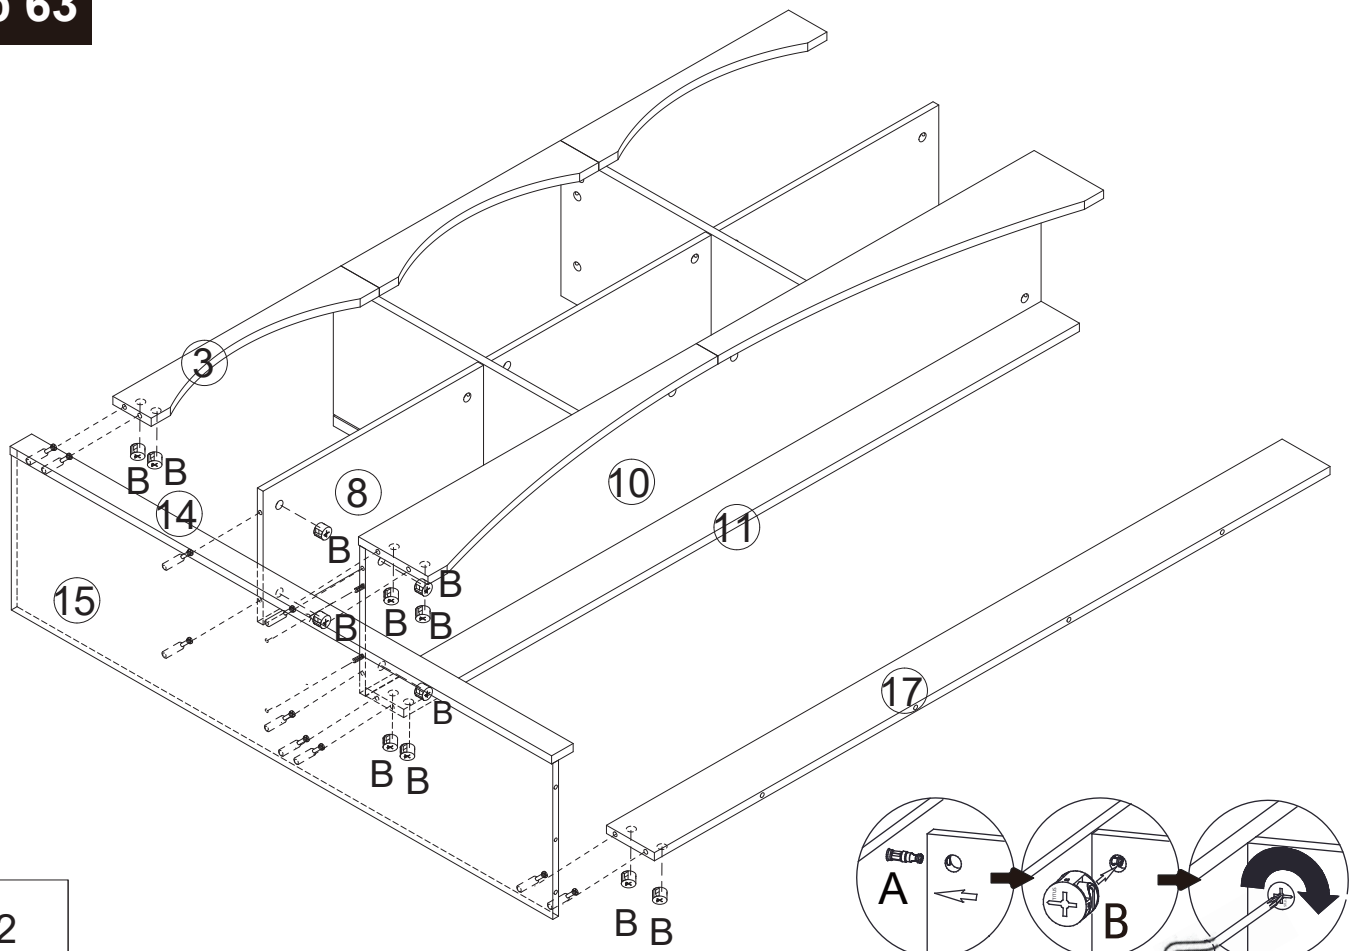

B*12



Step 64

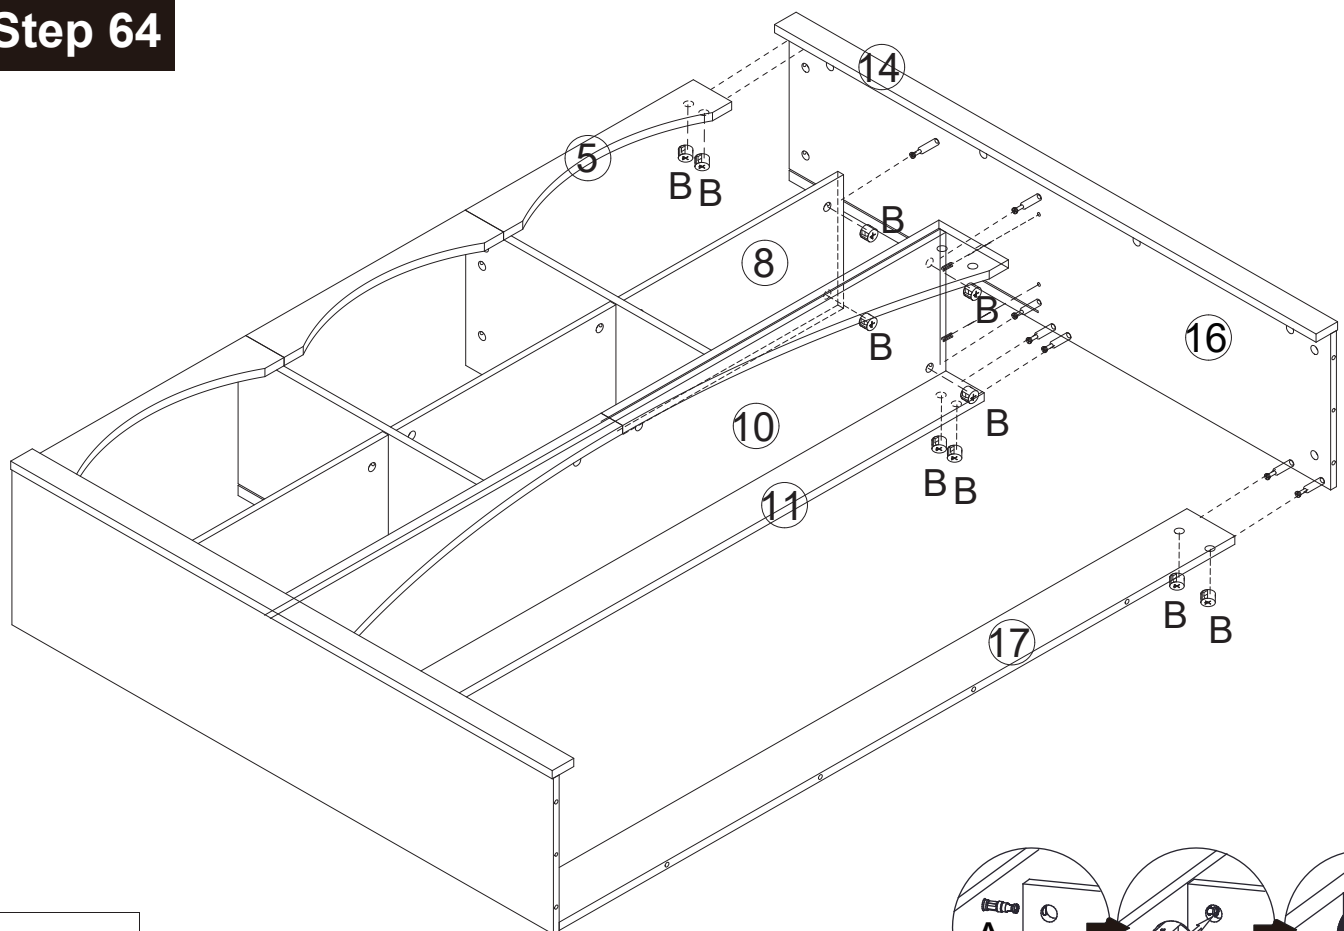


B*12




Step 65

It's better if two people work together on this step.


Please flip carefully

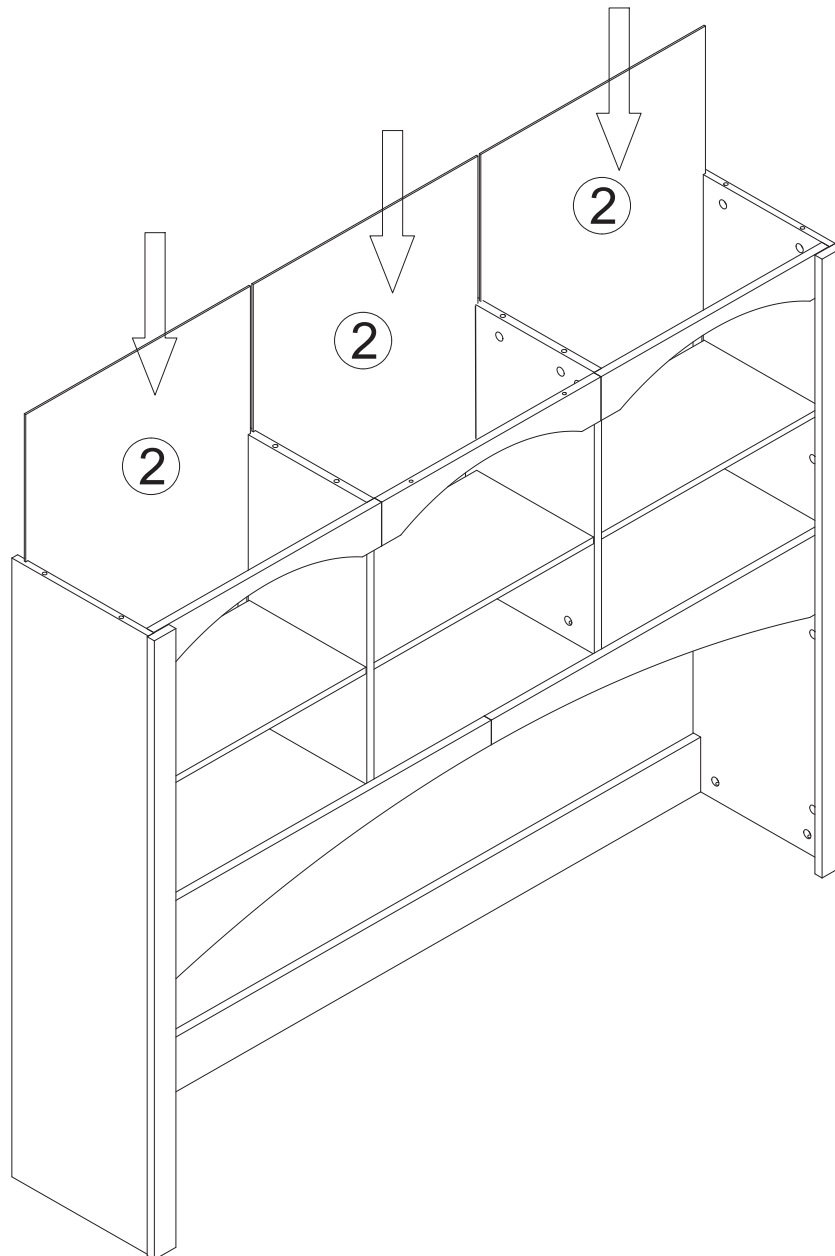

Step 66

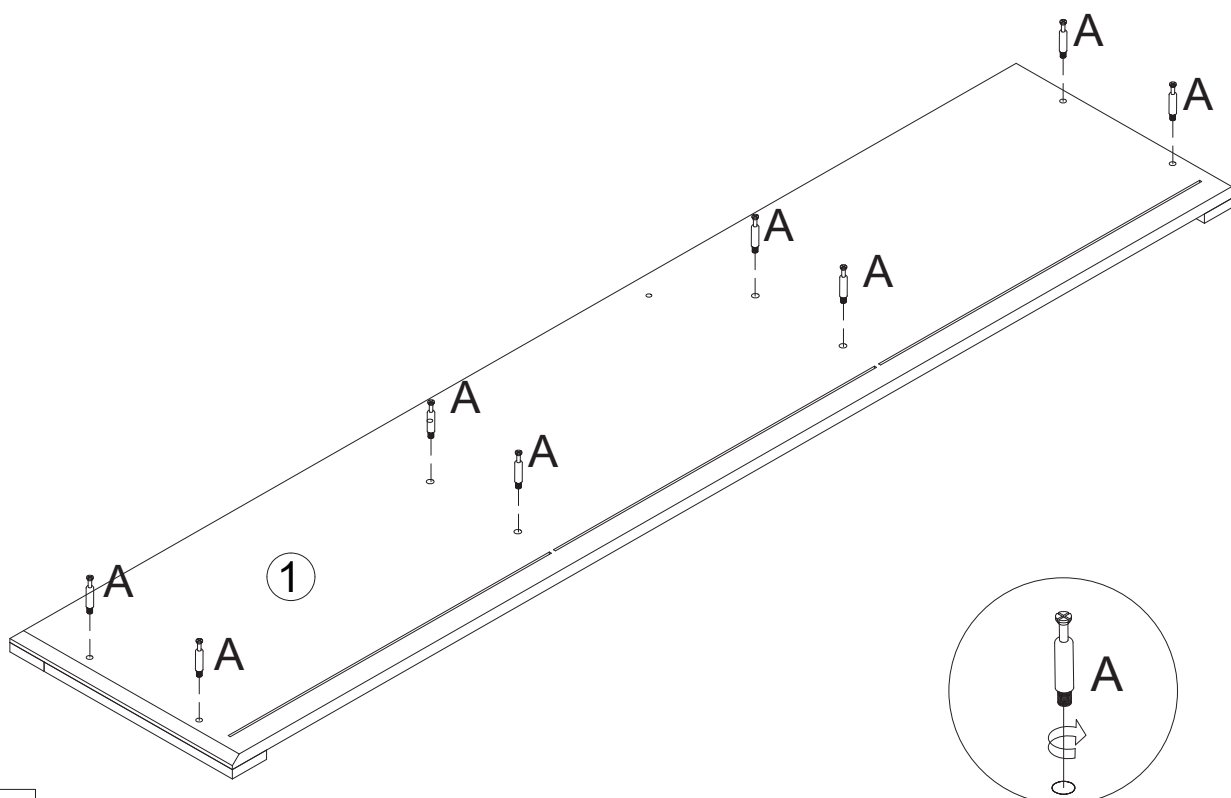


A*8



Step 67

It's better if two people work together on this step.


Please flip carefully

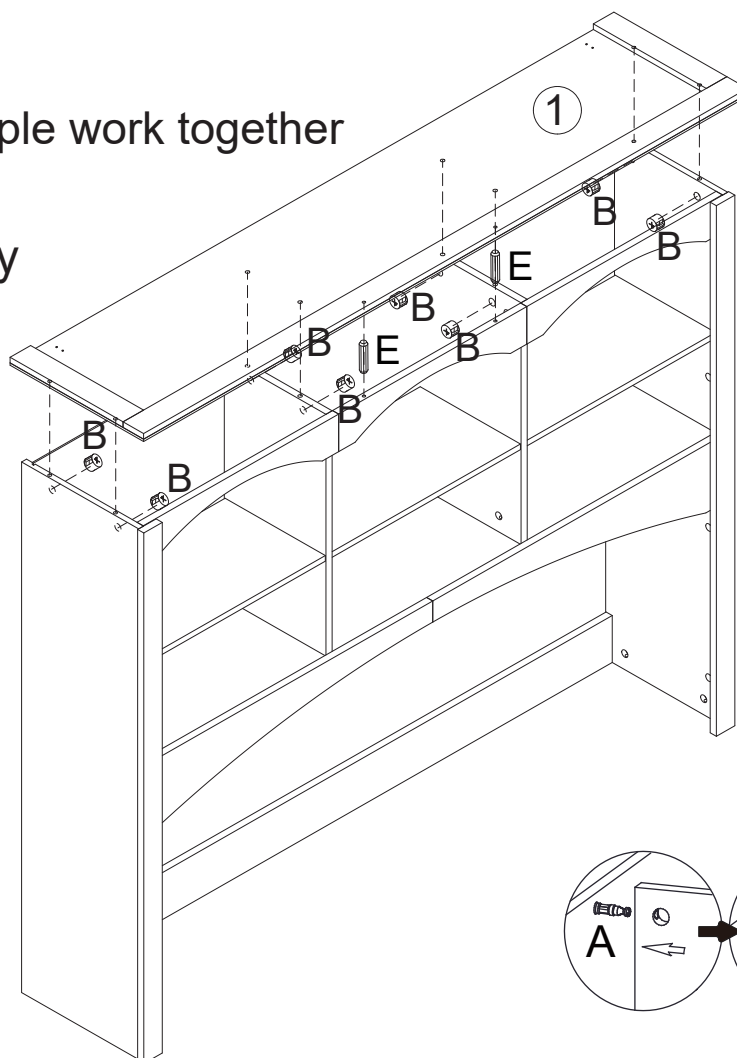

B*8




E*2

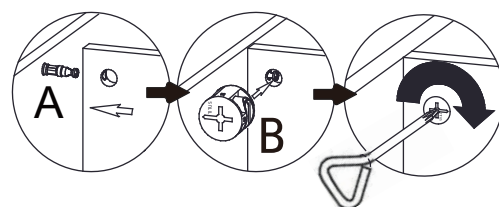

Step 68

It's better if two people work together on this step.

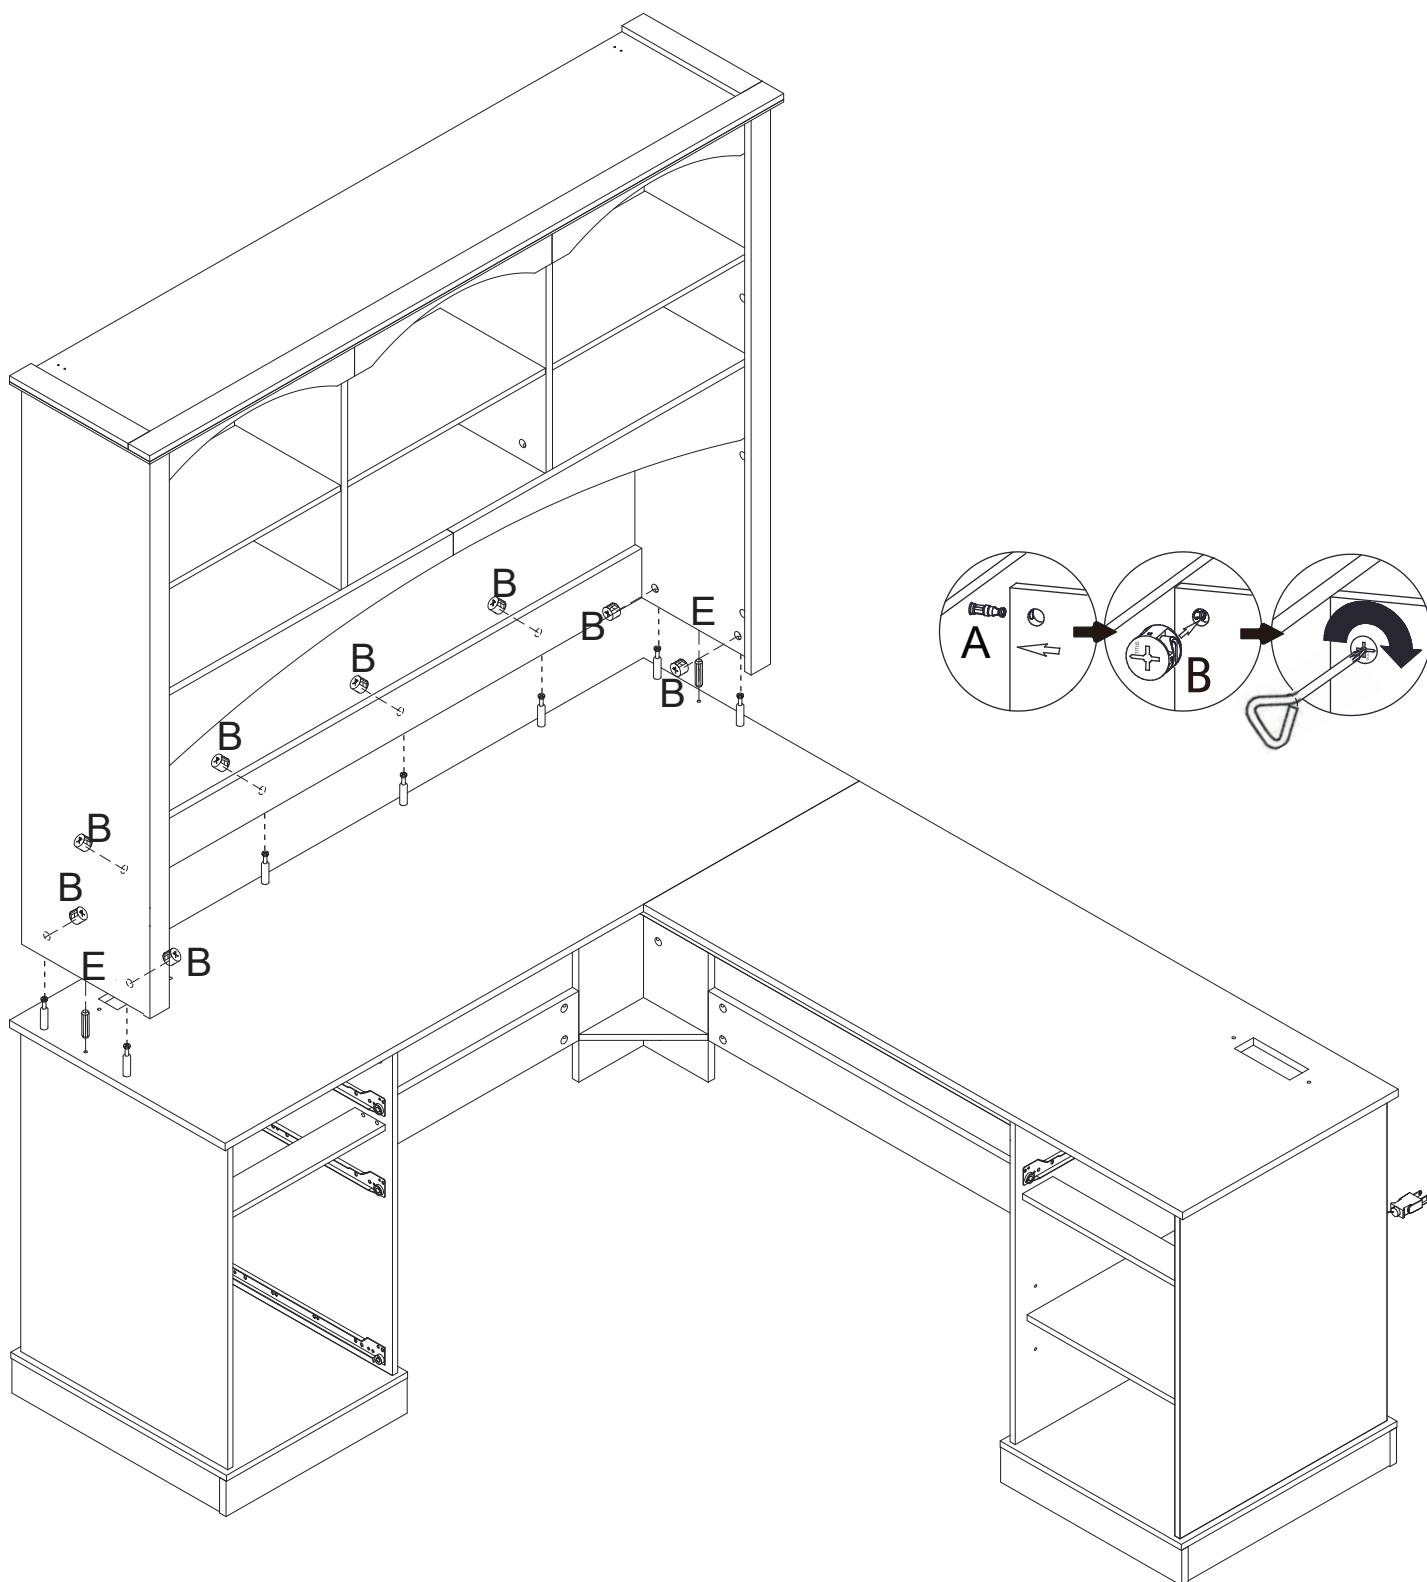


B*8




E*2



Step 69

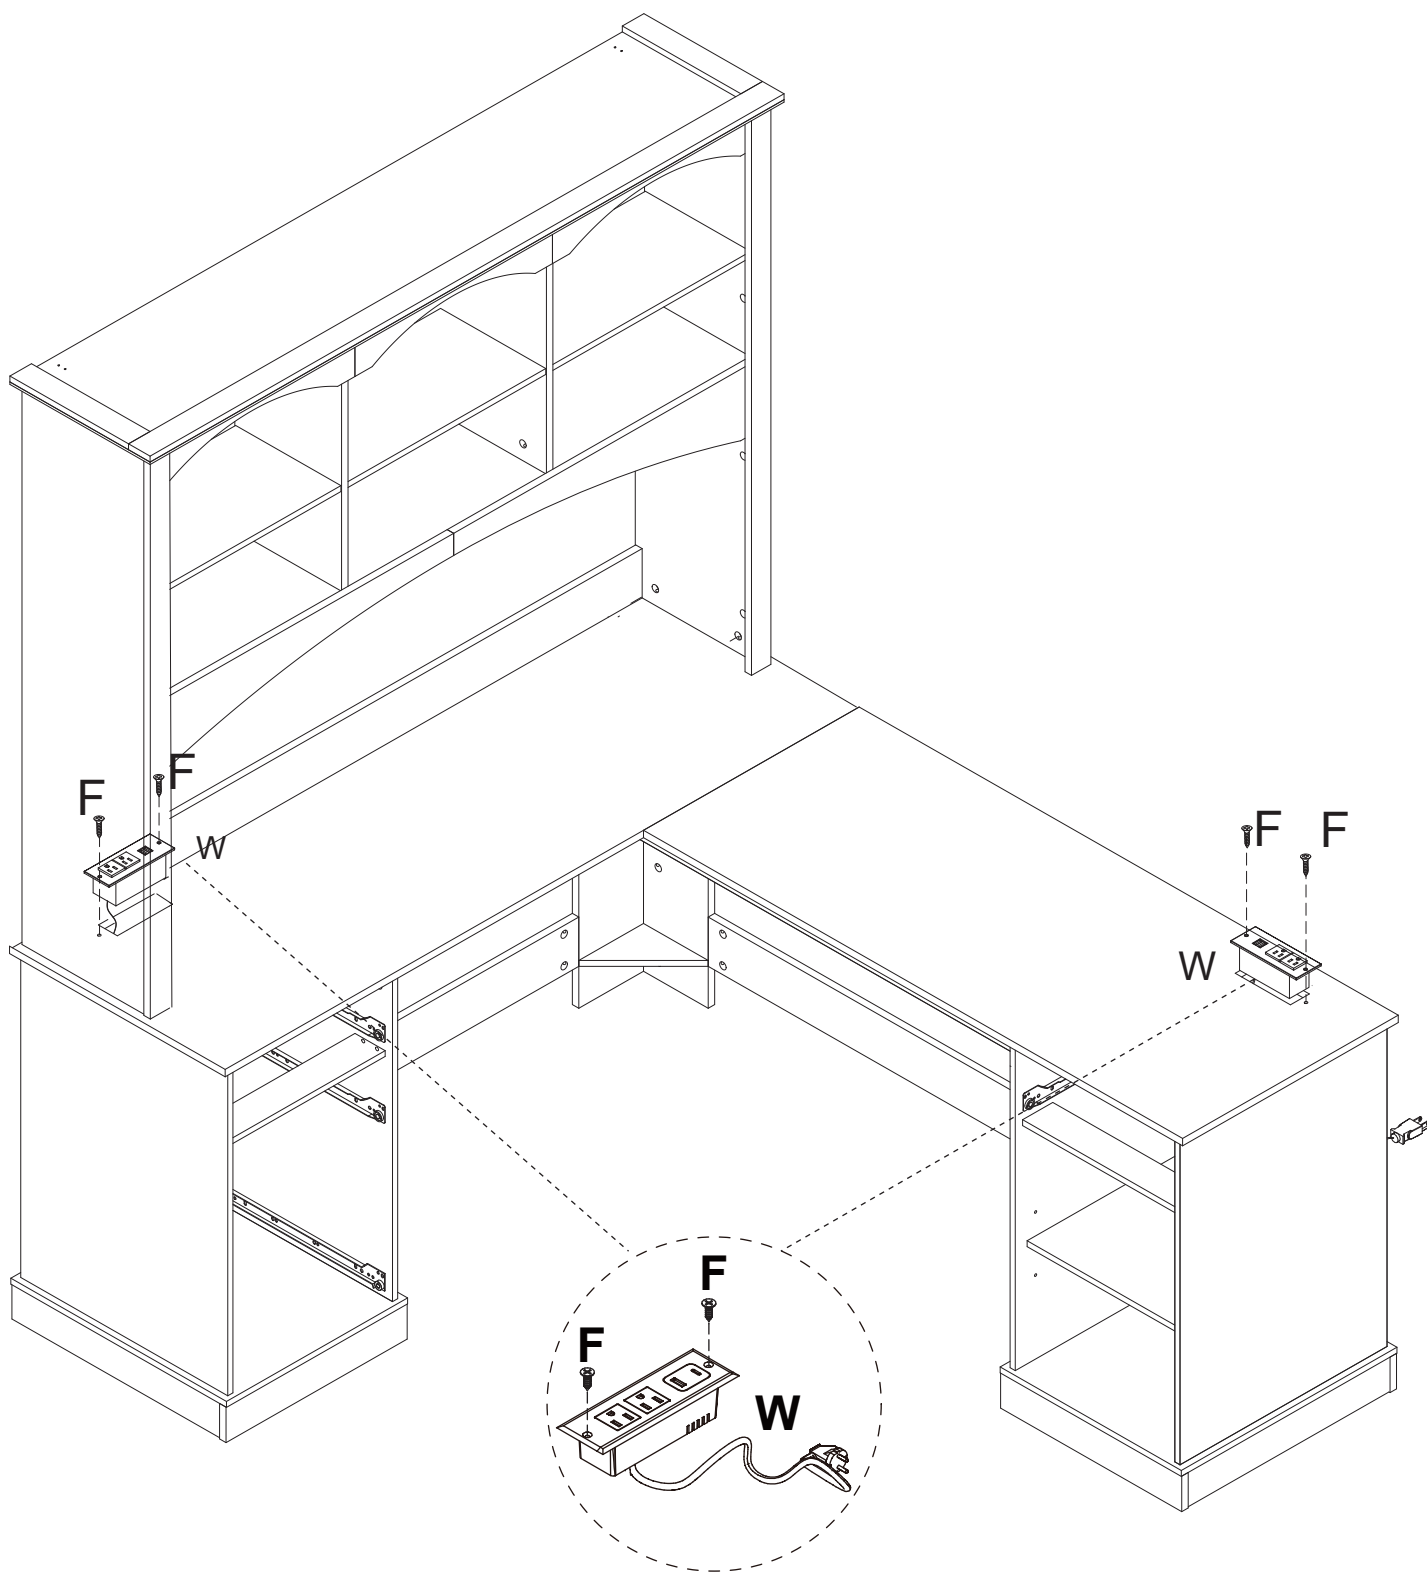


W*2




F*4



Step 70

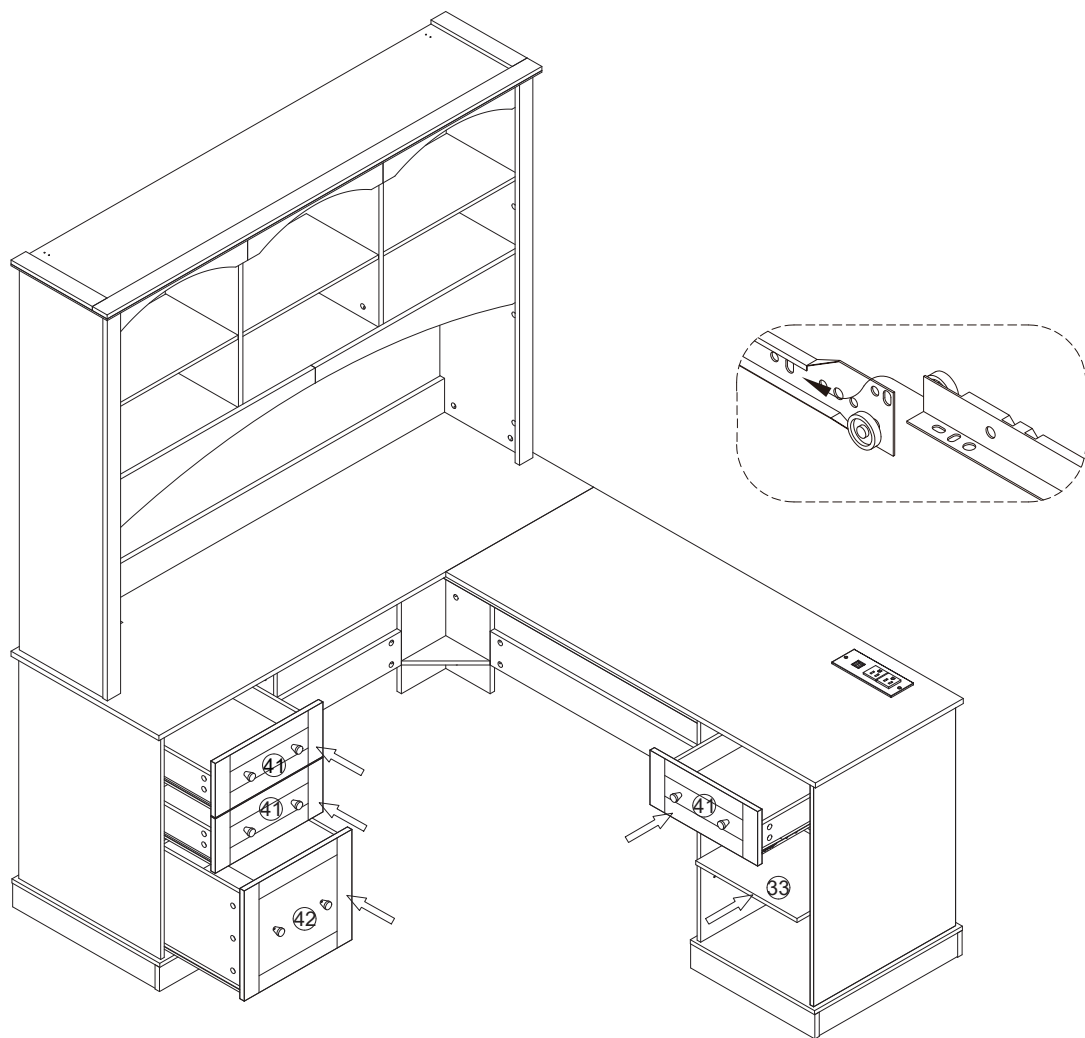

Step 71

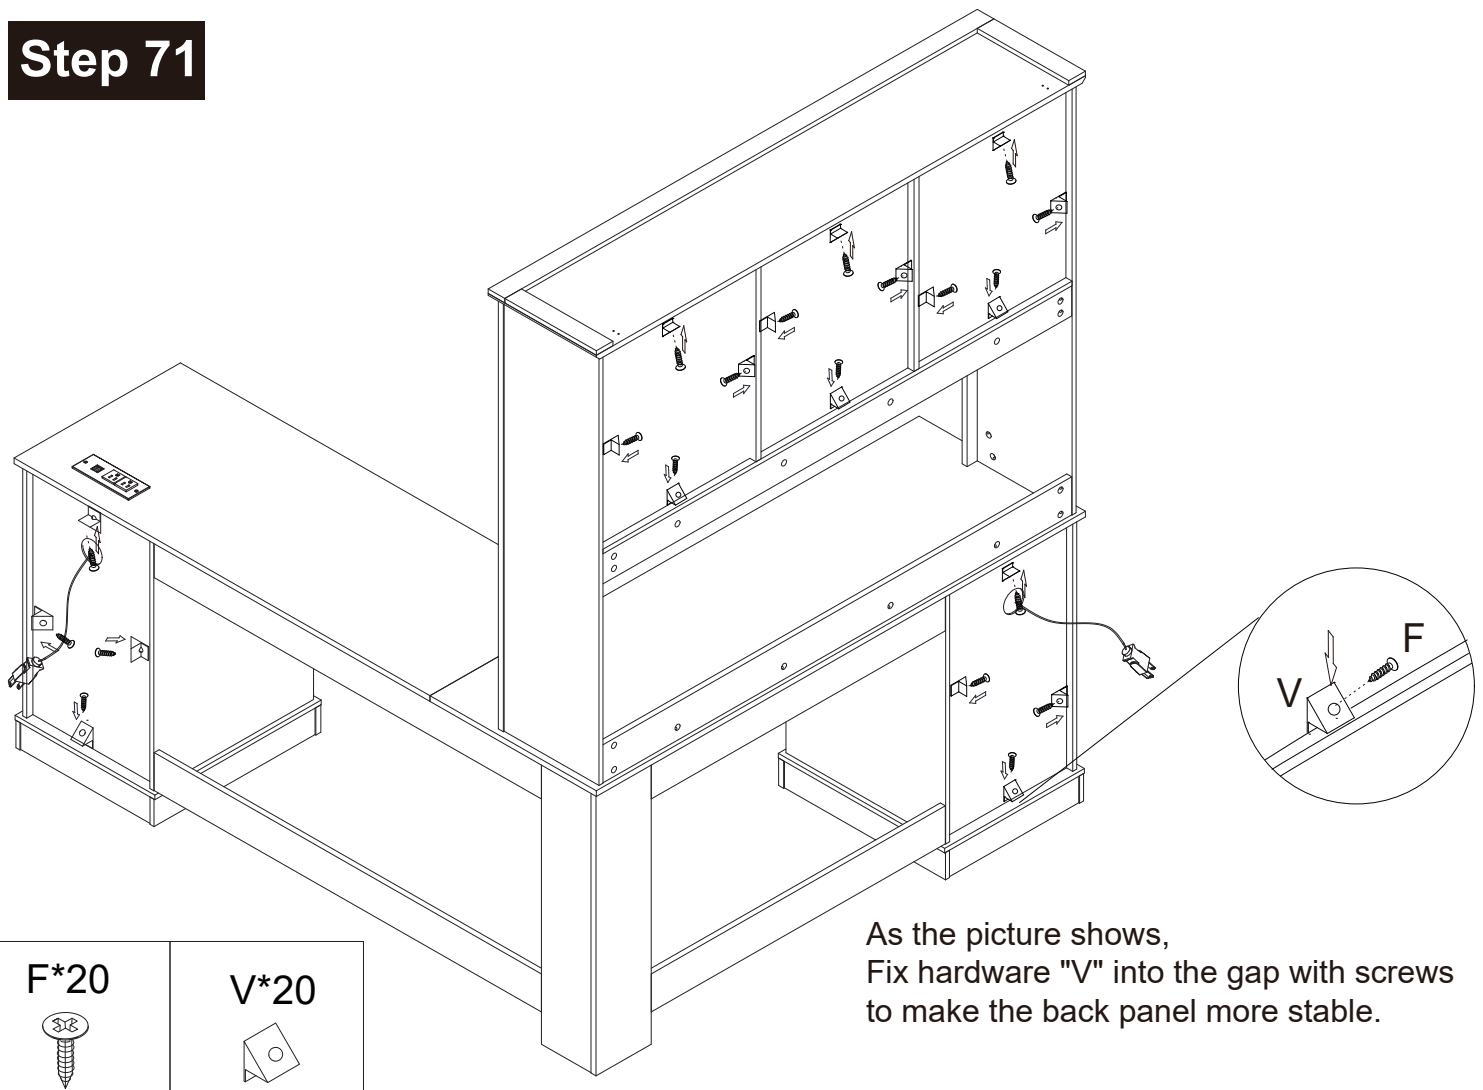


F*20



V*20



Step 72

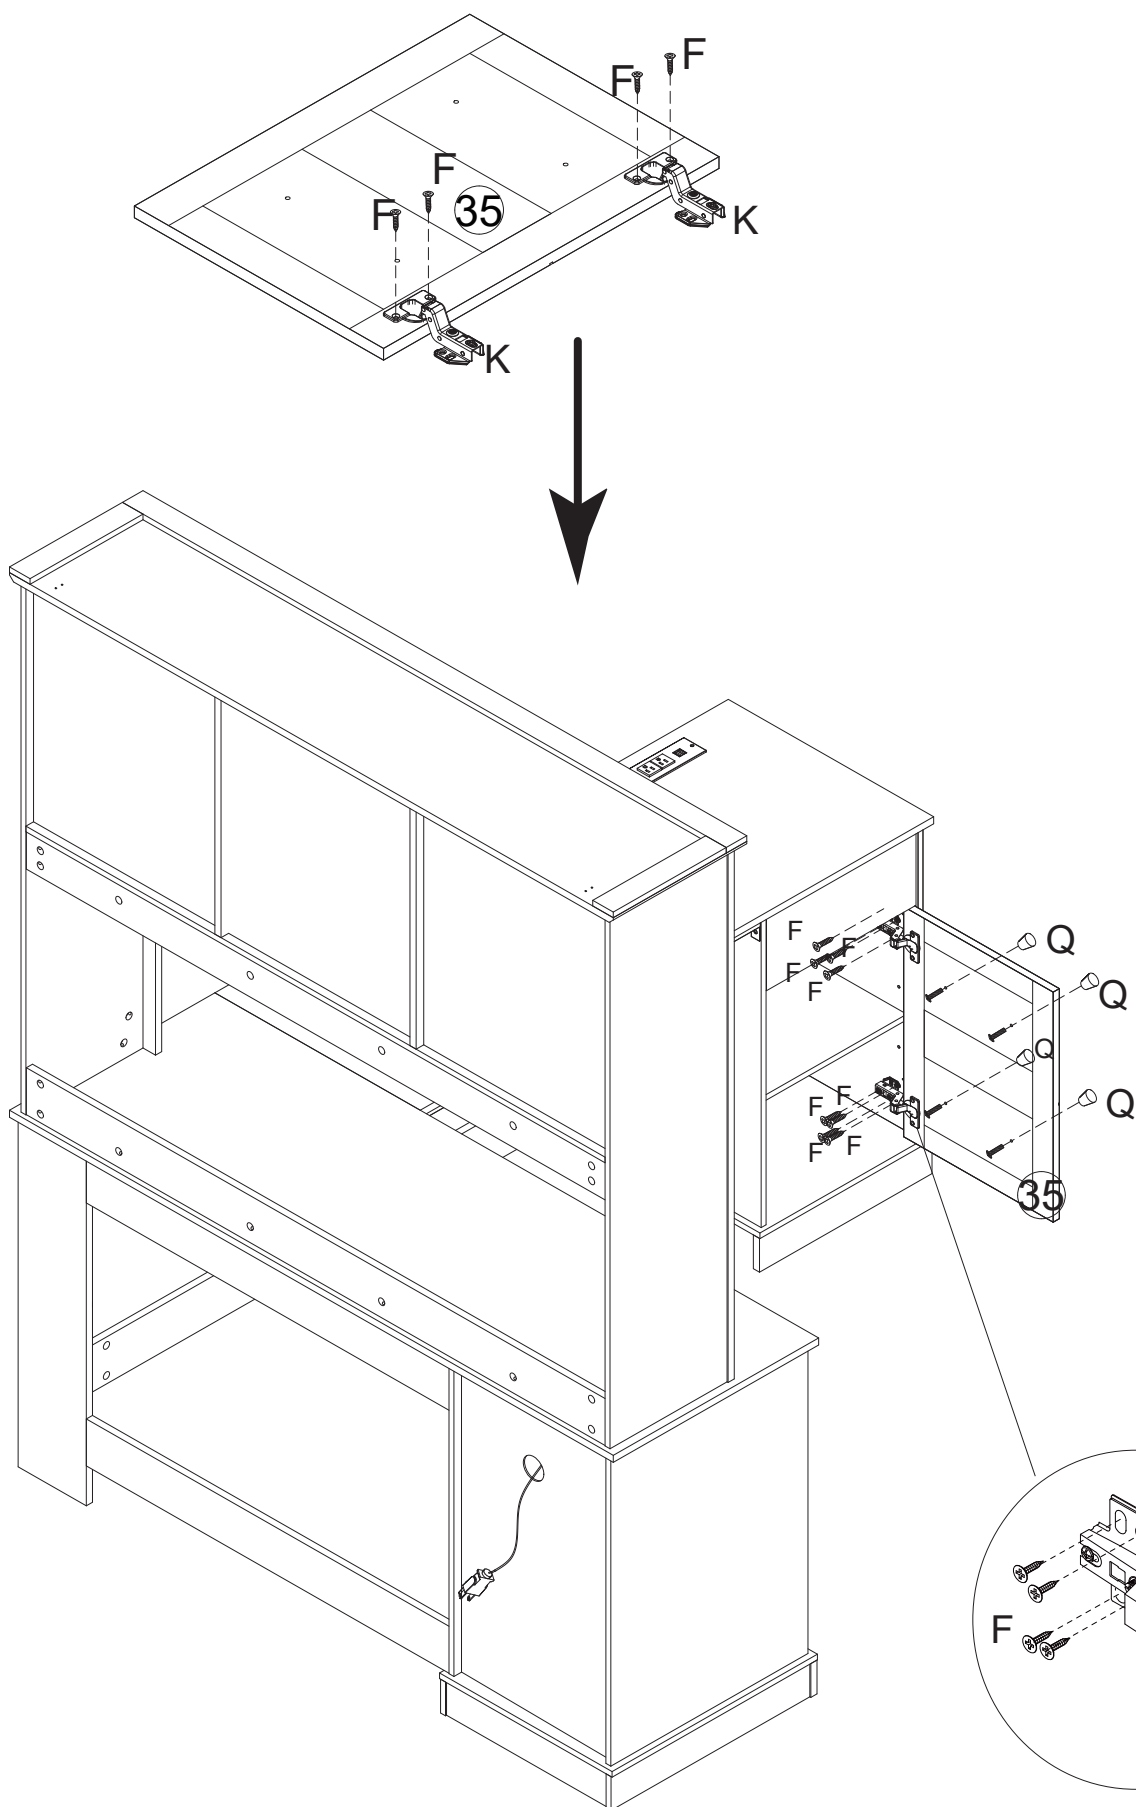

F*12



Q*4




K*2





Assembly Instructions



When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect.

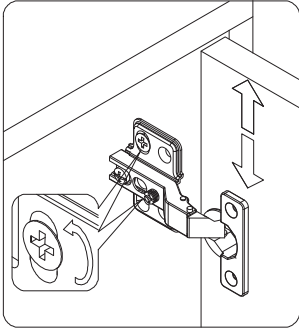



1. Adjust the screws shown in Figure 1 to adjust the door up and down.

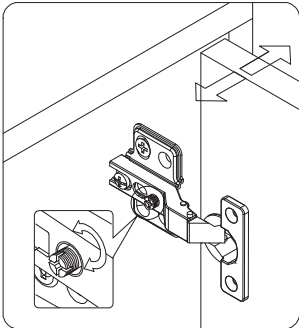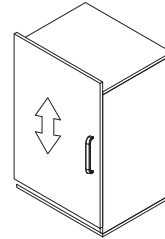

2. Adjust the screws shown in Figure 2 to adjust the door left and right to the right position.




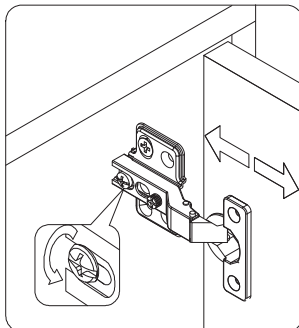
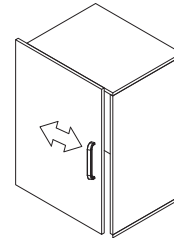


3. Adjust the screws shown in Figure 3 and pull the door back and forth so that it can be opened smoothly.

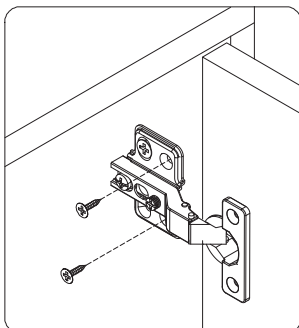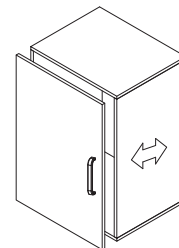

4. After the adjustment is complete, secure the remaining two screws to secure the door in place.


Step 73

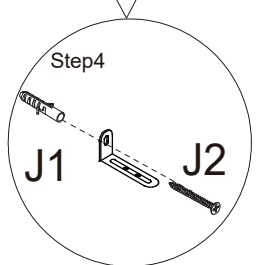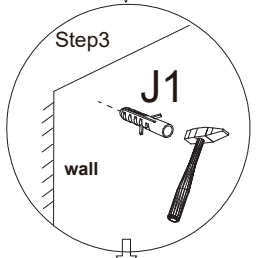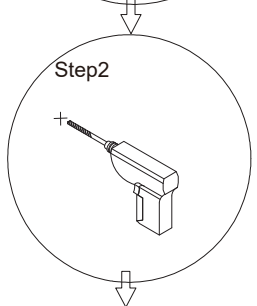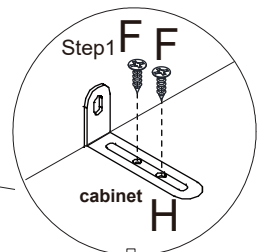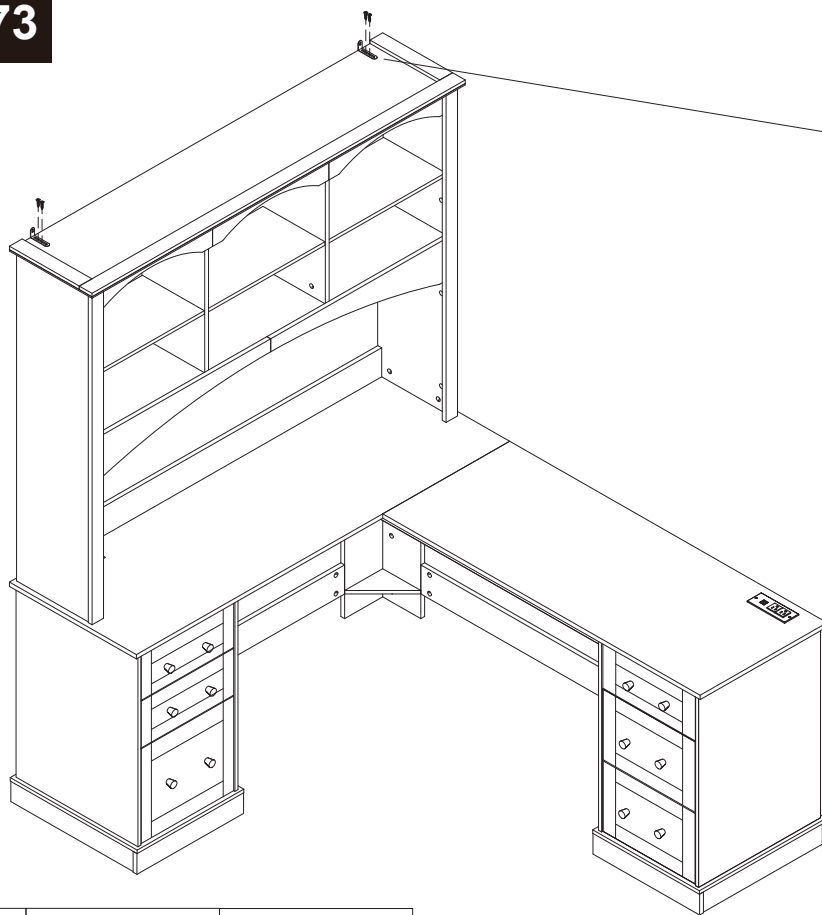


F*4




H*2





J*2



Step 74

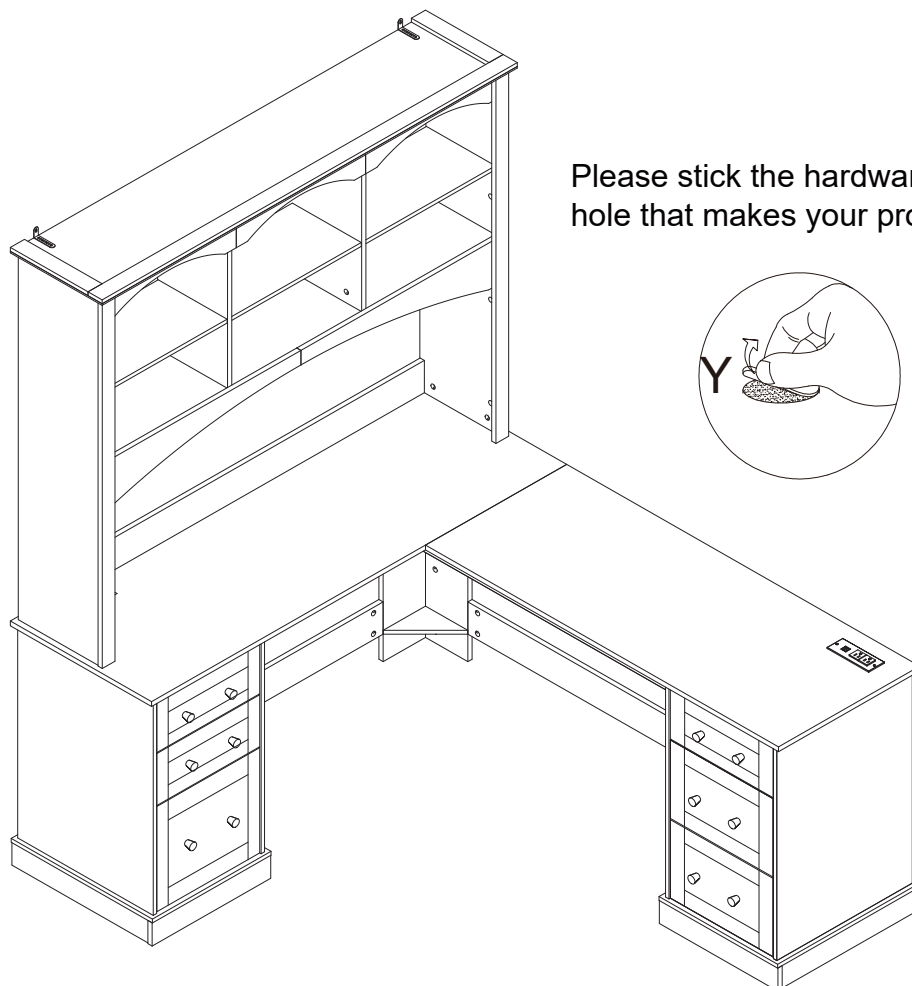

Please stick the hardware "Y" on the exposed hole that makes your product more beautiful.

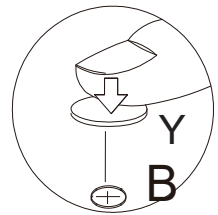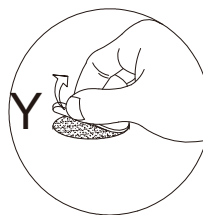

Y*50



FINISH

