

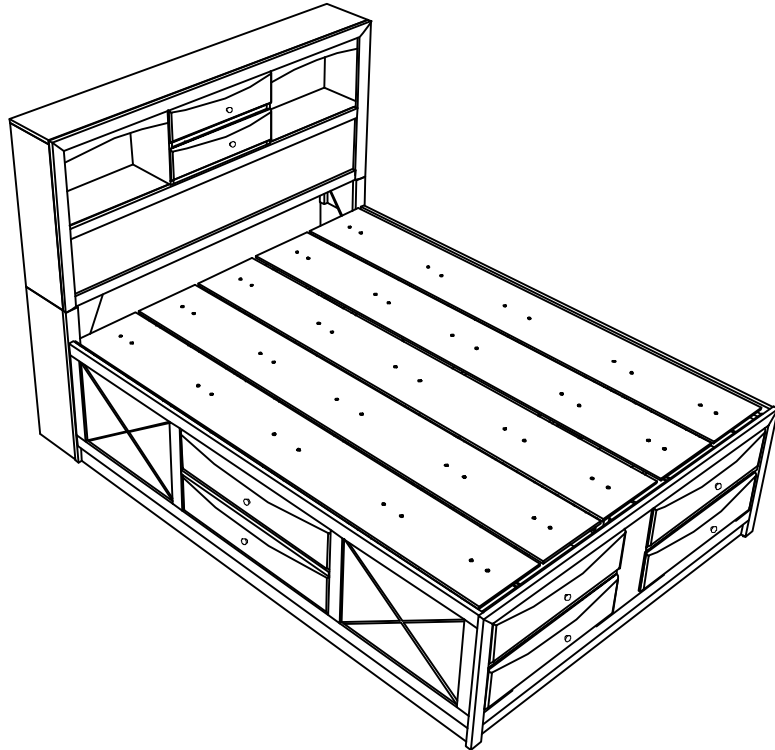


ASSEMBLY INSTRUCTION

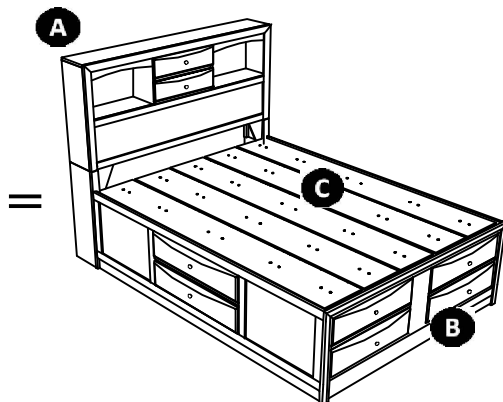

INSTALLATION AREA

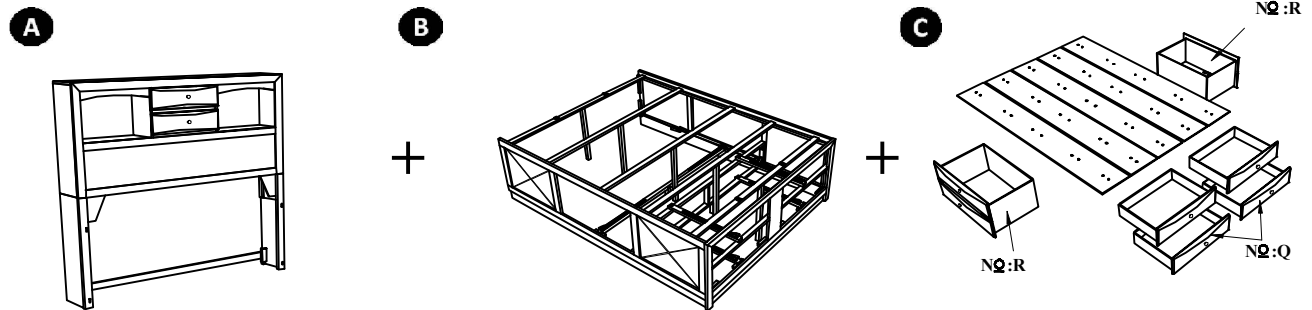


Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person ; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non - abrasive floor before assembly, and follow the assembly step to assemble your newly purchased product correctly and efficiently .

Drawer NQ:Q & NQ:R are identical & compatible, to each other regardless left or right.

During assembly, do not tighten any hardware until the complete unit has been assembled.



2 PERSON
installation recommended



20 - 25
minutes for installation

BOX 1

Box of Headboard & Footboard



NQ A

Headboard **x 1**
255 x 1420 x 1593 mm



NQ C(L)

Headboard Leg (L) **x 1**



NQ E

Drawer Support Rail 2 **x 4**
20 x 40 x 635mm



NQ B

Footboard **x 1**
42 x 570 x 1591mm



NQ C(R)

Headboard Leg (R) **x 1**



NQ F

Support Leg 2 **x 1**
30 x 30 x 95mm



NQ A1

Headboard Drawer **x 2**



NQ D

Triangle Support Panel **x 2**
-9 x 200 x 200



NQ G

Support Leg 3 **x 1**
30 x 30 x 107mm

Hardware List



NQ 1

Flat Head Chipboard
Screw **x 8**
m4 x 32mm RBW




NQ 2

Pan Head Chipboard
Screw **x 8**
m3.5 x 20mm BLK



NQ 3

JCBC Bolt **x 4**
m6 x 35mm
BLK



NQ 4

JCBC Bolt **x 2**
m6 x 50mm
BLK



NQ 5

Spring Washer **x 6**
1/4" RBW



NQ 6

Flat Washer **x 6**
1/4" ID x 13mm OD
BLK




NQ 7

Allen Key **x 1**
m4 x 110mm BLK

BOX 2

Box of Side rail




NQ H

Side Rail **x 2**
39 x 570 x 2060mm



NQ I

Bed Slat **x 3**
18 x 45 x 1545mm



NQ J

F/Board Drawer Frame **x 1**
40 x 220 x 1545mm



NQ K

Concealed Panel **x 5**
9 x 295 x 2040mm



NQ L

H/Board Back Support 1 **x 1**
19 x 30 x 1559mm



NQ M

Drawer Support Rail **x 1**
30 x 30 x 1545mm



NQ N

Support Leg 1 **x 5**
30 x 30 x 518mm



NQ O

H/Board Back Support 2 **x 1**
18 x 45 x 1559mm



NQ P

Bed Slat With Marking **x 2**
18 x 45 x 1545mm

Hardware List



NQ 8

Flat Head Chipboard
Screw **x 16**
m4 x 32mm RBW




NQ 9

Pan Head Chipboard
Screw **x 27**
m3.5 x 20mm BLK



NQ 10

JCBC Bolt **x 15**
m6 x 35mm
BLK



NQ 11

JCBC Bolt **x 6**
m6 x 50mm
BLK




NQ 12

Spring Washer **x 15**
1/4" RBW



NQ 13

Flat Washer **x 15**
1/4" ID x 13mm OD
BLK



NQ 14

Z - Bracket **x 1**



NQ 15

Allen Key **x 1**
m4 x 110mm BLK


BOX 3 & 4

Box of Parts & Hardware



NQ Q

Drawer 1 **x 4**



NQ R

Drawer 2 **x 2**



NQ 16

Handle **x 8**



NQ 17

Truss Head M.
Screw Handle **x 4**
m4 x 48mm BLK



NQ 18

Truss Head M.
Screw Handle **x 4**
m4 x 50mm BLK

A




Headboard
Assembly
Installation

STEP
01

Rotate the Headboard (A) down and
turn to back.

Box 1 : N°A

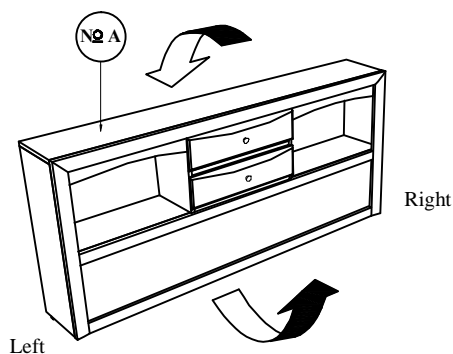


STEP
02

Attach and tighten the Headboard Leg

L/R (C) to the Headboard (A).



Box 1 : N° C(L) + N° C(R)

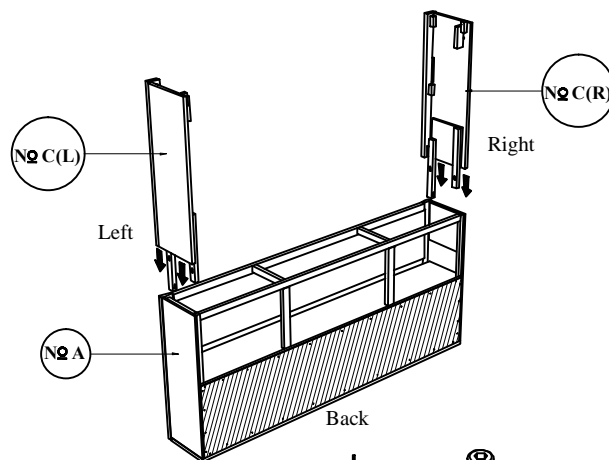

STEP
03

Insert Spring washer (5) , Flat Washer (6) , tighten JCBC bolt (3) by using
an Allen Key (7).



Box 1 : N° 3 + N° 5 + N° 6 + N° 7

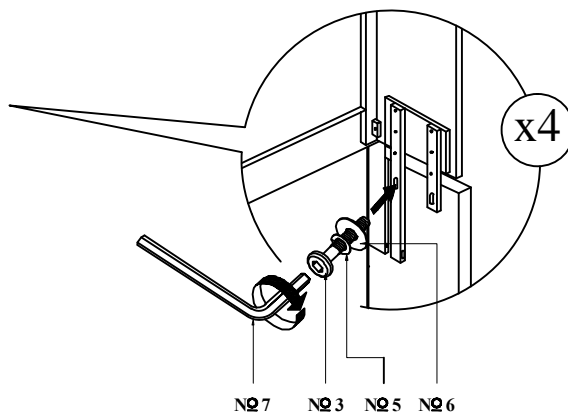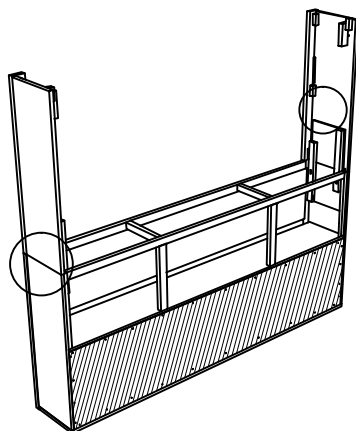

STEP
04

Insert Spring washer (5) , Flat Washer (6) , tighten JCBC bolt (4) by using
an Allen Key (7).

Box 1 : N° 4 + N° 5 + N° 6 + N° 7

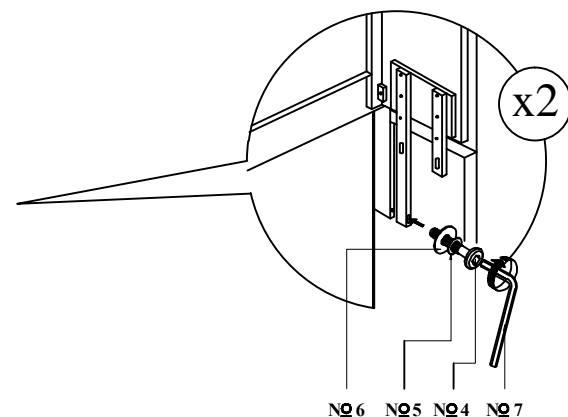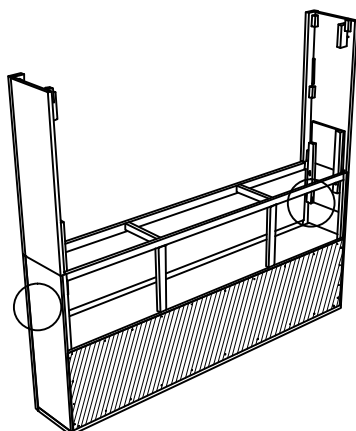

A





Headboard
Assembly
Installation

STEP
05

Attach and tighten the triangle Support Panel (D) to the Headboard and tighten the Panhead screw (2) using screw driver . (Not included)

Box 1 : N^o D + N^o 2



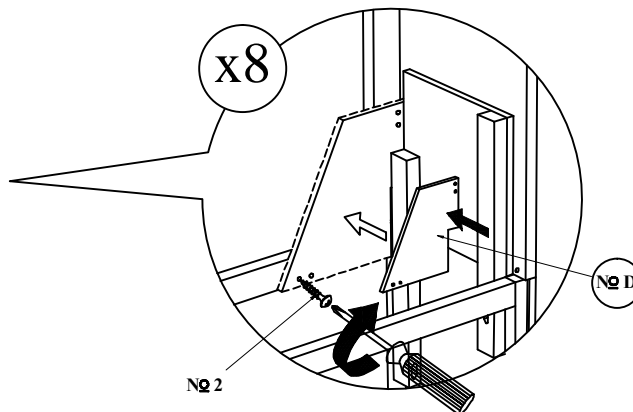
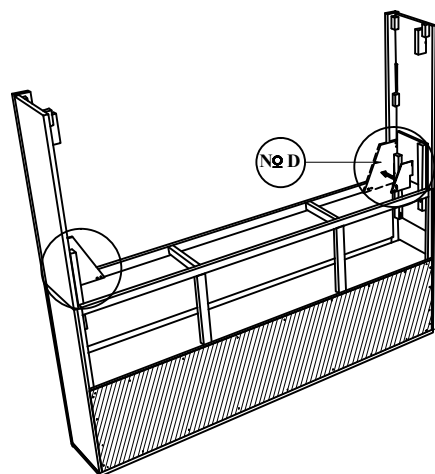


STEP
06

Attach Headboard Back Support (L) & (O) as picture shown. Tighten the CSK screw (1) using a screw driver. (Not included)

Box 1 : N^o 1

Box 2 : N^o L + N^o O

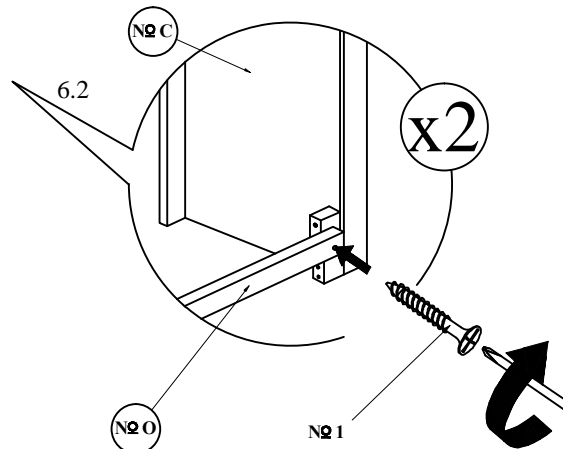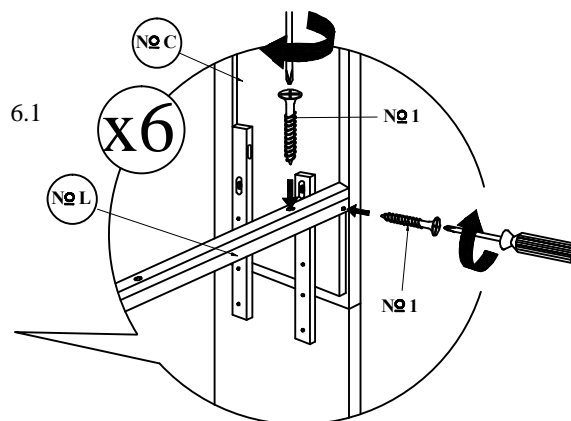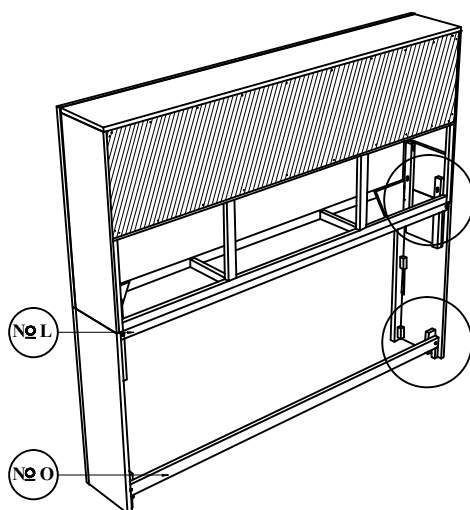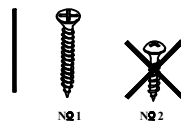

B


STEP
07

Attach the Side Rail (H) to the Headboard Leg L/R (C). Insert Spring Washer (12) , Flat Washer (13) , tighten JCBC (10) using an Allen Key (15).

Box 2 : NQ H + NQ 10 + NQ 12 + NQ 13 + NQ 15



Footboard
Structure
Assembly
Installation

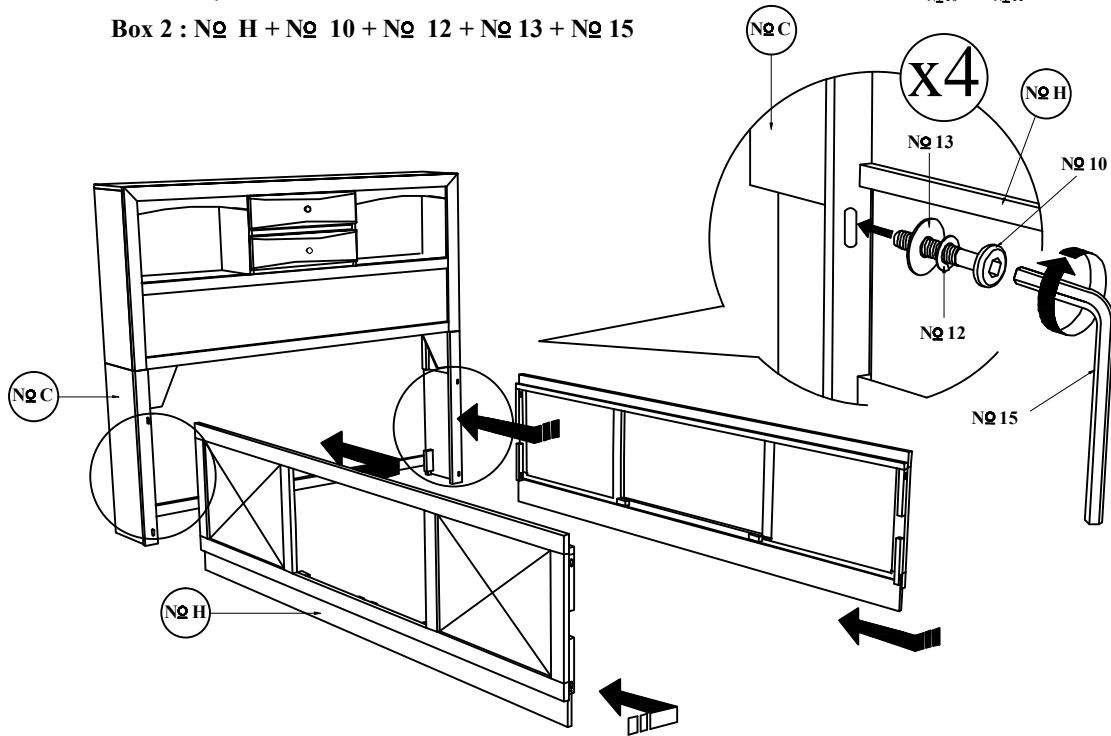


STEP
08

Attach the Side Rail (H) to the Footboard (B). Insert Spring Washer (12) , Flat Washer (13) , tighten JCBC (10) using an Allen Key (15).

Box 1 : NQ B

Box 2 : NQ 10 + NQ 12 + NQ 13 + NQ 15

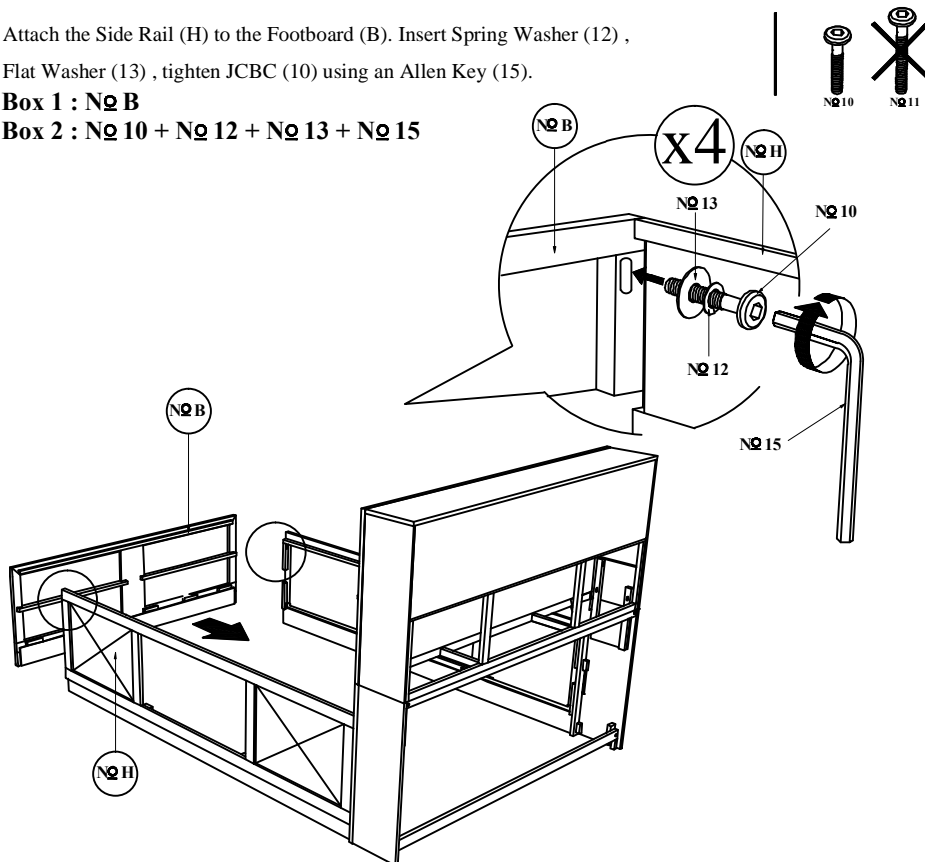


B

STEP
09


Attach Support Leg (G) to the Footboard Drawer Frame (J). Insert Spring Washer (12) , Flat Washer (13) , & tighten JCBC (10) using an Allen Key (15).

Box 1 : NQ G

Box 2 : NQ J + NQ 10 + NQ 12 + NQ 13 + NQ 15





Footboard
Structure
Assembly
Installation

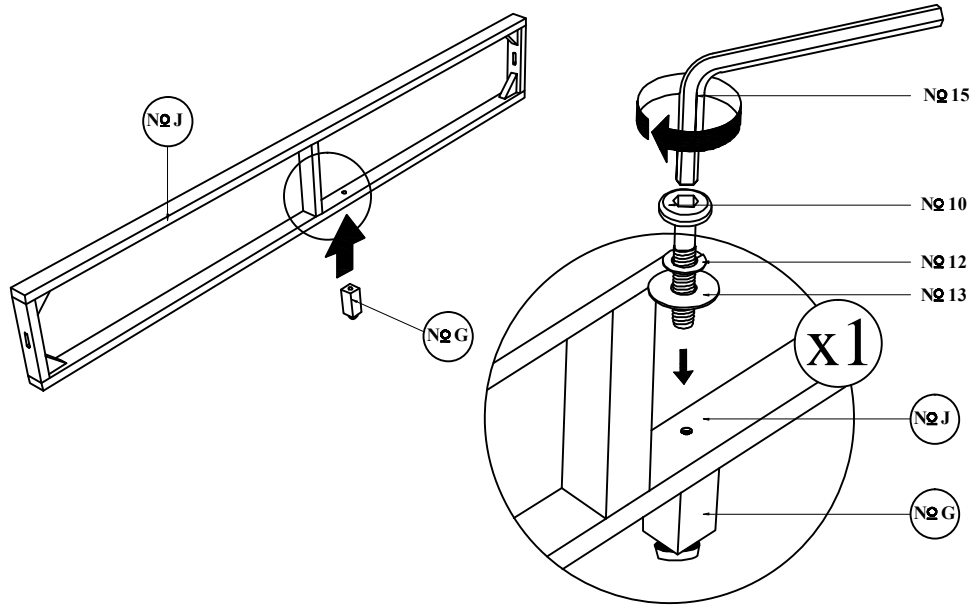

STEP
10

Attach the Footboard Drawer Frame (J) to the Side Rail (H). Insert Spring Washer (12) , Flat Washer (13) , tighten JCBC (10) using Allen Key (15).

Box 2 : NQ 10 + NQ 12 + NQ 13 + NQ 15

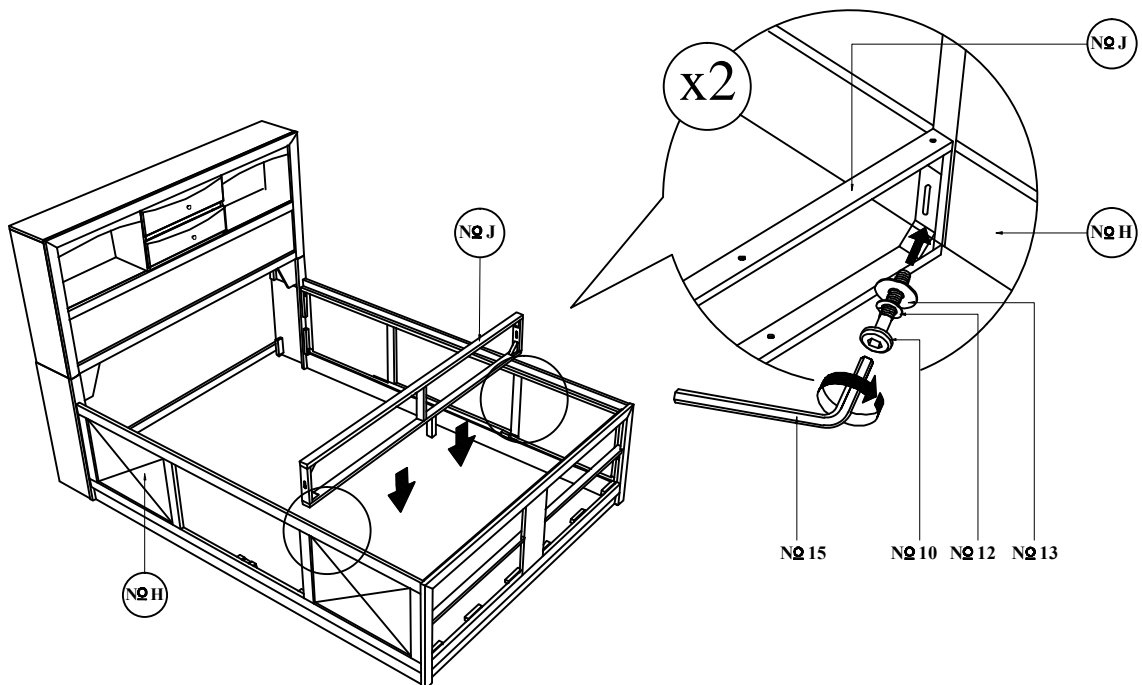

B


STEP
11

Attach the Drawer Support Rail (E) to the Footboard (B) using CSK Screw (8) and tighten with Screw Driver. (Not included)

Box 1 : N^o E
Box 2 : N^o 8




Footboard
Structure
Assembly
Installation

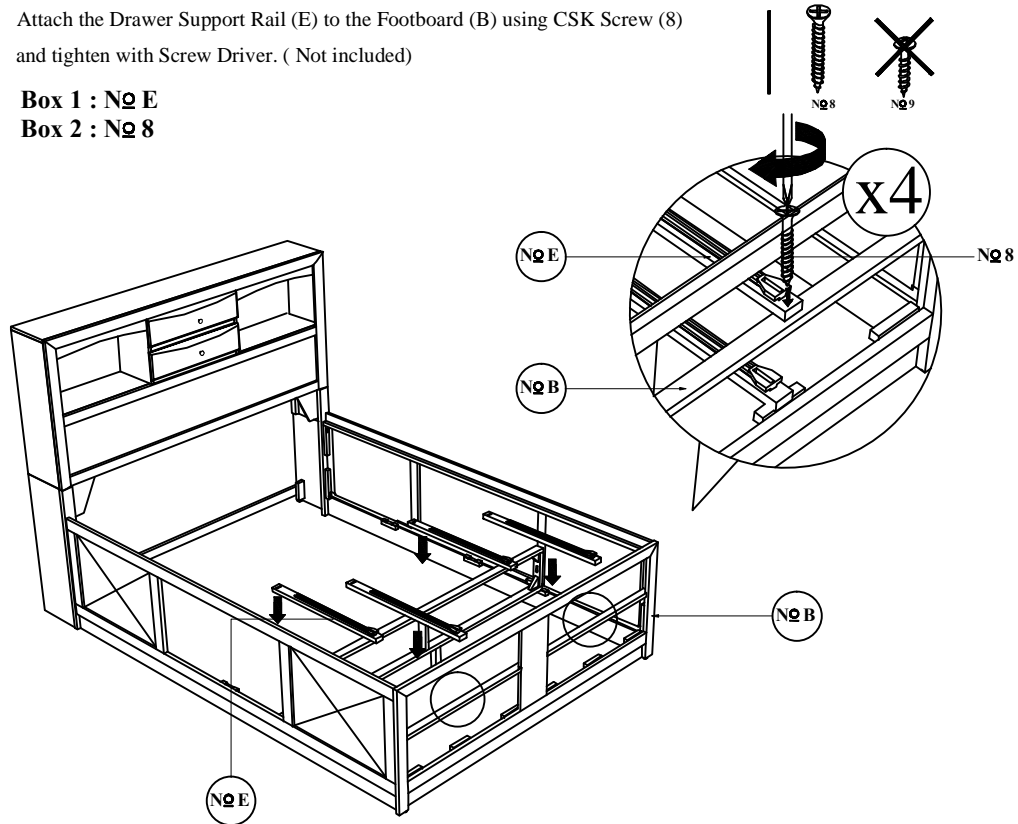

STEP
12

Attach the Drawer Support Rail (E) to the Footboard Drawer Frame (J). Insert Spring Washer (12), Flat Washer (13) & tighten JCBC Bolt (10) using an Allen Key (15).

Box 2 : N^o 10 + N^o 12 + N^o 13 + N^o 15

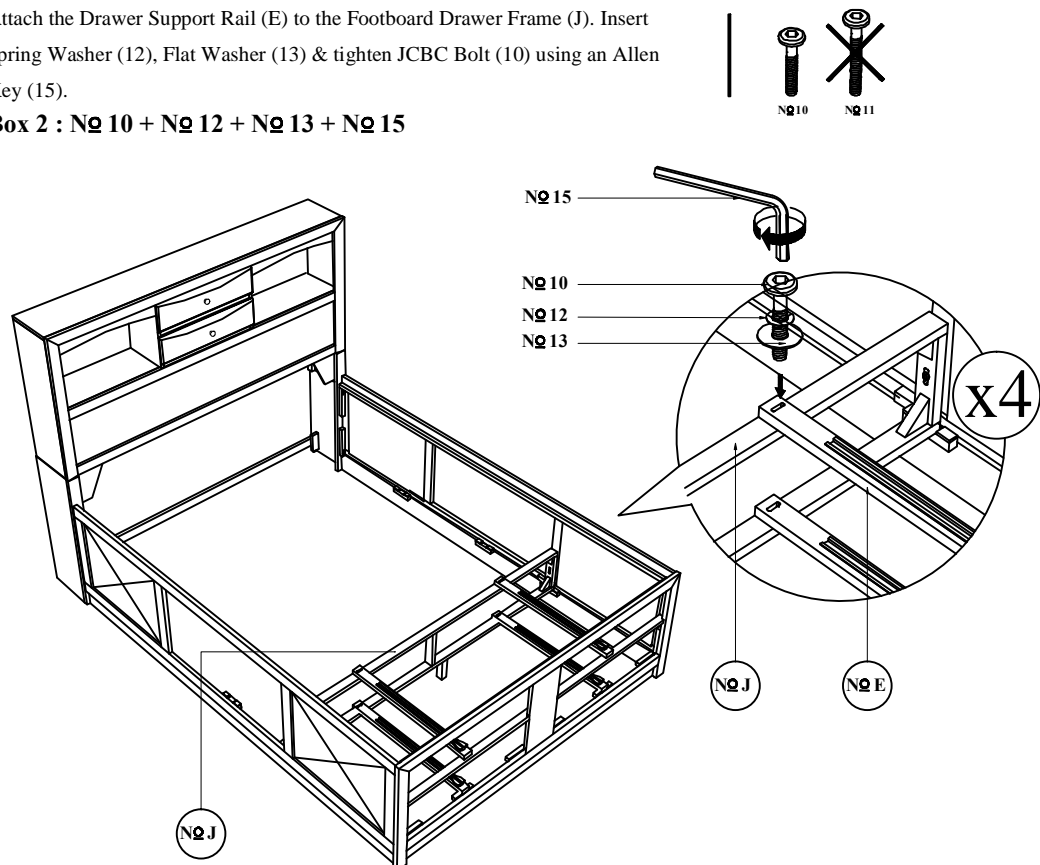


B

STEP
13


Attach Support Leg 2 (F) to the Drawer support Rail (M). Tighten JCBC Bolt (11) using an Allen Key (15)

Box 1 : N^o F

Box 2 : N^o M + N^o 11 + N^o 15





Footboard
Structure
Assembly
Installation

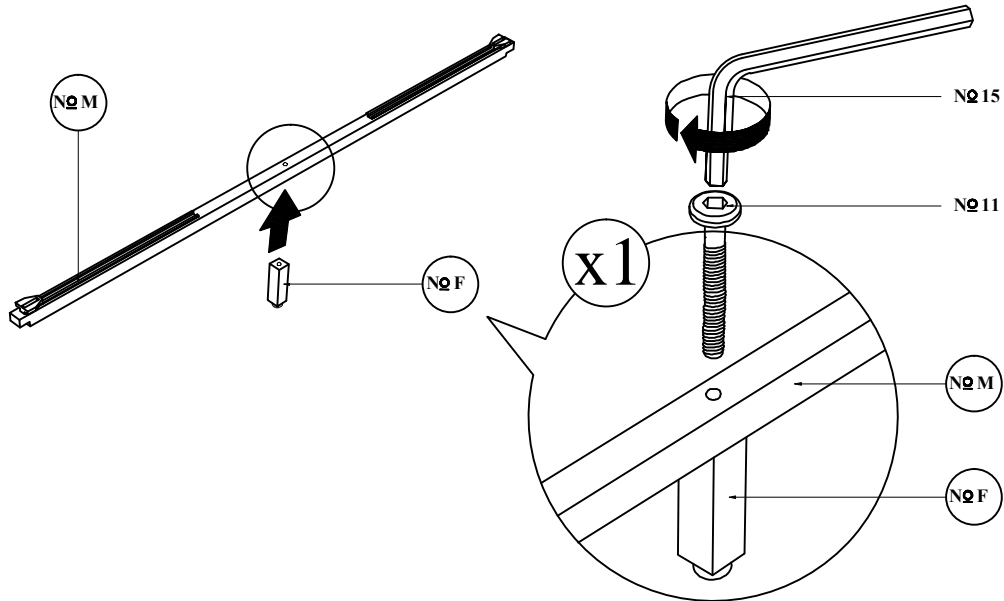

STEP
14

Attach Drawer Support Rail (M) to the Side Rail (H) using CSK Screw (8) and tighten with Screw Driver. (Not included)

Box 2 : N^o 8

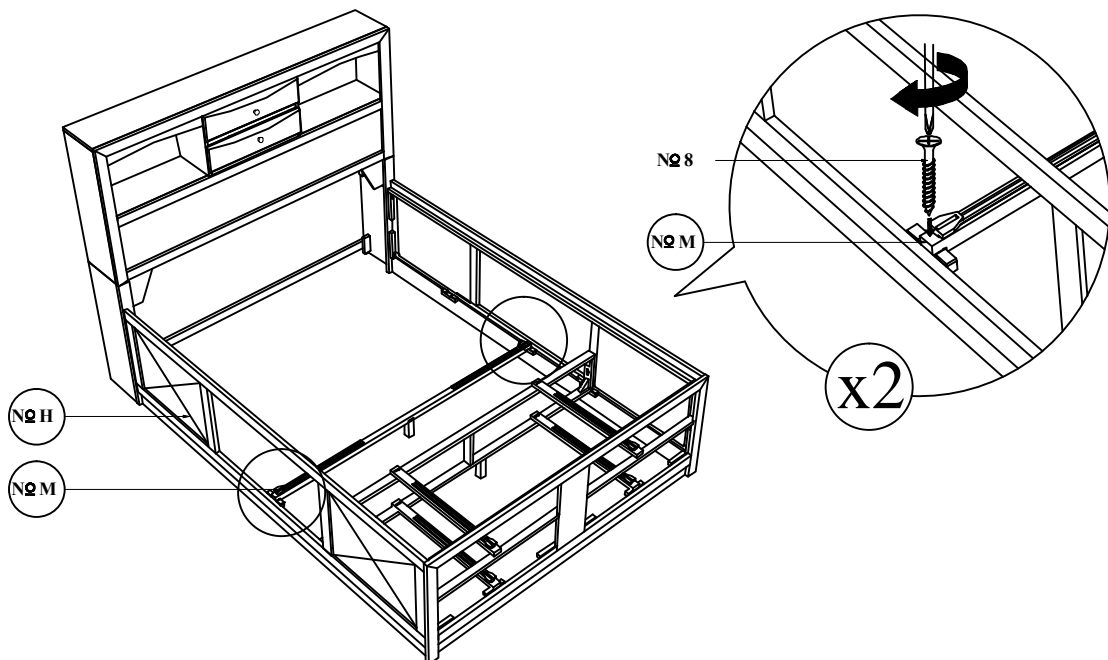

B





Footboard
Structure
Assembly
Installation

STEP
15

Attach Bed Slat (I) & (P) to the Bed Slat Support (N) . Tighten JCBC Bolt (11) using an Allen Key (15). (Loosen and tighten the Adjuster to stability of bed)



Box 2 : NQ I + NQ N + NQ O + NQ P + NQ 11 + NQ 15

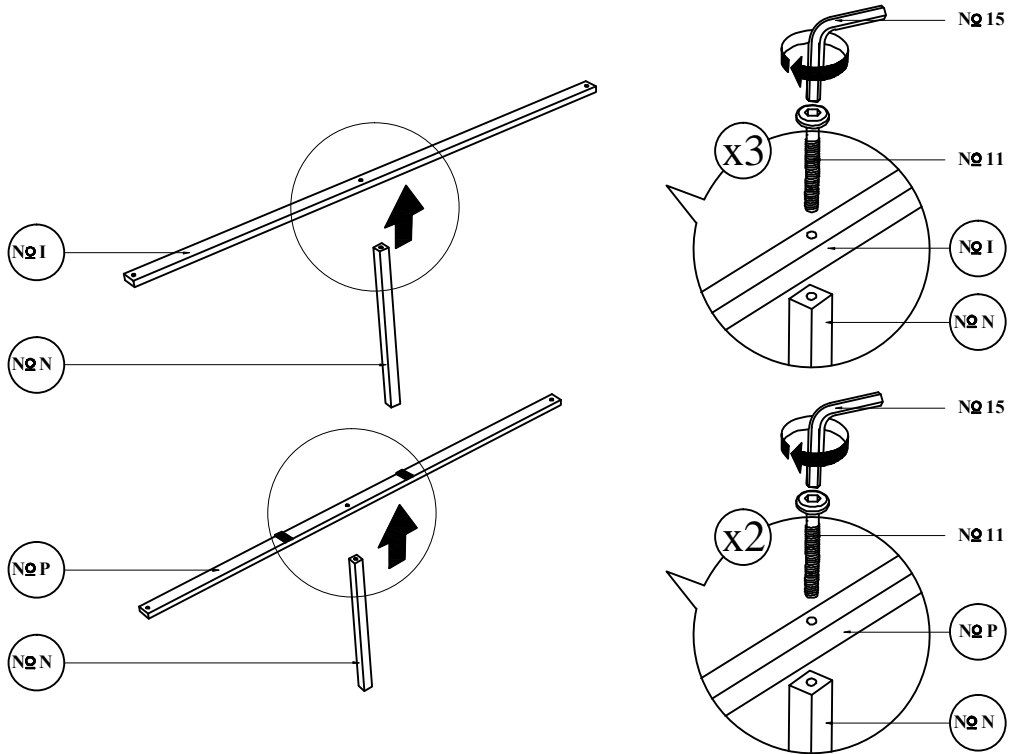

STEP
16

Attach Z-Bracket (14) to the Bed Slat Support (N) and Support Leg 2 (F). Use Panhead Screw (9) and tighten with Screw Driver. (Not included)

Box 2 : NQ 9 + NQ 14

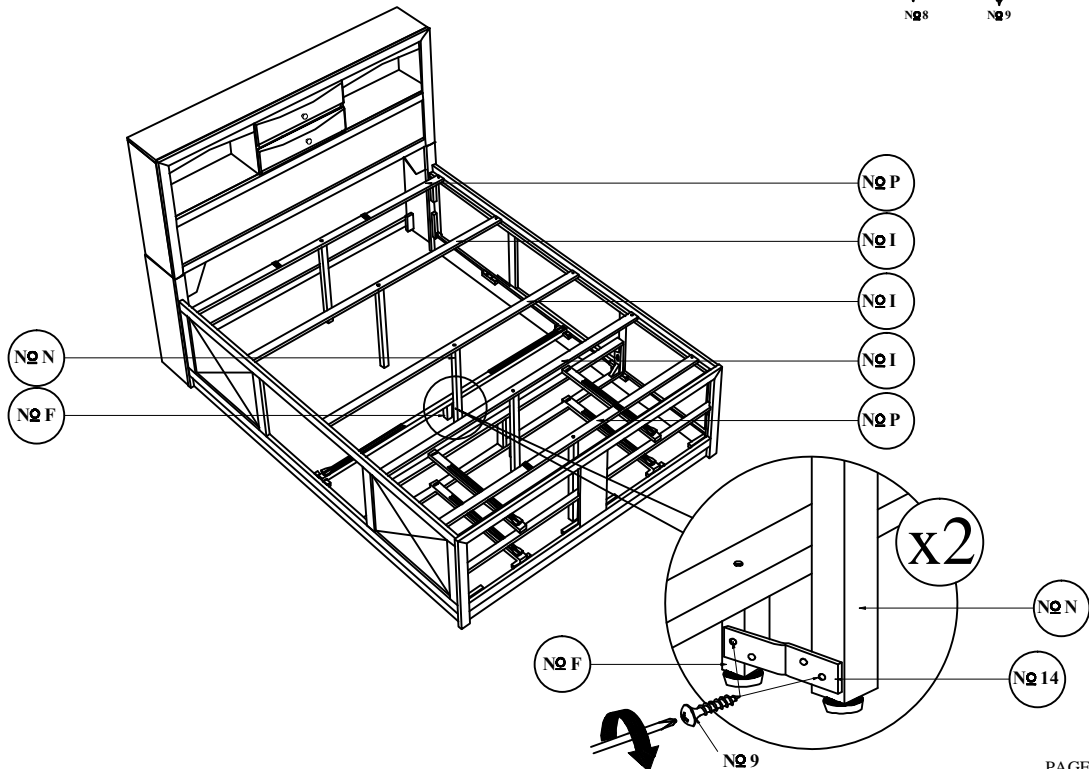


C


STEP
17

Slide Drawer - 2 (R) into position over Draer Support Rail -1 (M). Then slide Drawer - 1 (Q) into position over Drawer Support Rail - 2 (E). Adjust the adjuster for alignment of drawer box.

Box 3 : NQ Q + NQ R



Conceal
Panel & Drawer
Assembly
Installation

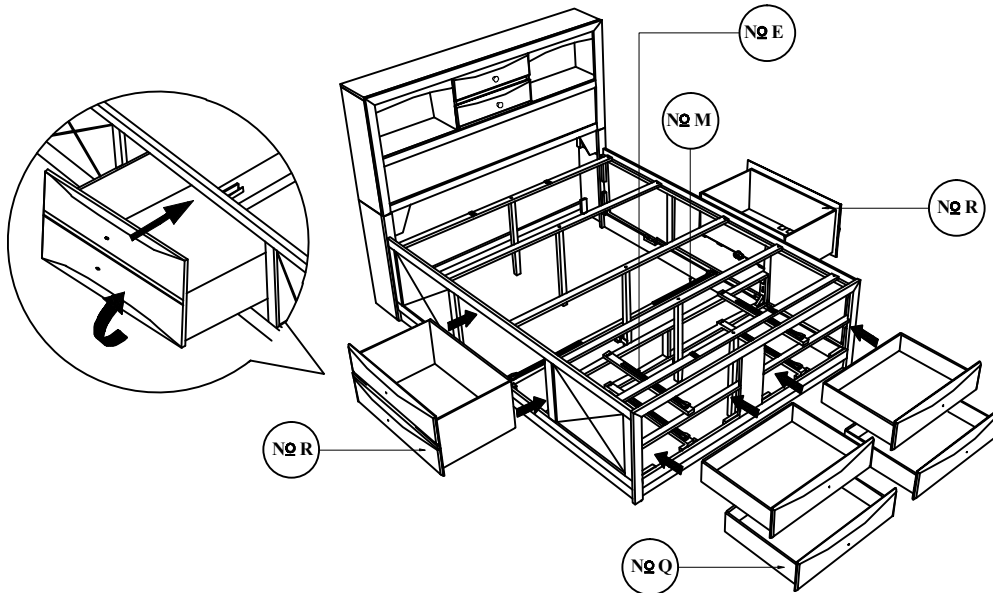

STEP
18



Install the handle (16) in the front of drawer (R). Tighten the Handle Screw (18) using Screw Driver. (Not included)

Install the Handle (16) in front of drawer (Q). Tighten the Handle Screw (17) using Screw Driver. (Not included)

Then Push together the Slide Rail (H) with Bed Slat (I) & tighten with CSK Screw (8) by using Screw Driver. (Make sure the center of Bed Slat (I) is aligned with the marked line as shown).

Box 2 : NQ 8


Box 3 : NQ 16 + NQ 17 + NQ 18

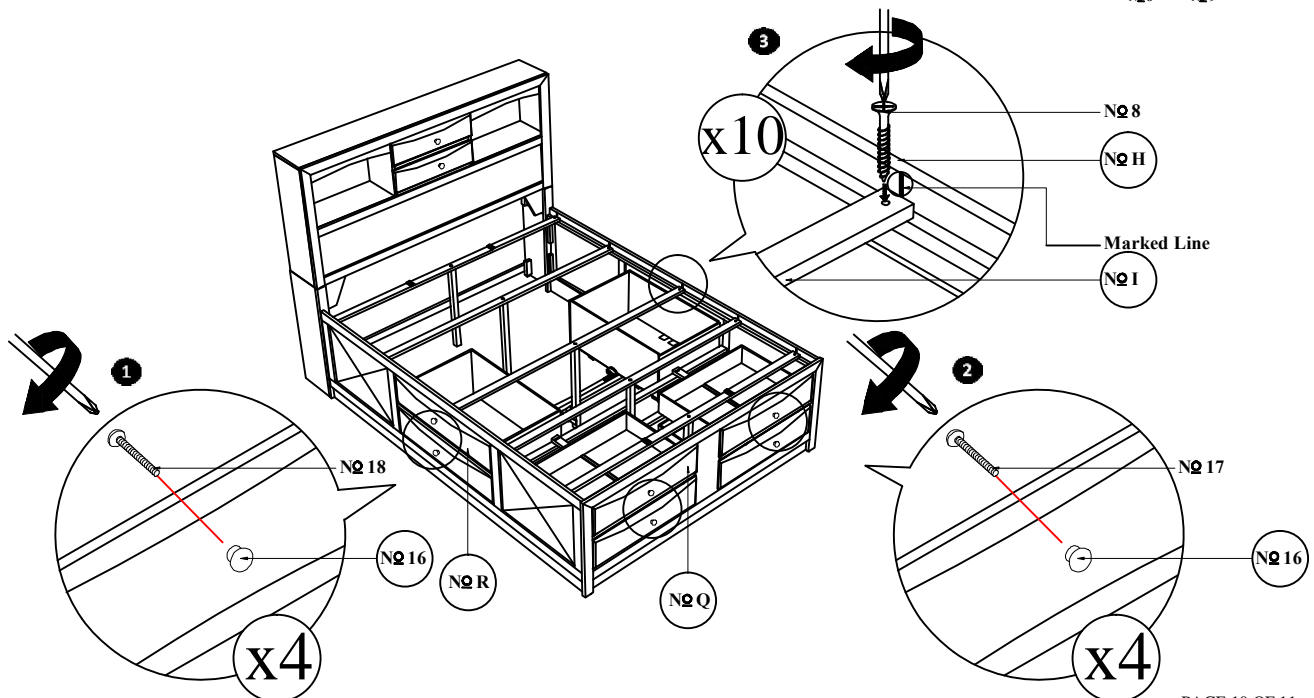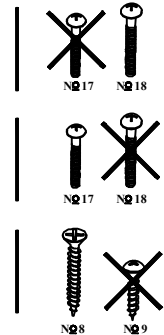


C

STEP
19

Attention! Screw on this markings on concealed panel slat (K).




Conceal
Panel & Drawer
Assembly
Installation

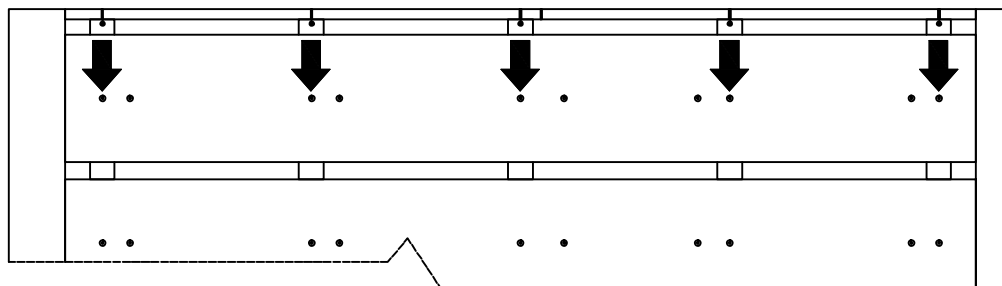

STEP
20

Realign the Concealed Panel Slat (K) as shown.

Box 2 : N^o K

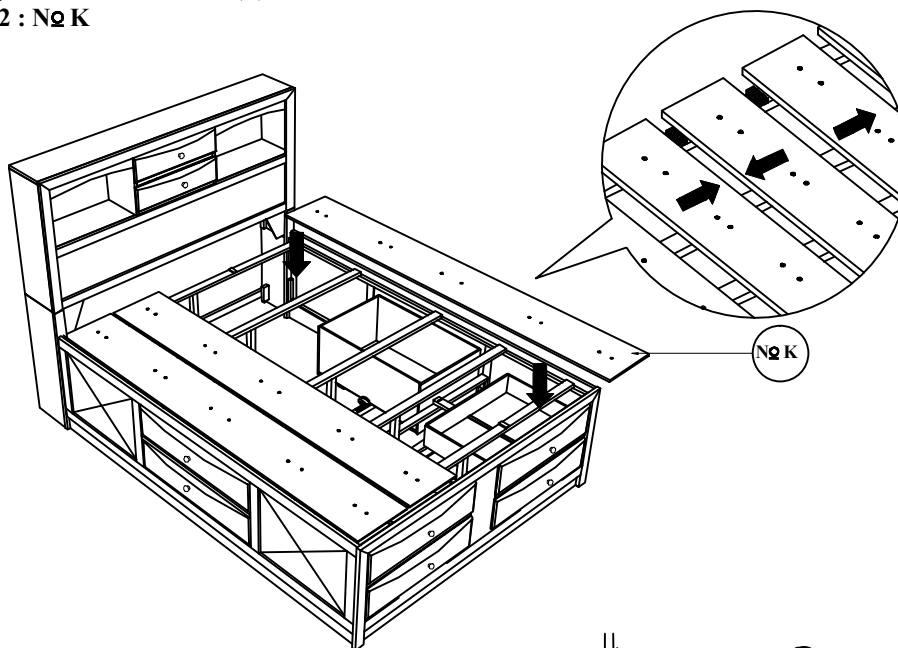

STEP
21

Attach Concealed Panel (K) over the Bed Slat (I) using Panhead Screw (9) and tighten with Screw Driver. (Not included)

Box 2 : N^o 9

