


Installation Manual

A



x28

B




x28

C





x4

D

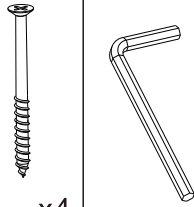


x4

1. Do not tighten the screws until it all installed.
2. Do not screw too tightly to prevent the wood from cracking.
3. Using a hexagonal wrench, use a short part to contact with the screw, hand twist the long part.

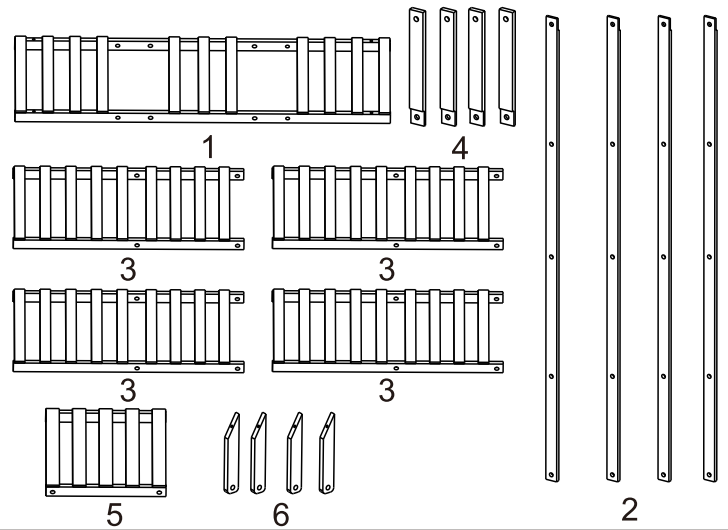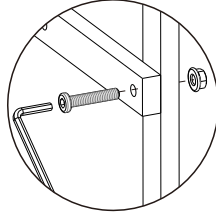


1

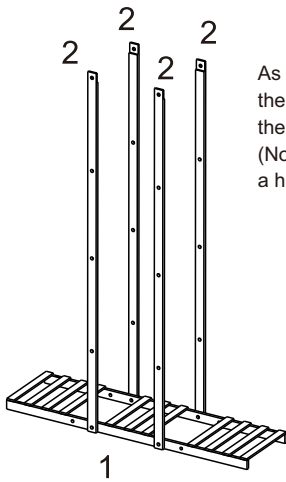



As shown, place the NO.1 panel on the floor, install 4 x NO.2 on holes in the middle of the bottom laminate. (Note that the end of the column with a half gap is on top).

2

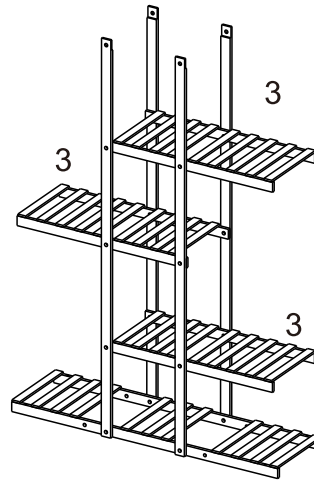


Install 3 x NO.3 laminates in the second, third, and fourth holes of the No. 2 column in turn.

3

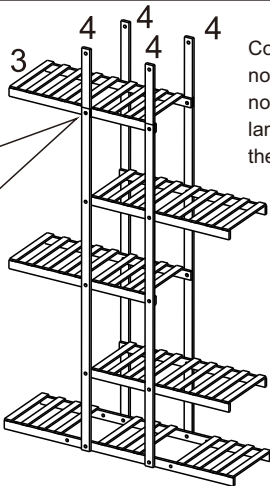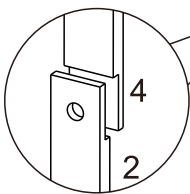


Connect the No. 4 short plate notch with the No.2 column notch, and then fix the No. 3 laminate on the inner side of the column.

4

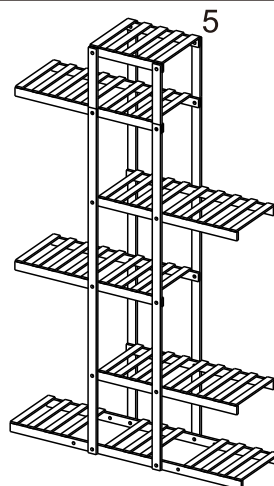


Fasten the No. 5 laminate to the top of column 4.


5

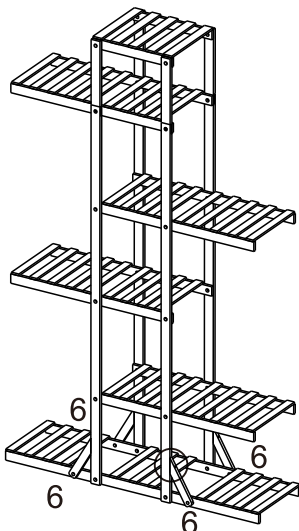

Install 4 x NO.6 diagonal braces, one end to the bottom plate and the other end to the No. 2 column with self-tapping screw C.

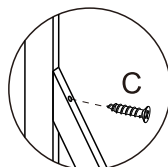

6

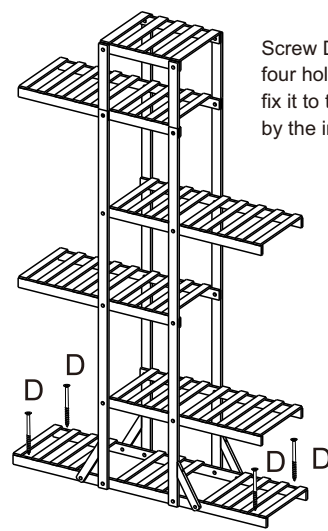

Screw D is used to pass through four holes in the substrate and fix it to the ground as required by the individual.