


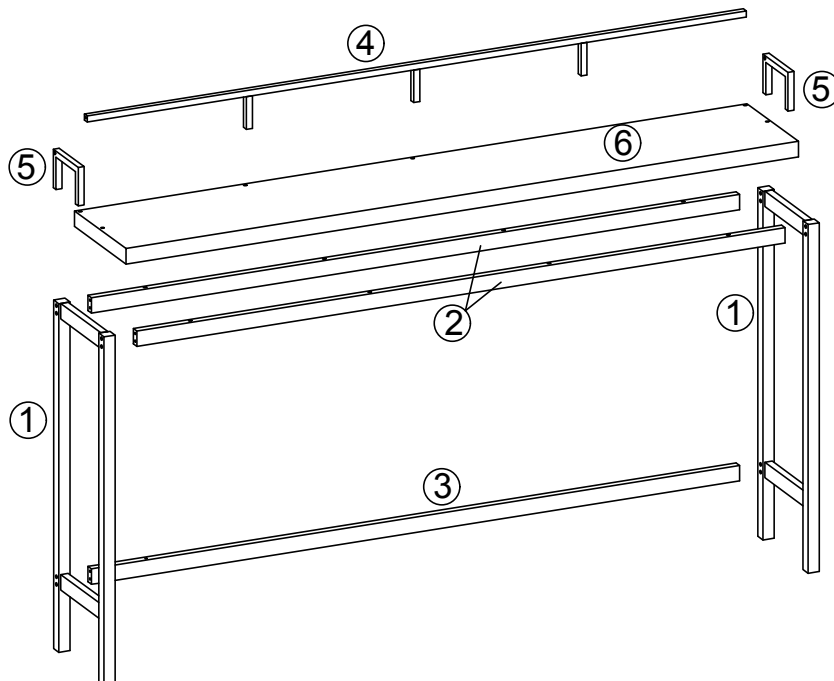


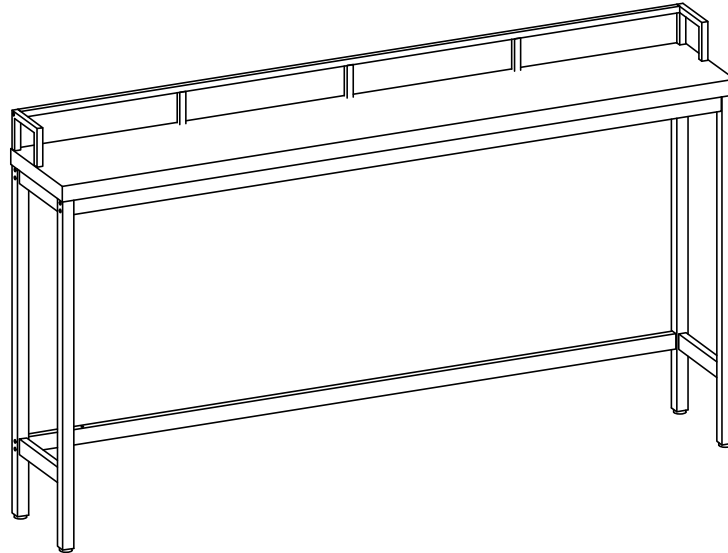




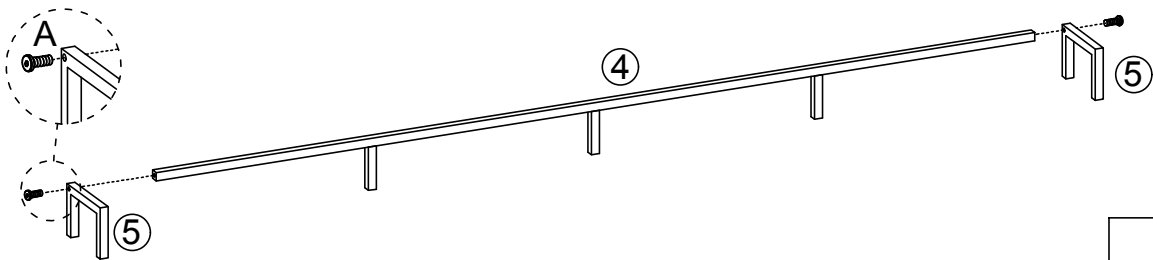
Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrong and need disassemble. Tighten screws at last when all parts are put together.




 M6×35mm Ⓐ×2pcs	 M6×55mm Ⓑ×27pcs	 4×35mm Ⓒ×2pcs	 Ø6×30mm Ⓓ×2pcs	 Ⓔ×2pcs	 Ⓕ×4pcs	 Ⓖ×1pc
--	---	---	--	--	---	--


STEP 1





M6×35mm
Ⓐ×2pcs



STEP 2

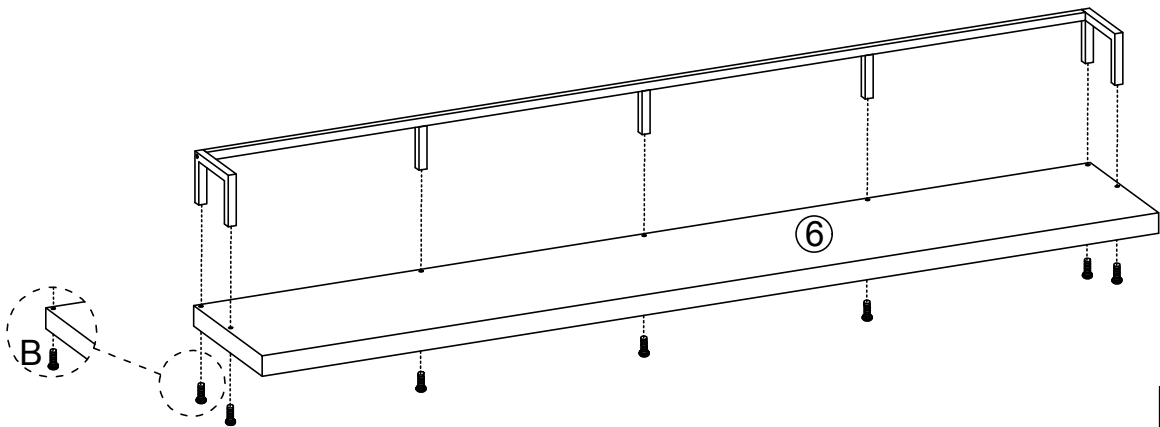



M6×55mm
Ⓑ×7pcs

STEP 3

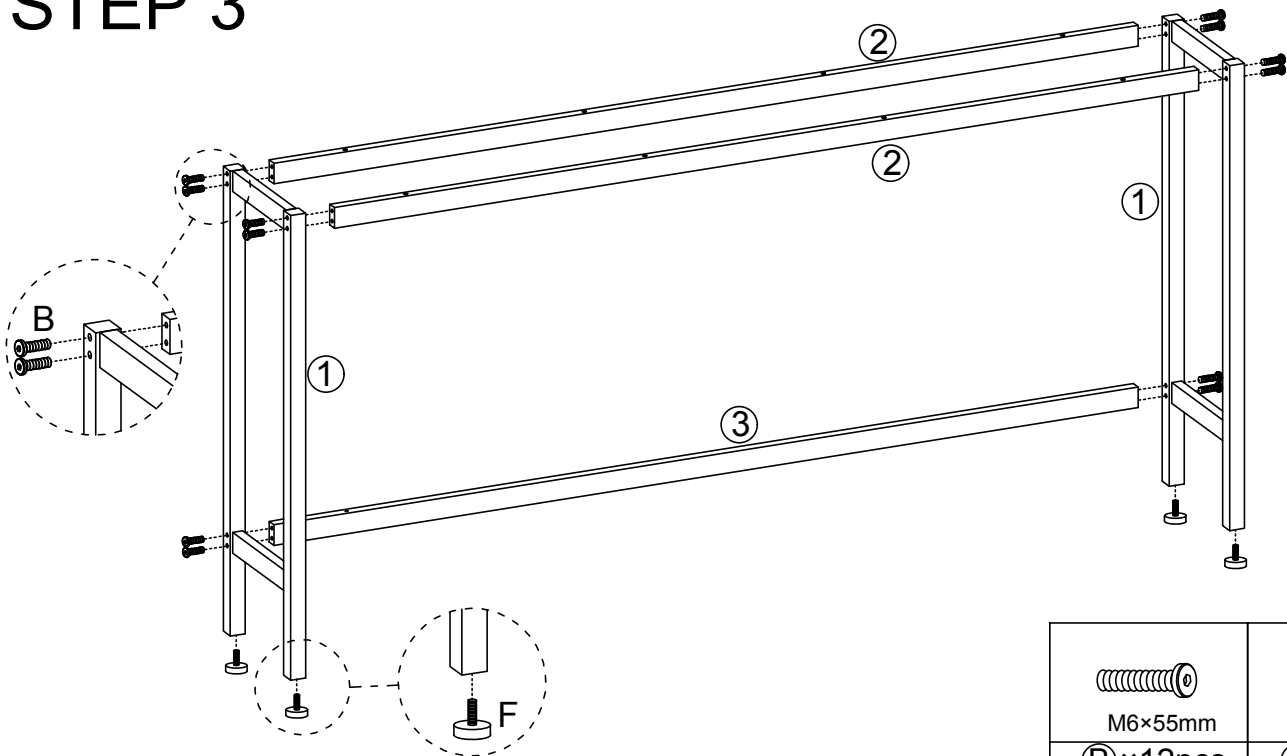

	
M6×55mm	
Ⓑ×12pcs	Ⓕ×4pcs



STEP 4

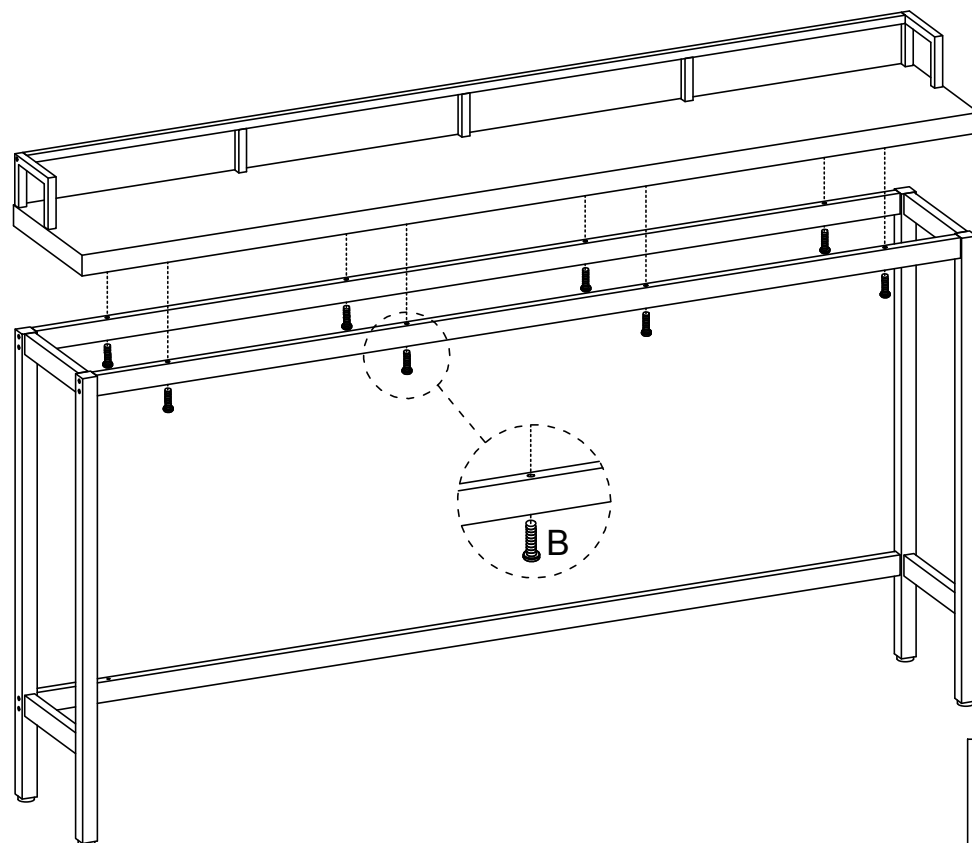

M6×55mm

Ⓑ × 8 pcs

STEP 5

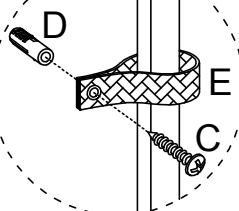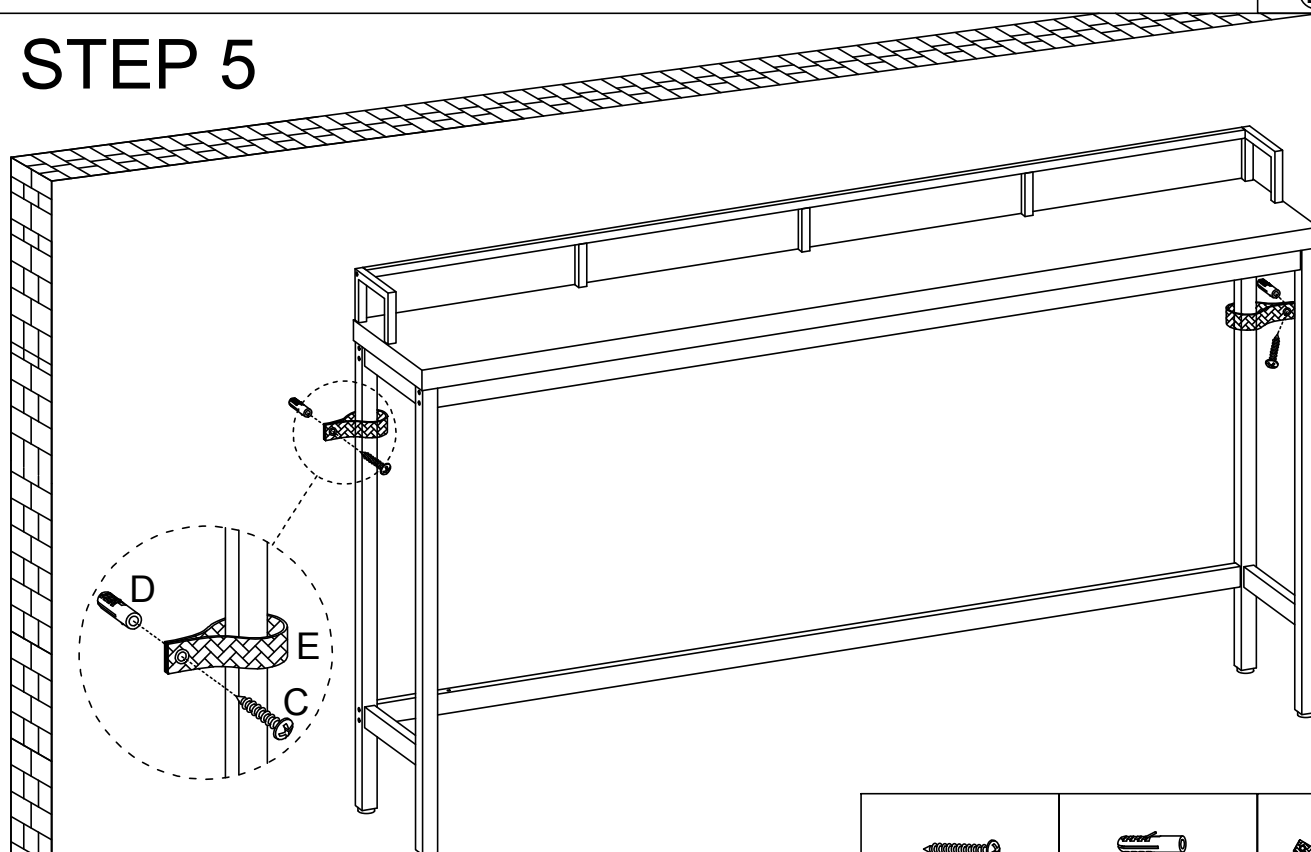

4×35mm

Ⓒ × 2 pcs



Ø6×30mm

Ⓓ × 2 pcs



Ⓔ × 2 pcs

We genuinely appreciate your purchase of our product. Any problem (installation or damage caused by shipping), please feel free to contact us. Our customer service will help to solve the problem for your ASAP, as your satisfaction is our final goal.

www.tribesigns.com

E-mail: support@tribesigns.com