


CONVENIENCE CONCEPTS

P&P Deluxe Square Plant Stand

121156

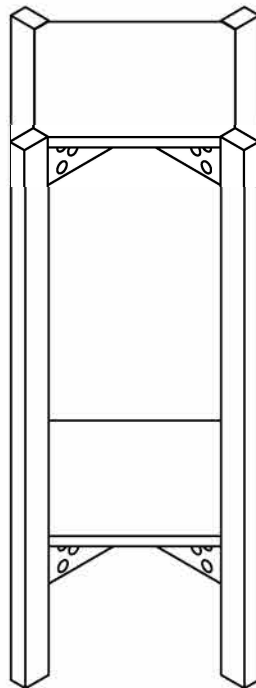

Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store
. Broken or missing Hardware?
. Need help with Assembly?

Our Illinois based customer service team is ready to help with any problems or questions you may have. Please give us a call (Toll Free) at 1-800-468-6447, or email us at parts@convenience-concepts.com.





Normal hours of Operation: M-F* 8am-4pm CST.

*Excludes Holidays

This product's warranty is only valid through authorized dealers.


VERSION:2019.07.10

Hardware List


A  L29 Cam bolt (24pcs)	B  ø15 Cam lock (24pcs)	C  ø16 Foot Pin (4pcs)	D  ø22 Small sticker (24pcs)
E  197×5×1 ANTI-TIP Strap (1pc)	F  12×12×1 Bracket (2pcs)	G  ø4×25 Small Screw (1pc)	H  ø5X40 Wall Screw (1pc)
I  ø8X40 Plastic Anchor (1pc)			

Please count and verify all parts before assembly.


Panel List




TOP/SHELF(2pcs)



TOP CROSSBAR(2pcs)








BOTTOM CROSSBAR(2pcs)




LEG(4pcs)

Please count and verify all parts before assembly.

Assembling the unit with camlocks and wood dowels.

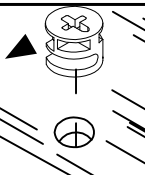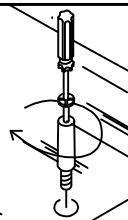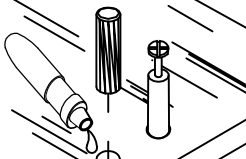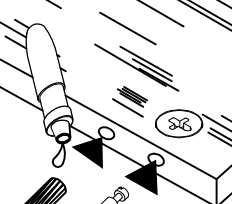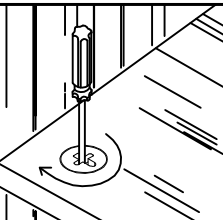
				
Insert camlock, camlock must face bolt hole	Gently screw cam bolt into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently screw the cam clockwise into locked position. Do not overtighten.

Exploded Views

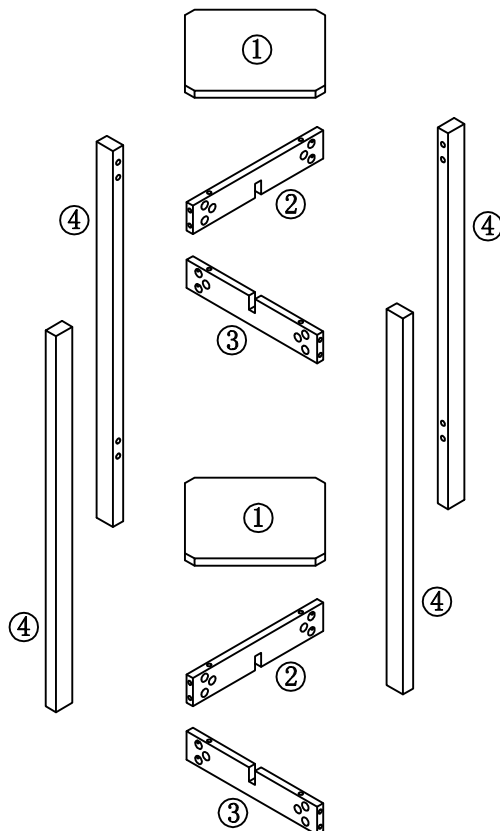





Step1

1. Attach top crossbar(2) to bottom crossbar (3) .
2. Repeat for another crossbar.

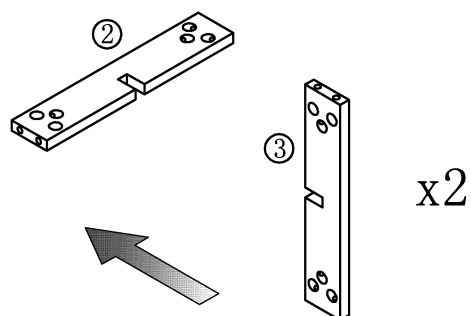





Step2

1. Screw cambolts(A) into top/shelf(1).
2. Attach crossbars(2,3) to top/shelf(1) using camlocks (B) and gently tighten.
3. Place cover(D) over holes as shown.

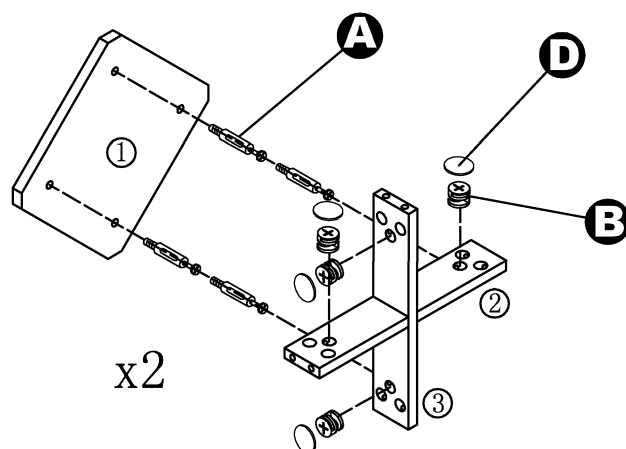





Step3

1. Screw cambolts(A) into leg(4).
2. Attach leg(4) to crossbars (2,3) using camlocks(B) and gently tighten.
3. Place covers(D) over holes.

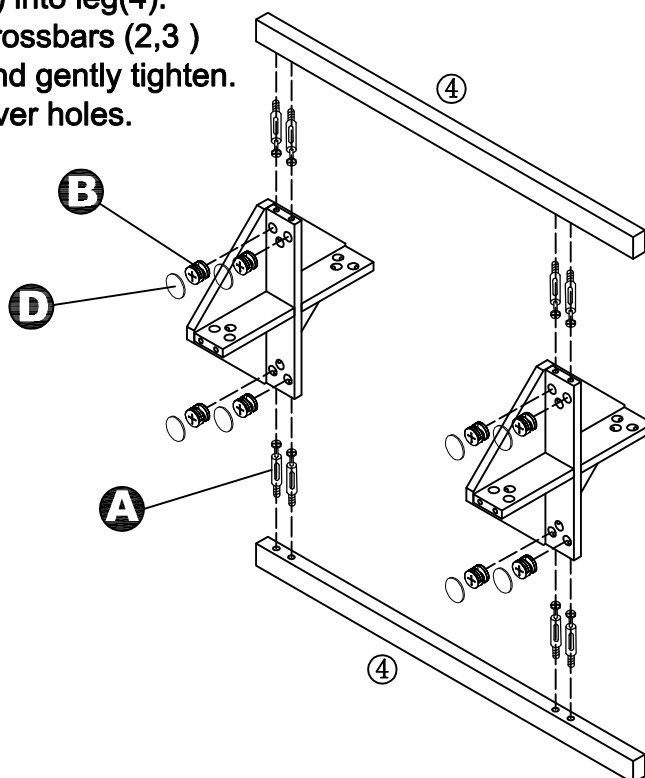

Step4

1. Screw cambolts(A) into leg(4).
2. Attach leg(4) to crossbars (2,3) using camlocks (B) and gently tighten.
3. Place covers(D) over holes.

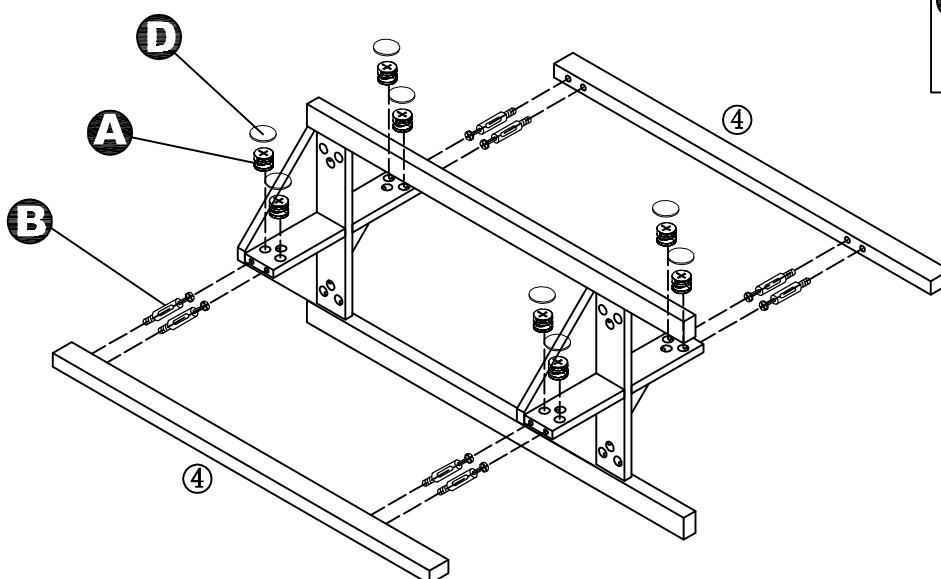


Step5

1. Knock foot tacks onto legs as shown.

G




x4

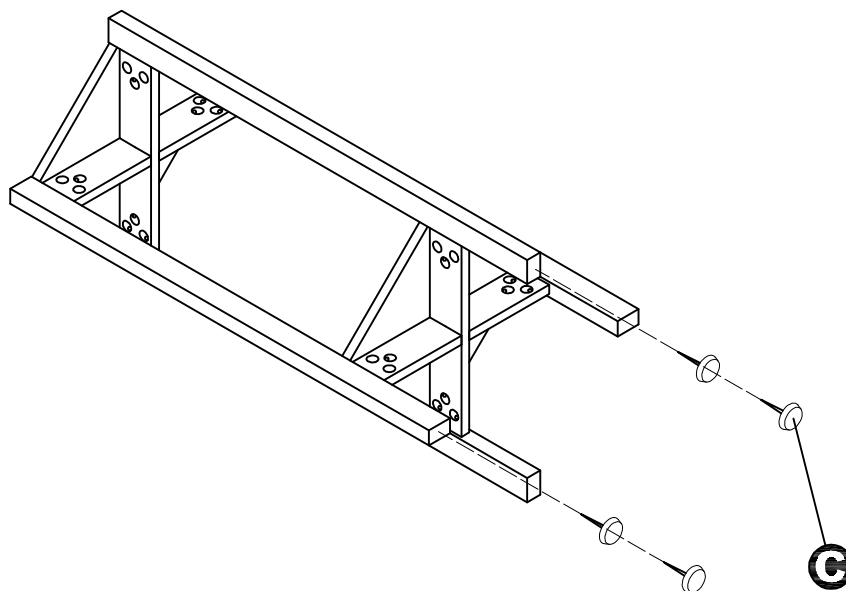

Step6

Enjoy your P&P Deluxe Square Plant Stand!

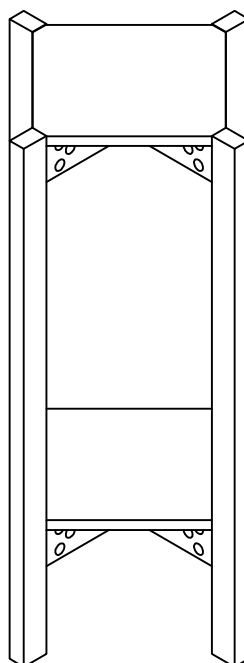


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :


TOOLS NEEDED (NOT INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS




DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

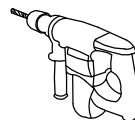


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

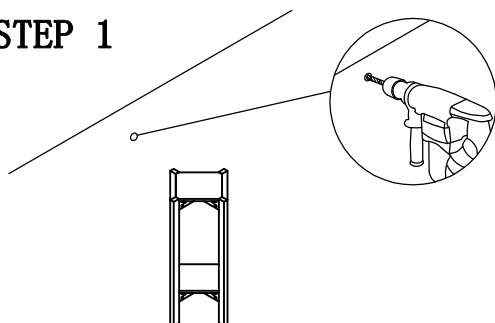


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

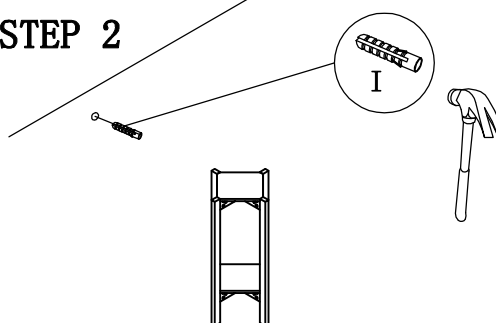


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

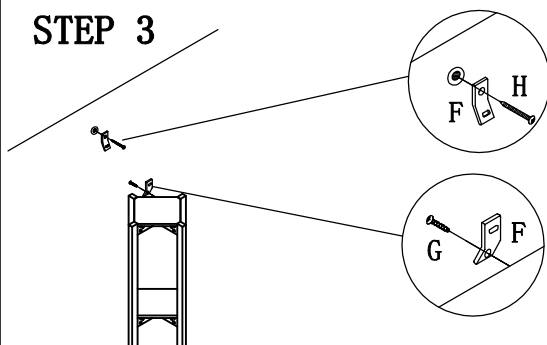

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

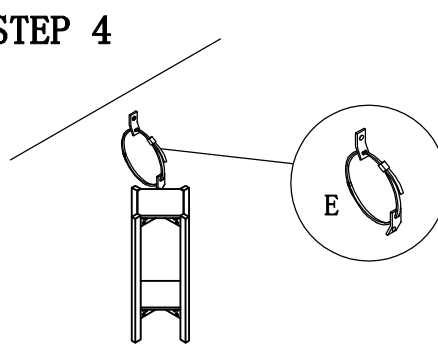

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.