


# Console Table

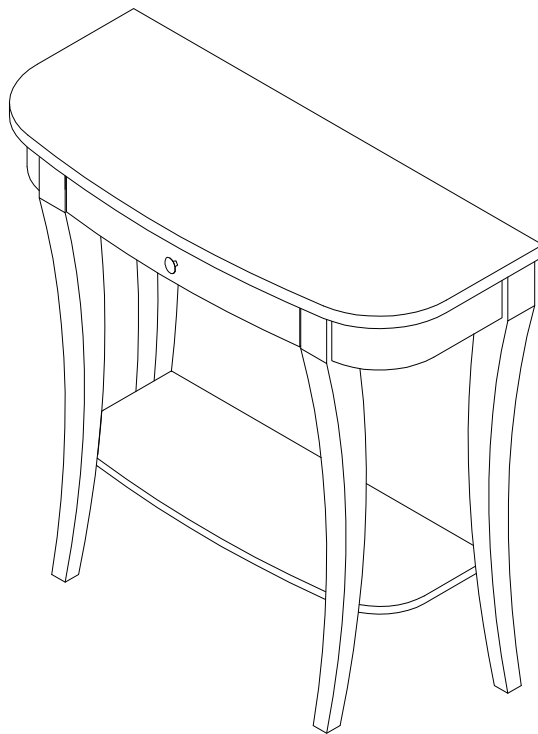

## Assembly instructions


We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give you years of enjoyment.



Please do not return to the store  
Broken or missing Hardware?  
Need help with Assembly?

# PARTS IDENTIFICATION



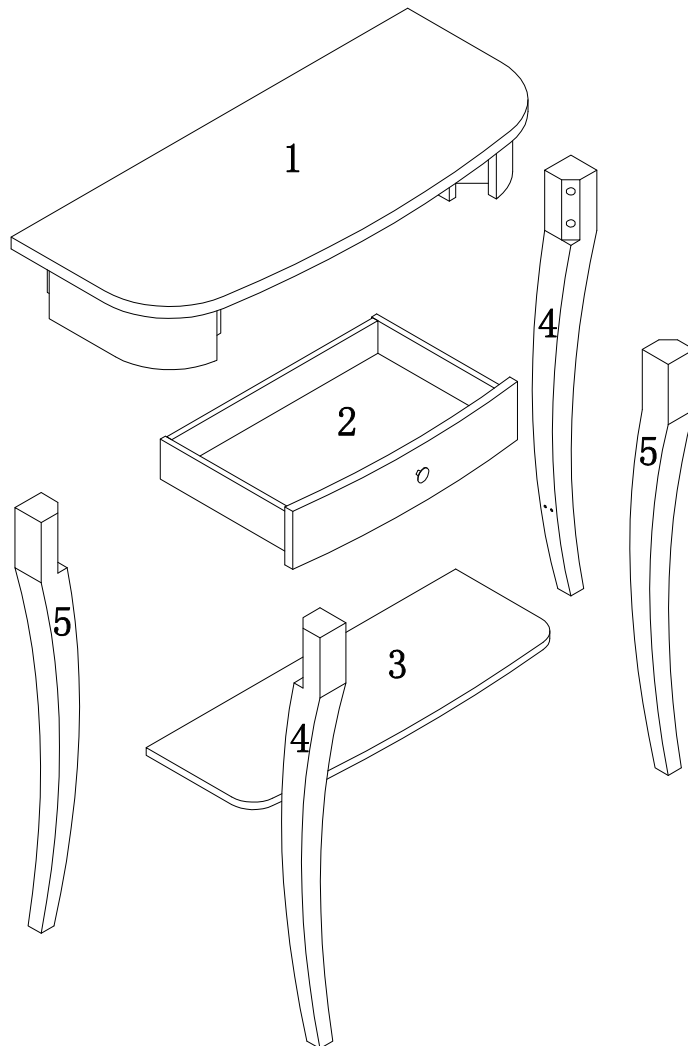












---



**Please count and verify all parts  
before assembly**

(1) Top	1pc
(2) Drawer	1pc
(3) Bottom Panel	1pc
(4) Front Left Leg/Rear Right Leg	2pcs
(5) Front Right Leg/Rear Left Leg	2pcs


# HARDWARE IDENTIFICATION

<b>A</b>		Knob Screw	1pc
<b>B</b>		Knob	1pc
<b>C</b>		Allen bolt	8pcs
<b>D</b>		Washer	8pcs
<b>E</b>		Allen wrench	4pcs
<b>F</b>		Bracket	4pcs
<b>G</b>		Long Screw	16pcs
<b>H</b>		Foot Pin	4pcs
<b>I</b>		Spring Washer	8pcs
<b>J</b>		Short Screw	2pcs
<b>K</b>		Anti-tip Strap	1pc
<b>L</b>		Bracket	2pcs
<b>M</b>		Medium Screw	1pc
<b>N</b>		Wall Anchor	1pc
<b>O</b>		Wall Screw	1pc

# Step1


PAGE: 4 of 6

1. Place Top (1) upside down on carpet or other soft surface.
2. Connect Legs (4) and (5) to Top (1) using Washers (D), Spring Washers (I), Allen Bolts (C ) and Allen wrench (E ).

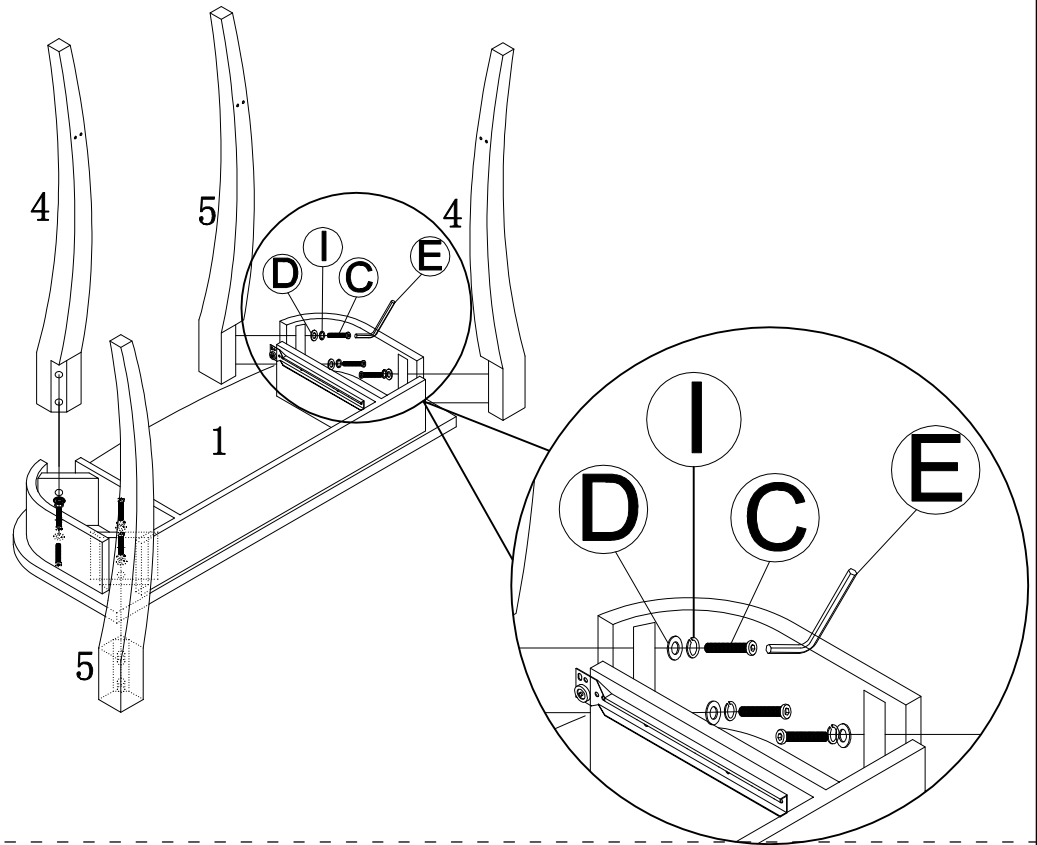

# Step2


1. Gently screw Short screws (J) into side of front legs (4) and (5).

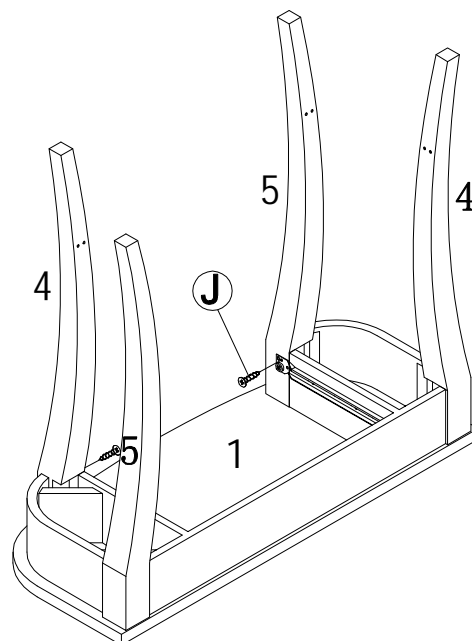

# Step3


PAGE: 5 of 6

1. Attach Brackets (F) to bottom side of Bottom Panel (3) with Long screws (G).

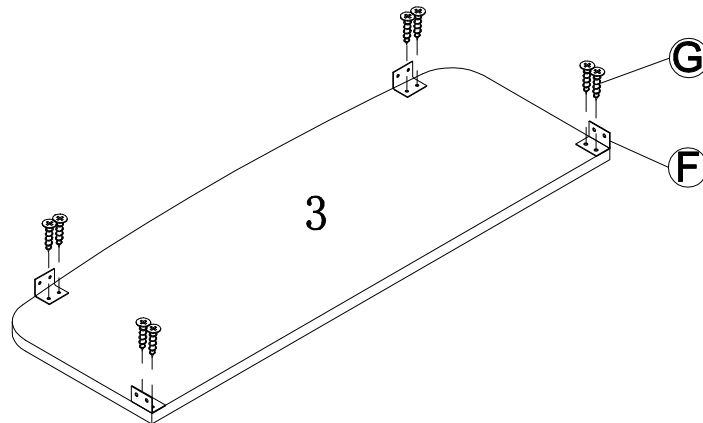

# Step4

1. Connect Bottom Panel (3) to assembly using Long Screws (G).
2. Gently tap Foot pins (H) into bottom of legs.

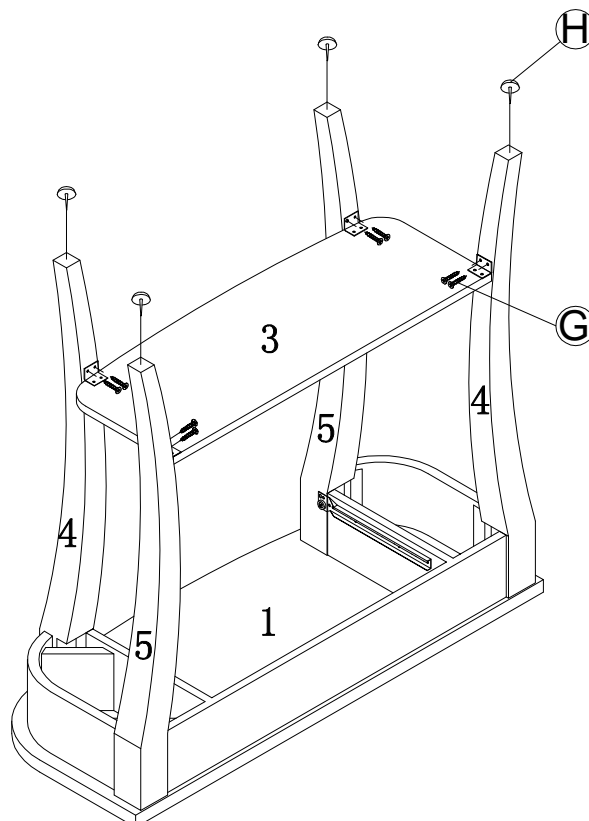


\*Be careful to not to overtighten!

# Step5


PAGE: 6 of 6

1. Attach Knob (B) to Drawer (2) using Knob Screw (A) as shown.
2. Gently insert Drawer (2) into unit.

\*Be careful to overtighten!

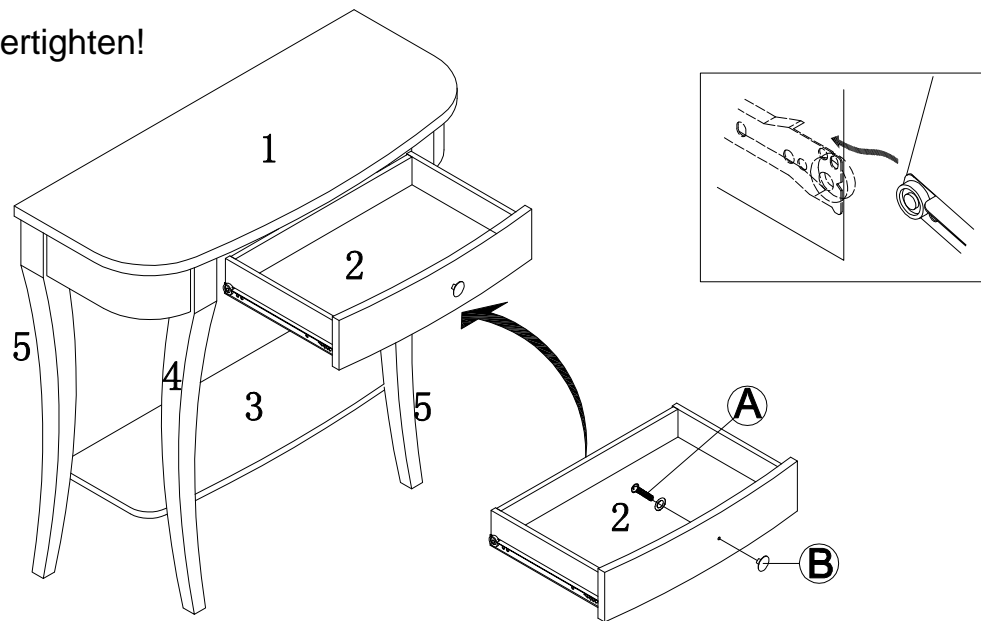


# Step6

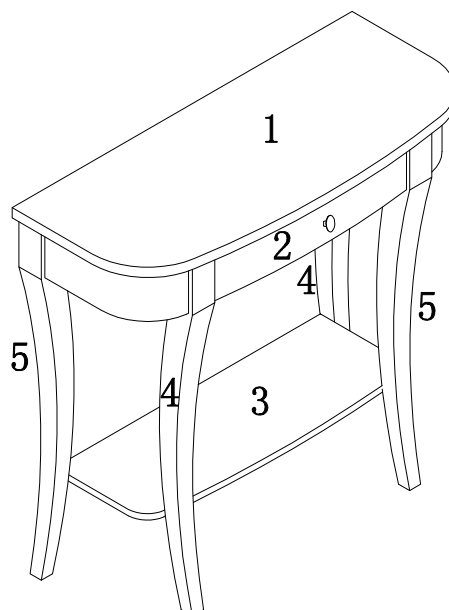


# ANTI-TIPPING STRAP INSTRUCTION

## HARDWARE (INCLUDED) :



DRYWALL ANCHOR  $\phi 8 \times 40$  X 1PC



METAL BRACKETS  $12 \times 12 \times 1$  X 2PCS



DRYWALL SCREW  $\phi 5 \times 40$  X 1PC




STRAP  $197 \times 5 \times 1$  X 1PC



FLATHEAD SCREW  $\phi 4 \times 25$  X 1PC

## TOOLS NEEDED ( NOT INCLUDED) :

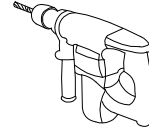


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

### STEP 1

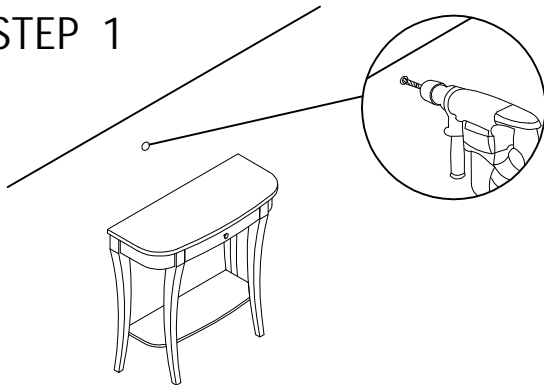


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

### STEP 2

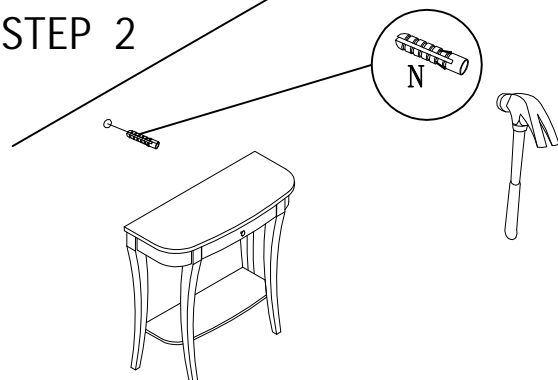


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

### STEP 3

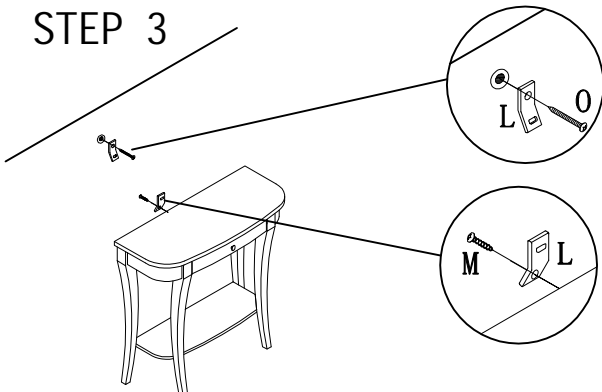

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

### STEP 4

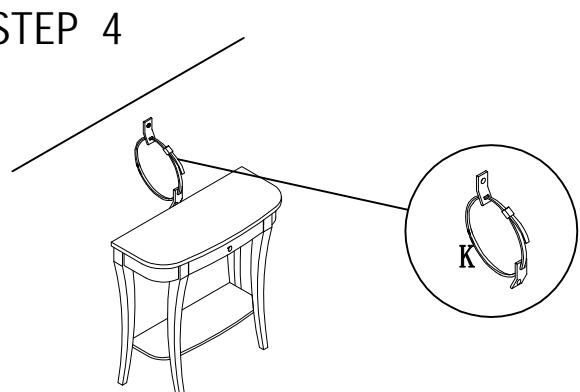

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
  2. pull lightly til strap stops.
- Assembly is complete.