



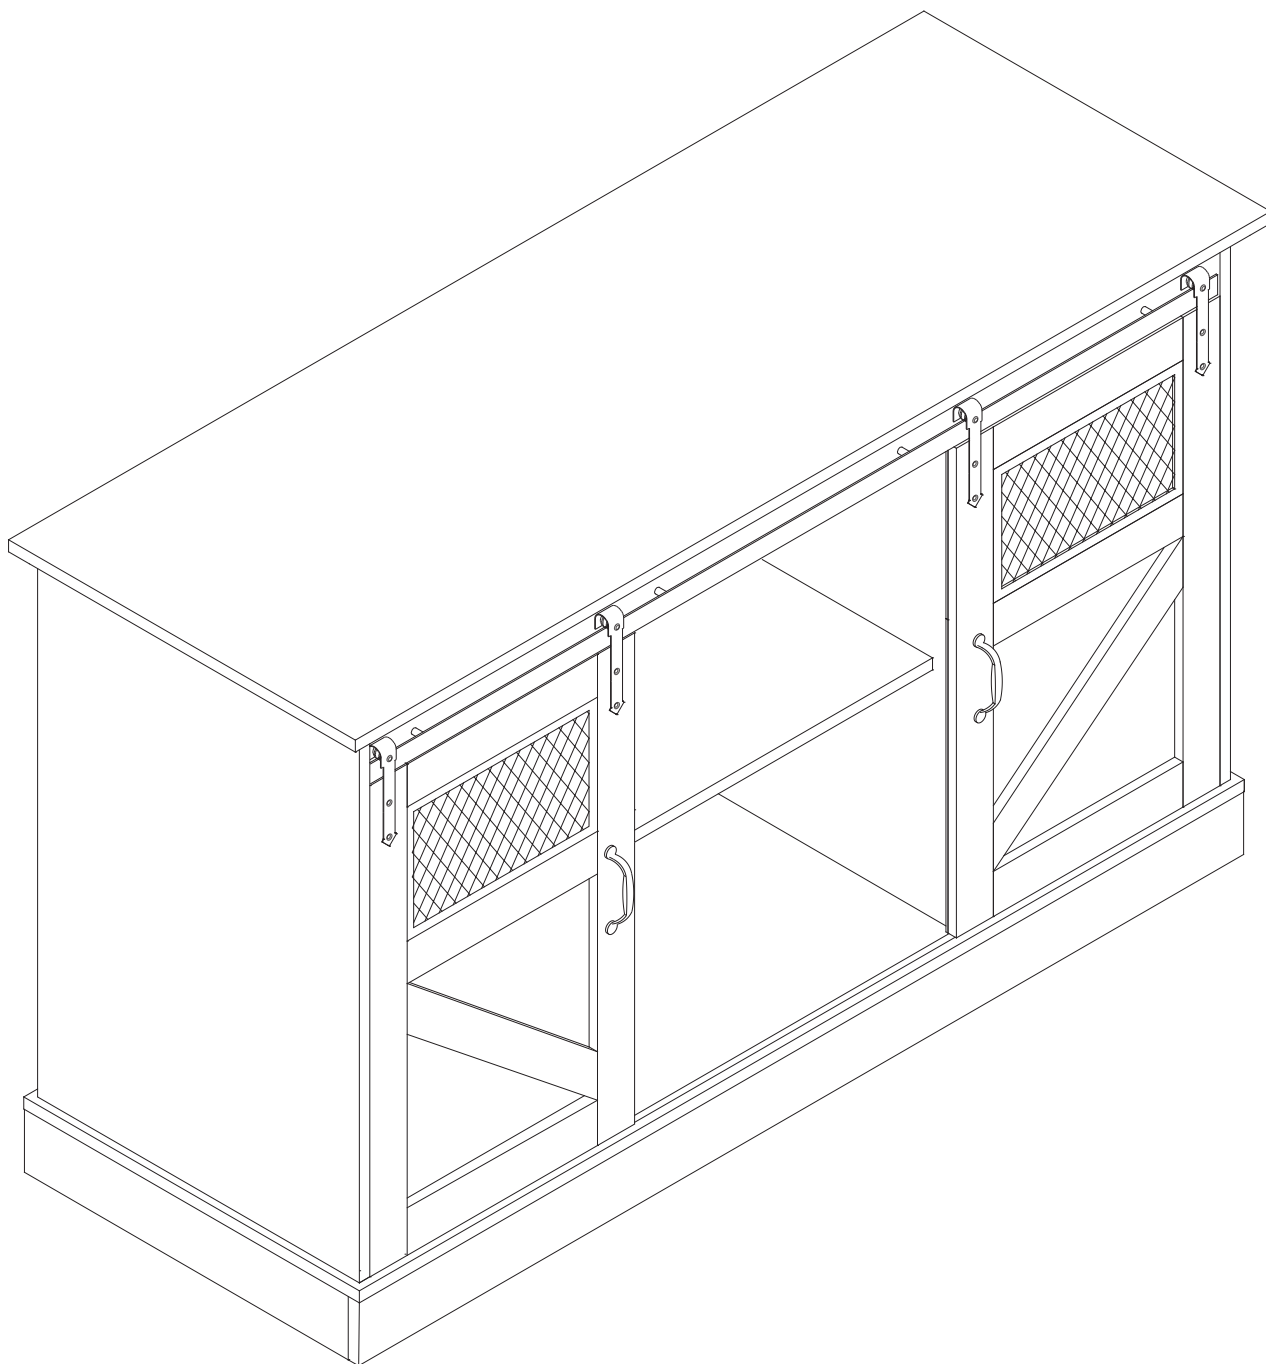

Before You Start

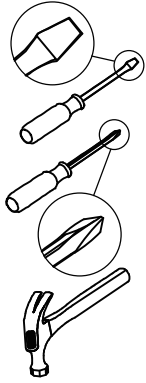

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

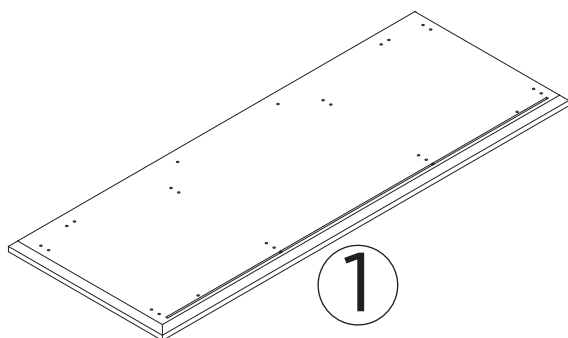


1

QTY: 1

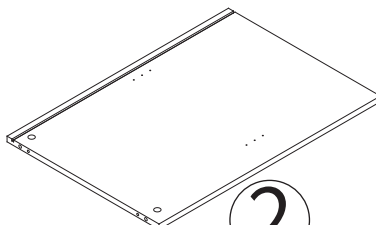


2

QTY: 1

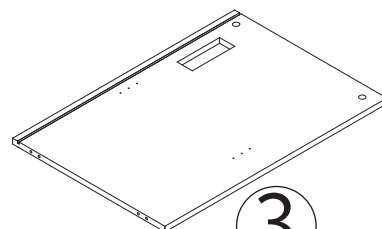


3

QTY: 1

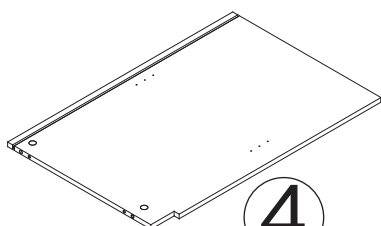


4

QTY: 1

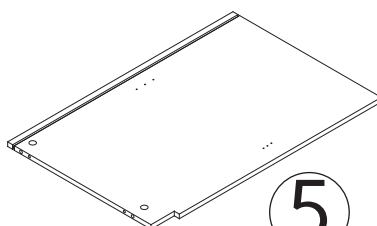


5

QTY: 1

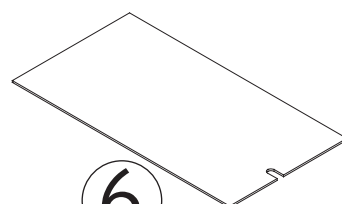


6

QTY: 1

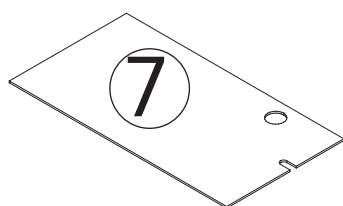


7

QTY: 1

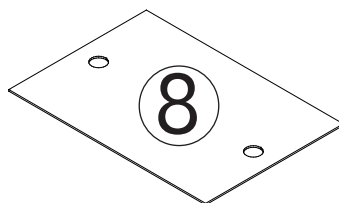


8

QTY: 1

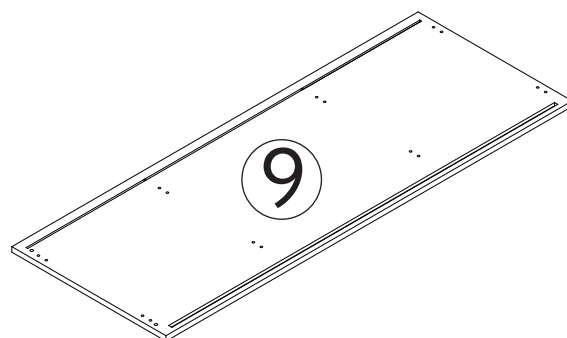


9

QTY: 1

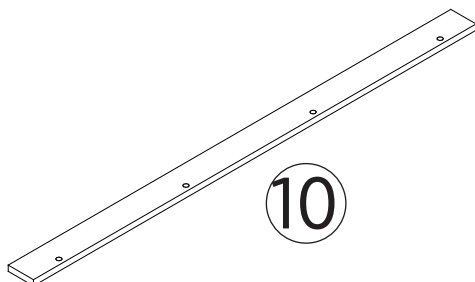


10

QTY: 1

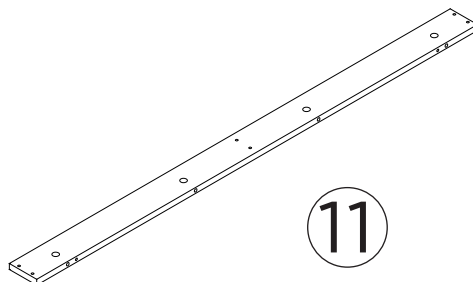

11

QTY: 2

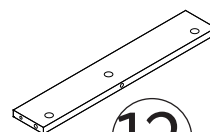


12

QTY: 3


Board Identification

Not actual size

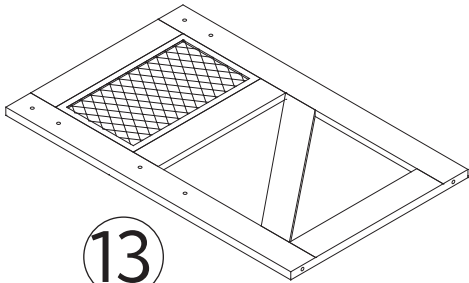


13

QTY: 1

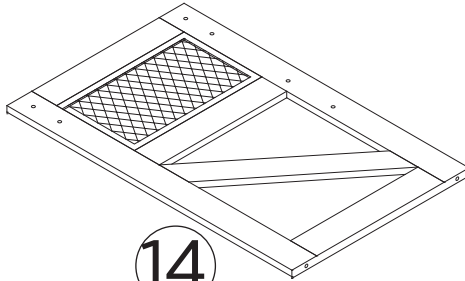


14

QTY: 1

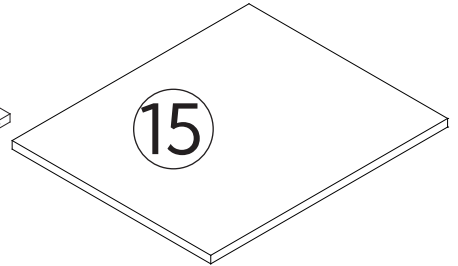


15

QTY: 1

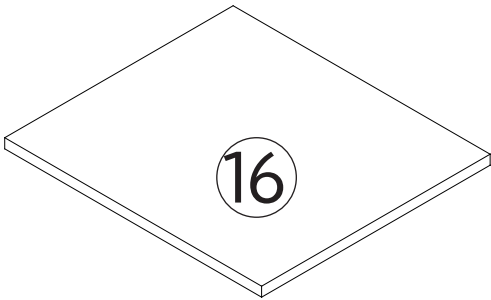

16


QTY: 2

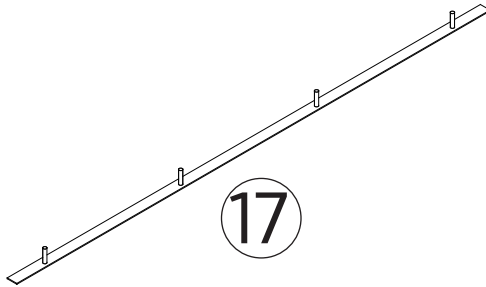

17

QTY: 1


Part List

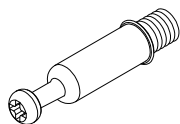

M6x33.5mm

A

X29



M15x9.5mm

B


X29



M6x30mm

C


X28



M3X14mm

D


X12



M4x14mm

E


X10

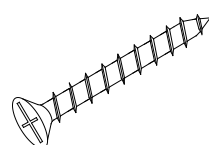

M4x35mm

F

X8

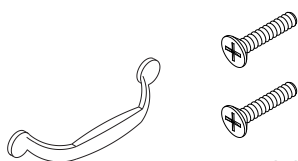

M4x20mm


G

X2



H

X16

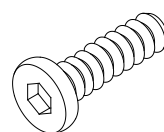

M6x25mm


J

X4




K

X12

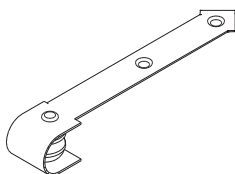


L

X4

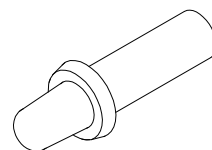


M

X4

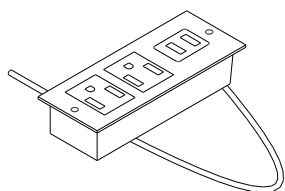


N

X1

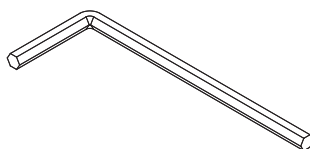

P

X1

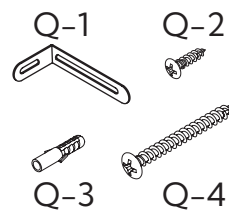


Q




X2

Board Identification

Not actual size

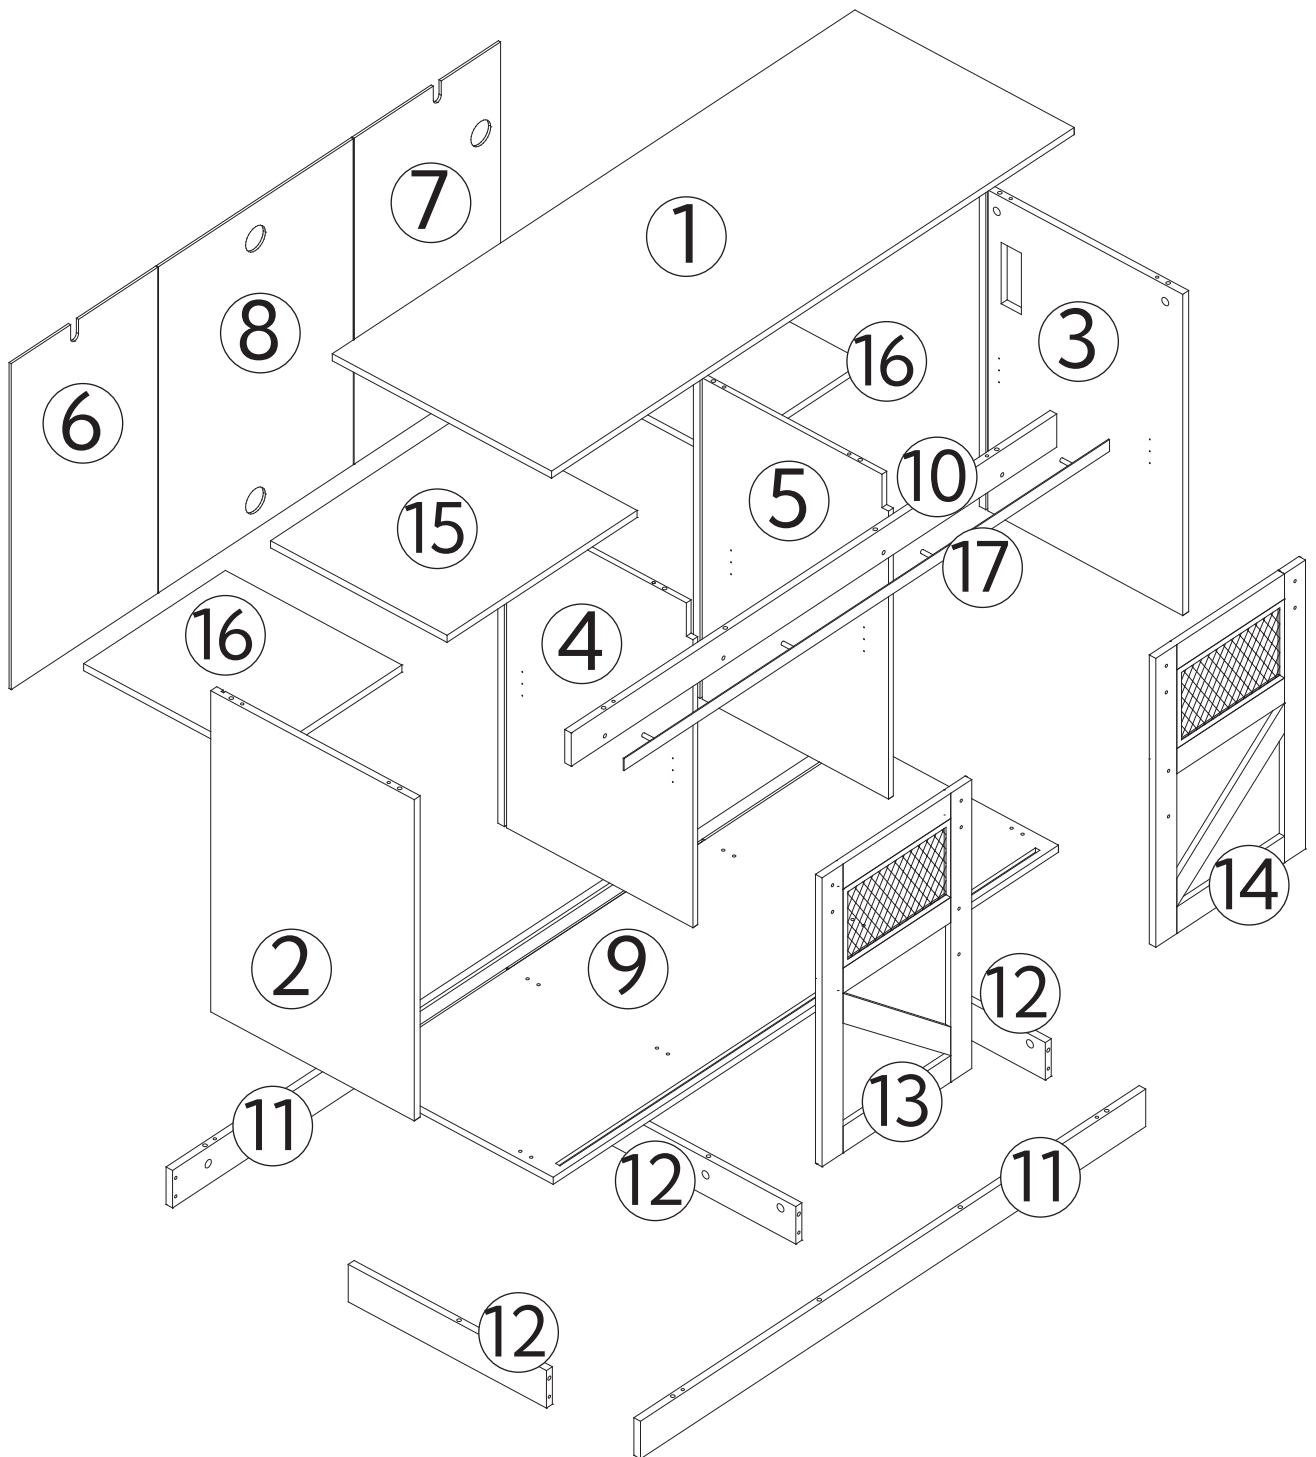

STEP 1

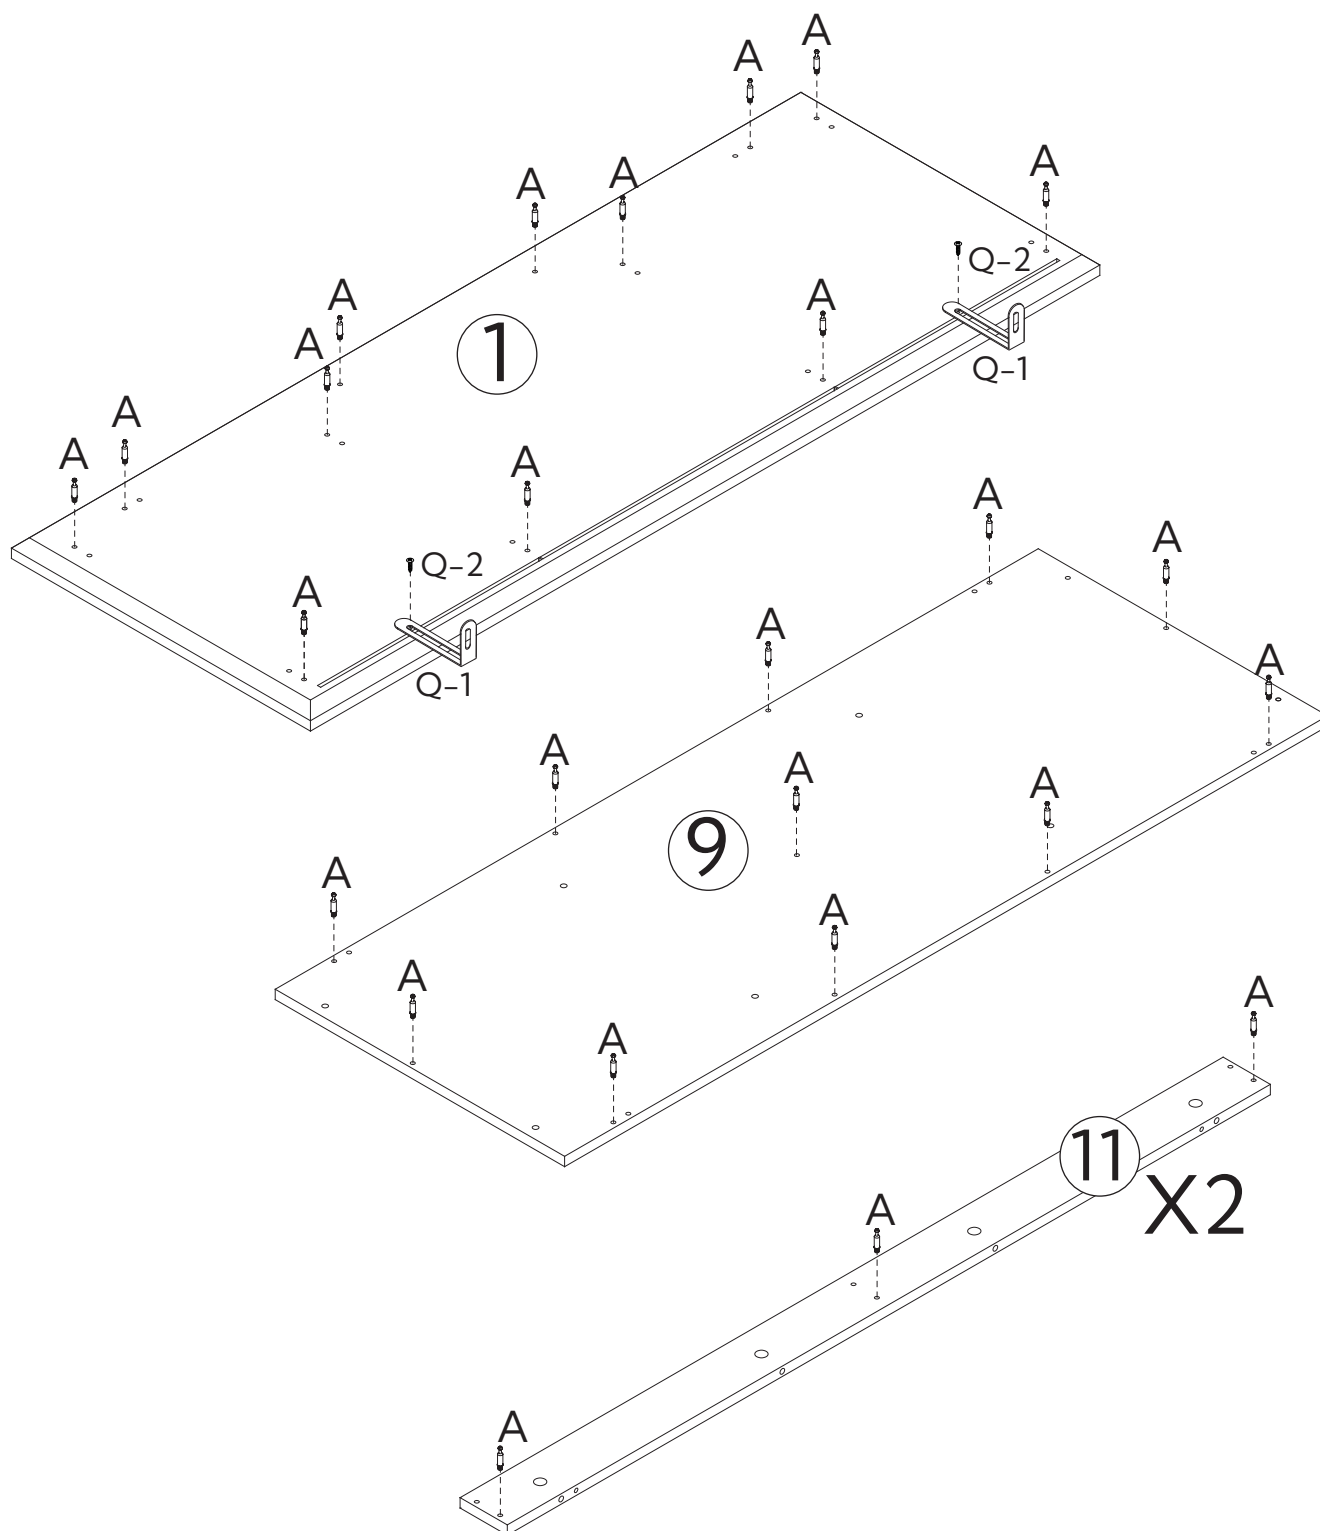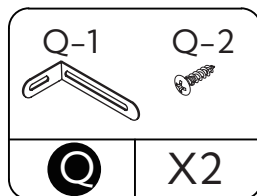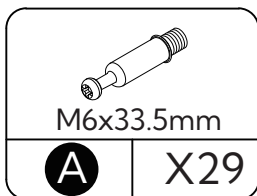

STEP 2



M15x9.5mm

B	X4
----------	----




M6x30mm

C	X2
----------	----




M6x25mm


J	X4
----------	----

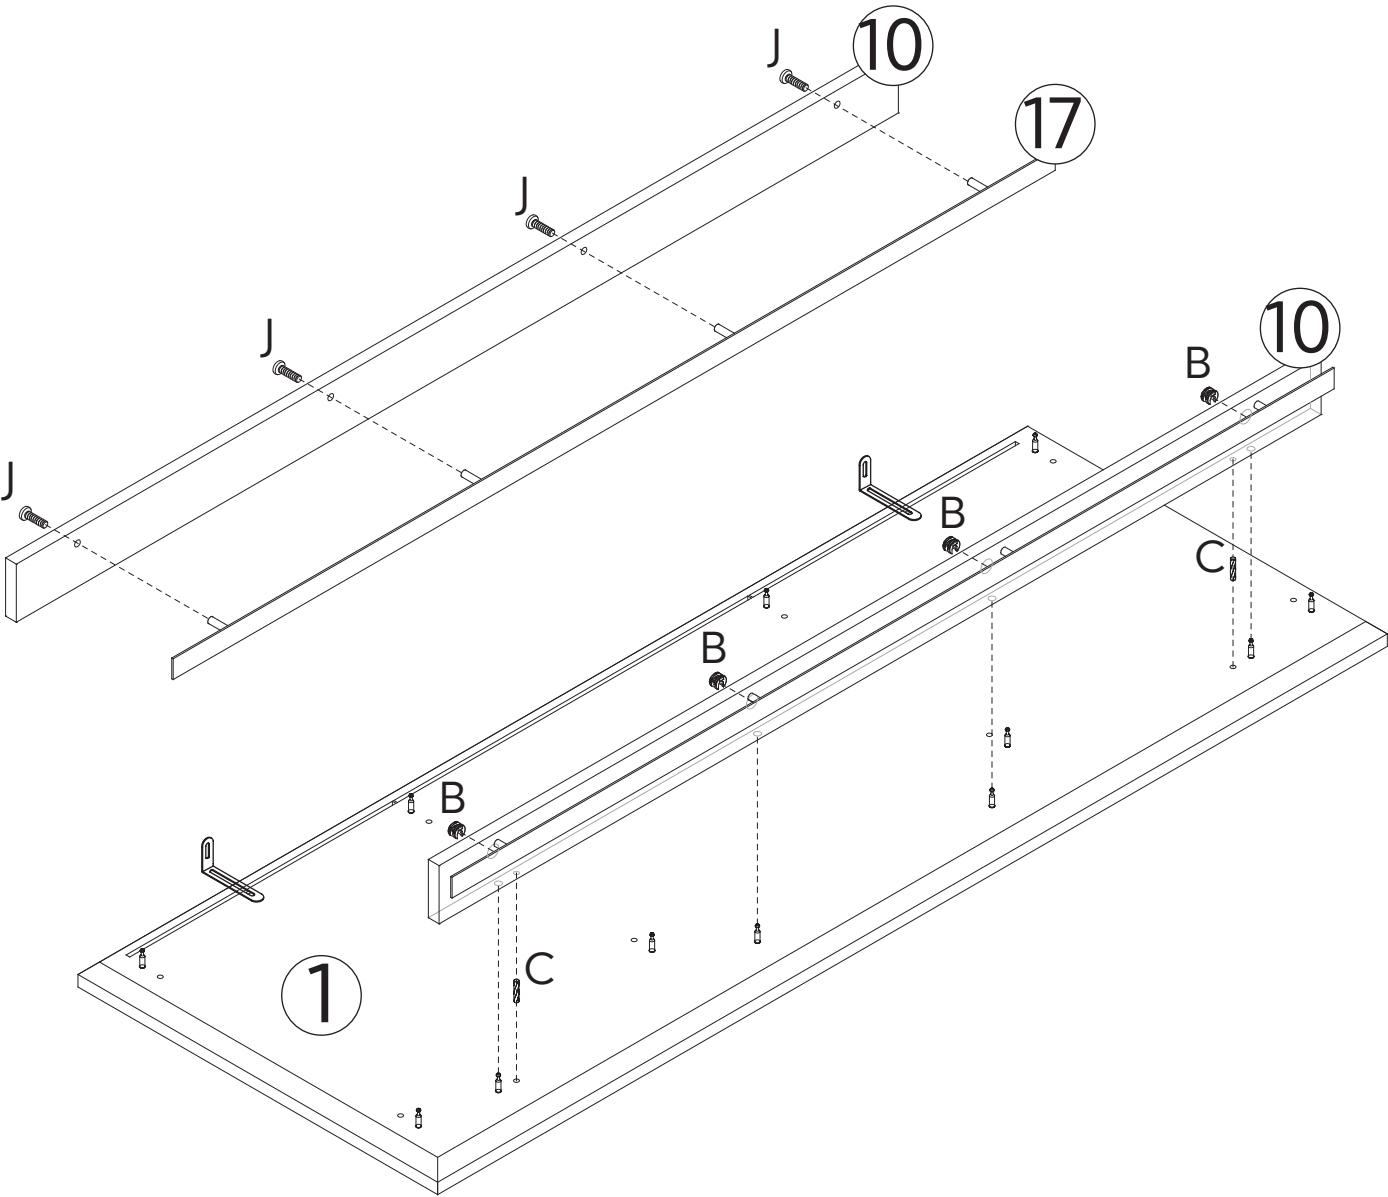




STEP 3

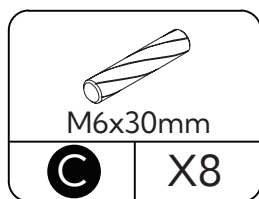




STEP 4

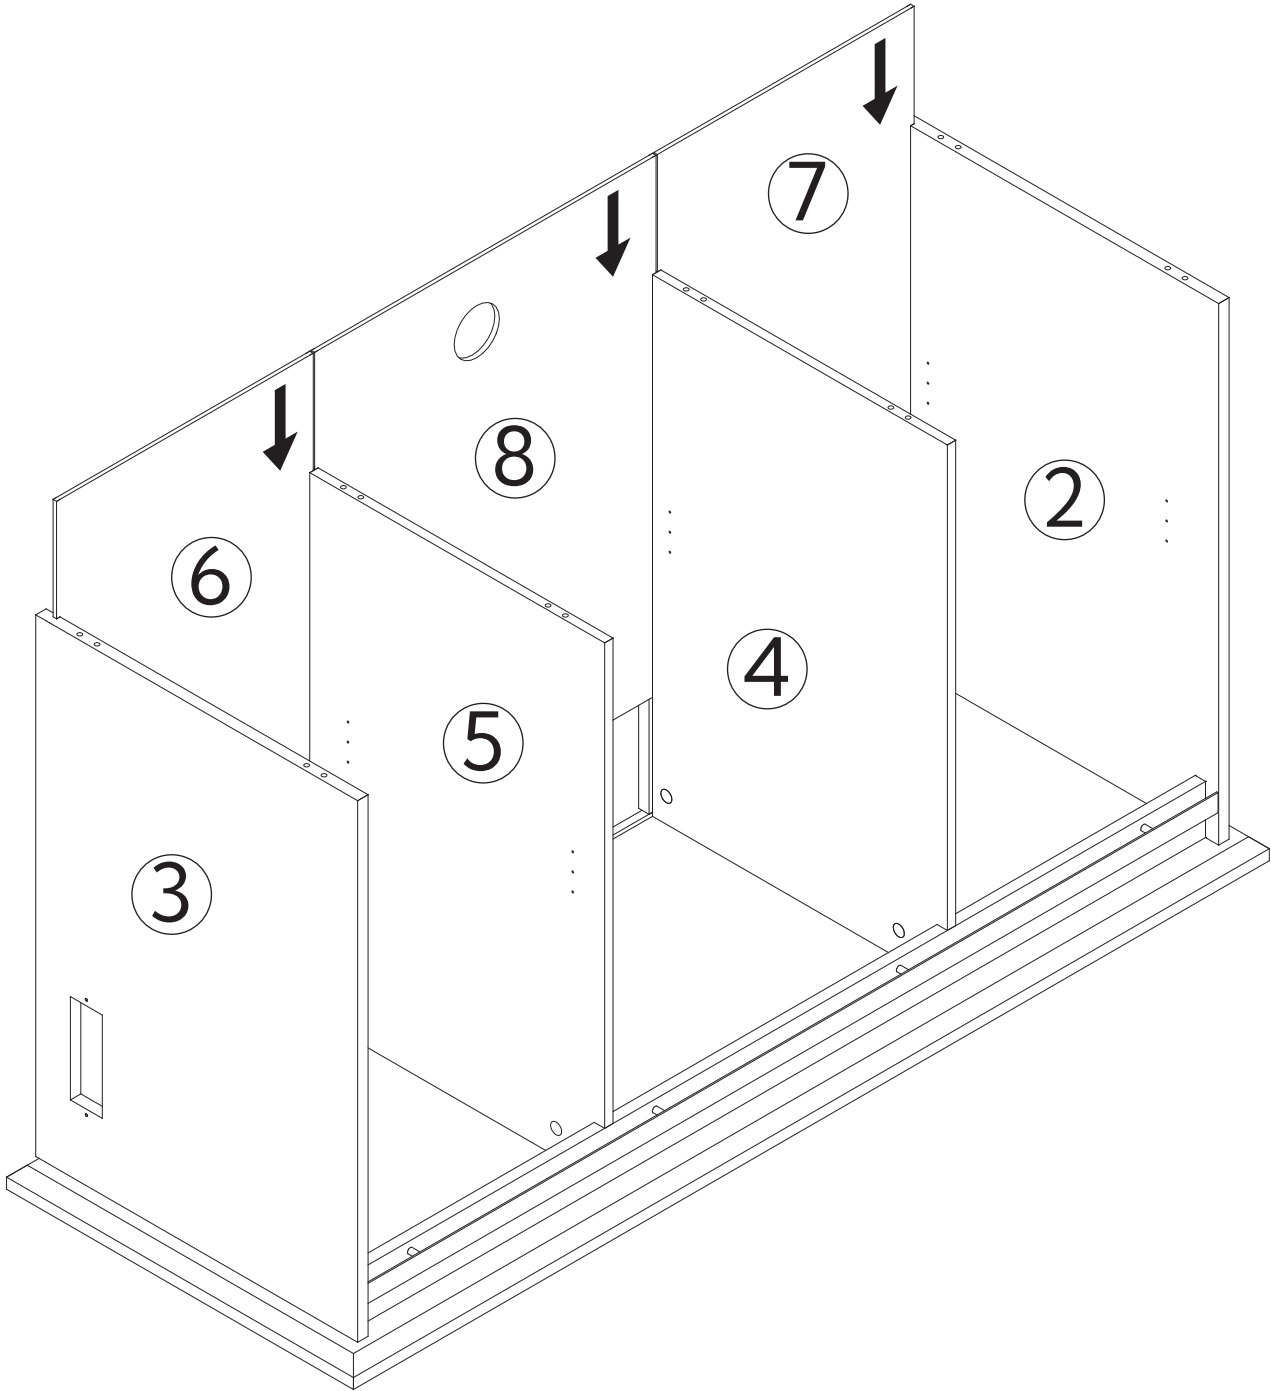



STEP 5

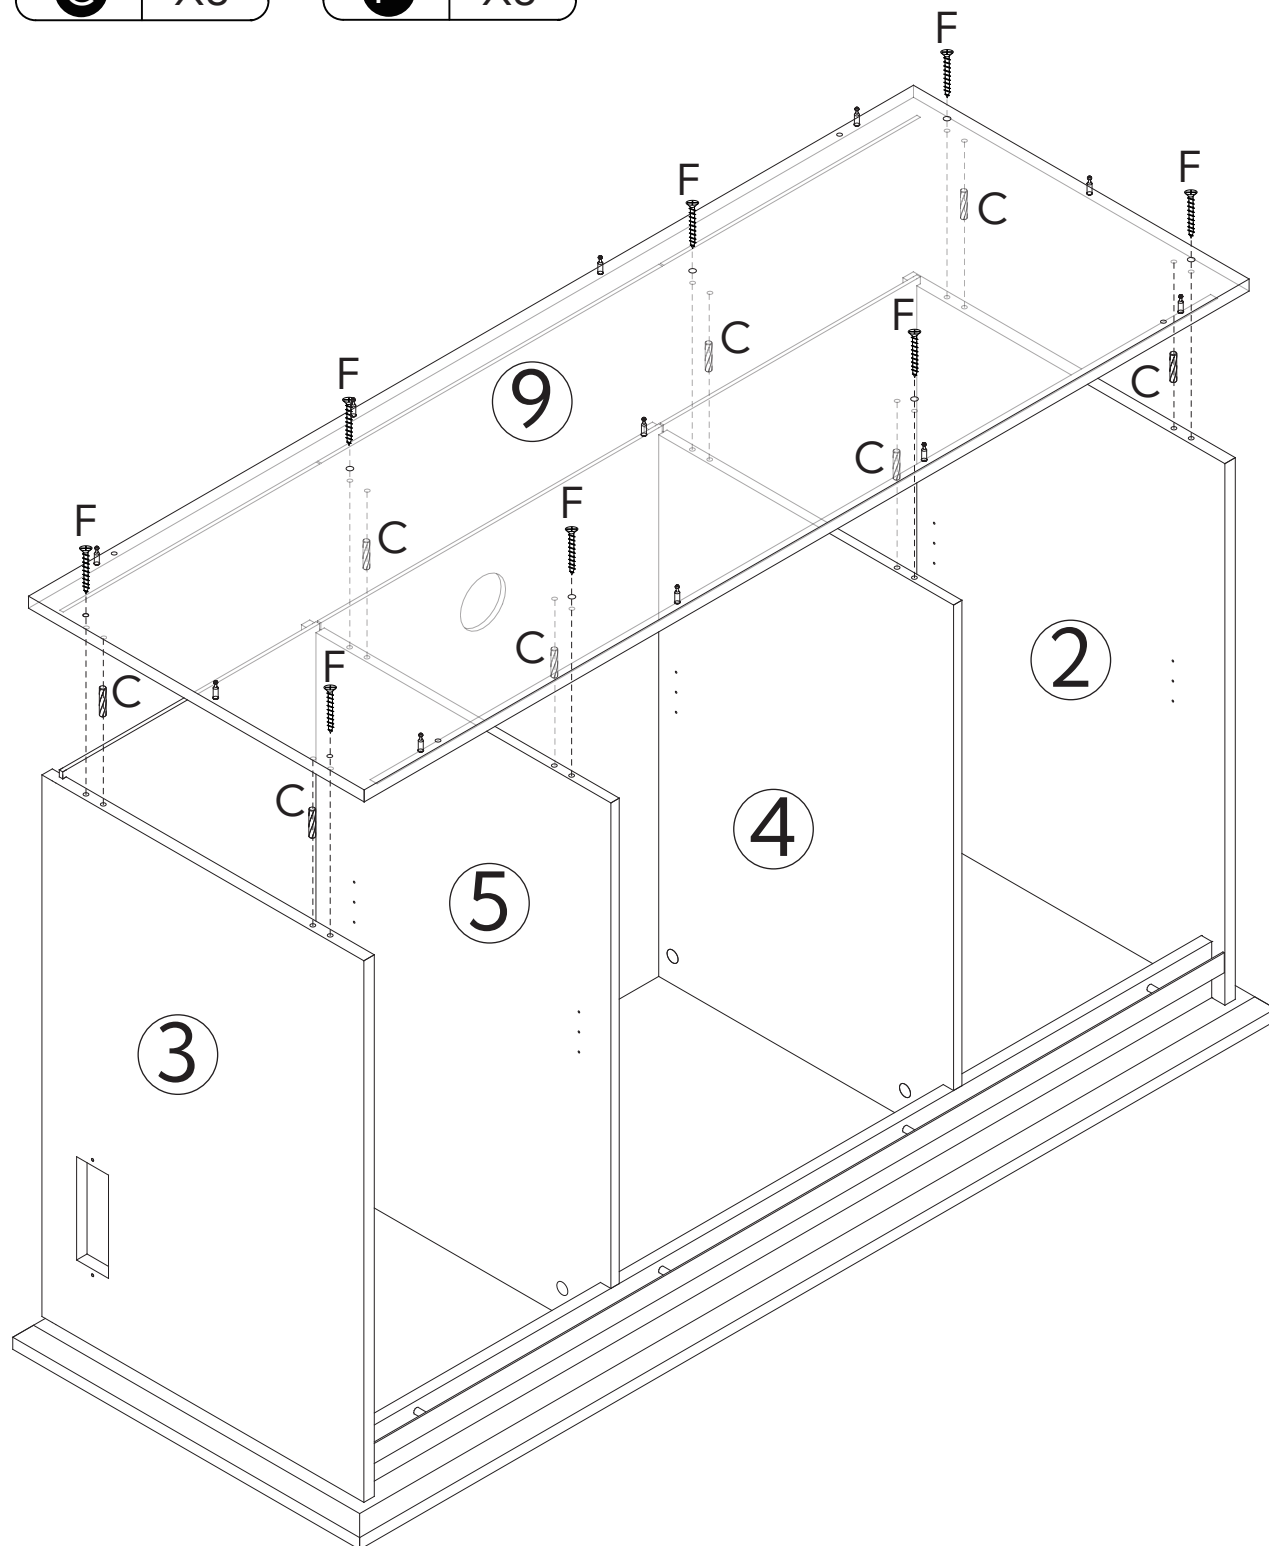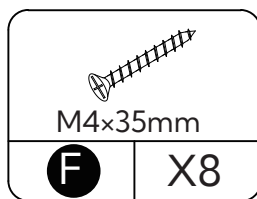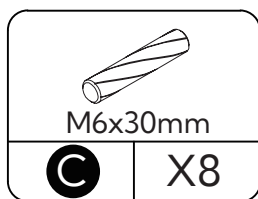


STEP 6

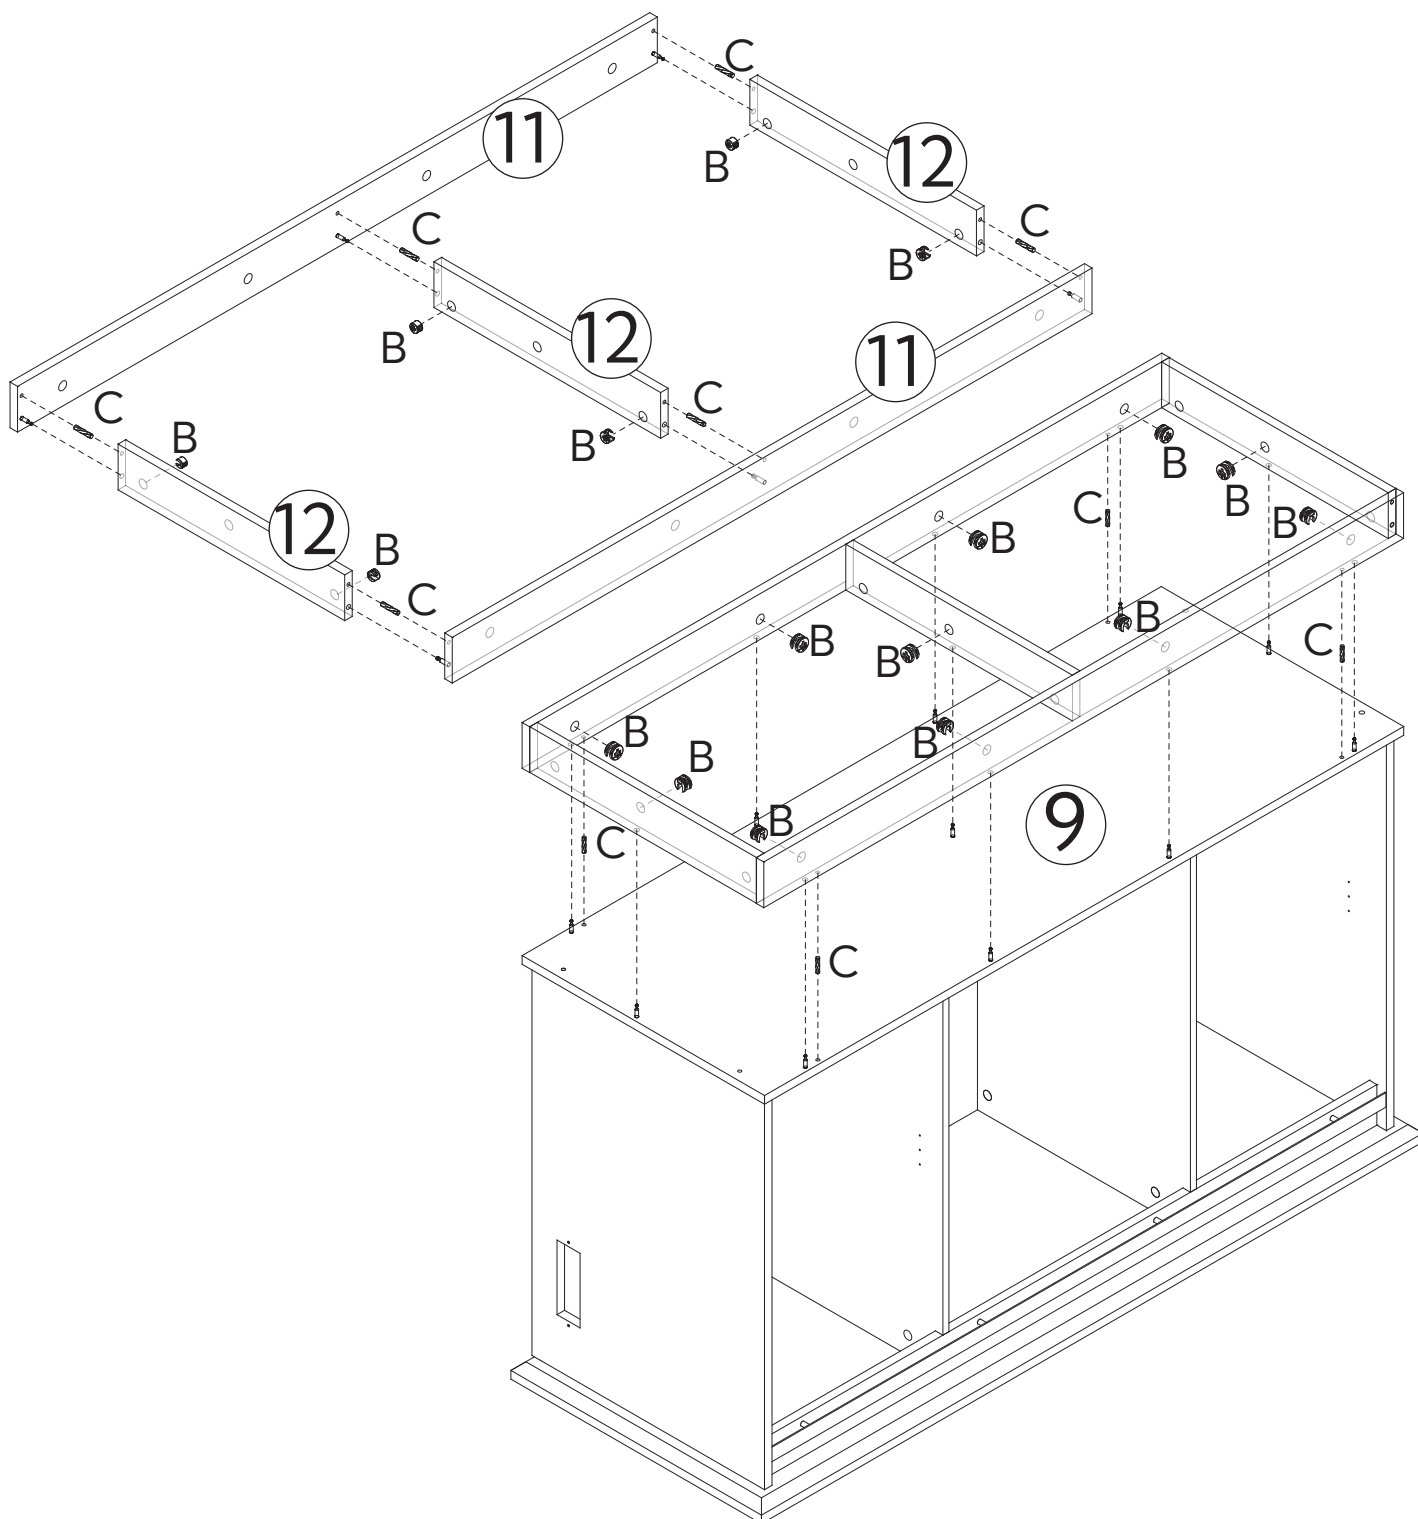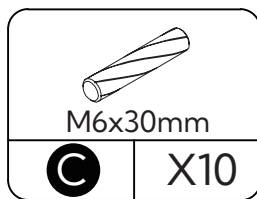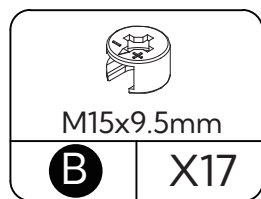





STEP 7

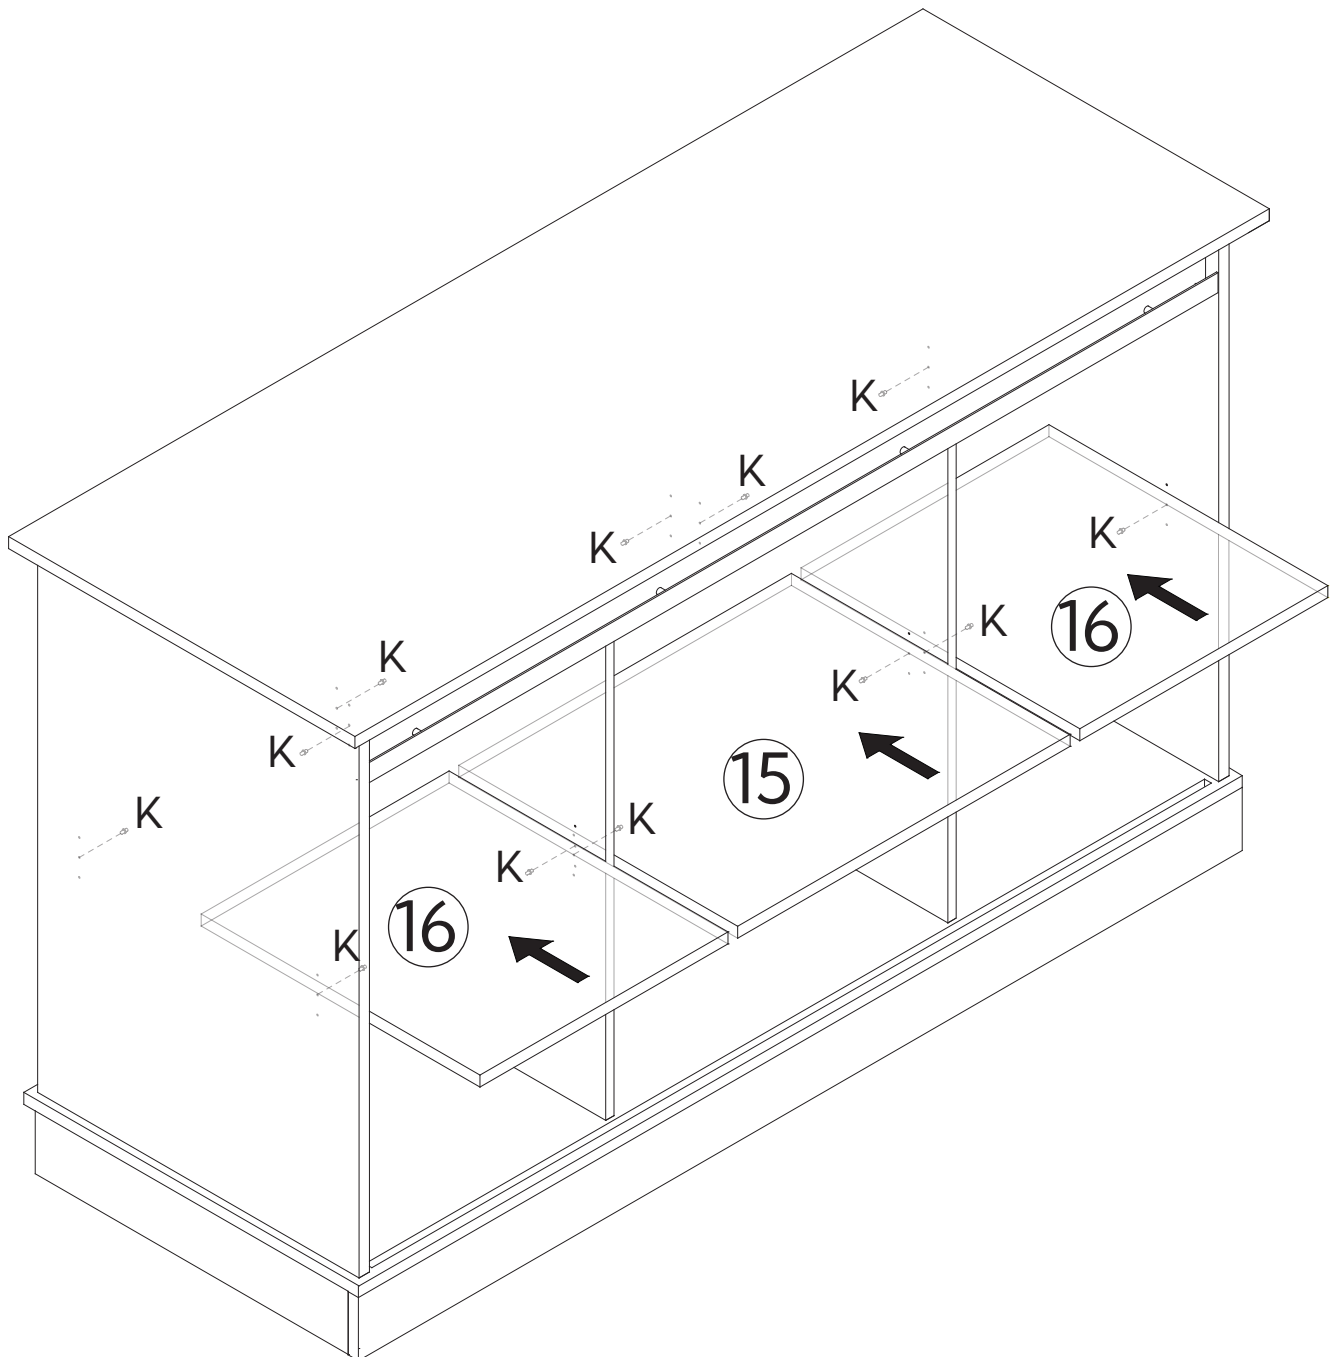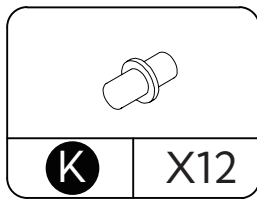



STEP 8

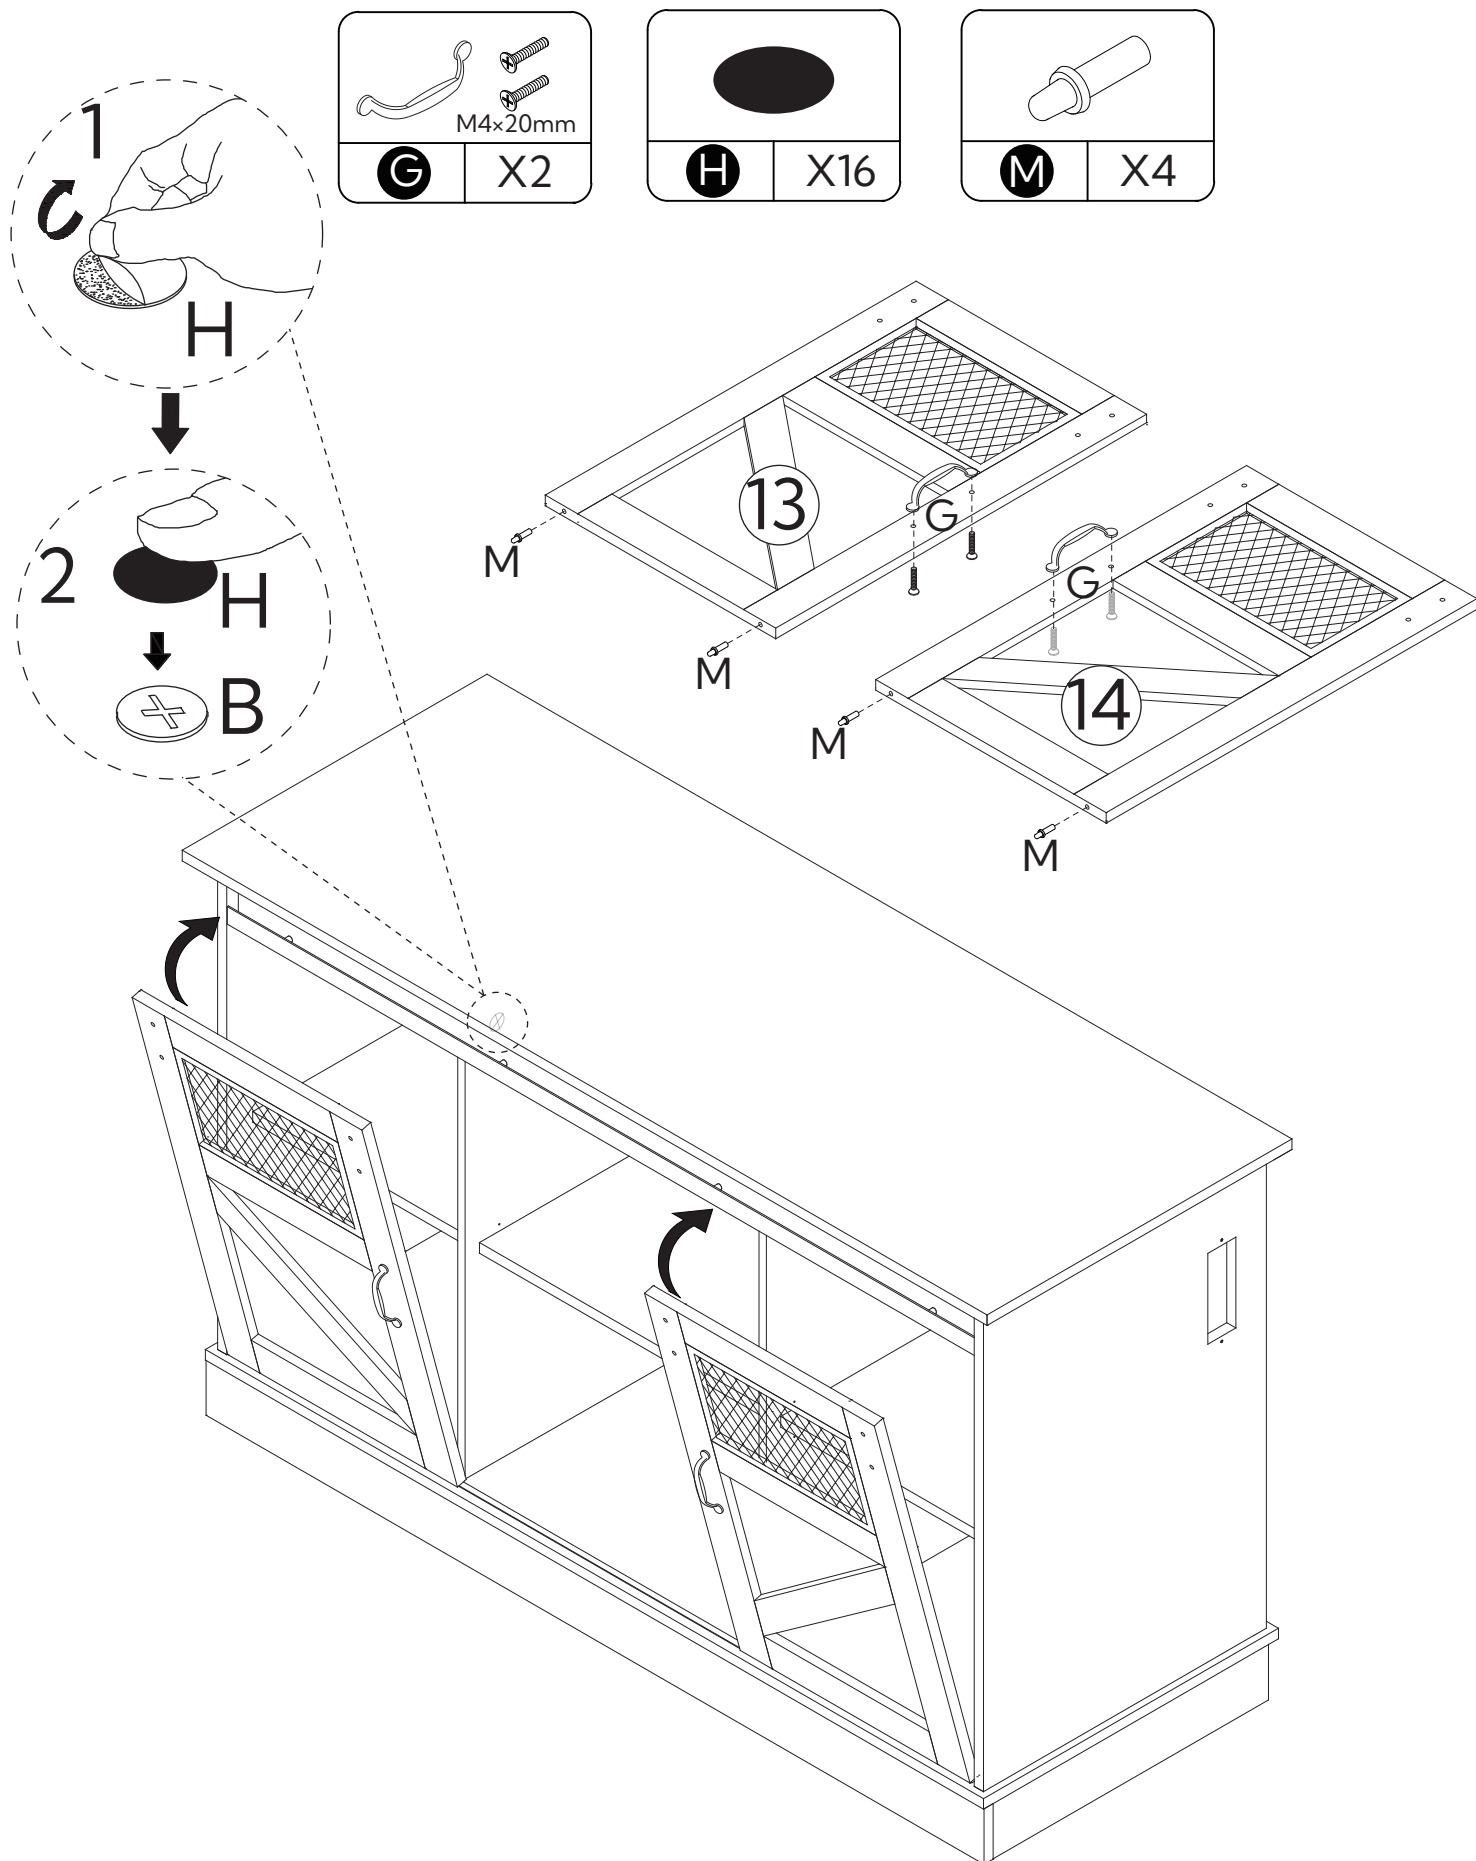

STEP 9

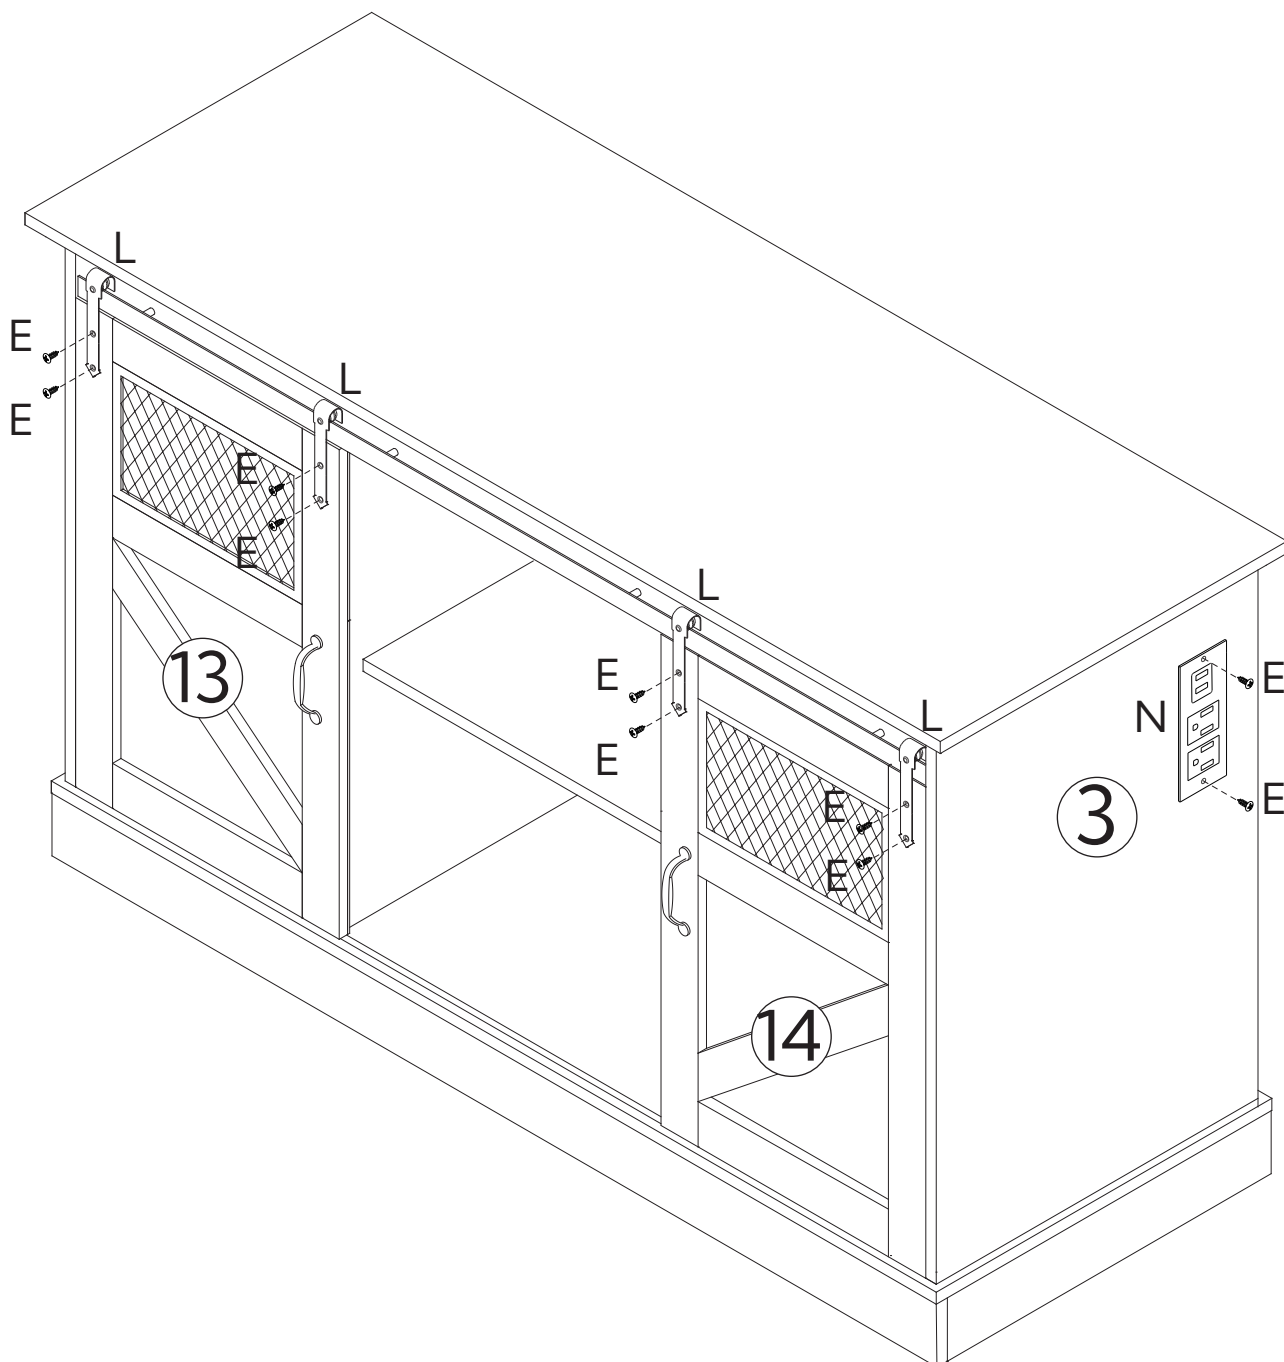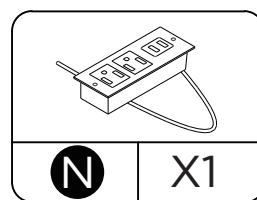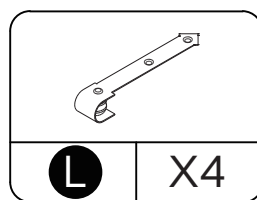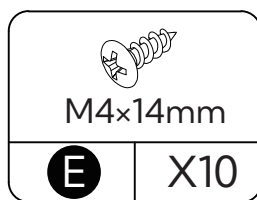


STEP 10

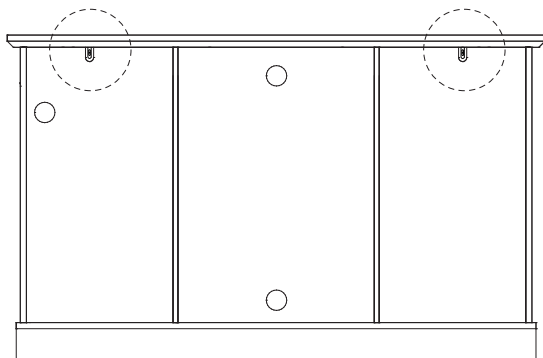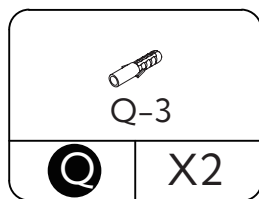


1. Place the cabinet in the desired position, then mark the center of pre-drilled holes on wall with pencil.

Wall



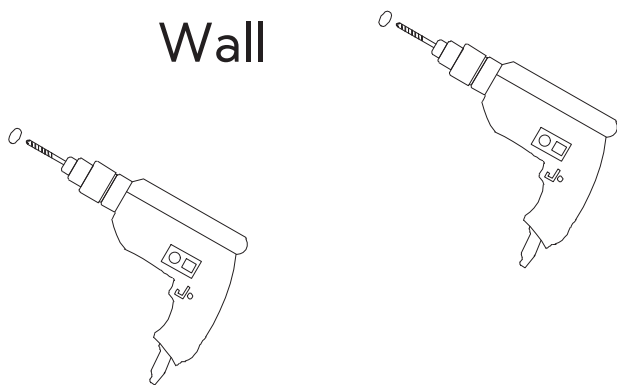


2. Drill holes following the two marks.

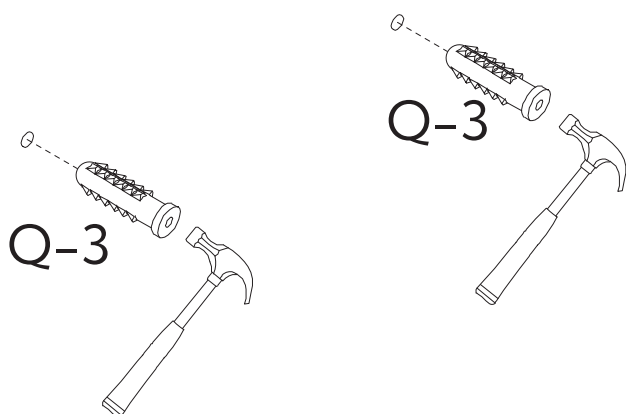

3. Tap the wall anchor (Q1) into the drilled holes with a hammer.

STEP 11

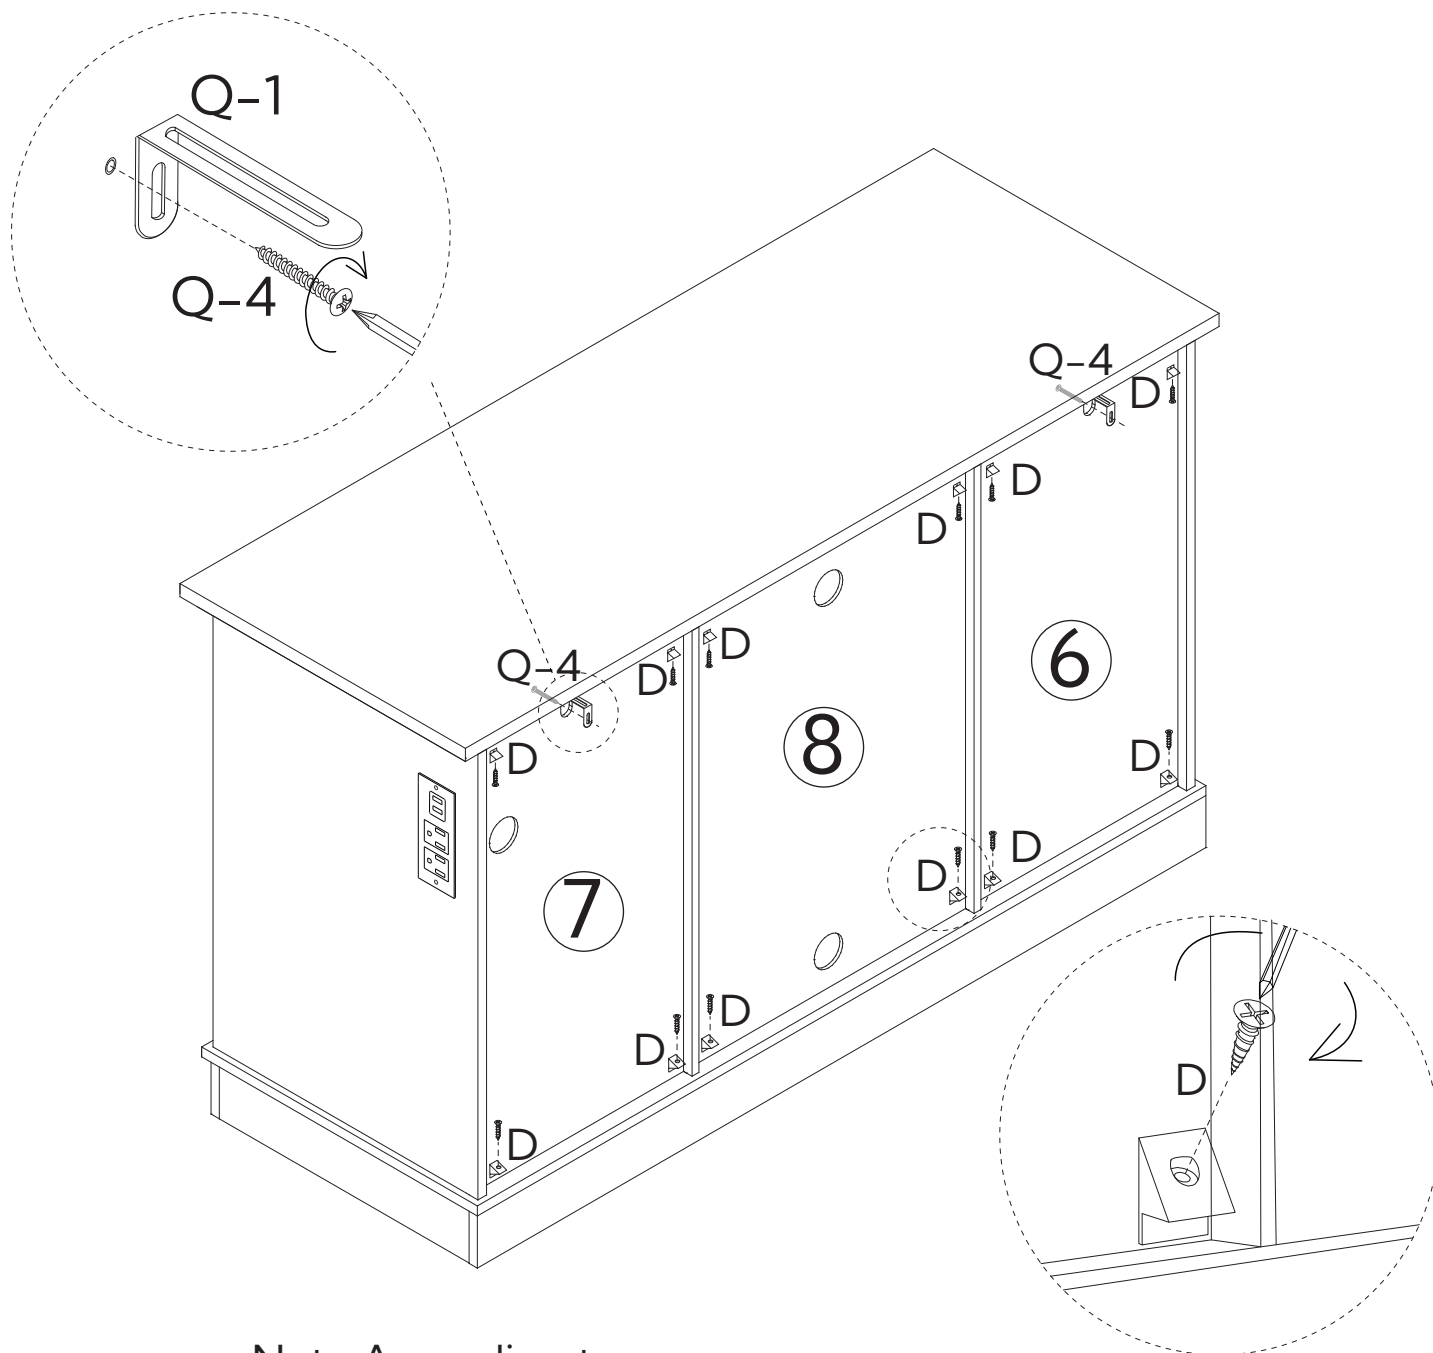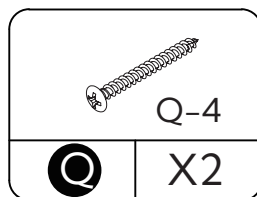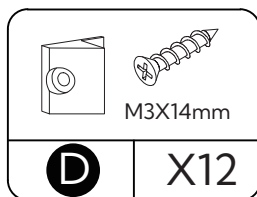

Note: According to the distance between the cabinet and the wall, adjust the Q-1 fitting to the appropriate position. and then tighten all the screw on the Q-1 fitting.