

Notice:


1. Follow the installation instructions. Please confirm all accessories are present before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.



Recommended installers : 2











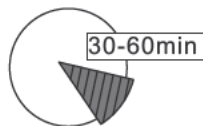













Put a carpet on the floor
before unpacking


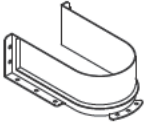






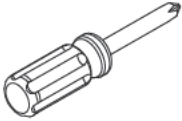






Estimate installation time:
30 minutes

ASSEMBLY INSTRUCTIONS

1		x1	13		x1
2		x1	14		x1
3		x1	15		x1
4		x1	16		x2
5		x1	17		x2
6		x1	18		x1
7		x1	19		x1
8		x1	20		x1
9		x2	21		x1
10		x1	22		x1
11		x1			
12		x1			

ASSEMBLY INSTRUCTIONS



<p>(A)</p>	 $\varnothing 6 \times 26 \text{mm}$	<p>x84</p>	<p>(J)</p>		<p>x1</p>
<p>(B)</p>	 $\varnothing 15 \times 9 \text{mm}$	<p>x84</p>	<p>(K)</p>		<p>x2</p>
<p>(C)</p>	 $\varnothing 3.5 \times 14 \text{mm}$	<p>x101</p>	<p>(L)</p>		<p>x8</p>
<p>(D)</p>		<p>x4</p>	<p>(M)</p>		<p>x1</p>
<p>(E)</p>		<p>x4</p>	<p>(N)</p>		<p>x1</p>
<p>(F)</p>		<p>x4</p>			
<p>(G)</p>		<p>x4</p>			
<p>(H)</p>		<p>x2</p>			
<p>(I)</p>		<p>x6</p>			

ASSEMBLY INSTRUCTIONS


Use the Cam Lock and Eccentric Wheel

ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.

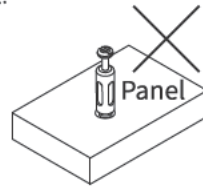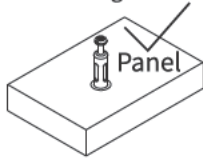

The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

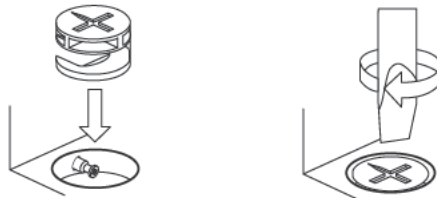

Turn the cam lock clockwise to tighten

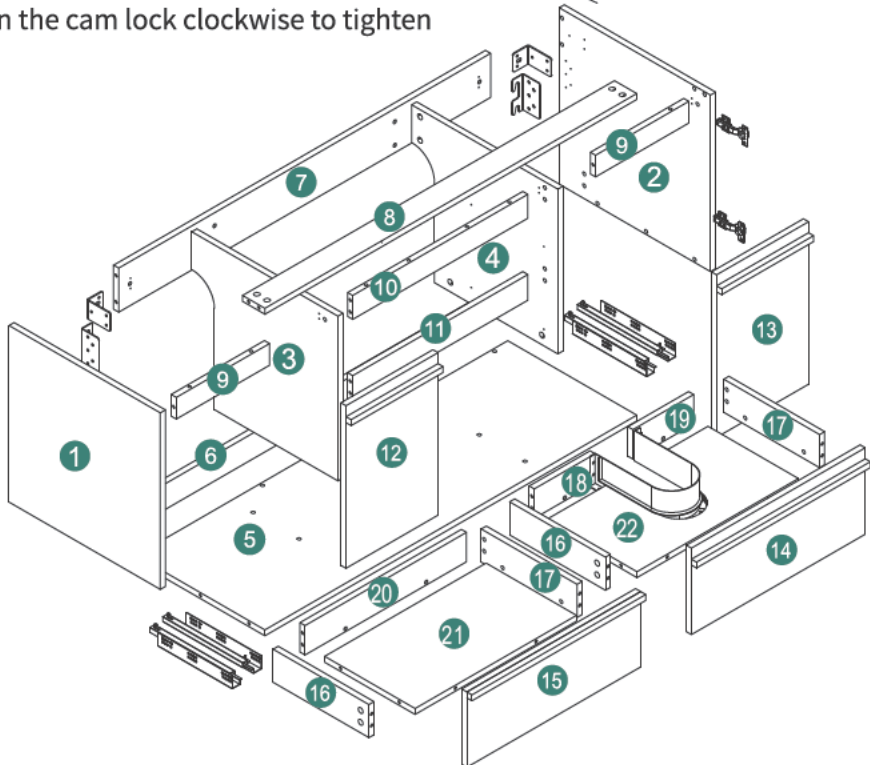

ASSEMBLY INSTRUCTIONS



1



(A) 84 pcs






The floor needs to be covered with paper or carpet protective material before installation!

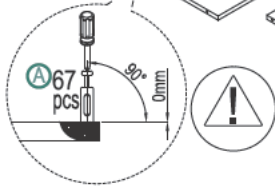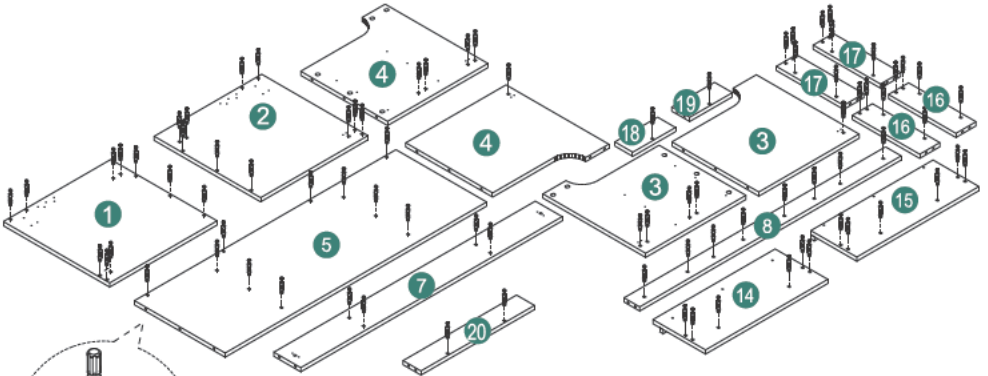

2



(B) 52 pcs

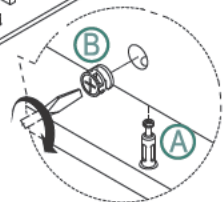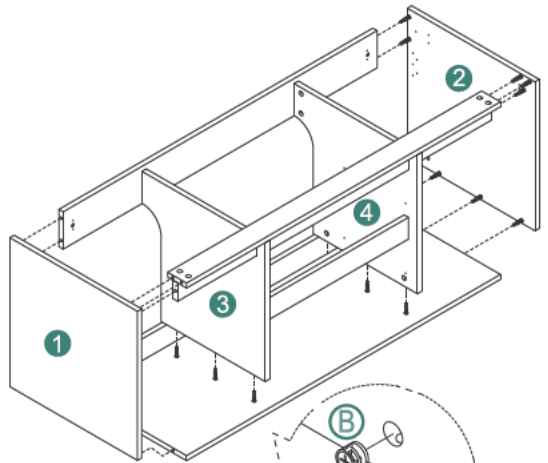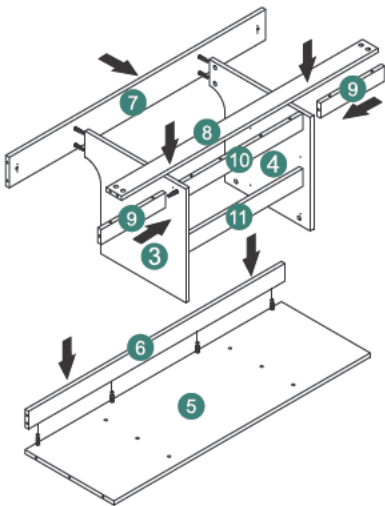

5

ASSEMBLY INSTRUCTIONS

3



C 56 pcs






I 6 pcs



H 2 pcs



K 2 pcs

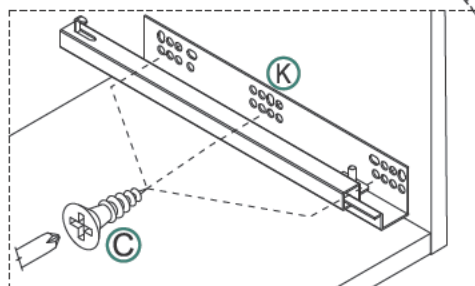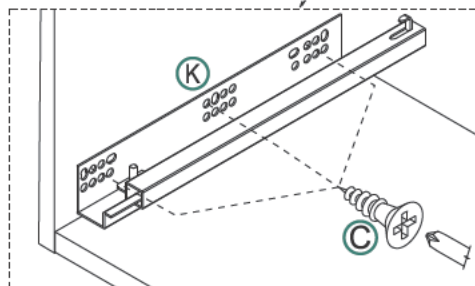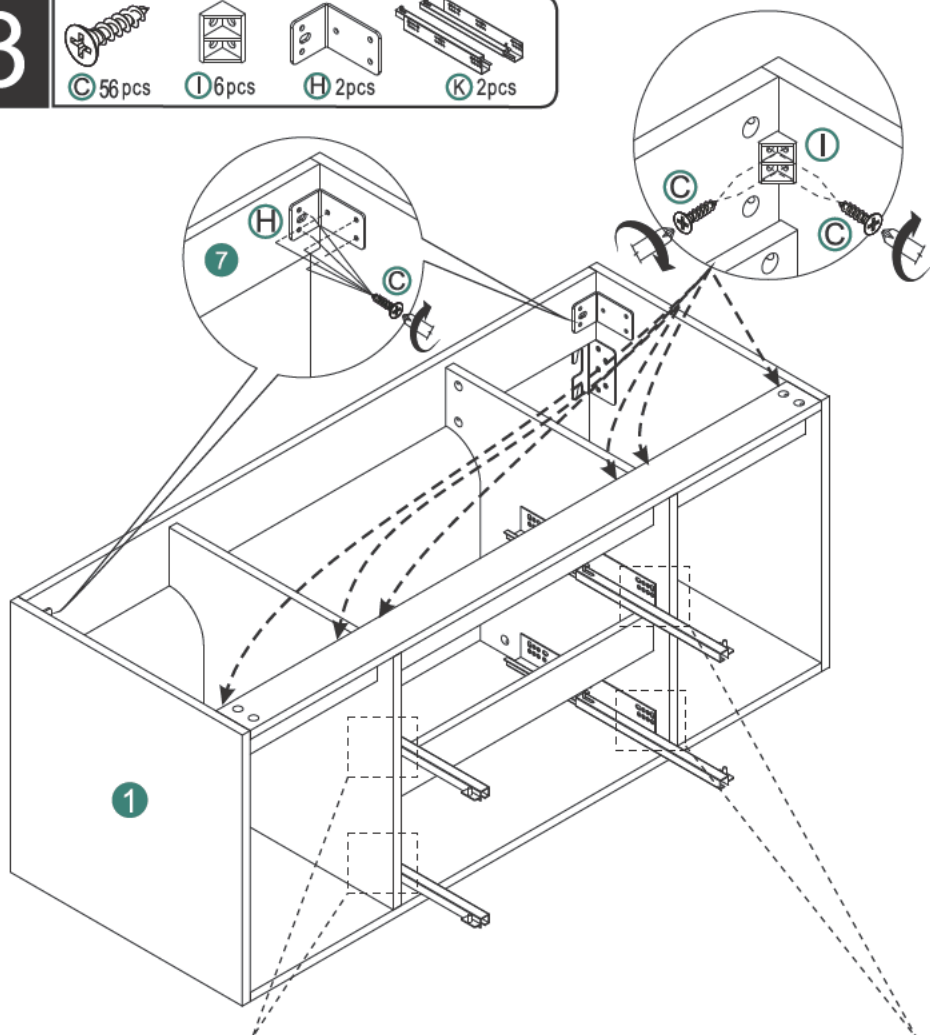

6

ASSEMBLY INSTRUCTIONS

4



B 32 pcs



D 4 pcs










J 1 pcs



C 21 pcs



L 12 pcs

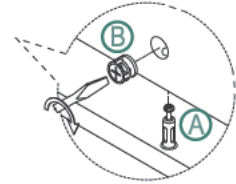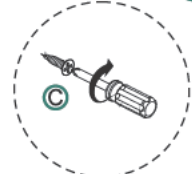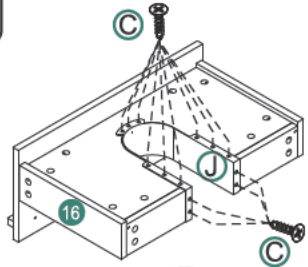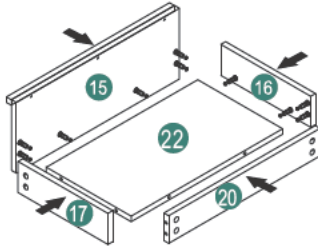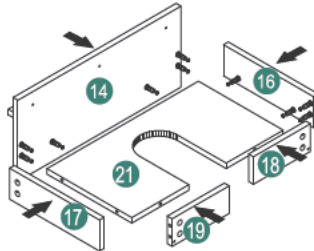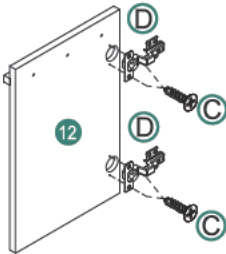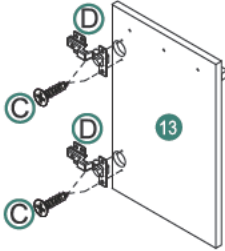


5



E 4 pcs



Bring your own tools

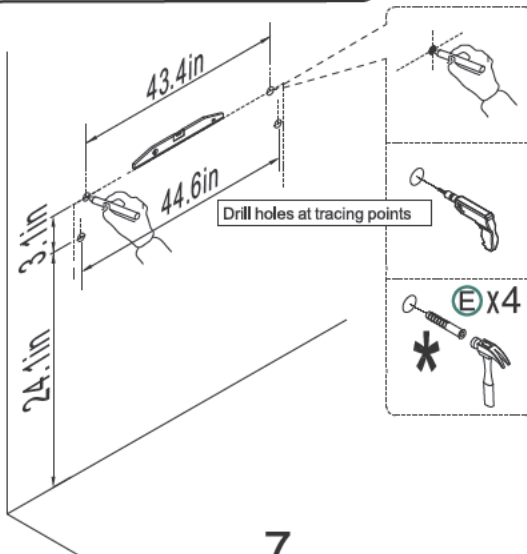


7

ASSEMBLY INSTRUCTIONS



6

 **C** 24pcs
 **F** 4pcs
 **G** 4pcs

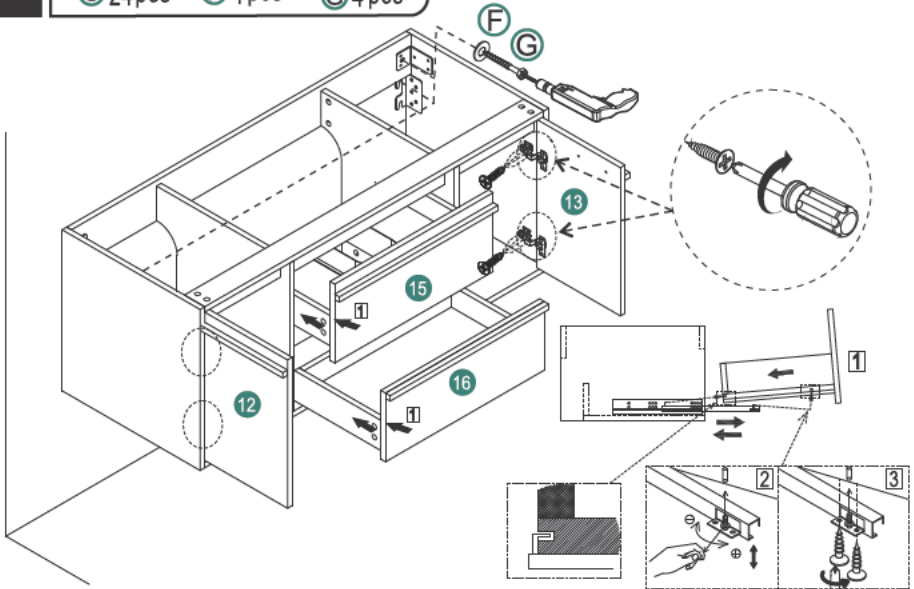

7

 **L** 8pcs
 **M** 1pcs

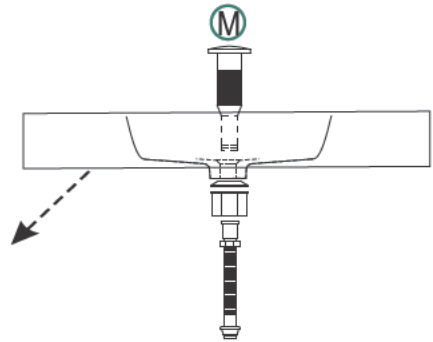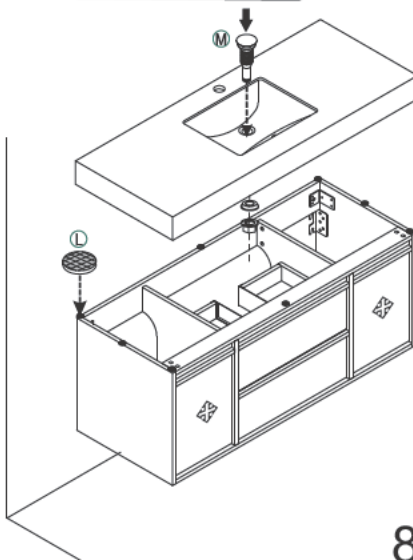

HOW TO ADJUST HINGES (if required)



DRAWERS REMOVAL & RE-INSTALLATION (if required)

REMOVAL

RE-INSTALLATION

8