

Assembly Instructions Cases

1 Hardware in this Box.





80mm Bolts
x 4



Allen Key
x 1

2 Assembly of the feet.

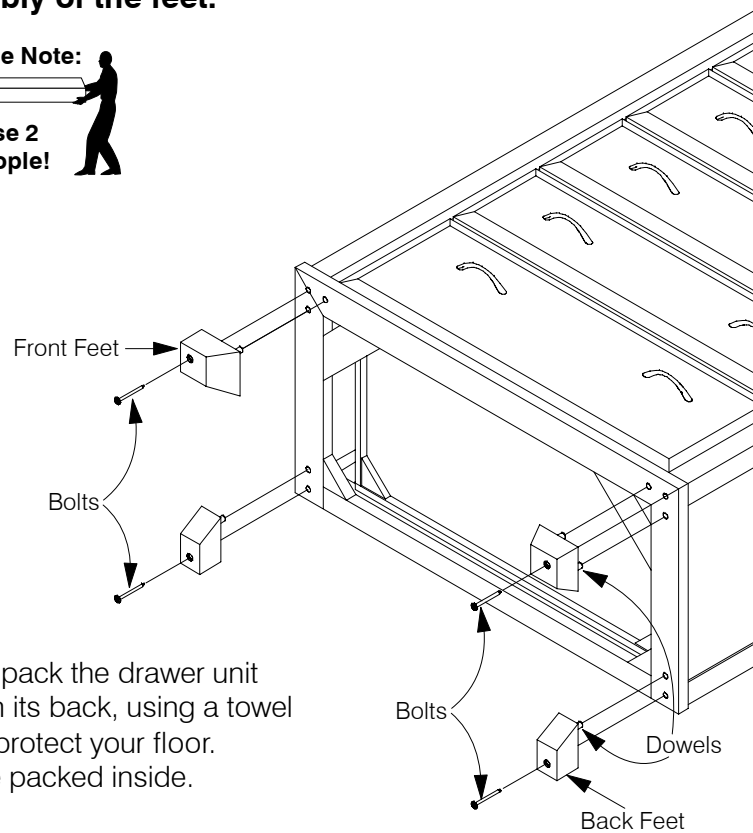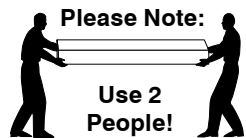

Carefully unpack the drawer unit and lay it on its back, using a towel or sheet to protect your floor. The feet are packed inside.

!!! Be careful not to tip the unit forward, as the drawers can slide open unexpectedly.

Assembly Instructions Cases

1 Hardware in this Box.




80mm Bolts
x 4



Allen Key
x 1

2 Assembly of the feet.

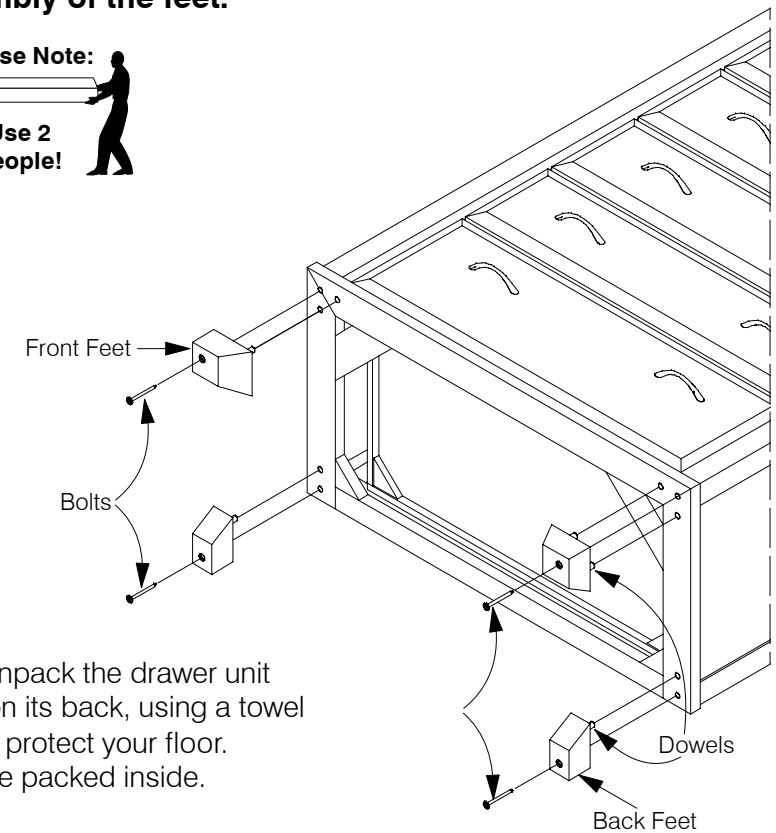

Carefully unpack the drawer unit and lay it on its back, using a towel or sheet to protect your floor. The feet are packed inside.

!!! Be careful not to tip the unit forward, as the drawers can slide open unexpectedly.