

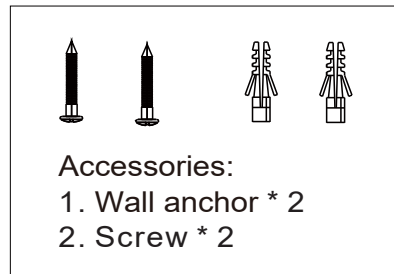


# Installation instructions


ITEM:DM-12-R60 (24in.)

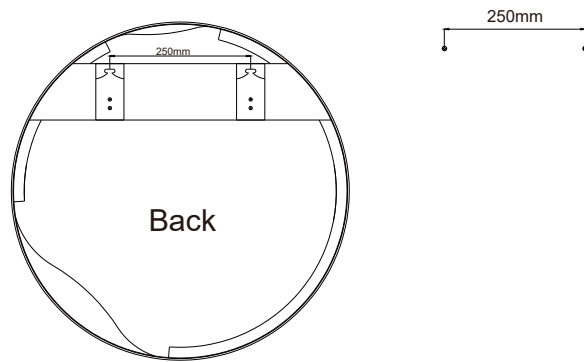


1.Punch 2 holes in the wall with an electric drill at the proper height, leaving a hole spacing of 250mm.

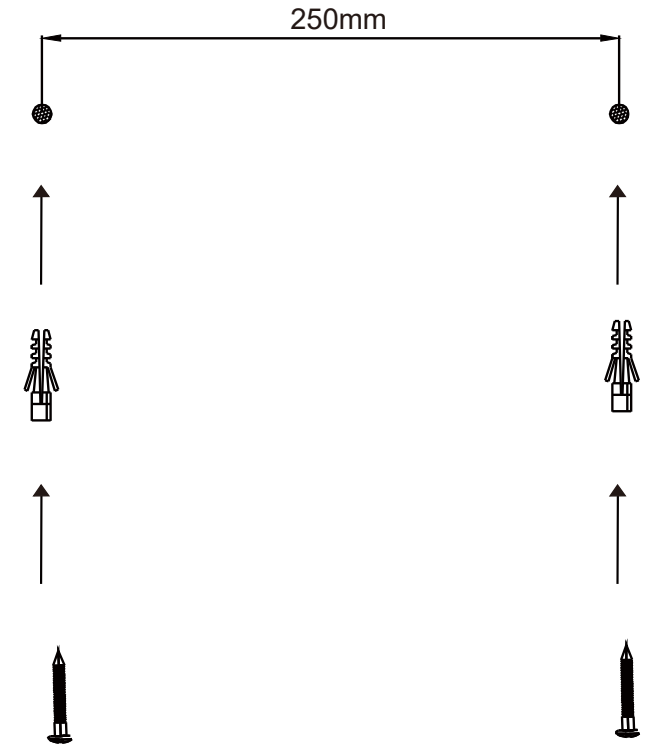

2.Insert the wall anchors and install the screws.

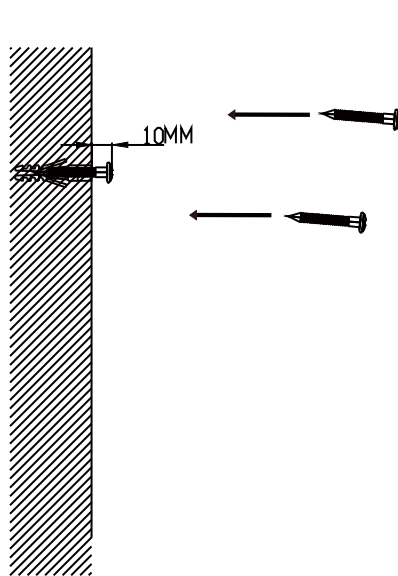

3. Make sure to leave a 10mm gap between the screw head and the wall.

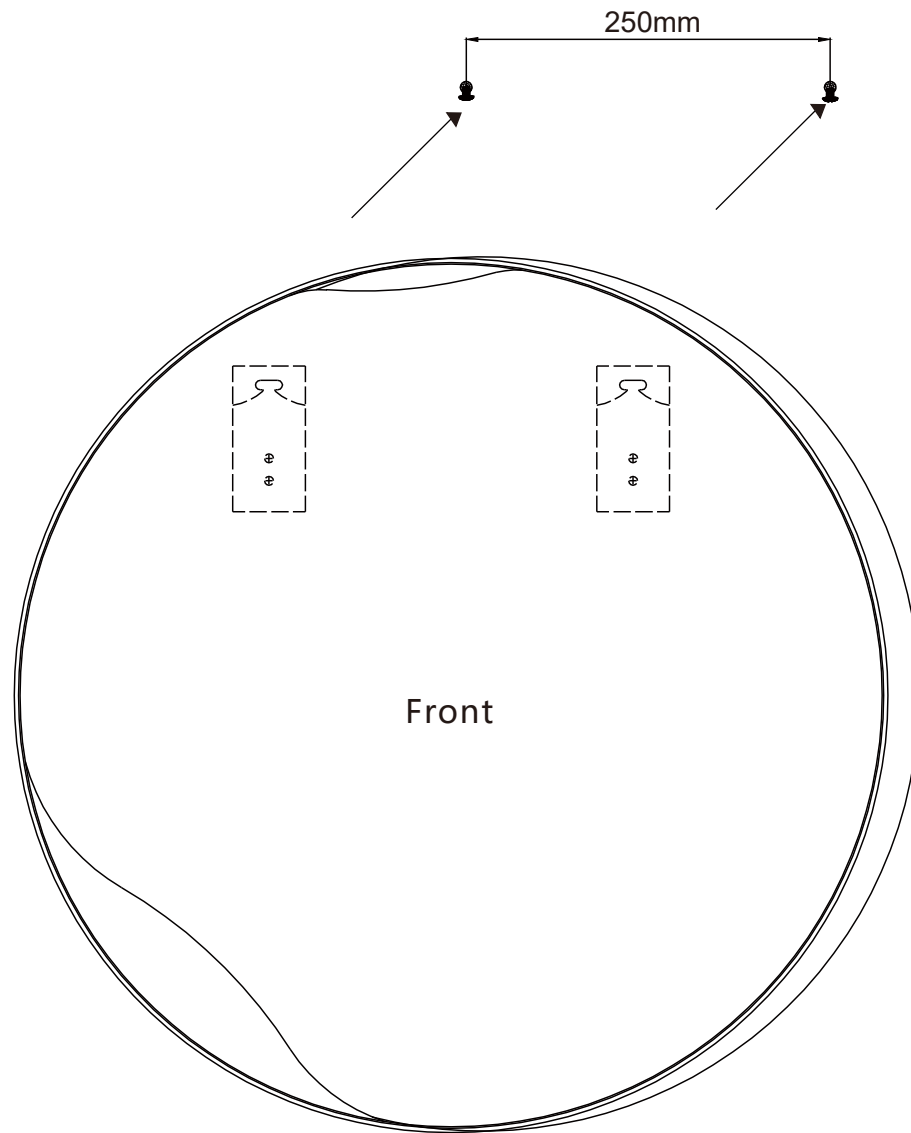

4. Align the mounting holes on the back of the mirror to the screw heads and hang the mirror. Ensure that the mirror hangs securely before loosening your grip.