


ASSEMBLY INSTRUCTIONS

EEI-6250

V1.10.03.23

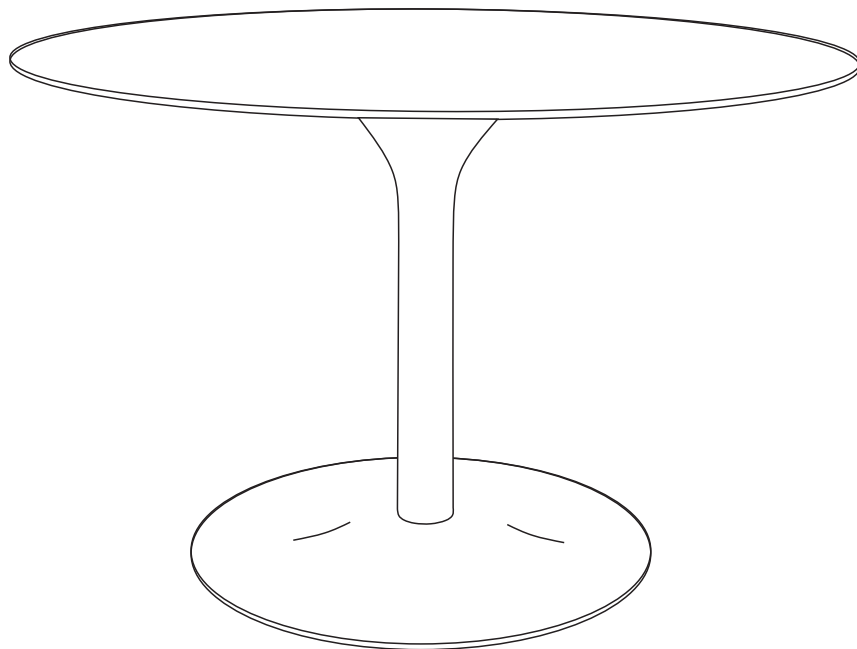

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 30 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

A	Pedestal	x1
B	Metal Plate	x1
C	Table Top	x1
D	Base	x1
E	Bottom Plate	x1

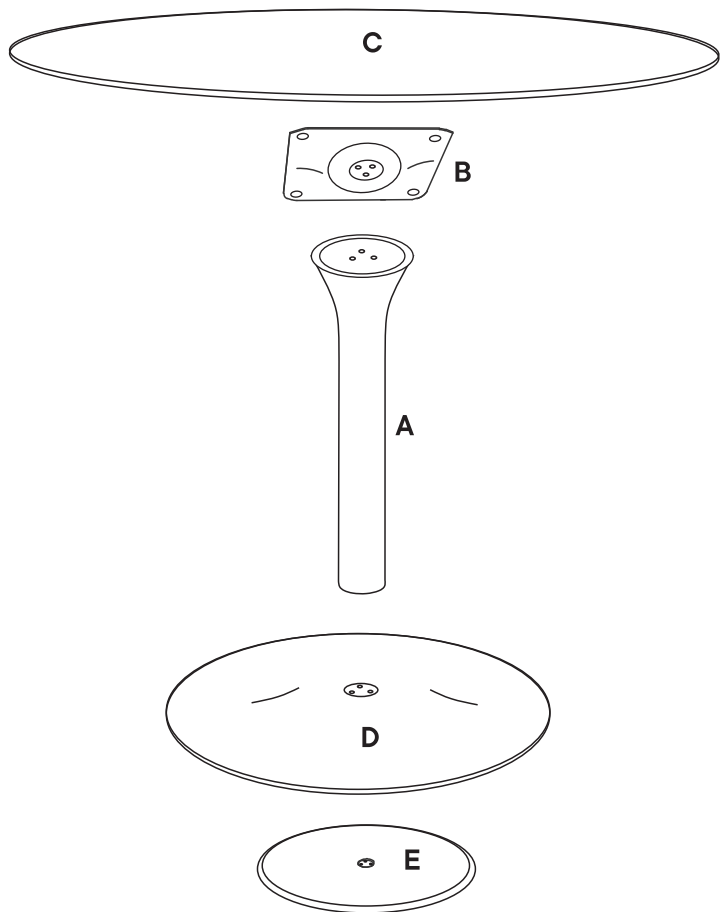

Provided hardware:

F		Bolt M8 x 30mm	x6
G		Bolt M8 x 20mm	x4
H		Bolt M10 x 100mm	x1
I		Flat Washer Ø19	x10
J		Spring Washer Ø15	x4
K		Allen Wrench M8	x1
L		Allen Wrench M10	x1


Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Step 1

Before Assembly...

The **Base (D)**, **Bottom Plate (E)** and **Metal Plate (B)** are assembled together by **Bolt** and **Nut** during packaging. Please firstly loosen the **Bolt** and **Nut**, discard the **Bolt** and **Nut** which are no use keep the **Base (D)** **Bottom Plate (E)** and **Metal Plate (B)** for use to complete the whole assembly.

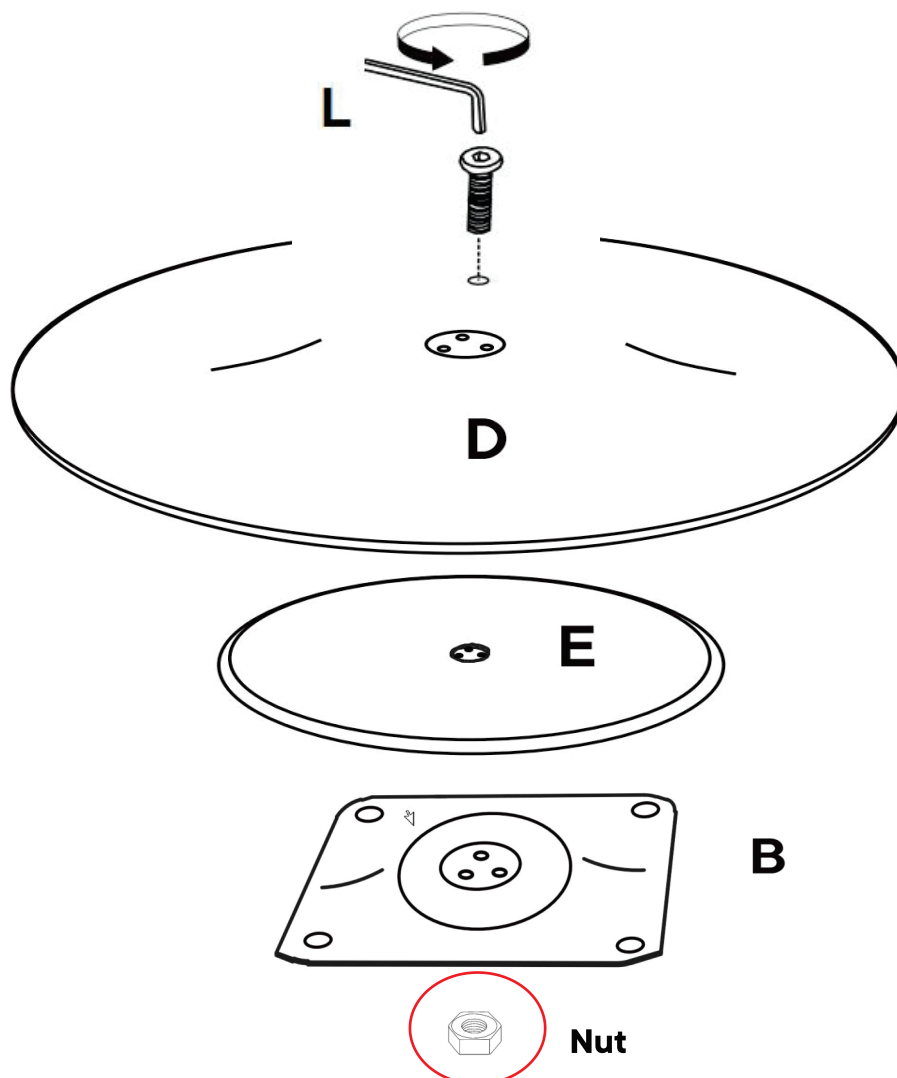


Step 2

COMPONENTS

A	Pedestal	x1
B	Metal Plate	x1

HARDWARE

F	Bolt M8 x 30mm	x3
I	Flat Washer Ø19	x3
K	Allen Wrench M8	x1

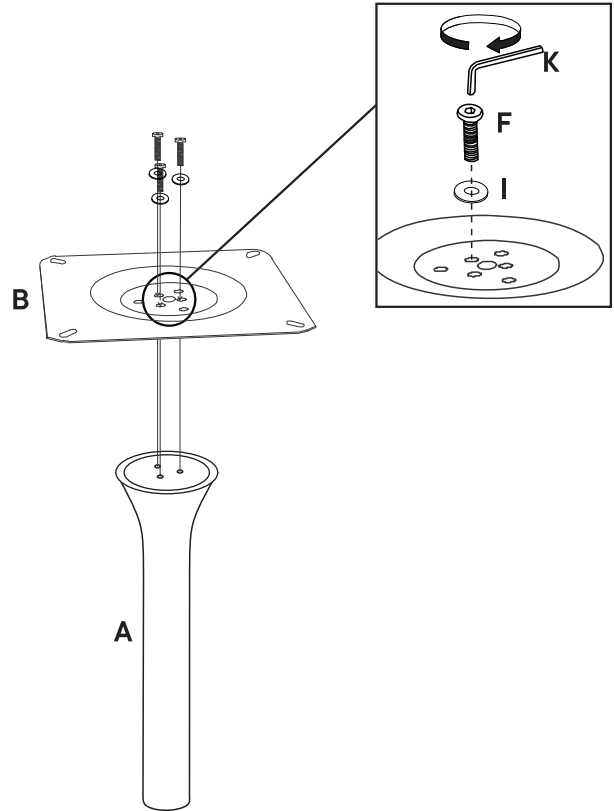


Step 3

COMPONENTS

A	Pedestal	x1
B	Metal Plate	x1
C	Table Top	x1

HARDWARE

G	Bolt M8 x 20mm	x4
I	Flat Washer Ø19	x4
J	Spring Washer Ø15	x4
K	Allen Wrench M8	x1

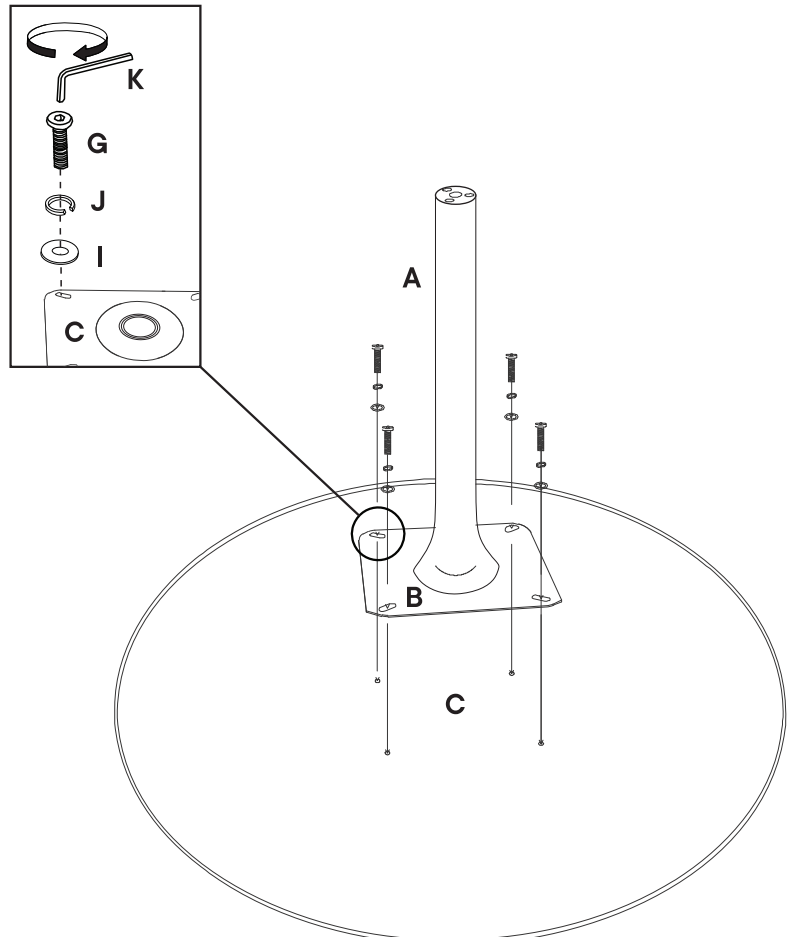


Step 4

COMPONENTS

A	Pedestal	x1
D	Base	x1

HARDWARE

F	Bolt M8 x 30mm	x3
I	Flat Washer Ø19	x3
K	Allen Wrench M8	x1

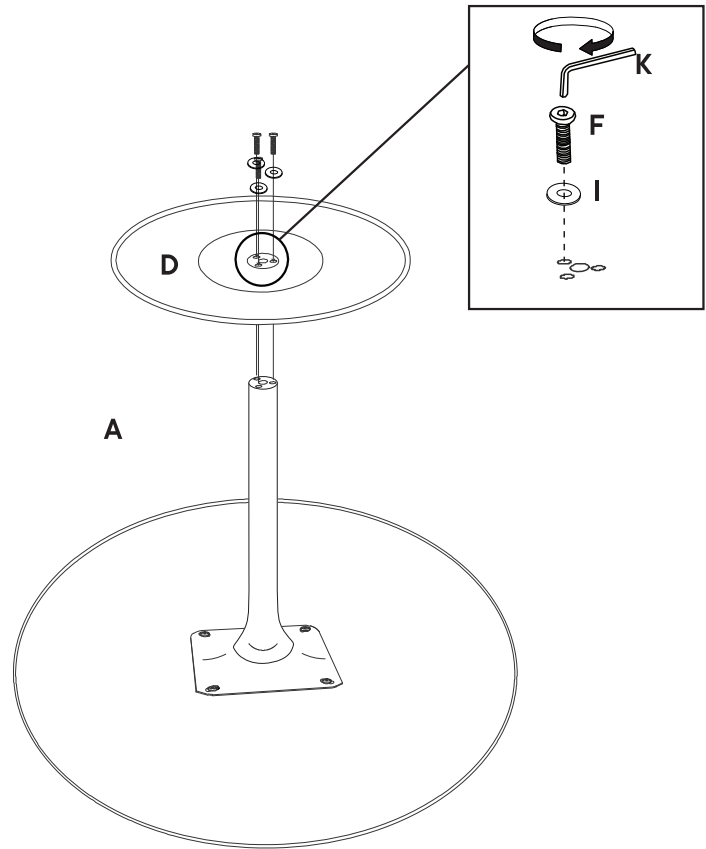


Step 5

COMPONENTS

D	Base	x1
E	Bottom Plate	x1

HARDWARE

H	Bolt M10 x 100mm	x1
L	Allen Wrench M10	x1

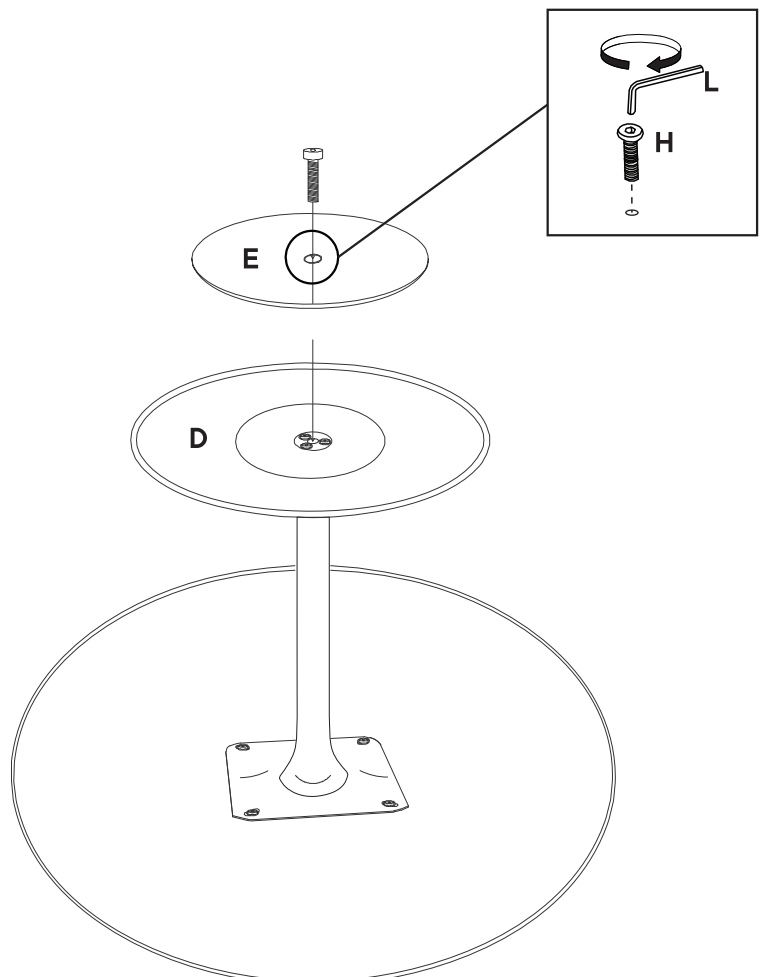

Great job!

Your table is complete and ready to enjoy.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

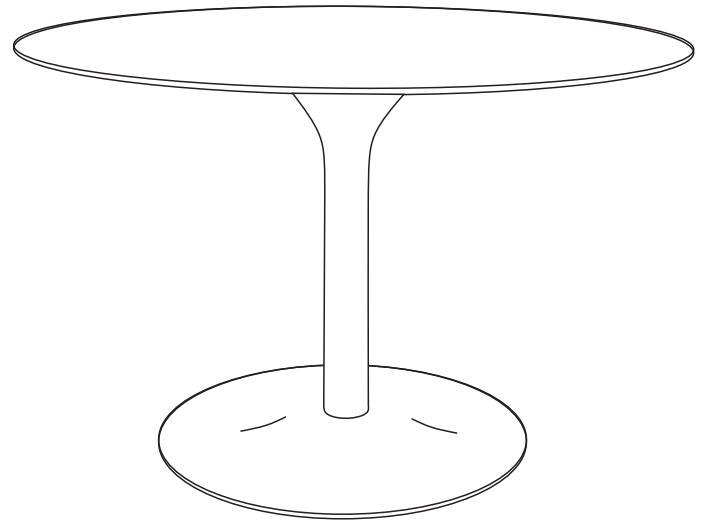

CONNECT WITH US!   

Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.