
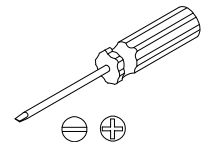
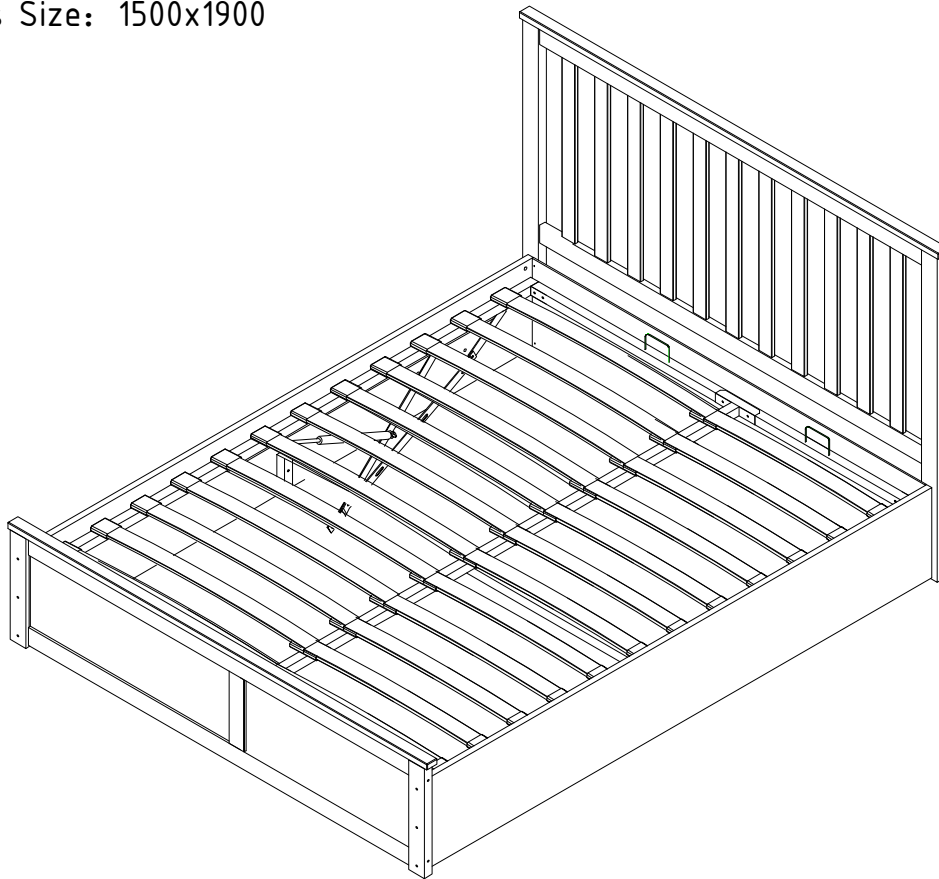












Assemble Instruction

Mattress Size: 1500x1900



Hardware List


A	 M6x100mm	08
B	 M6	20
C	 Ø8x30mm	24
D	 M8x45mm	08
E	 M6x70mm	12
F	 Ø3x16mm	06
G	 Left side	01
H	 Right side	01
I	 750N	02
J	 M6x20mm	12
K	 M8x40mm	04

L	 Ø8mm	12
M	 M6x10mm	04
N		06
O		06
Q	 M8x20mm	16
R		02
S		01
U	 Ø4mm	01
V	 Ø5mm	01


Important

If you need help or have damaged or missing parts, please call the Customer Helpline on 01278 764644


Parts List

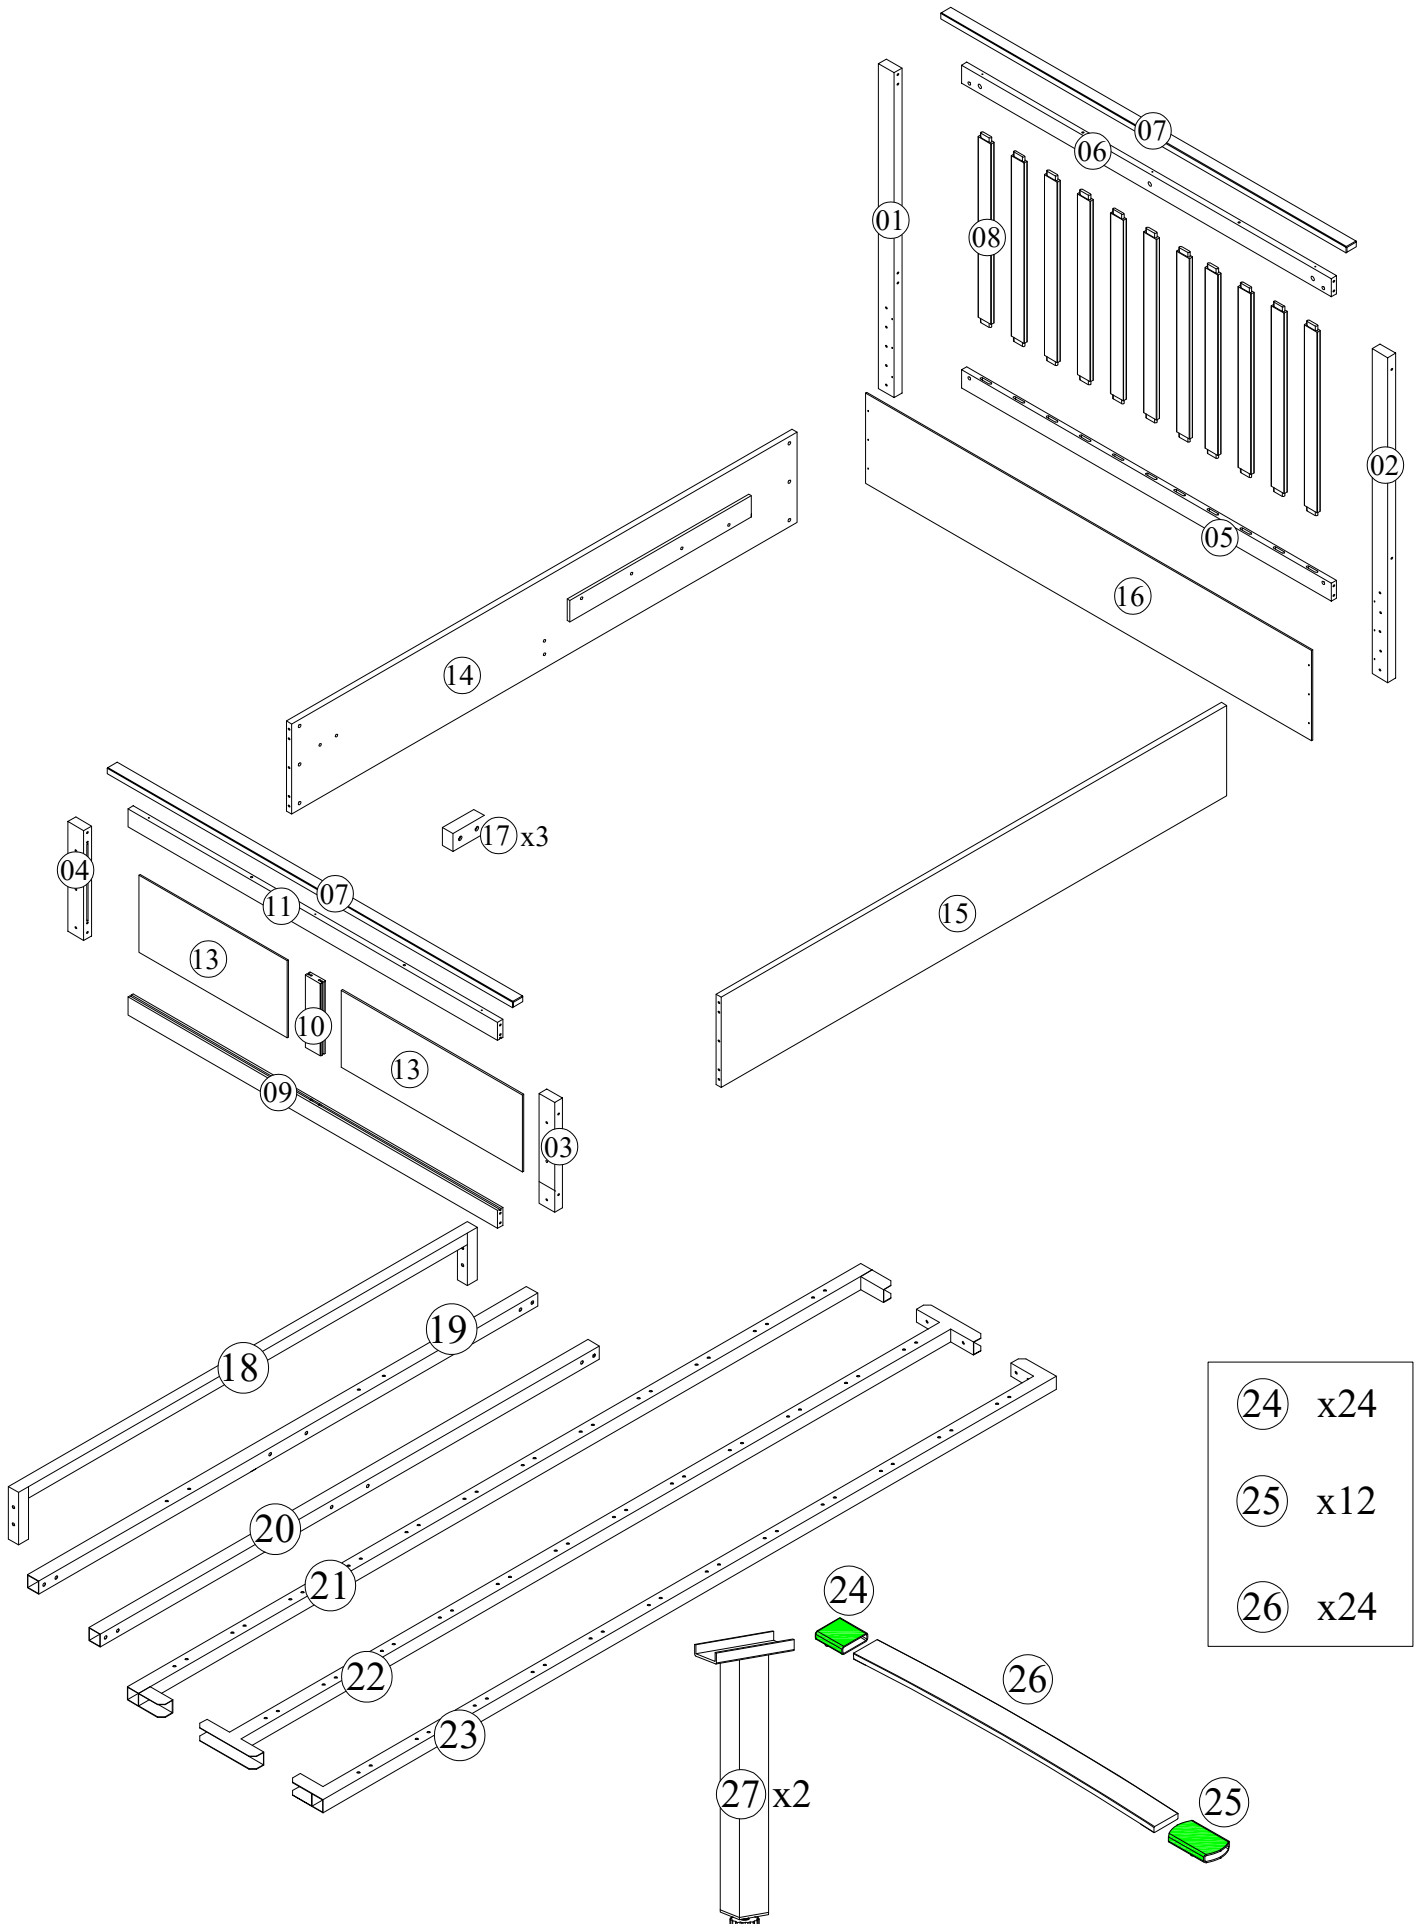


1

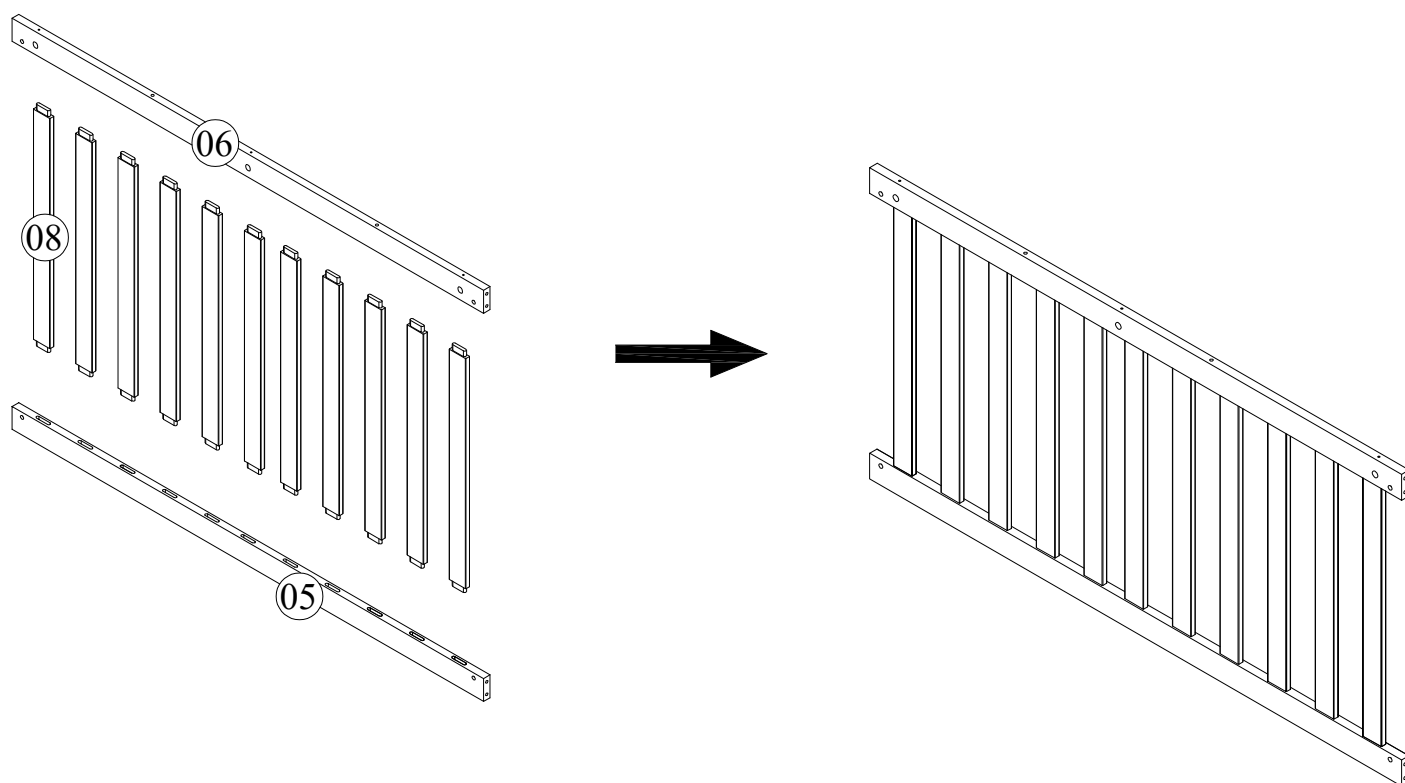


2

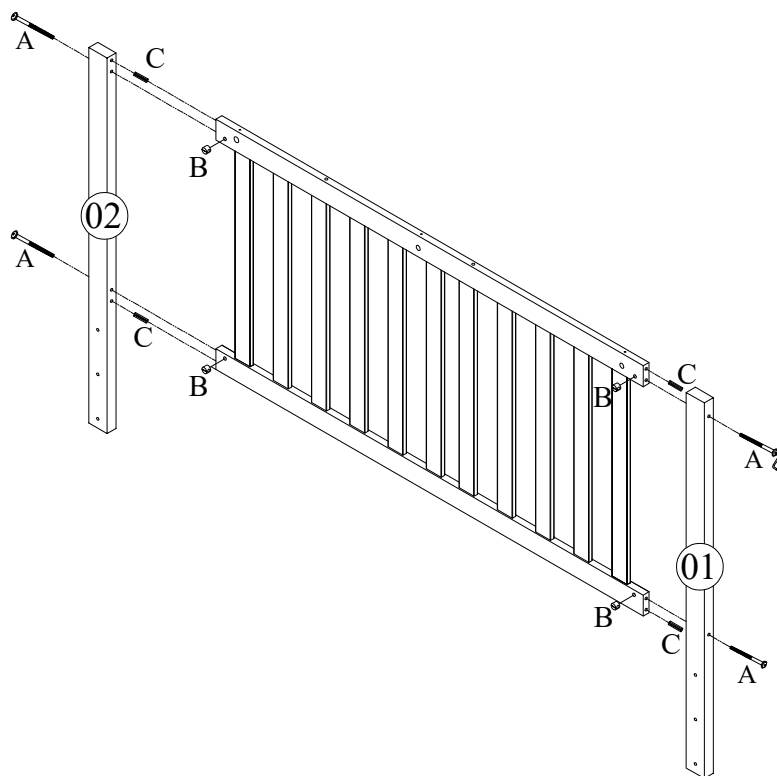


A	 M6x100mm	04
B	 M6	04
C	 Ø8x30mm	04

3

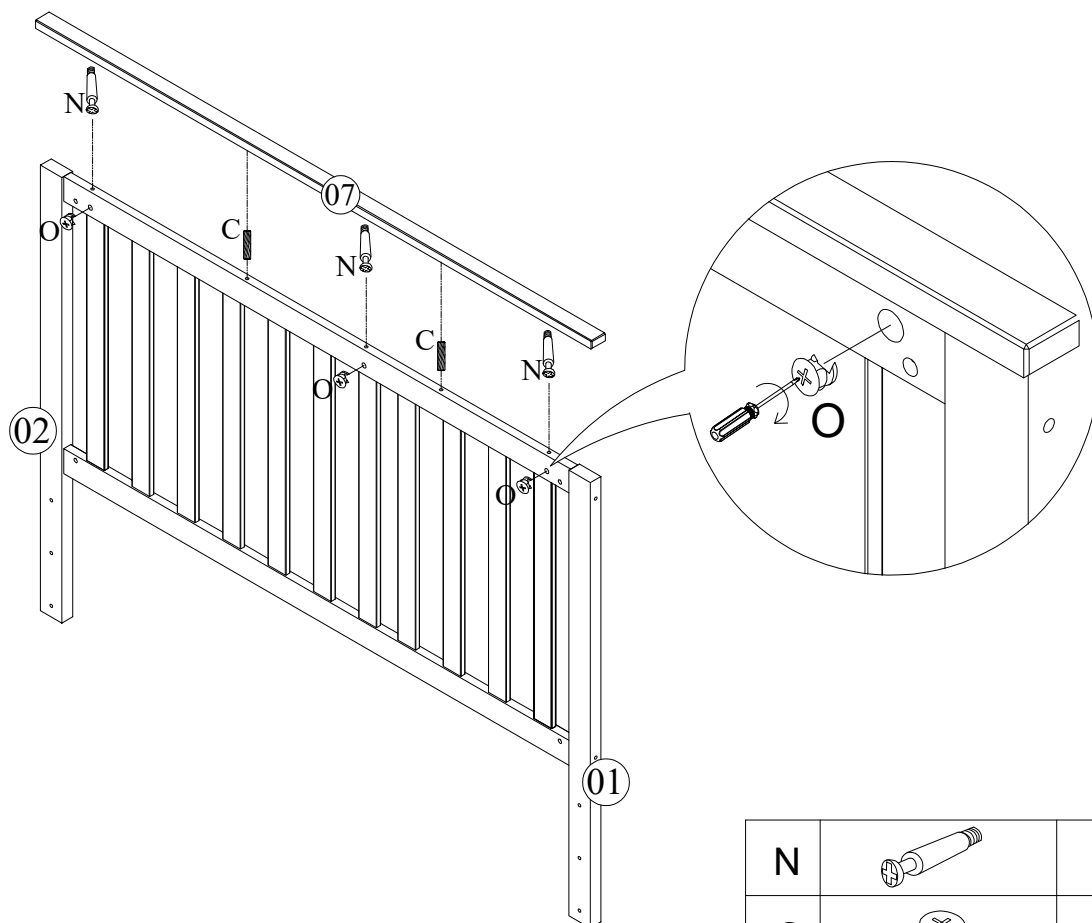


N		03
O		03
C		02

4

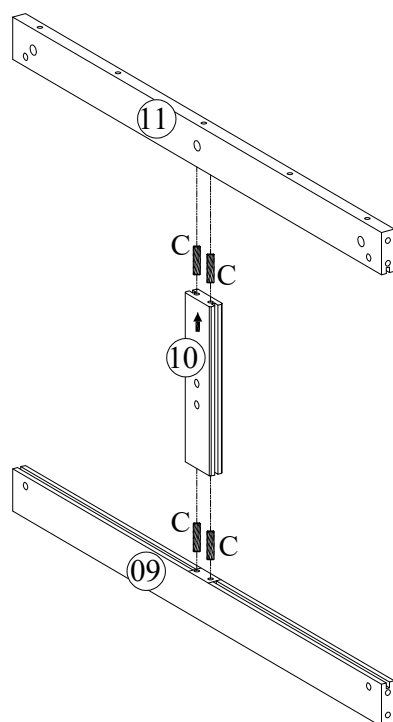



C		04
---	--	----

5

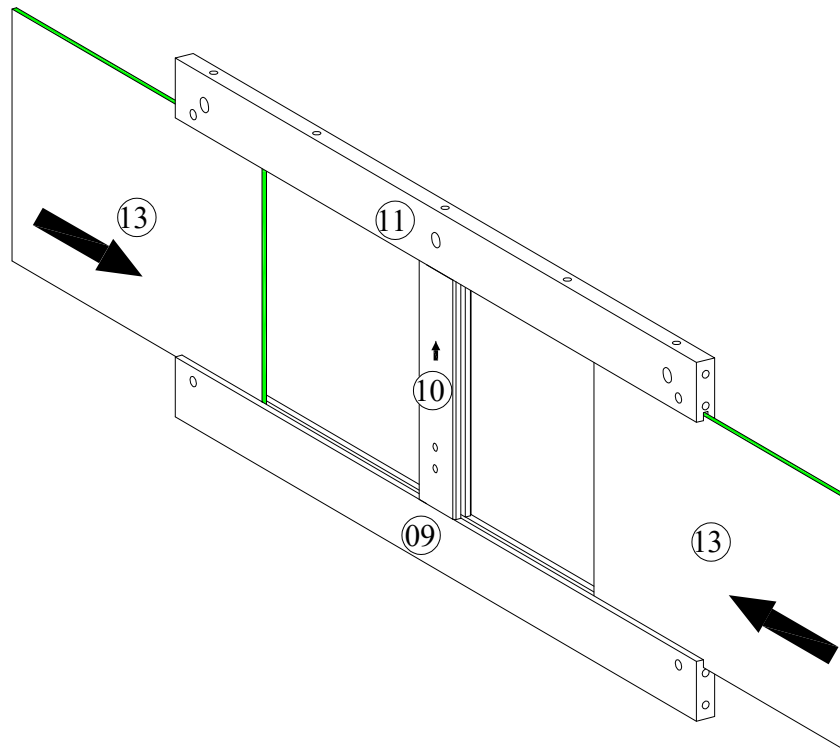





6

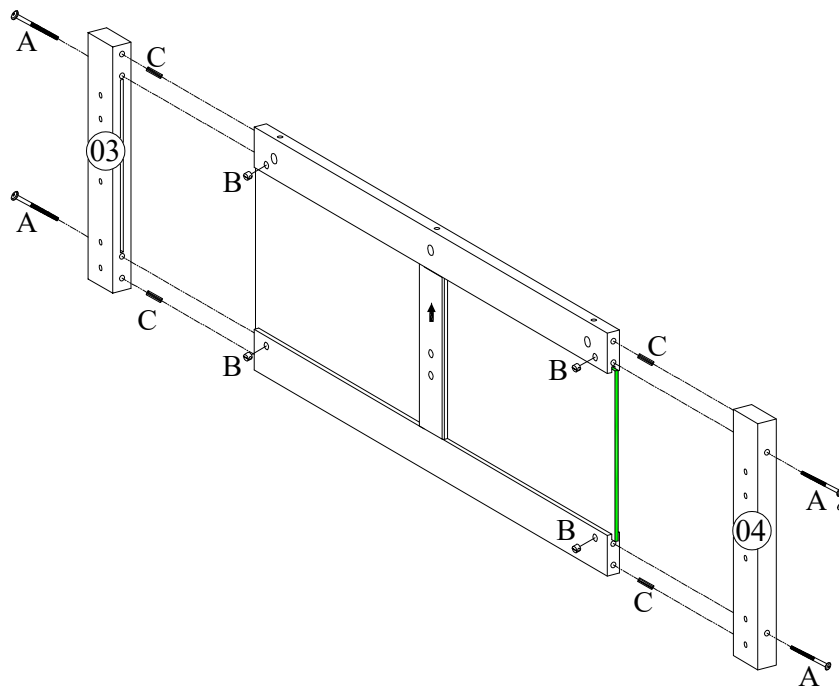


A	 M6x100mm	04
B	 M6	04
C	 Ø8x30mm	04

7

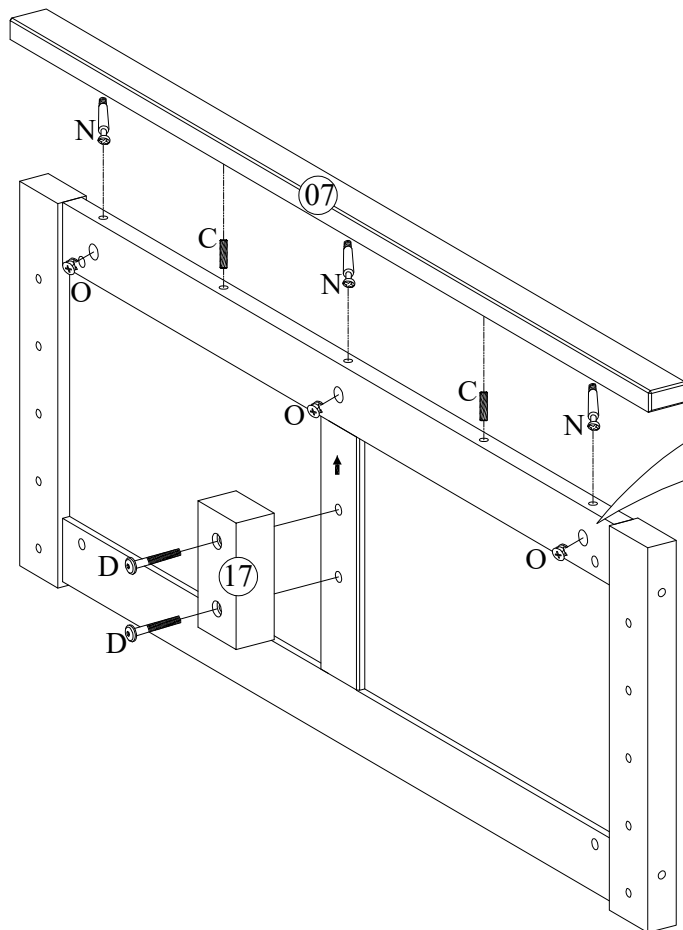


N		03
O		03
C	 Ø6x30mm	02
D	 M8x45mm	02

8

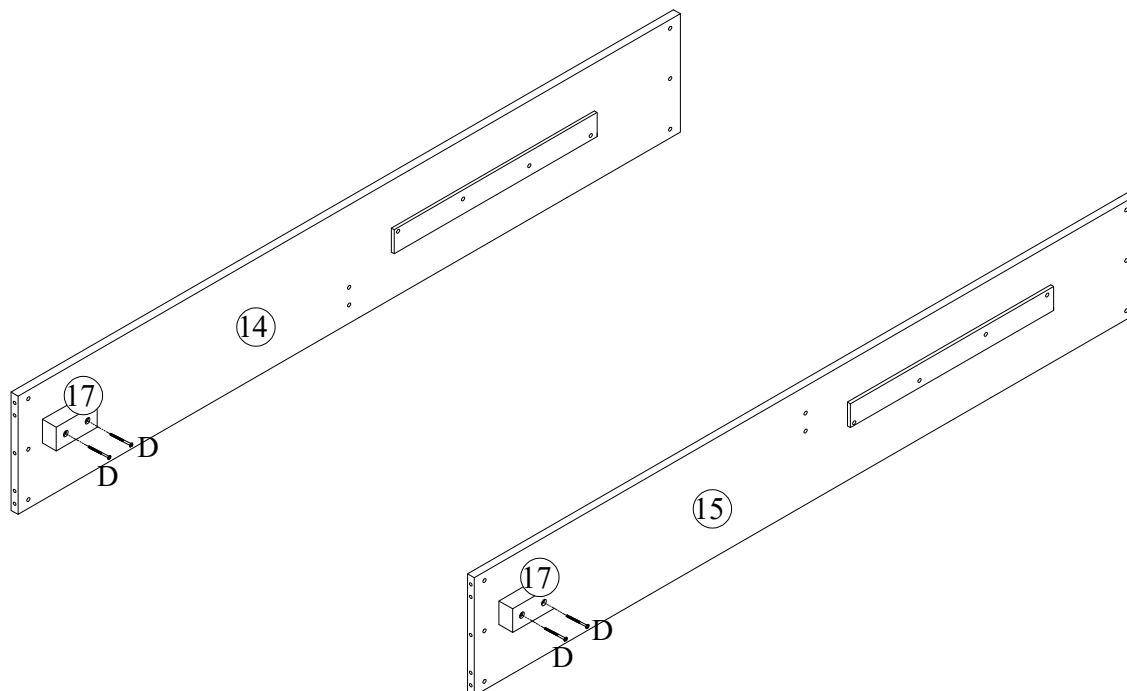


9

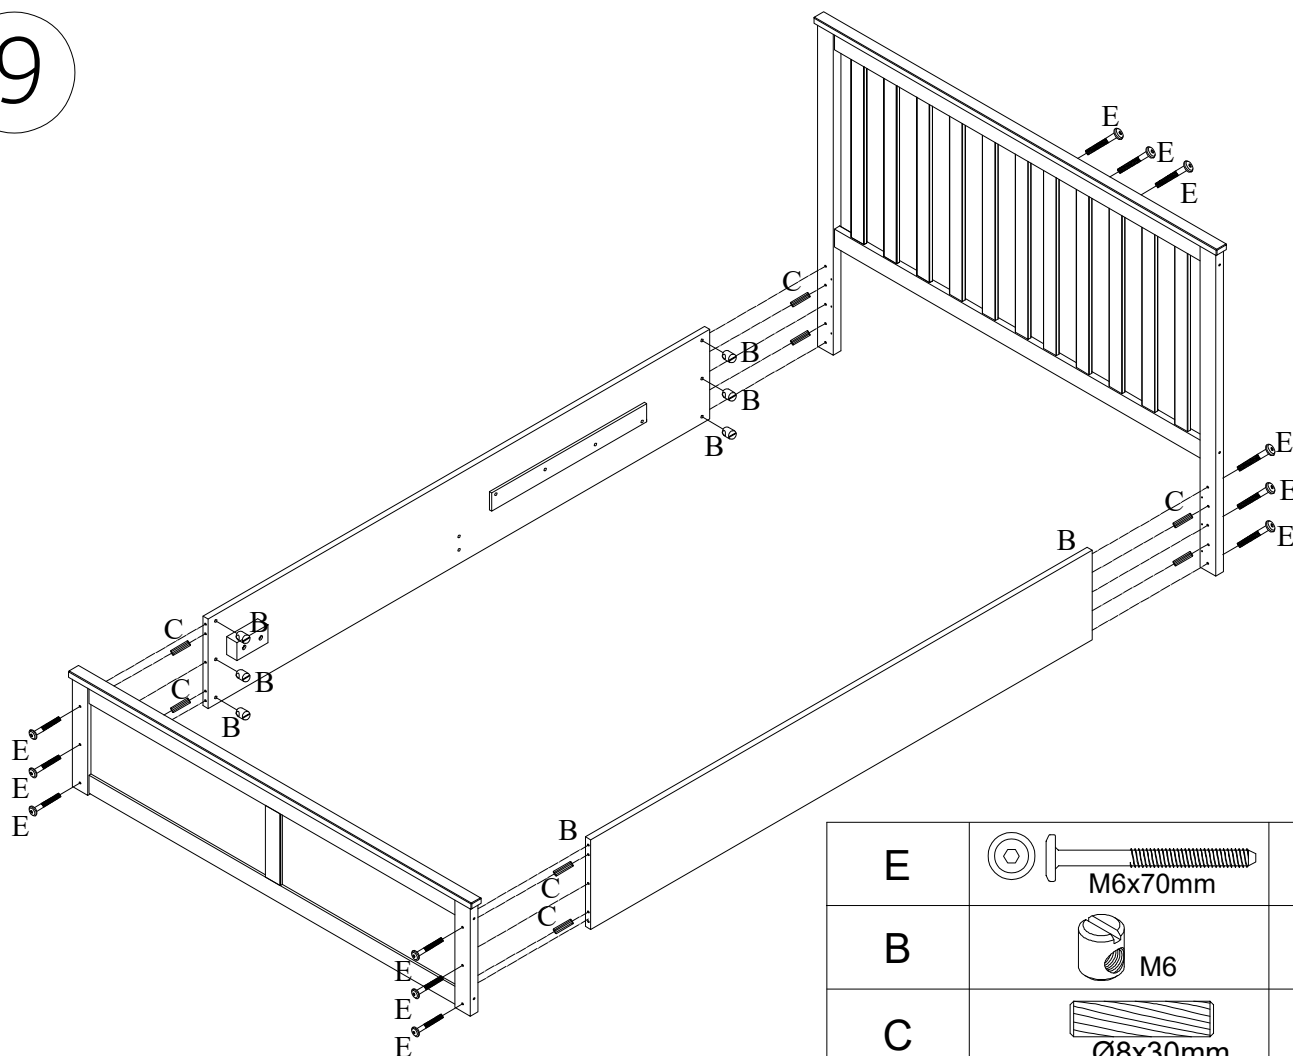


E	 M6x70mm	12
B	 M6	12
C	 Ø8x30mm	08

10

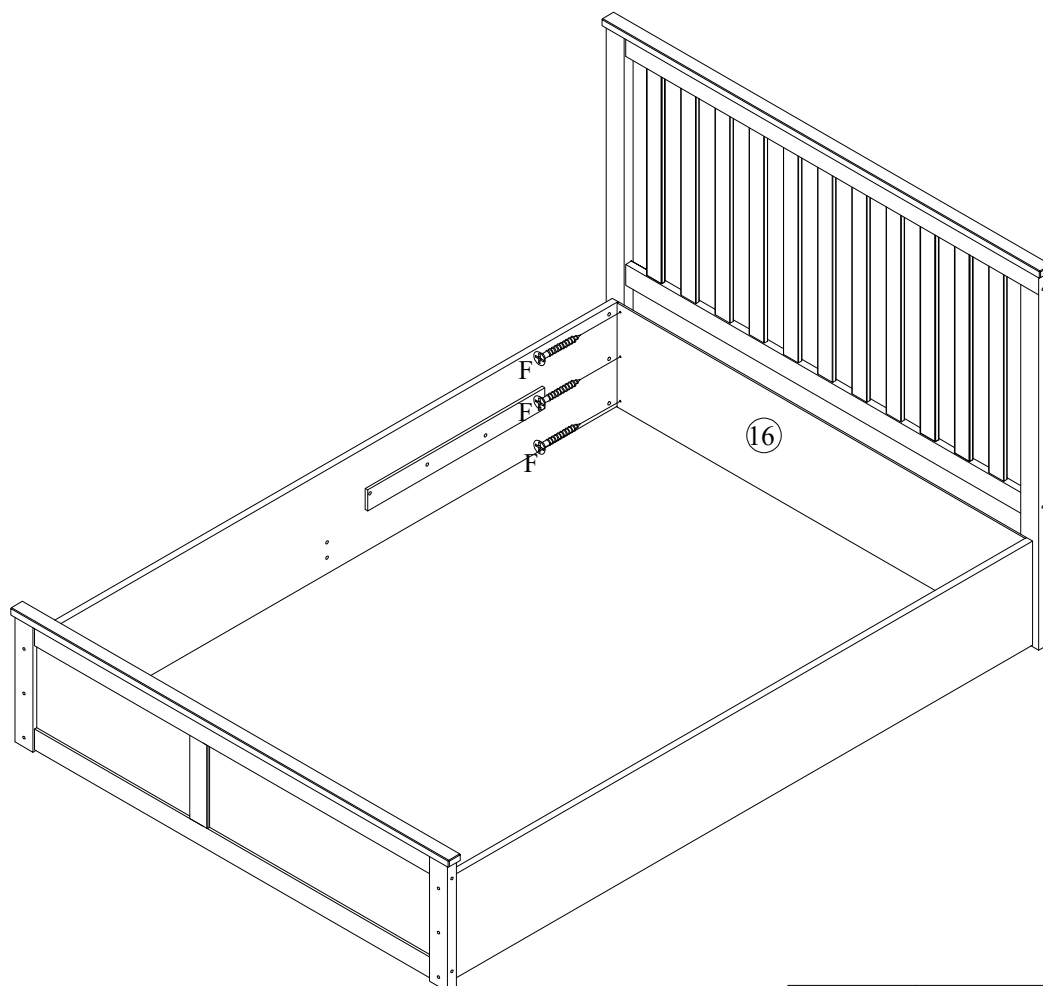


F	 Ø3x16mm	06
---	---	----

11

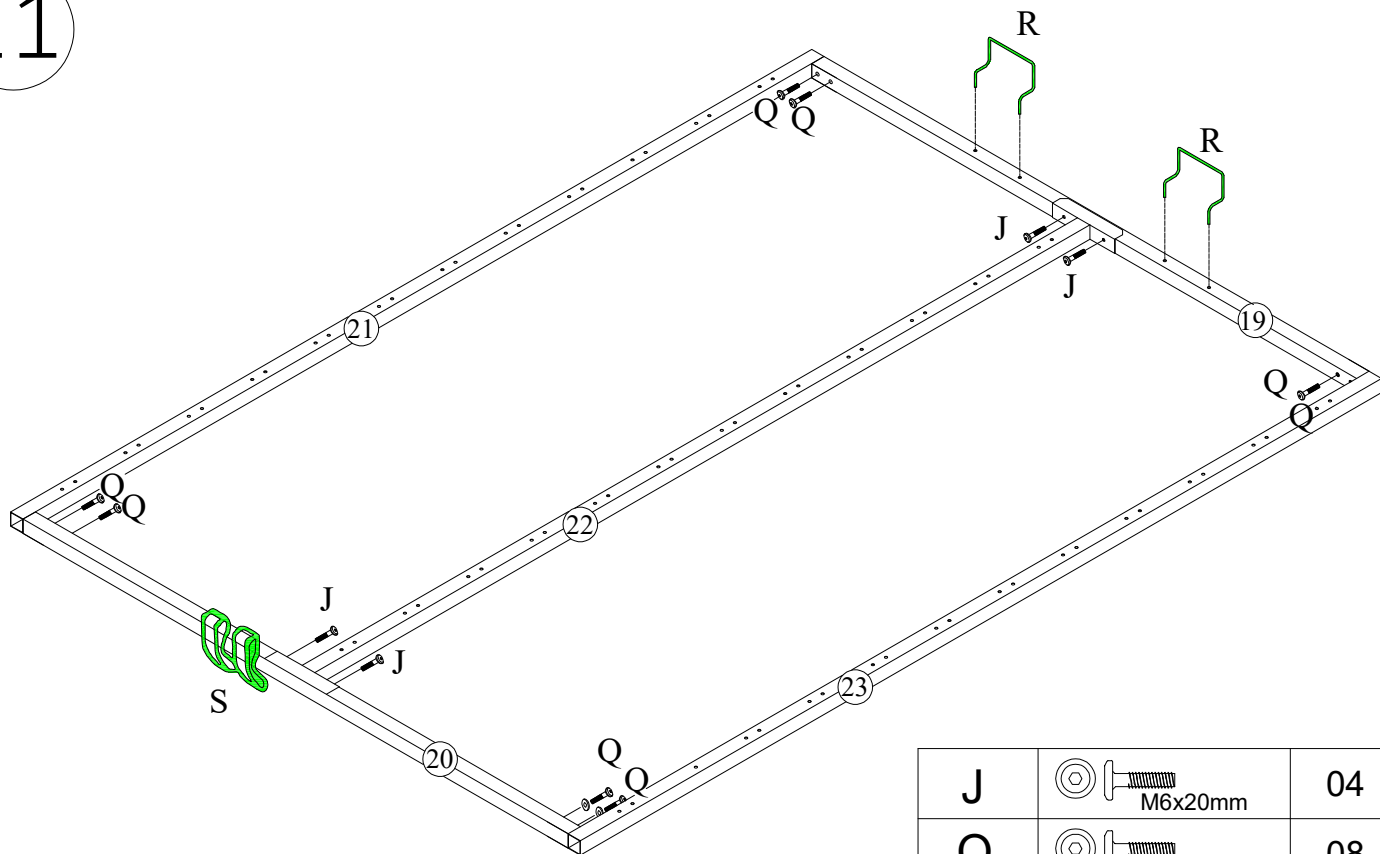


J	 M6x20mm	04
Q	 M8x20mm	08
R		02
S		01

12

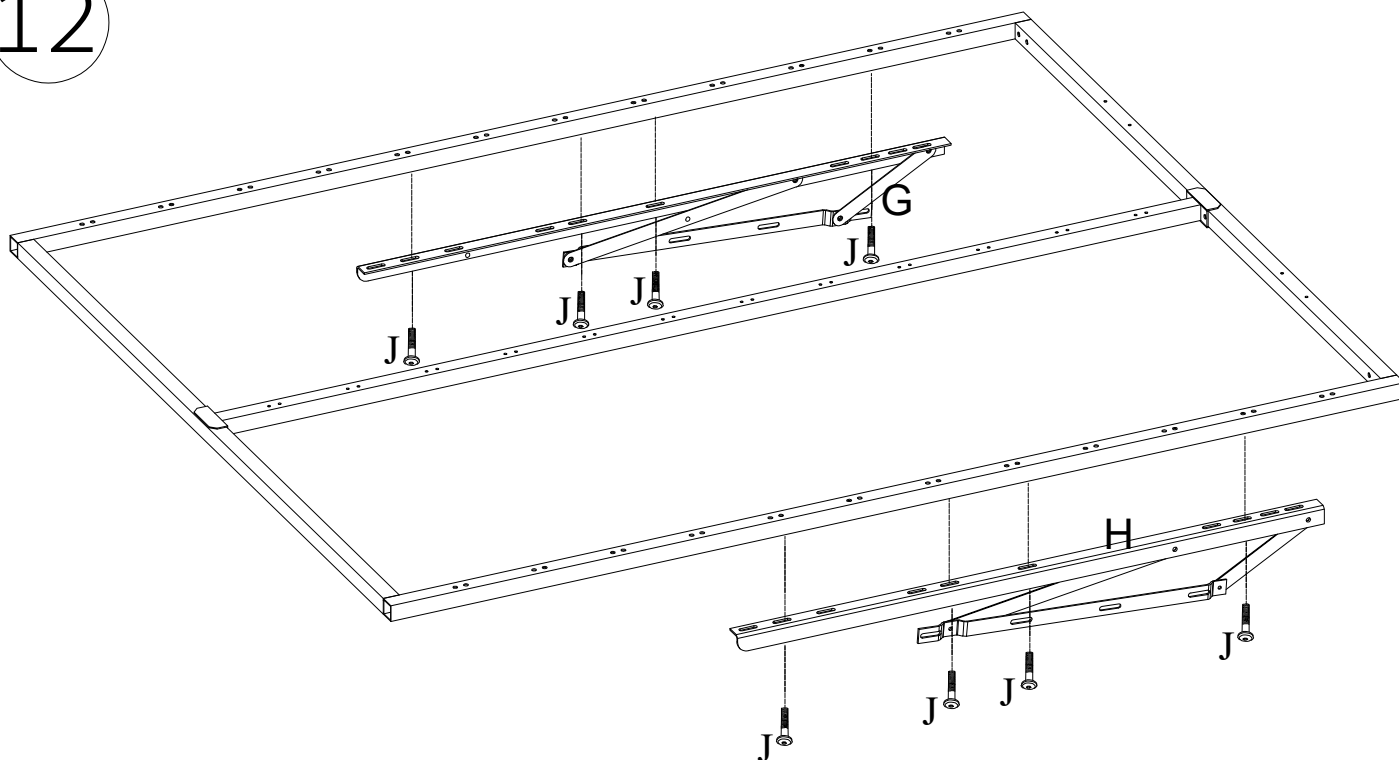


G	 Left side	01
H	 Right side	01
J	 M6x20mm	08

13

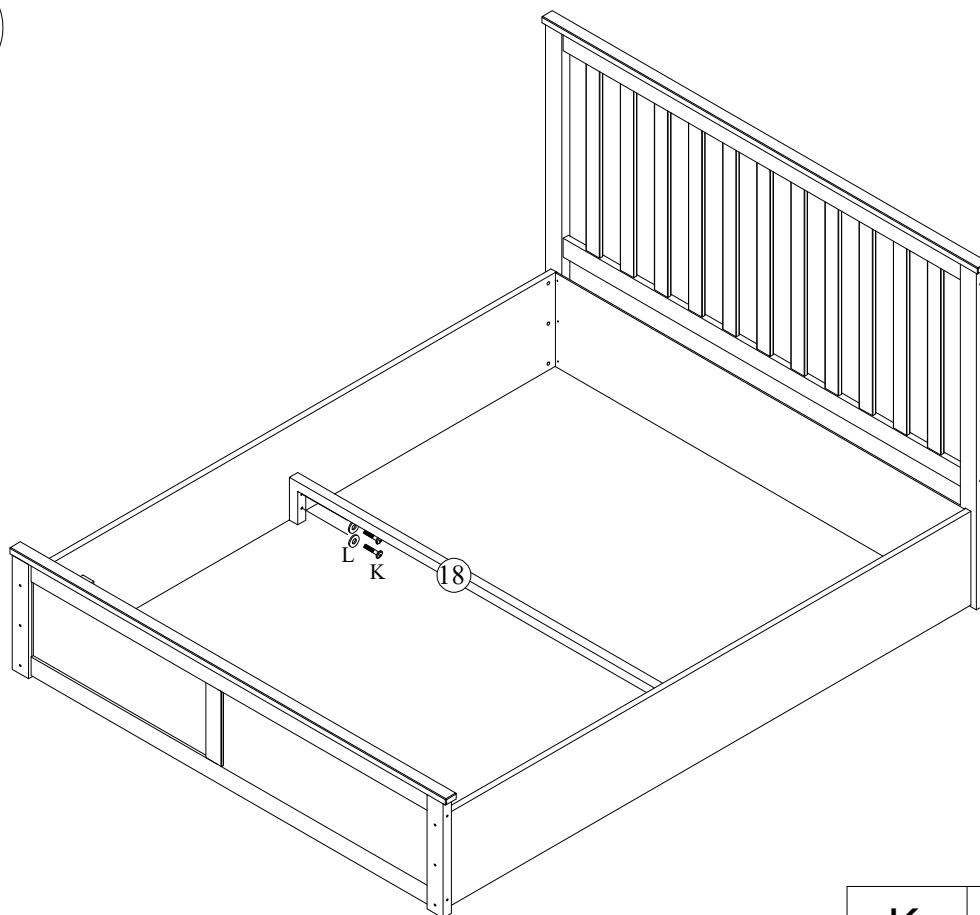


K	 M8x40mm	04
L		04

14

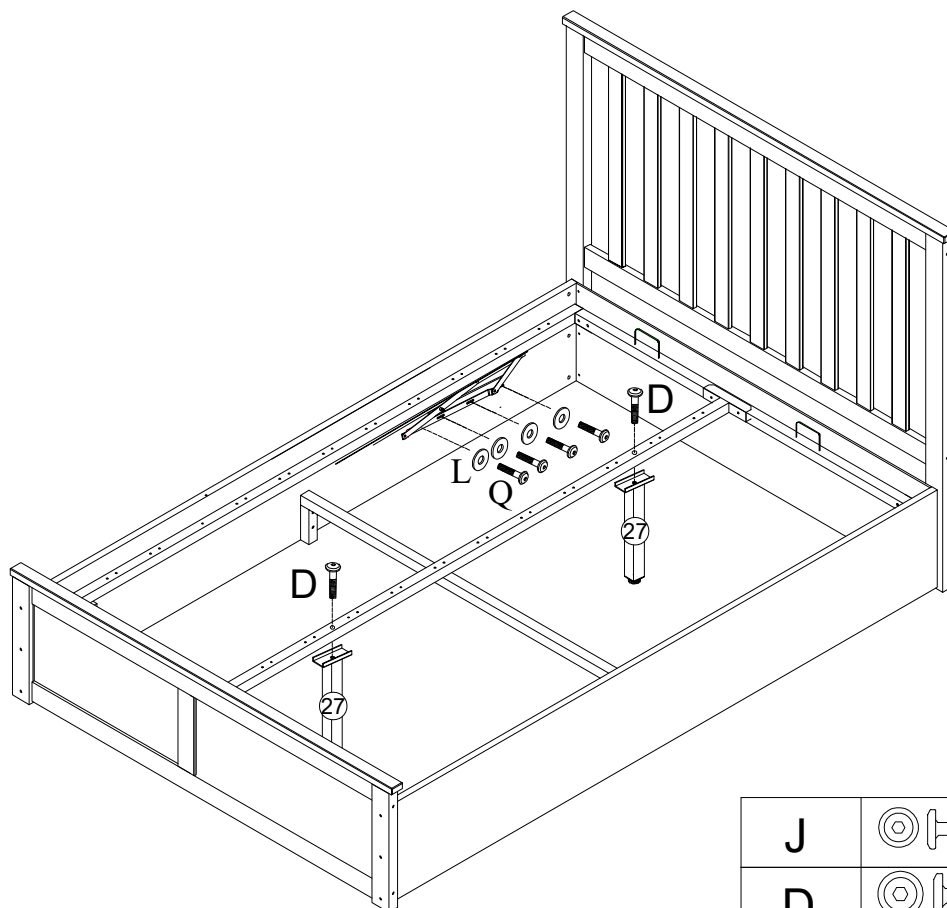

J	 M6x20mm	08
D	 M8x45mm	02
Q	 M8x20mm	08
L		08

15

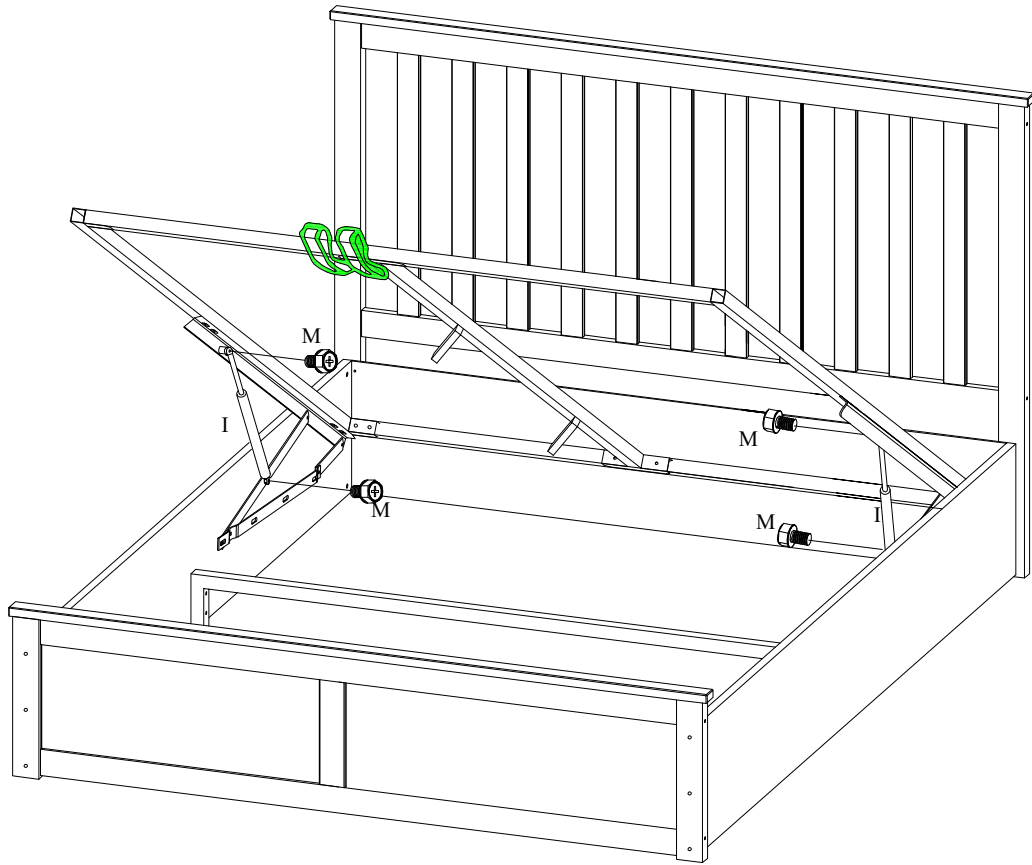

I		02
M	 M6x10mm	04

16

