

# NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.

\* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\* If any part is missing or damaged, do not attempt to assemble the product.

\* Estimated Assembly Time: 10 minutes.















\* Tools Required for Assembly (included): Allen Key

## CARE AND MAINTENANCE

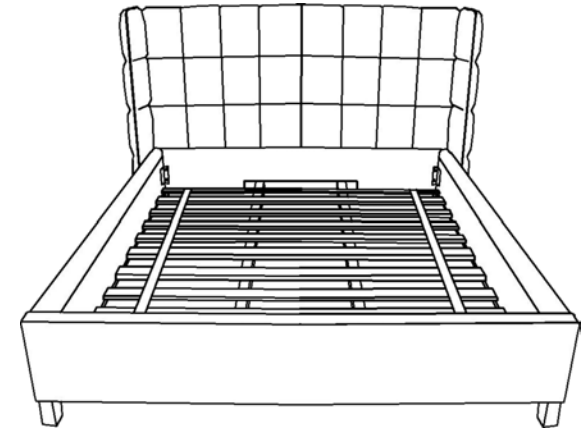
\* Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

\* The use of steam or water-based cleaners may cause excessive shrinking or staining.

### Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Headboard		1X
B	Ear of Headboard(L&R)		2X
C	Footboard		1X
D	Sideboard		2X
E	Bed Legs		4X
F	Slat		1X
G	Cross Slat		2X
H	Support Leg for Cross Slat		4X
HW1	Phillips Screws 4*2*40MM		12X
HW2	Split Lock Washer(M8)		6X
HW3	Flat Washer(M8)		6X
HW4	Socket Screws 8*1.25*40MM		6X
HW5	Allen Key		1X
HW6	Wrench		1X

Dimensions: 89.6"WX87.4"Dx50.8"H



Weight Capacity: 825 lbs

WARNING: DO NOT STAND ON BED

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

# PREPARATION

\* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list. \* If any part is missing or damaged, do not attempt to assemble the product.

\* Estimated Assembly Time: 10 minutes.

\* Tools Required for Assembly (included): Allen Key

<p>STEP1 Rotate the bed legs E to the footboard C and headboard A.</p>	<p>STEP2 Attach the sideboard D with headboard and footboard(Step1) by sliding the iron plates onto the bolts, the metal card should be alignment card when install it, then press it lightly.</p>	<p>STEP3 Rotate the slat legs H to the middle rod of slat G. Put it inside the middle of the bed, and then, smooth the slat F inside the bed slot</p>
<p>STEP4 Secure the slat with screw HW1 by using wrench HW6. There are totally 12 holes on slat to make sure it stable, it's shown in step 3.</p>	<p>STEP5 Open the velcro on the headboard A, attach the ear of headboard B to the headboard A by using allen key HW5 and hardware HW2, HW3, HW4 as shown, tighten until secure, Then smooth the velcro.</p>	<p>It's finished as shown, your bed is ready for use.</p>