

Front Stacking Kit

(For Stacking Dryers on Washers)

A  **D**  **ESK**


Part# FSK 3087

Enclosed: 5pcs (2 sides + Front + 2 Spacers) +
4 Phillips Screws + 4 Allen Bolts + Allen Key




For Models: Washer - 835, 840, 842
Dryer - 870, 880

CONTENTS

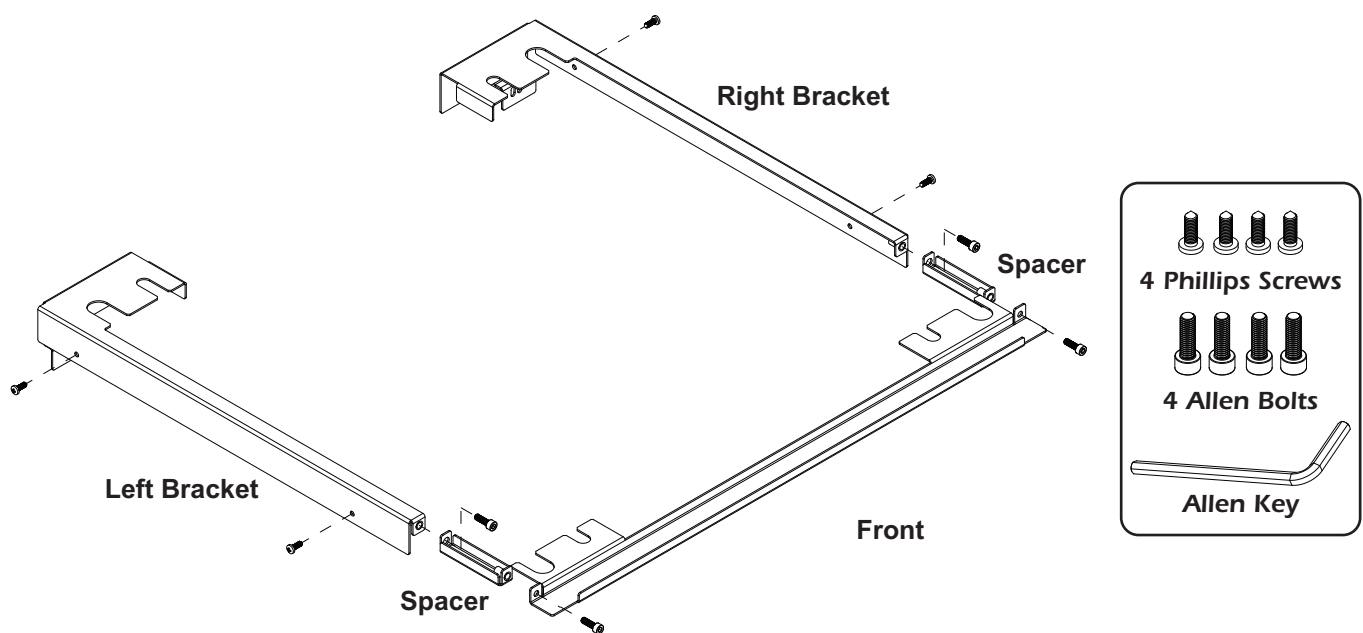

SAFETY


- Do not attempt installation alone.
- Incorrect installation can cause accidents or injuries.
- Because of the dryer's weight and height, at least two trained people are required.
- Always follow safety guidelines and wear protective gloves and safety glasses.
- Do not use stacking kits with gas dryers in unstable conditions (e.g., mobile homes).
- Place the washer on a stable, level floor.

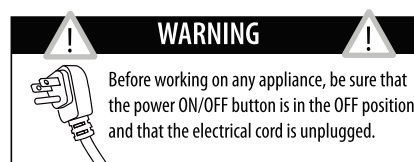


Installation Instructions

To ensure safe and secure installation, please observe the instructions below.

1. Remove the 2 rear Phillips screws holding the washer's top panel (reinstall after #2).

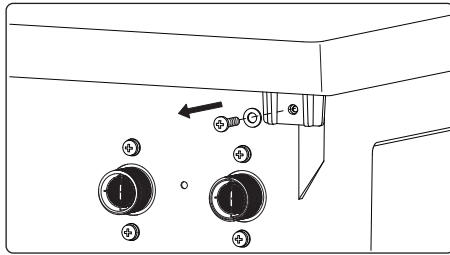


2. Attach the left and right side brackets using the screws (included).

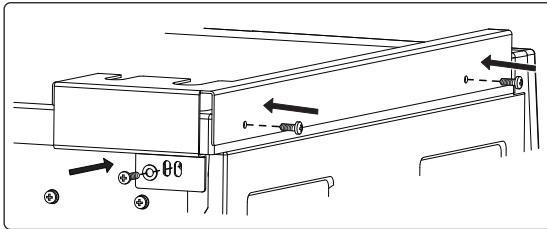


NOTE FOR SIDE BRACKETS

- Self-tapping screws can be installed without pre-drilled holes.
- Start with high torque to create the hole, then lower torque to prevent stripping.


3. Attach 2 spacers with 2 bolts to extend brackets.

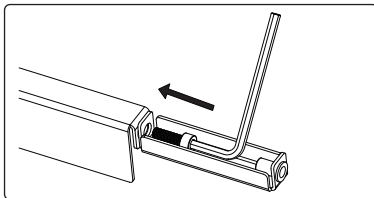


4. Carefully place the dryer on top, sliding it into the side brackets.

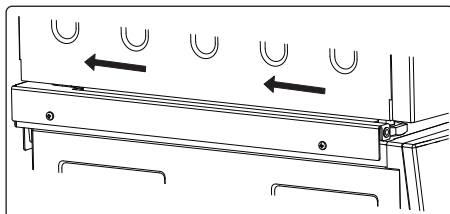

5. Insert the front bracket and push it back into place.

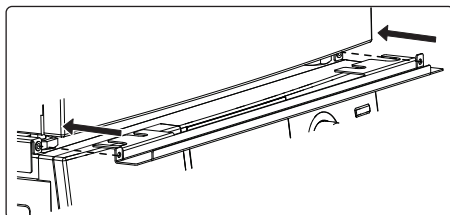

6. Secure the front bracket with 2 Bolts with Allen key (included).

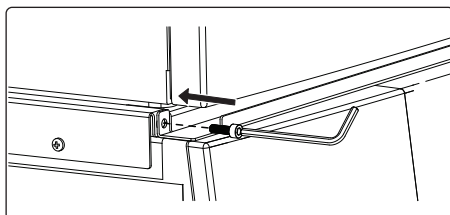

Appliance Desk Inc.

5006 Steffani Lane, Houston, Texas, 77041, USA.

Tel: 1800-490-8018 Web: www.ApplianceDesk.com