

DE0030

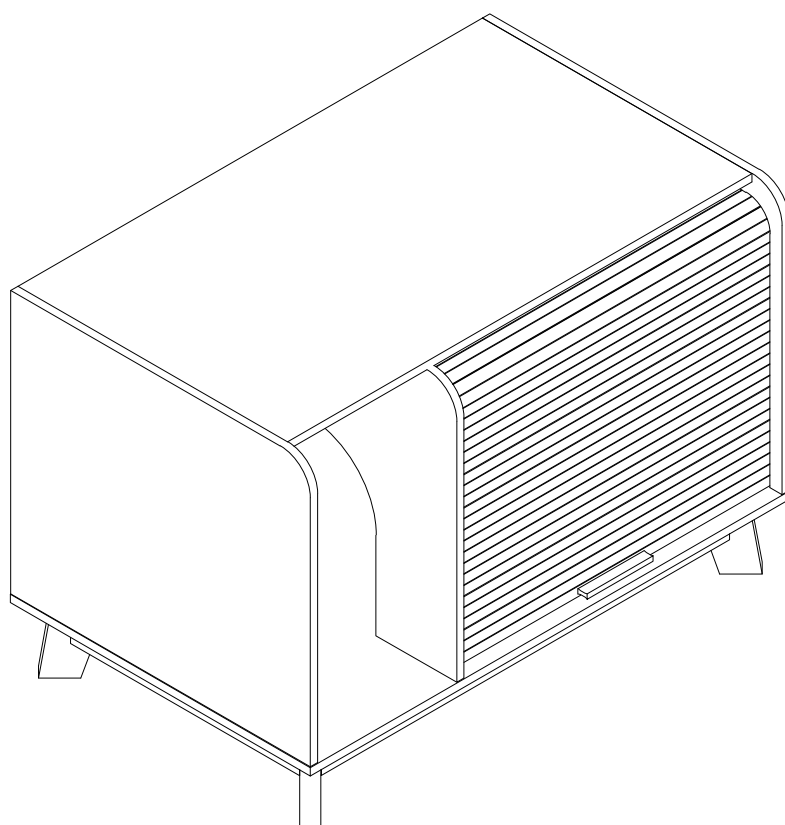


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

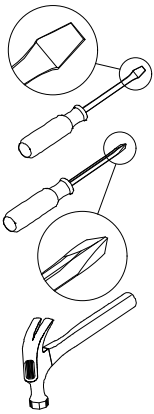


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

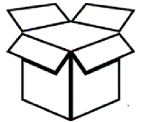

Part List




Ø12x9.5mm

(A)

X29

CAM LOCK
spare: 3



Ø5.3x35mm

(B)

X29

CAM BOLT
spare: 3



Ø6x30mm

(C)

X8

WOOD DOWEL



Ø21mm

(D)

X8


COVER



(E)

X4

EVA




M6x20mm

(F)

X8

SCREW



(G)

X1

HANDLE




M4X10

(H)

X2

SCREW



(I)

X19

BRACKET
Spare: 3



M3.5x14mm

(J)

X24

SCREW
Spare: 3



(K)

X2

METAL SHEET



(L)

X4

METAL SHEET



Ø6x20mm

(M)

X2

BRACKET




M3.5x12mm

(N)

X8


SCREW
Spare: 2



(O)

X1

ALLEN WRENCH















(P)

X2

SCREW

Board Identification

Not actual size

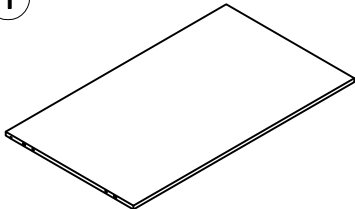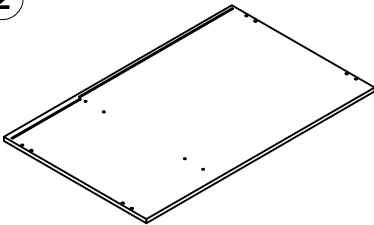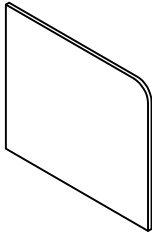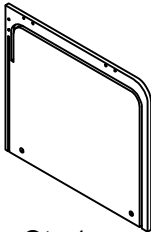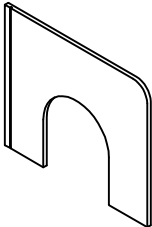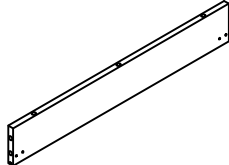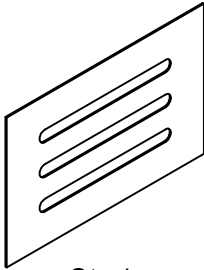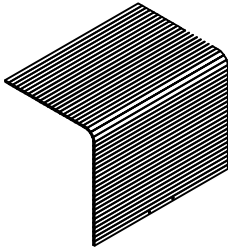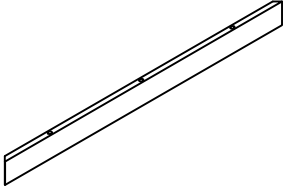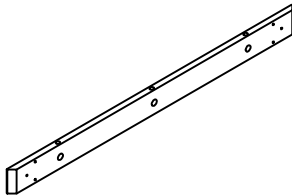
①  Qty:1	②  Qty:1	③  Qty:1
④  Qty:1	⑤  Qty:1	⑥  Qty:1
⑦  Qty:1	⑧  Qty:1	⑨  Qty:1
⑩  Qty:1	⑪  Qty:1	⑫  Qty:1
⑬  Qty:1	⑭  Qty:4	

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it .


1

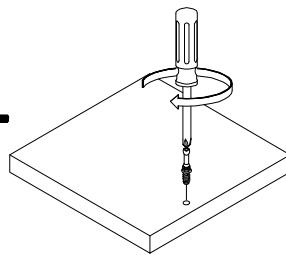


2

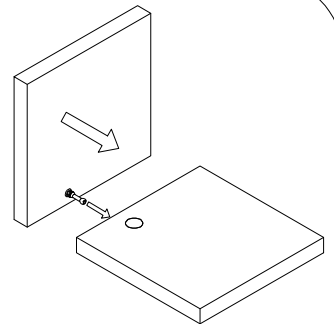

3

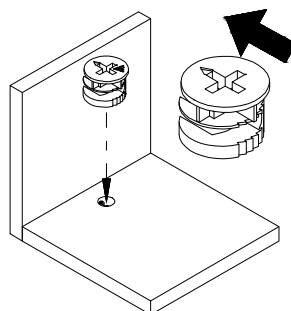


4

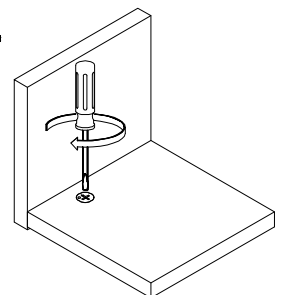

Board Identification

Not actual size

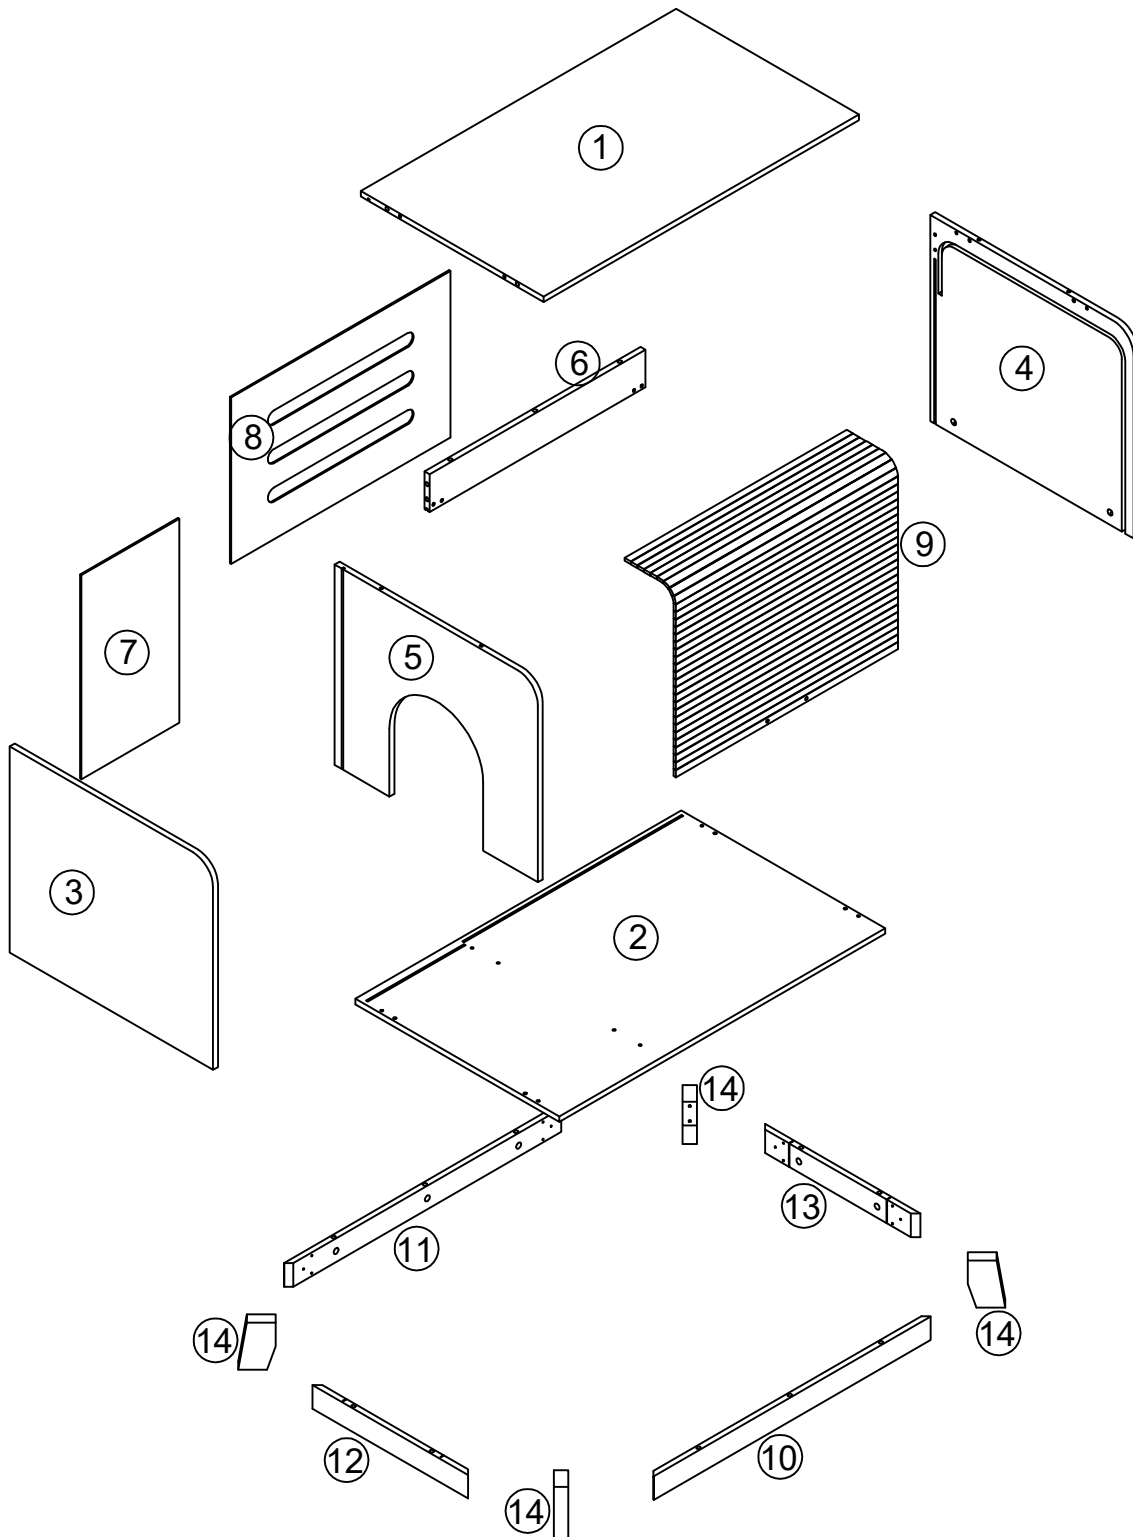


STEP1



Ø12x9.5mm

A

X2



Ø5.3x35mm

B

X2



M3.5x12mm


N

X4




K

X2





p

X2

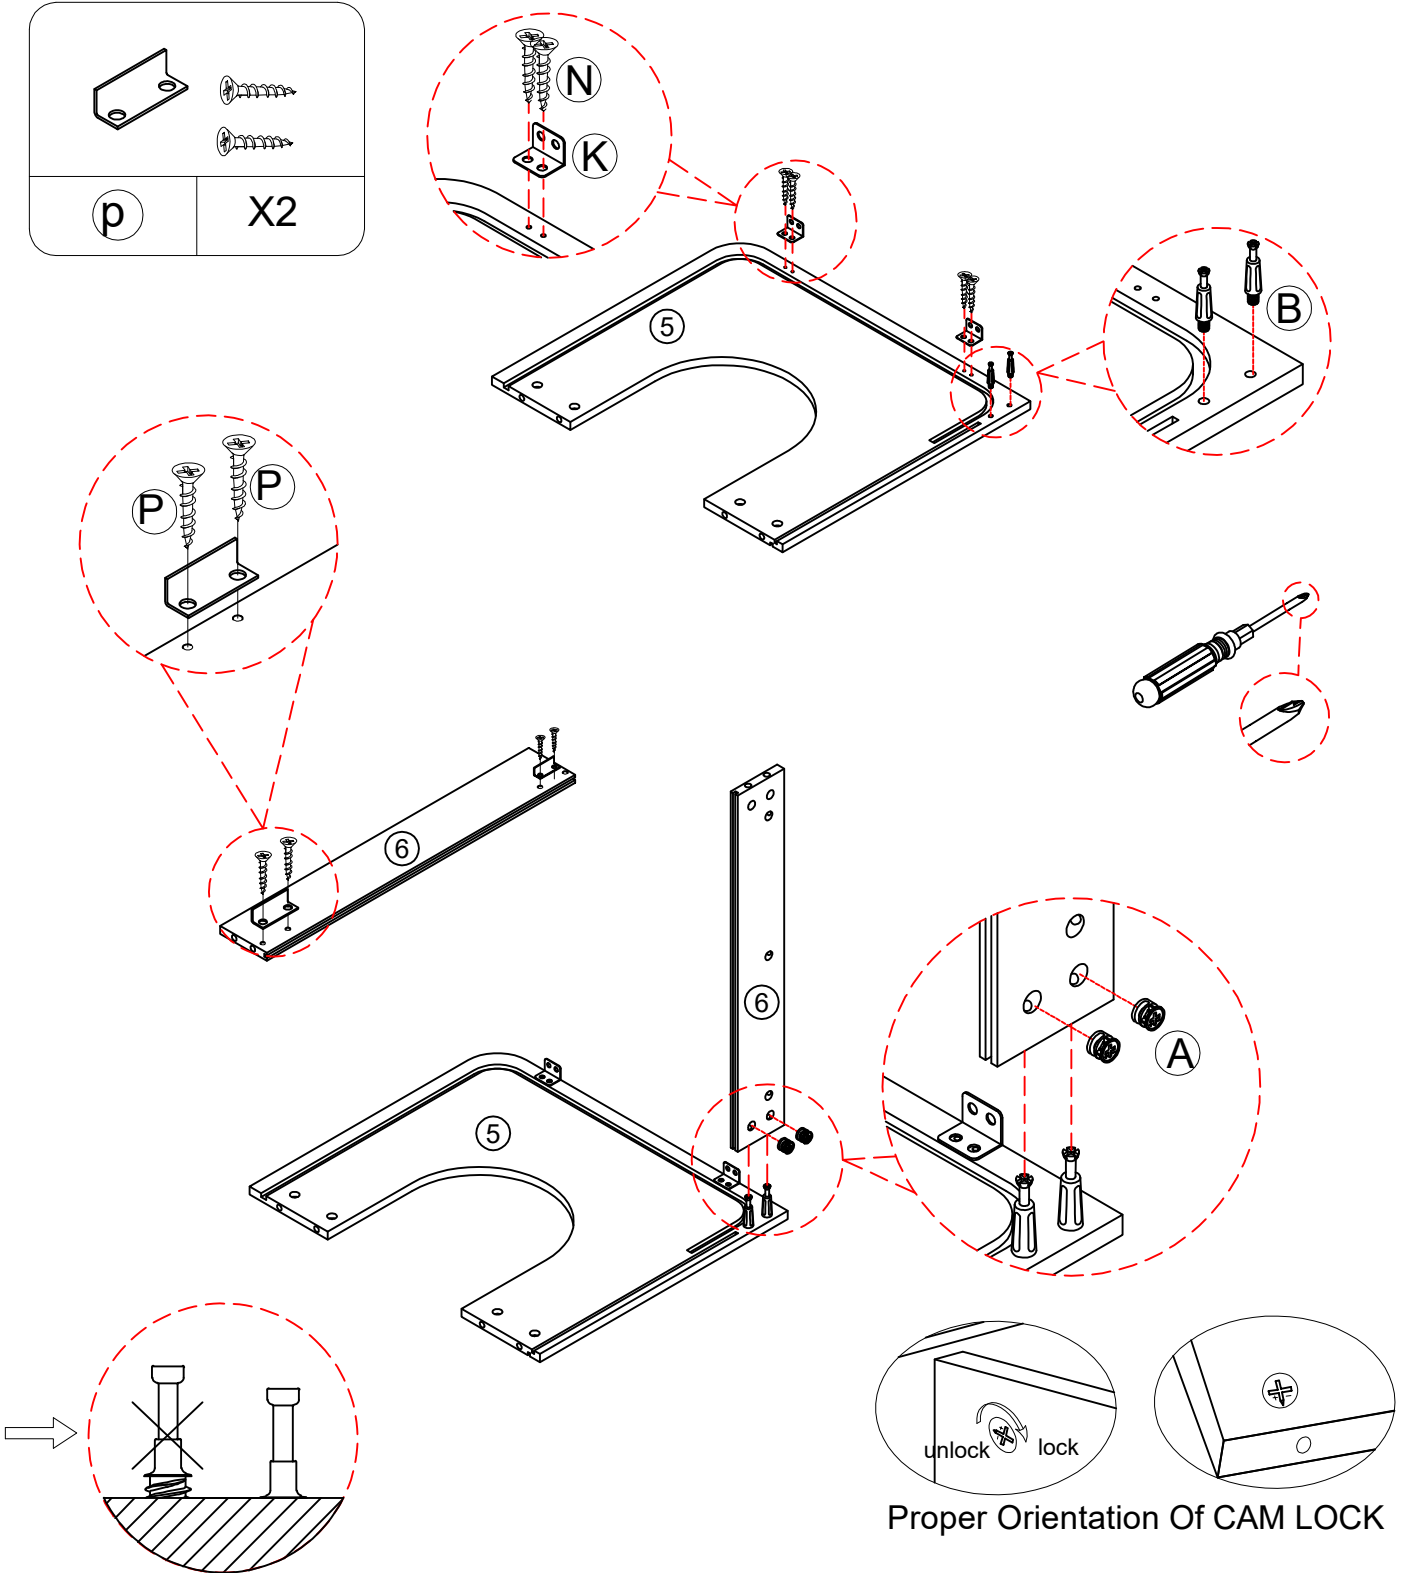

STEP2

 Ø12x9.5mm		 Ø5.3x35mm		 M3.5x12mm		 Ø6x20mm	
(A)	X3	(B)	X3	(N)	X4	(M)	X2

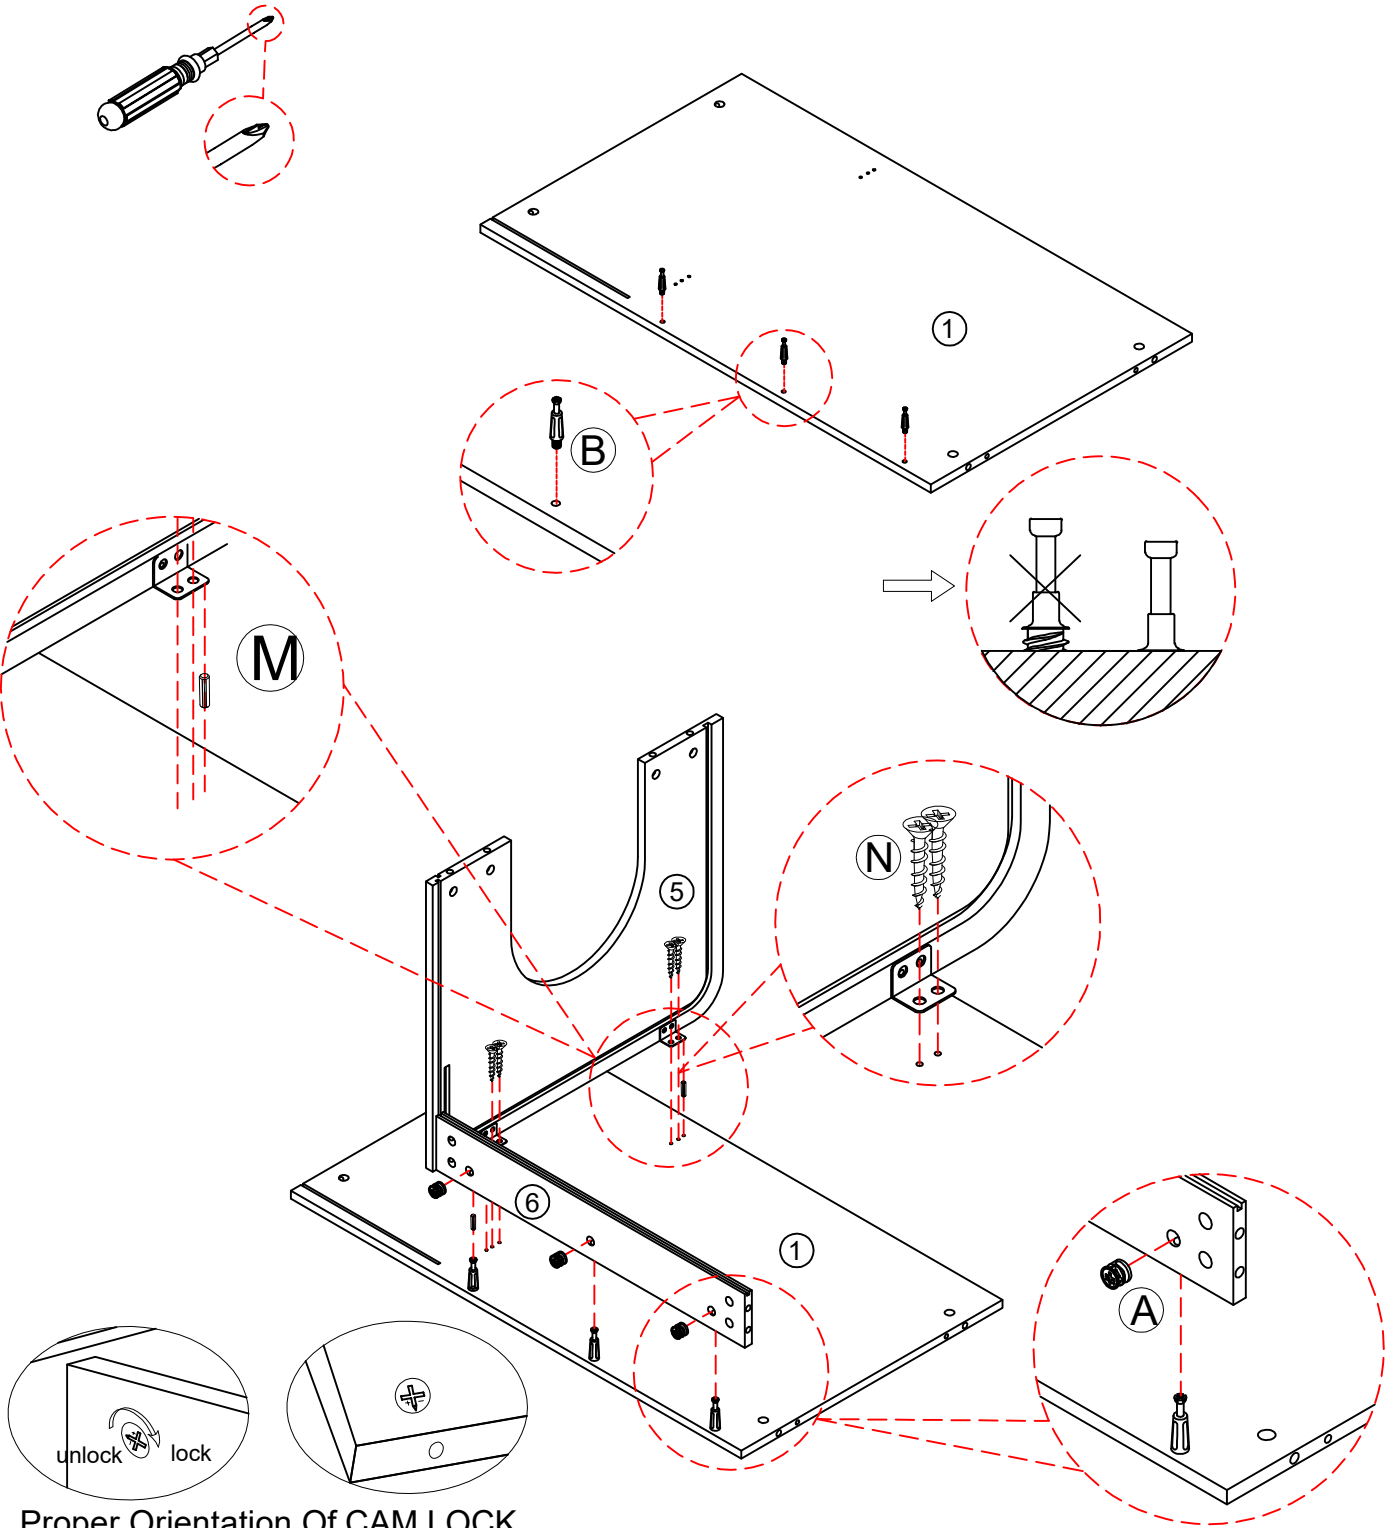

Proper Orientation Of CAM LOCK


STEP3



Ø12x9.5mm

A


X4



Ø5.3x35mm

B



X4



Ø6x30mm









C

X2

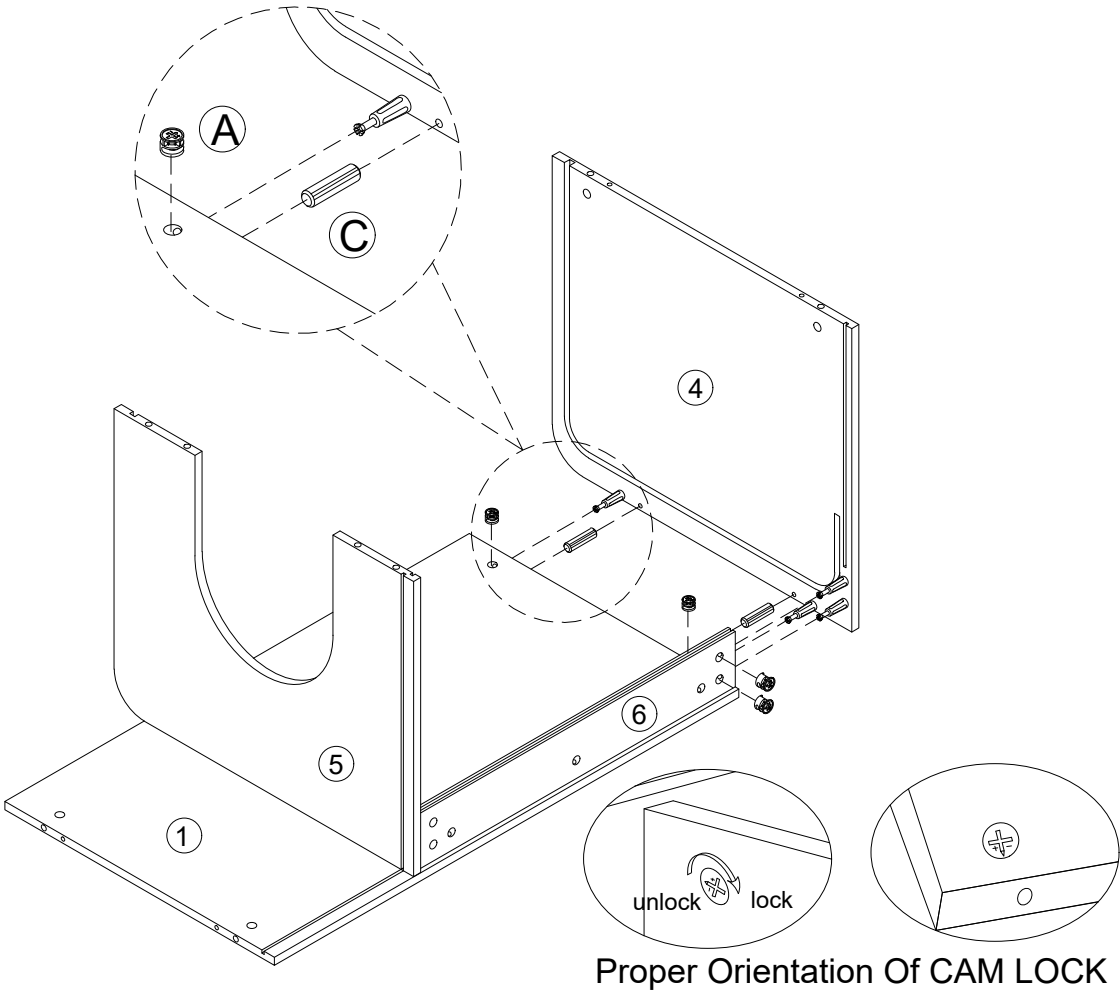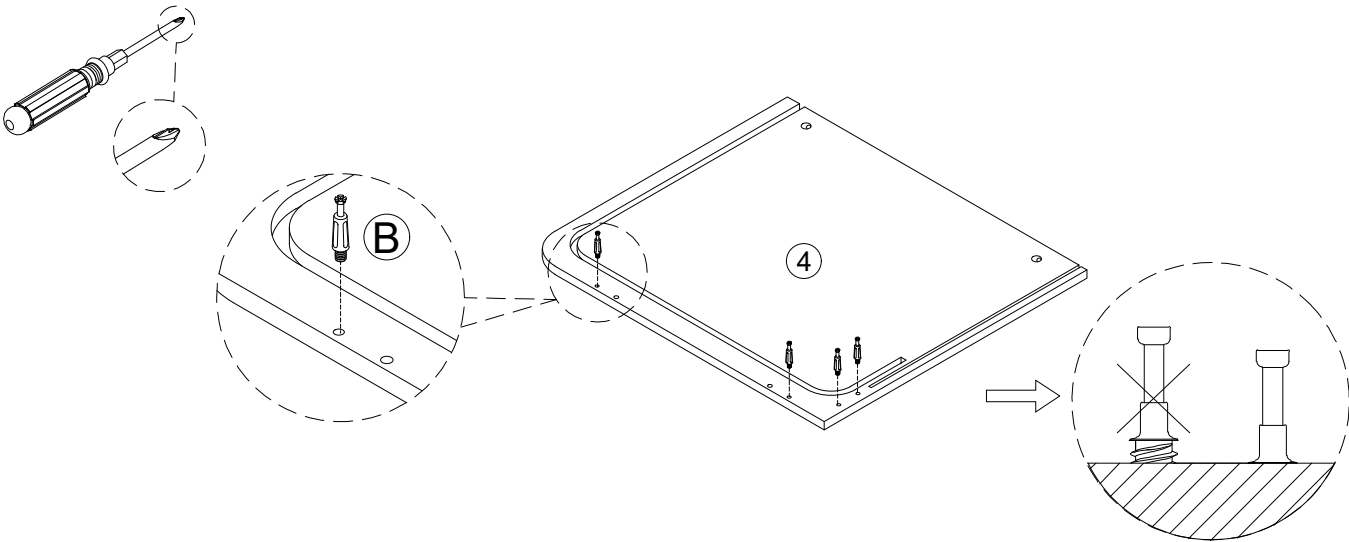


Proper Orientation Of CAM LOCK

STEP4

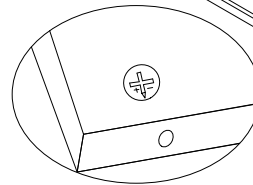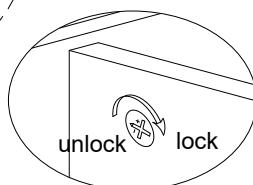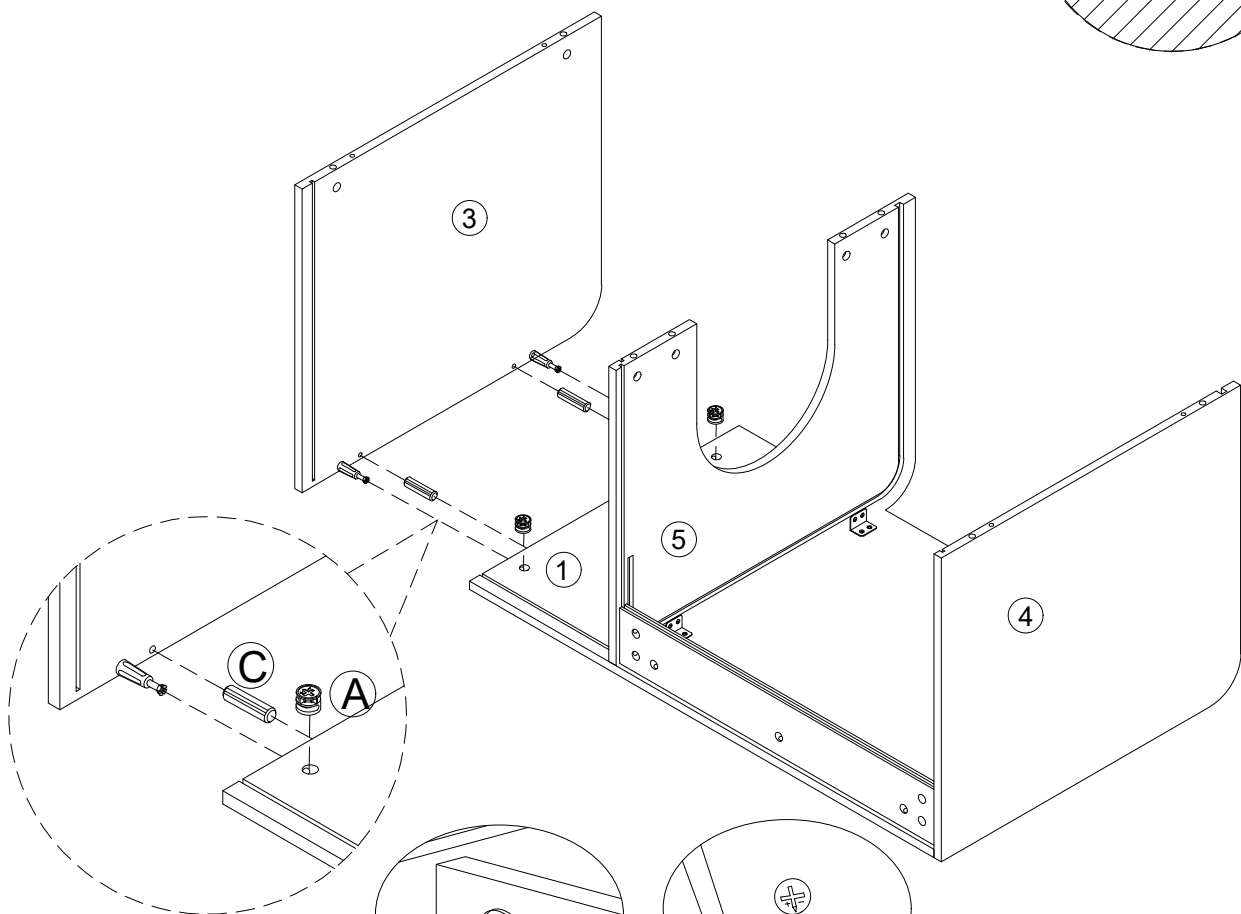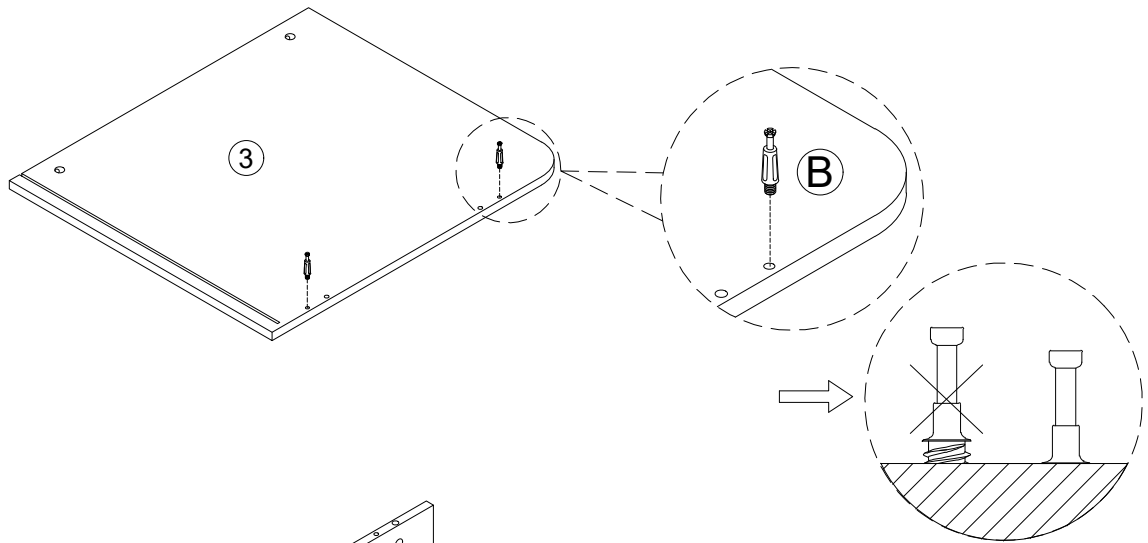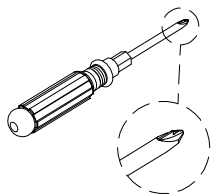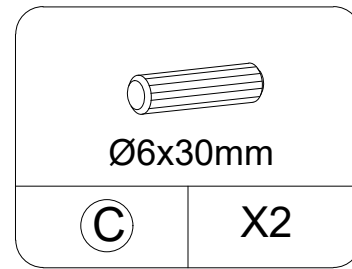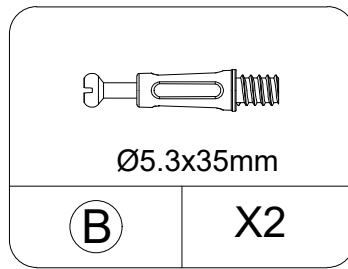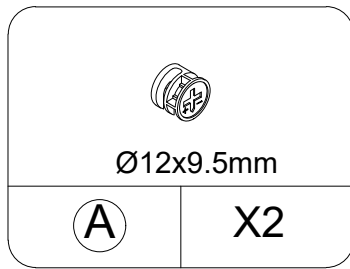



Proper Orientation Of CAM LOCK

STEP5

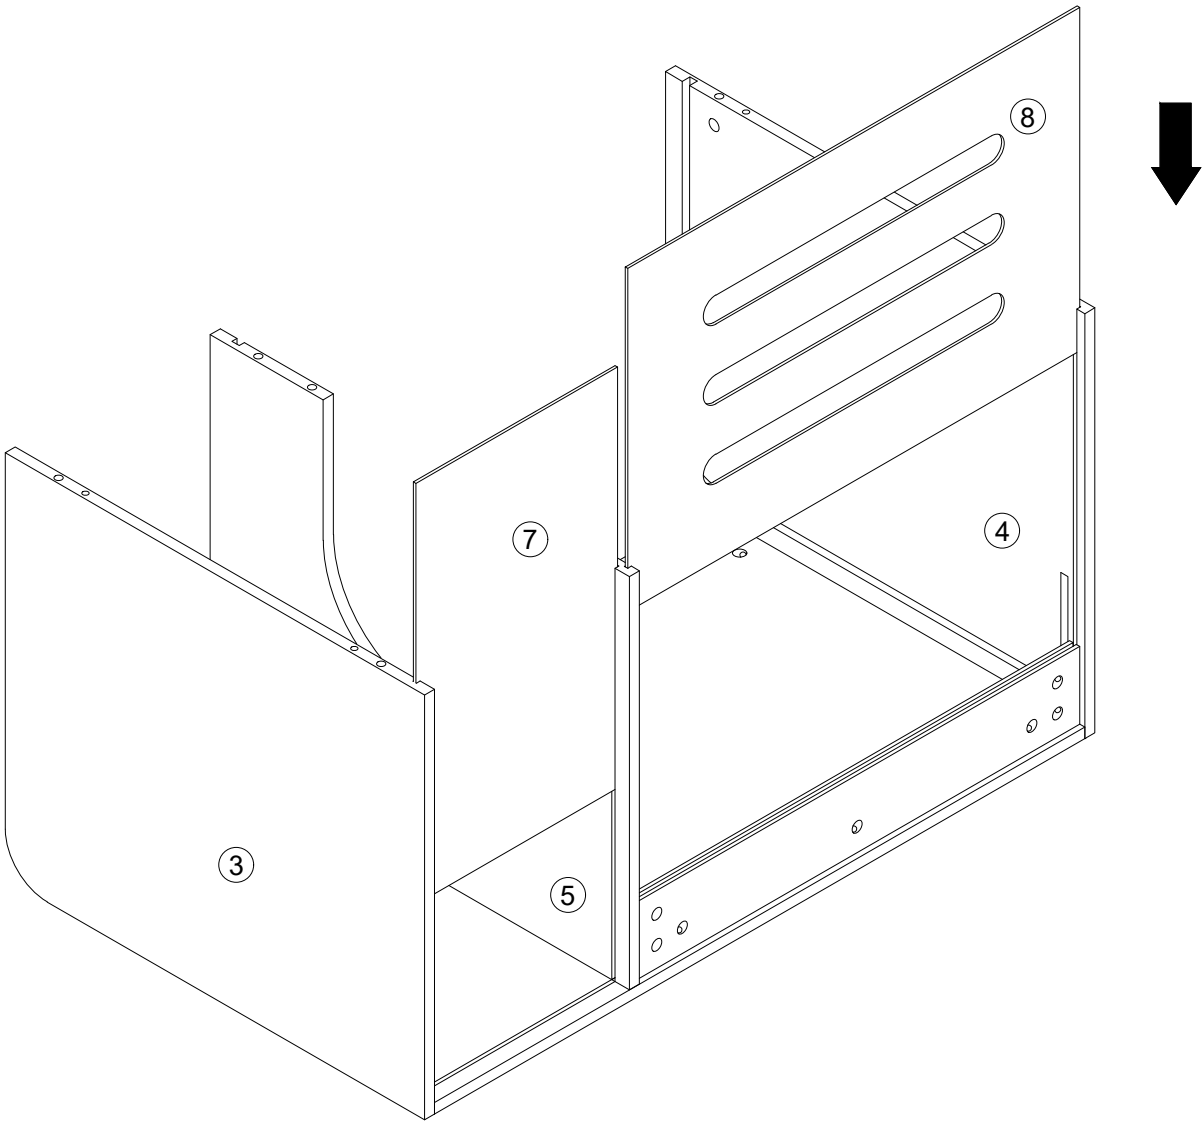


STEP6







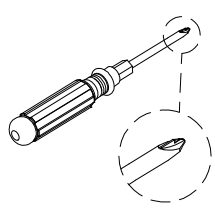


	
G	X1

 M4X10	
H	X2


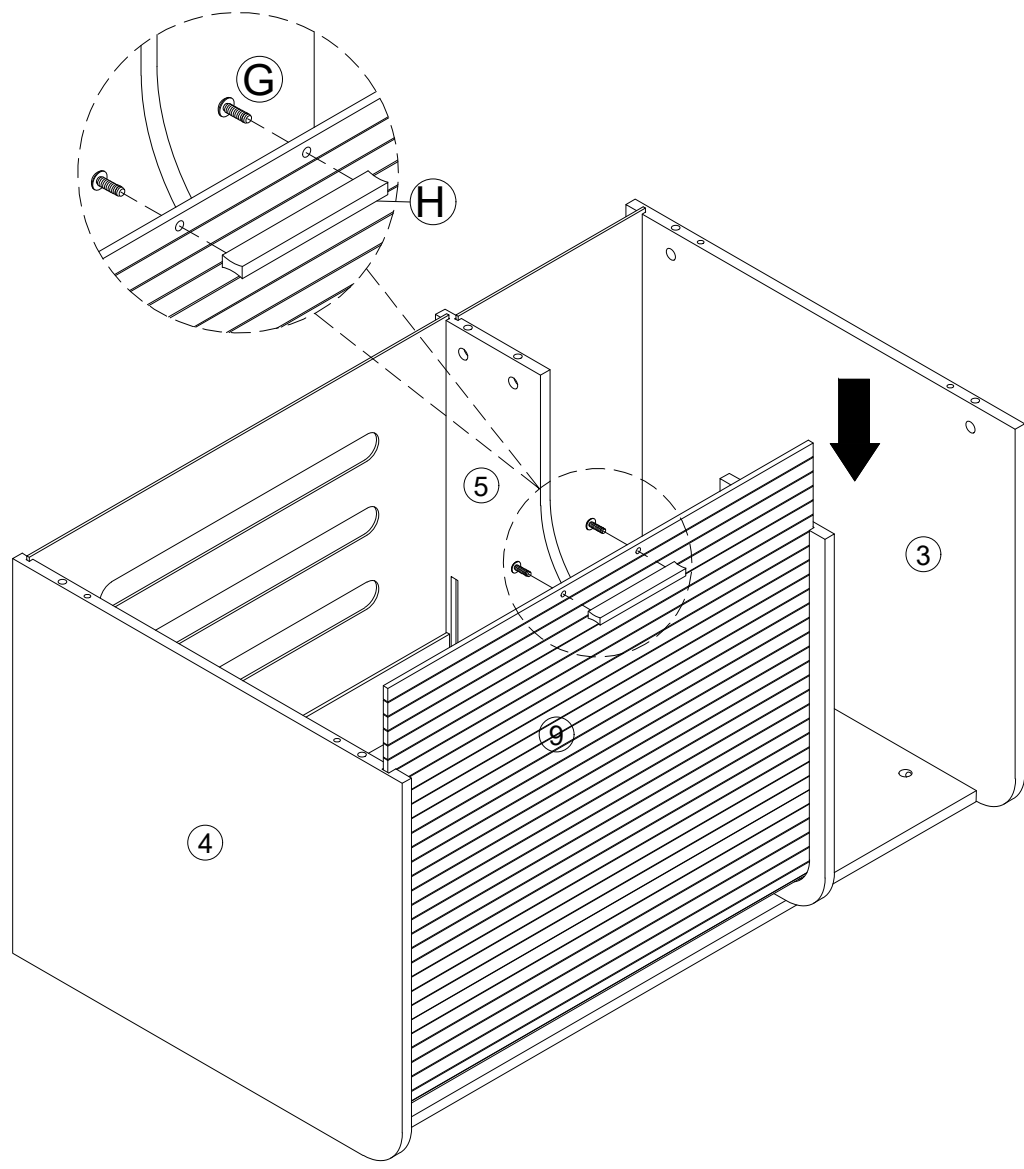


STEP7

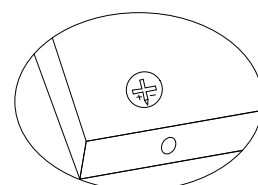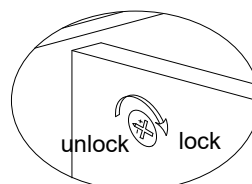
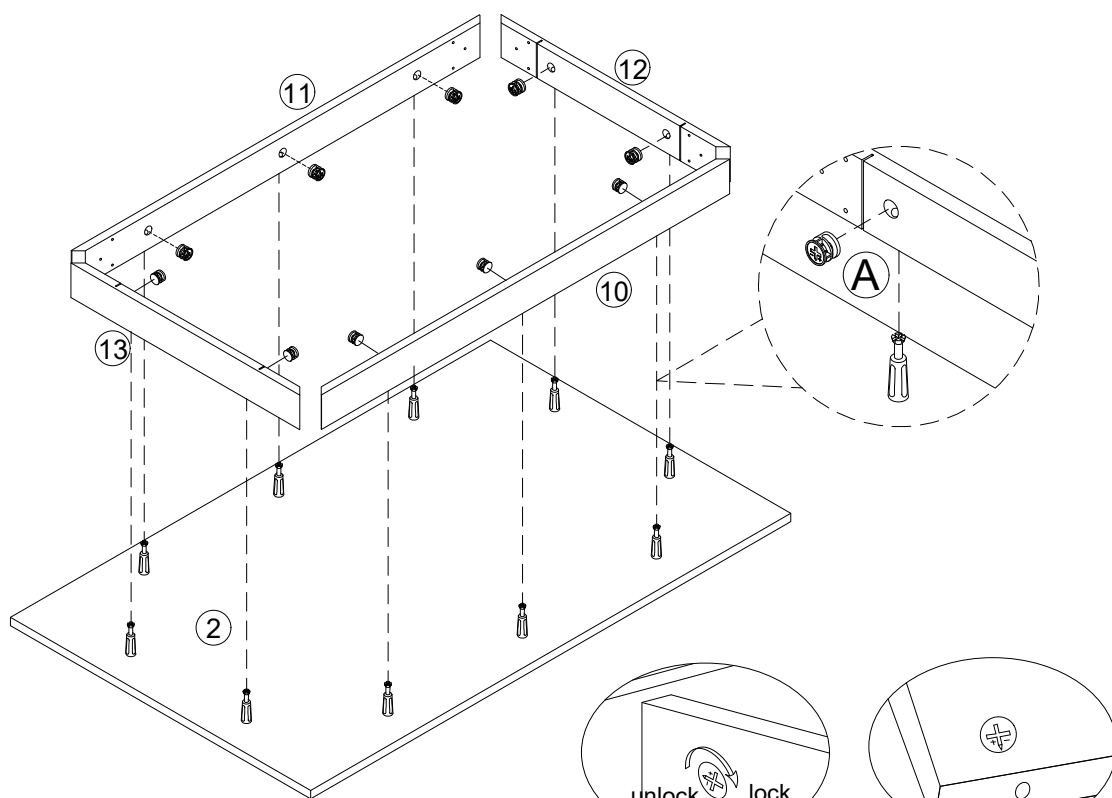
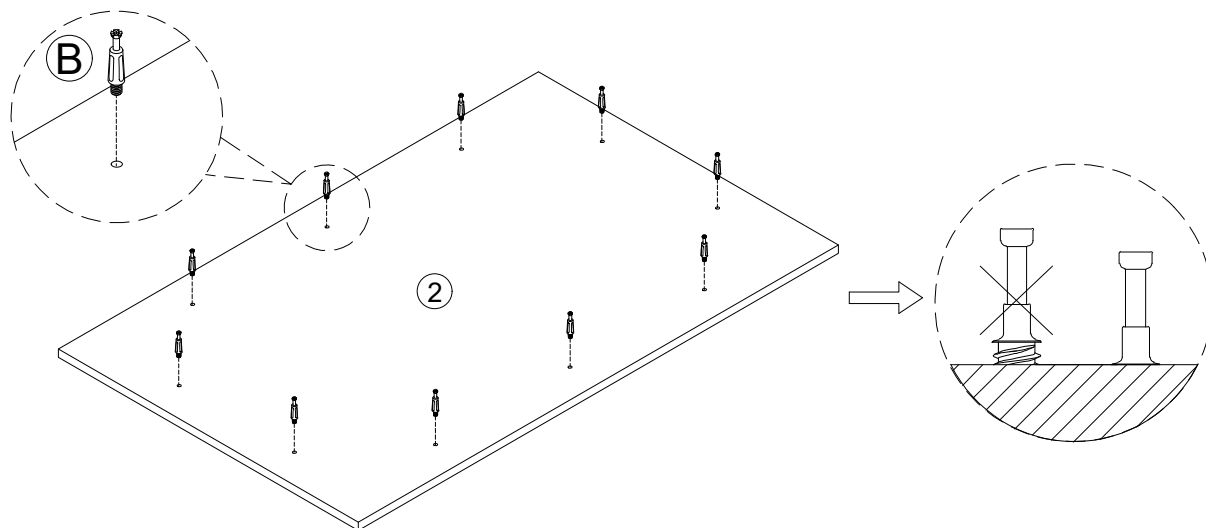
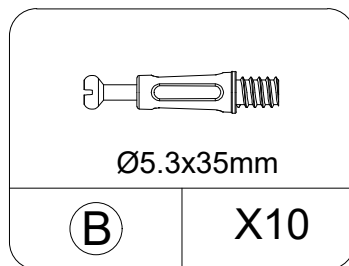
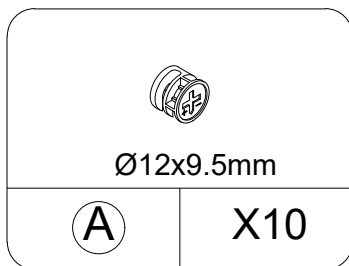
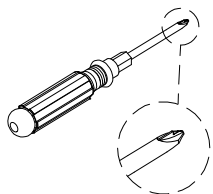


Proper Orientation Of CAM LOCK


STEP8

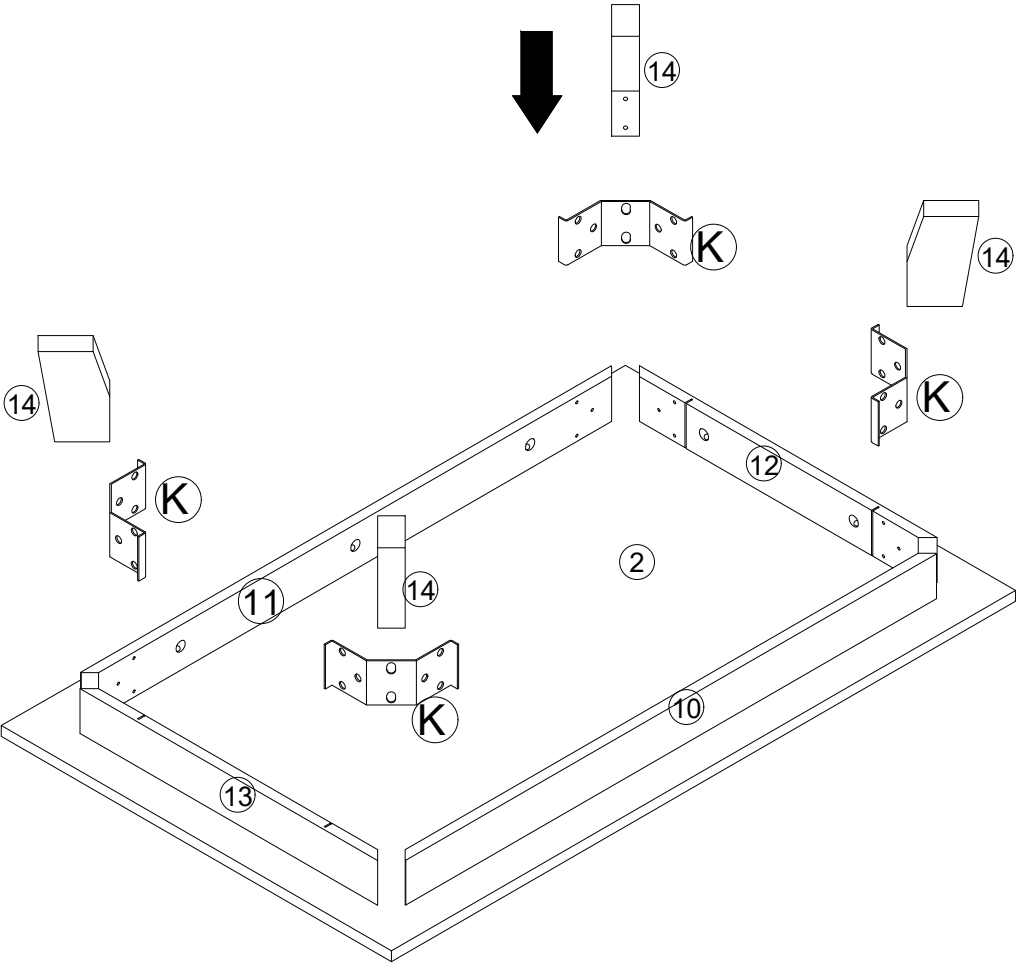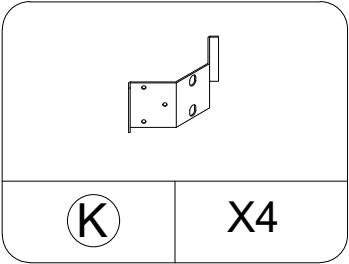

STEP9

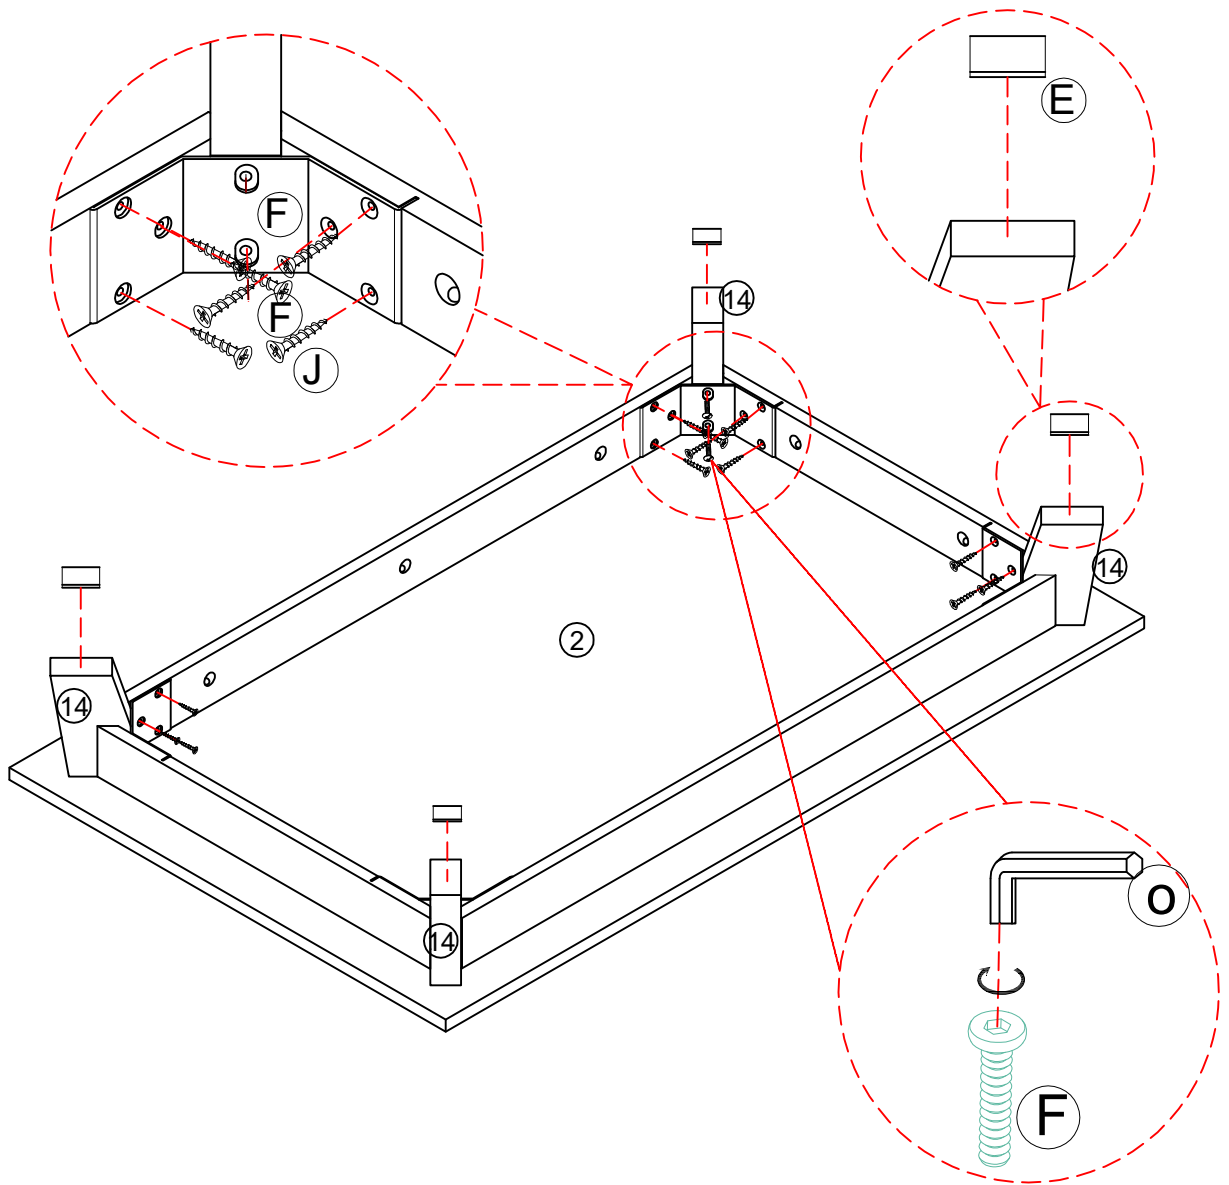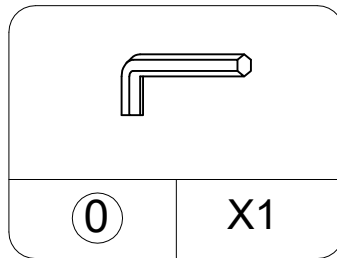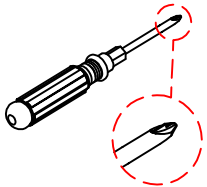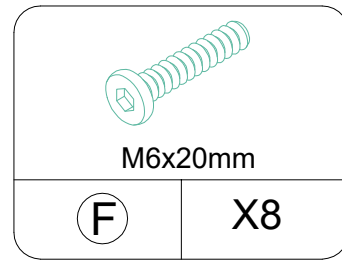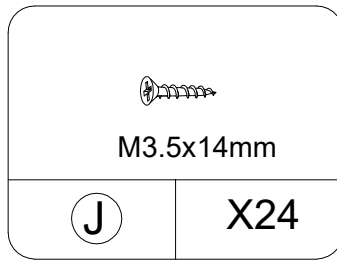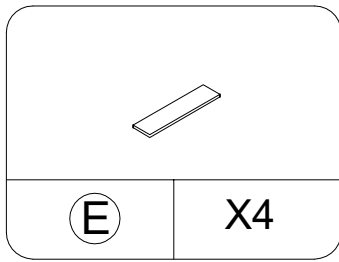


STEP10

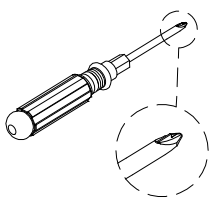



Ø5.3x35mm

B	X8
----------	-----------

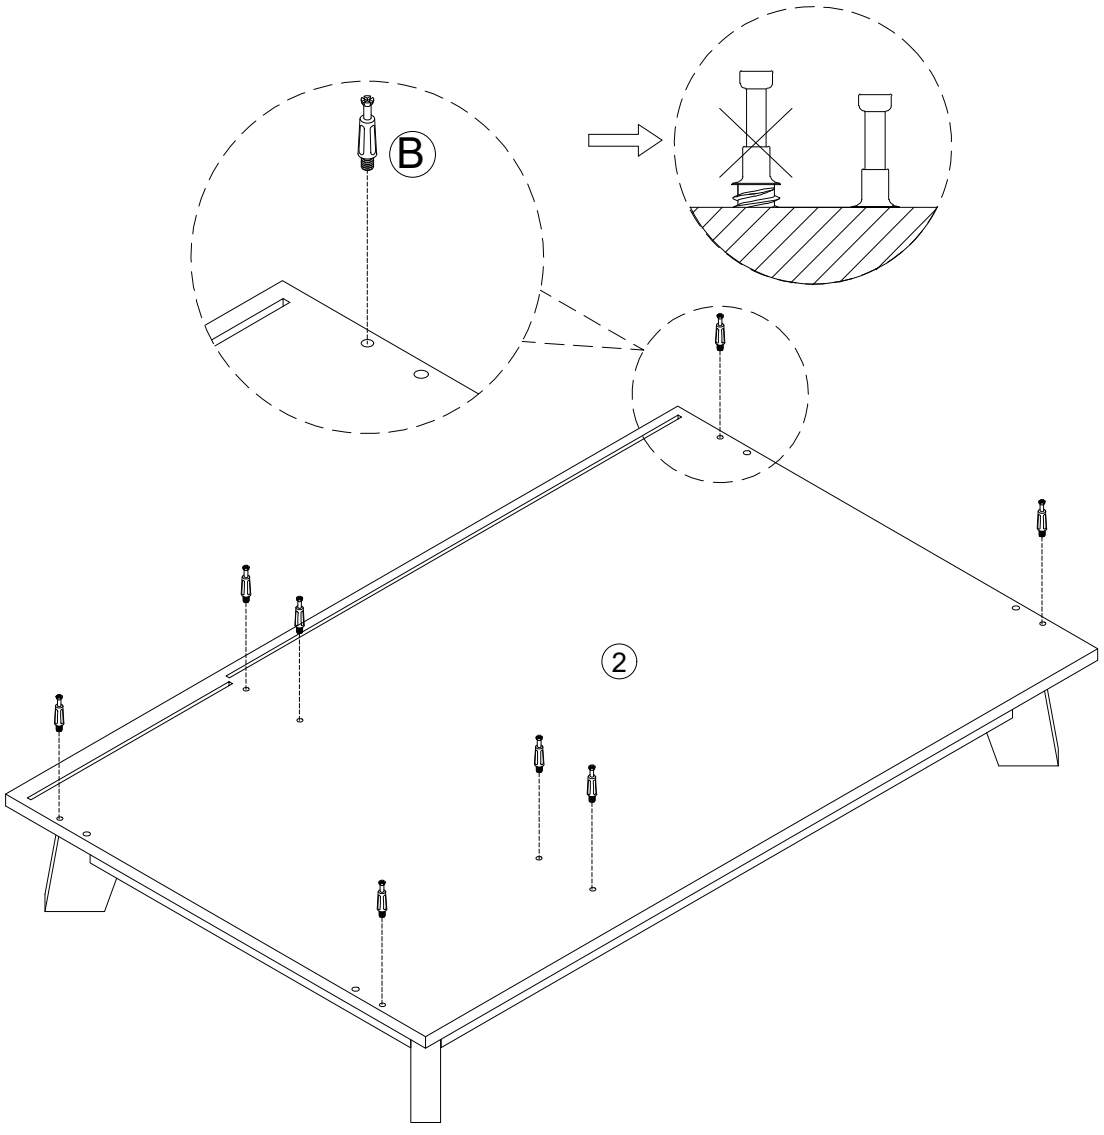


STEP11



Ø12x9.5mm

A	X8
---	----






Ø6x30mm

C	X4
---	----



Ø21mm

D	X8
---	----

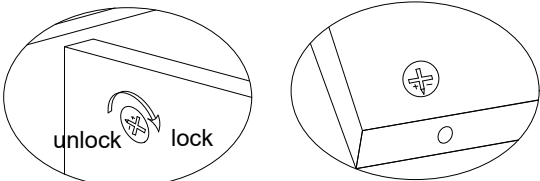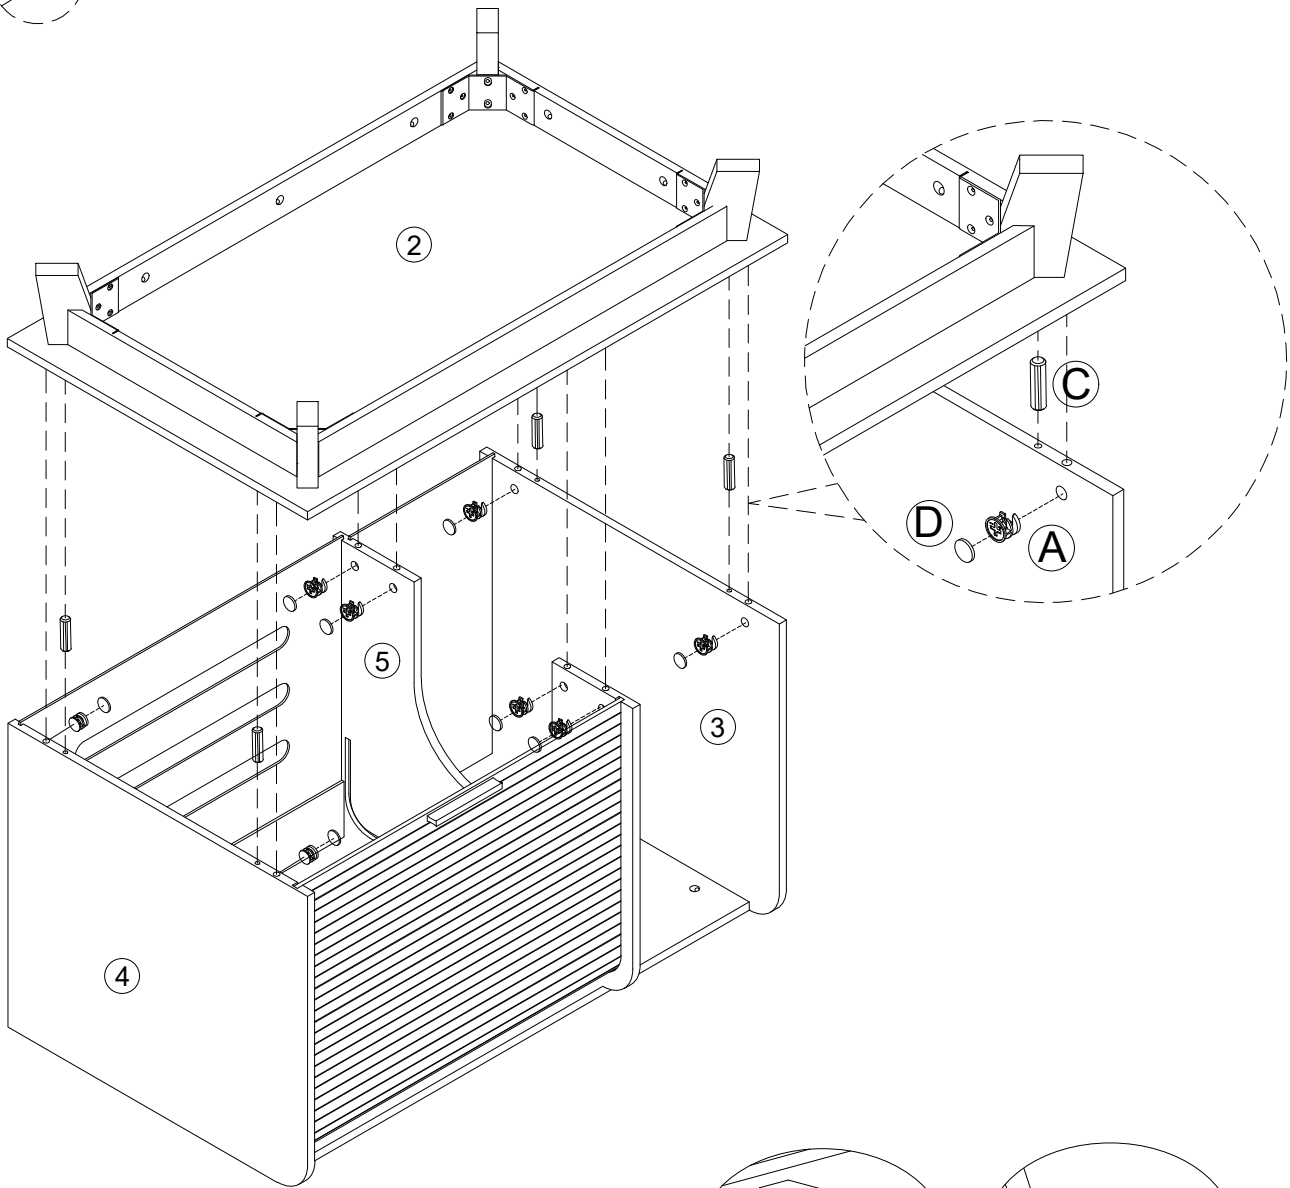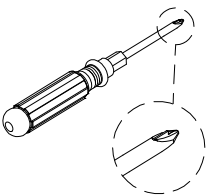

Proper Orientation Of CAM LOCK

STEP12

