

DAYBED

ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS














- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.
















Warning !

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

PARTS IDENTIFICATION

B1(BOX1)			
A	RIGHT SIDE FRAME		1PC
B	LEFT SIDE FRAME		1PC
C	FINIAL		4PCS
D	BUN FOOT		4PCS
E	ROLL SLAT		1 SET (13 PCS)
B2(BOX2)			
F	BACK REST FRAME		1PC
G	FRONT BED RAIL		1PC
H	BACK BED RAIL		1PC
B3(BOX3)			
I	ROLL SLAT		1 SET (13 PCS)
J	FRONT FRAME		1PC
K	BACK PANEL		1PC
L	RIGHT END PANEL		1PC
M	LEFT END PANEL		1PC


HARDWARE IDENTIFICATION

Z-B2(BOX2)-HARDWARE PACK IS LOCATED IN B2			
1	BOLT		12PCS
2	NYLON WASHER		12PCS
3	WOOD SCREW		26PCS
4	WOOD DOWEL		8PCS
5	ALLEN WRENCH		1PC
Z-B3(BOX3)-HARDWARE PACK IS LOCATED IN B3			
6	LONG BOLT		2PCS
7	NYLON WASHER		2PCS
8	MEDIUM BOLT		4PCS
9	WOOD SCREW		26PCS
10	WOOD DOWEL		4PCS
11	PULL		4PCS
12	SHORT BOLT		4PCS
13	ALLEN WRENCH		1PC

ASSEMBLY INSTRUCTIONS


STEP 1

Insert wood dowel(4) to both ends of back rest frame(F), front(G) & back(H) bed rail.

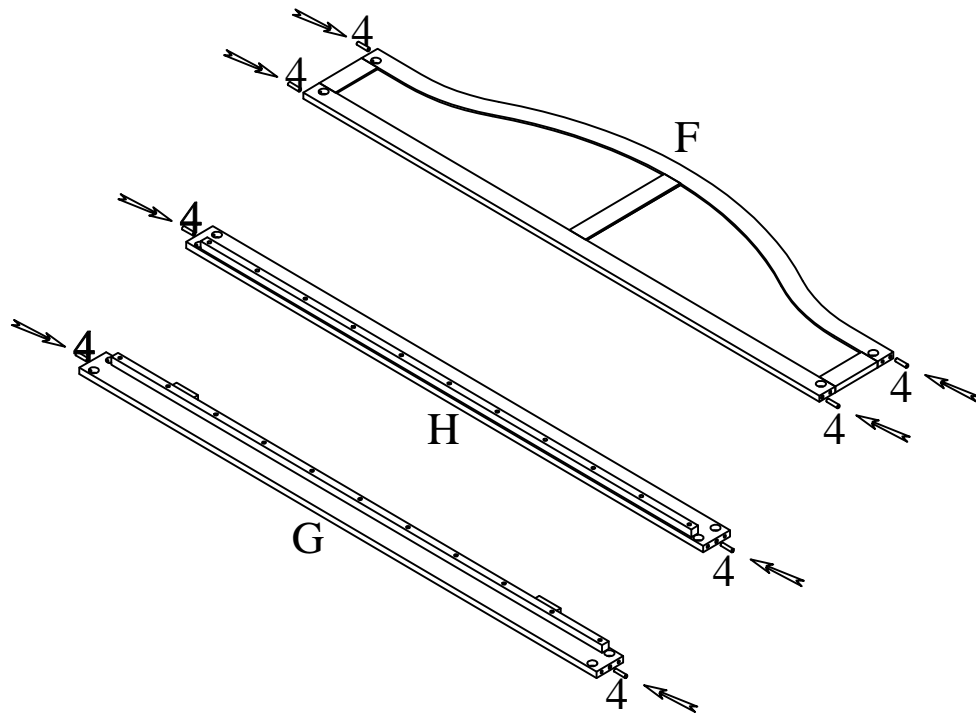

STEP 2


- 2.1 Align & fasten back rest frame(F) & back bed rail(H) to right(A)& left(B) side frame using bolt(1)&nylon washer(2). DO NOT FULLY TIGHTEN AT THIS STEP.
- 2.2 Align & fasten front bed rail(G) to right(A)& left(B)side frame using bolt(1)& nylon washer(2).
- THEN FULLY TIGHTEN ALL THE BOLTS AT STEP 2.1 & 2.2 WITH ALLEN WRENCH(5).

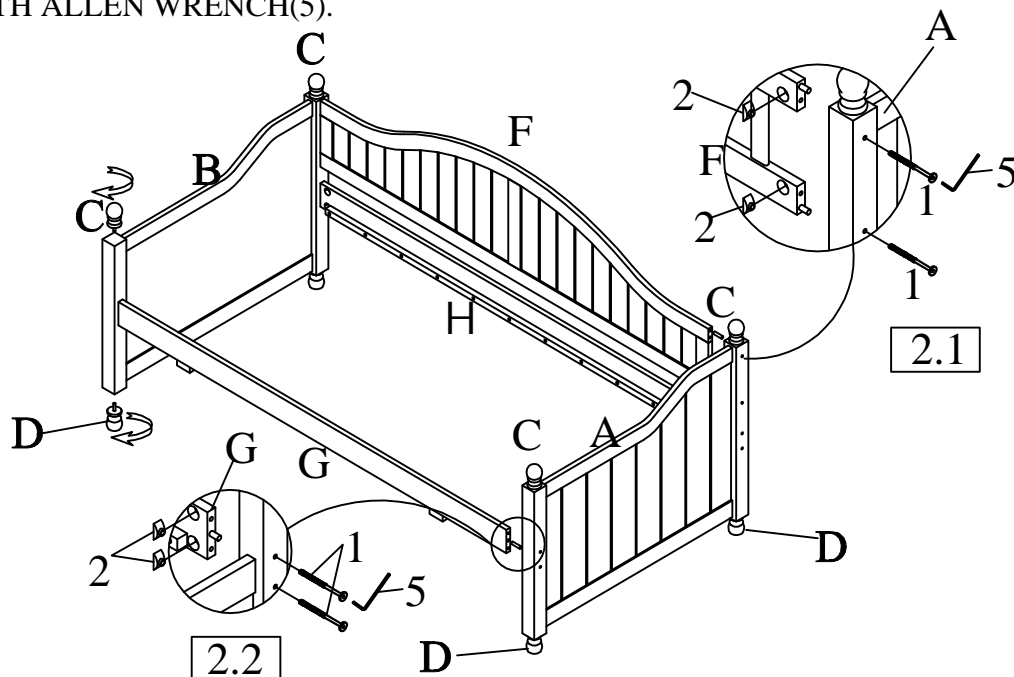

ASSEMBLY INSTRUCTIONS


STEP 3

Align and fasten roll slat(E) to bed rails using wood screw(3).
Tighten with screw driver(NOT INCLUDED)

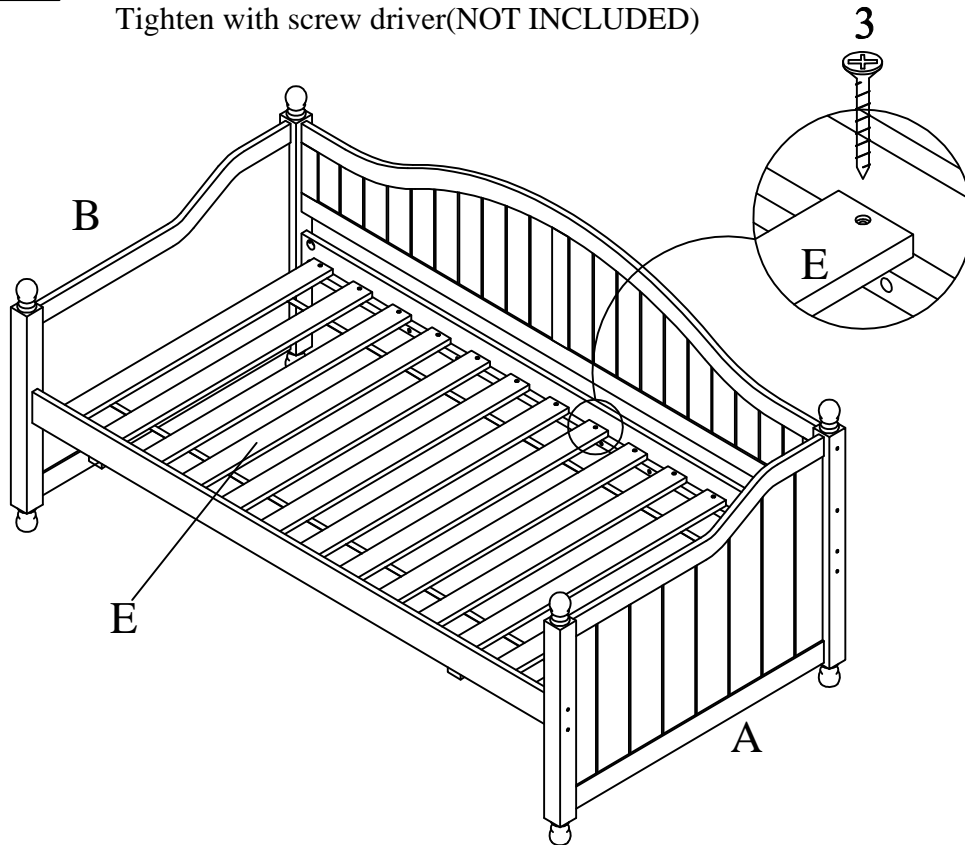

STEP 4


- 4.1 Insert wood dowel(10) to both ends of back panel(K) & front frame(J).
- 4.2 Align and fasten front frame(J) & back panel(K) to left(M) and right(L) end panel using Medium bolt(8). Tighten with Allen wrench(13).
- 4.3 Align and fasten pull(11) to front frame(J) using short bolt(12).

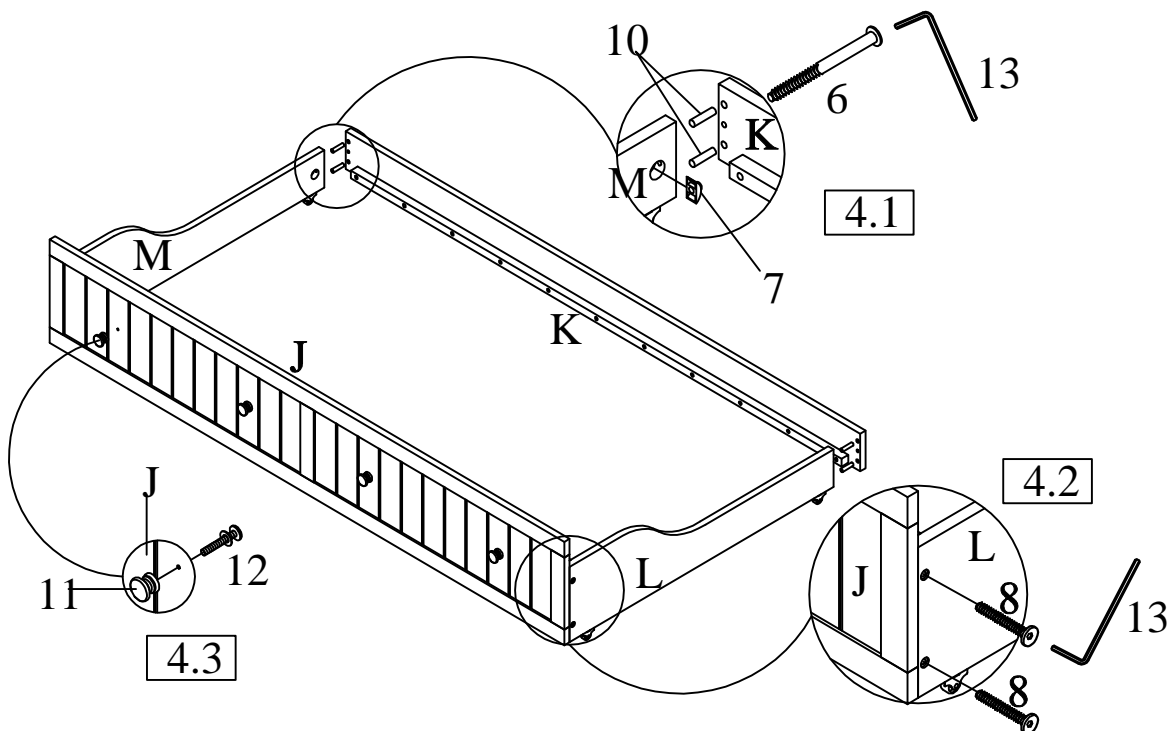

ASSEMBLY INSTRUCTIONS

STEP 5

Align & fasten roll slat(I) to front frame(J)& back panel(K)
using wood screw(9).
Tighten with screw driver(NOT INCLUDED)

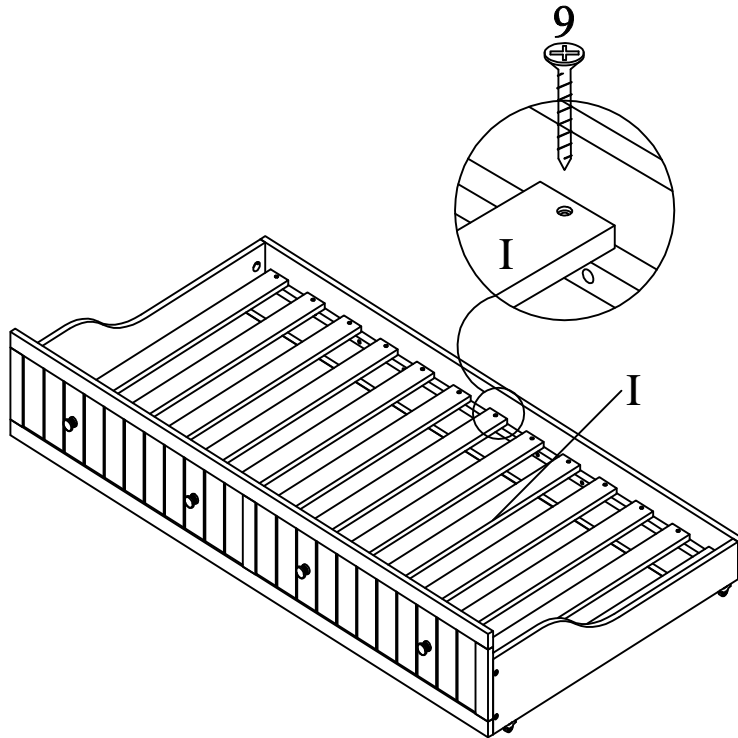

STEP 6

Complete

