


Please consult your electrician for hanging fixture and wiring.

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:
Voici une liste de variateur recommandé :

Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

WARNING: Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur.

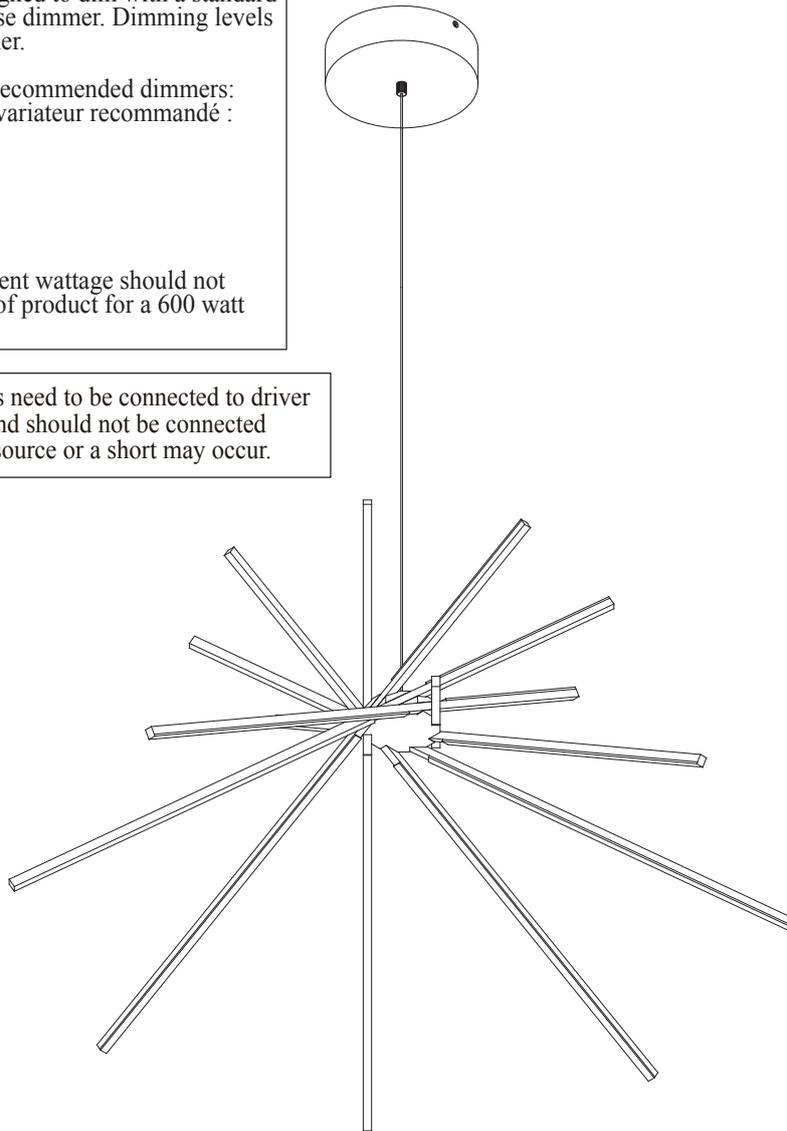

LED 60W

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation



(A)
Backplate



(B)
Wire Nuts (x3)





(C)
Mounting screws (x2)




(D)
LED arm (x8)

Locate all hardware & components before discarding packaging

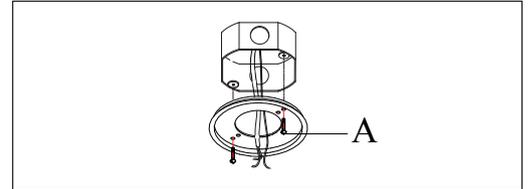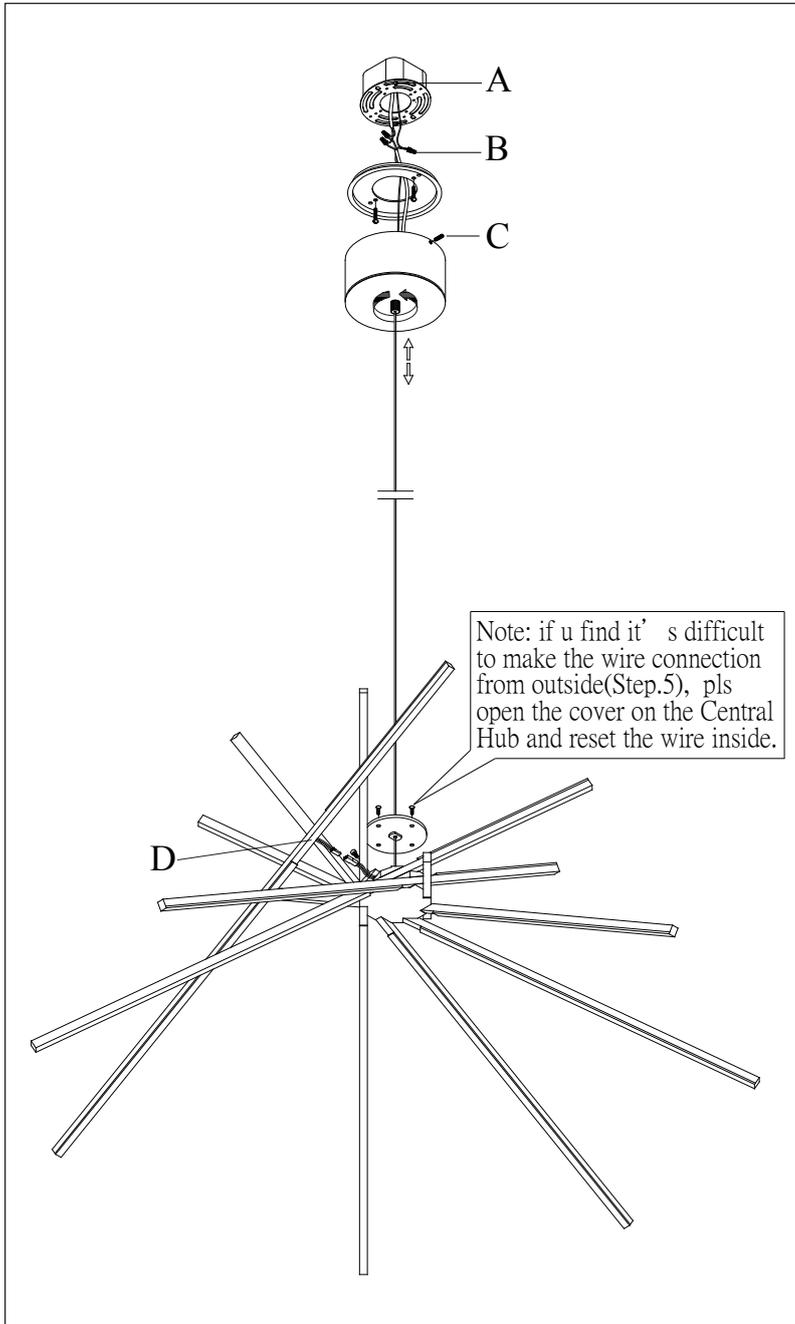


1.)

Step.1: Install Backplate(A) to outlet box.

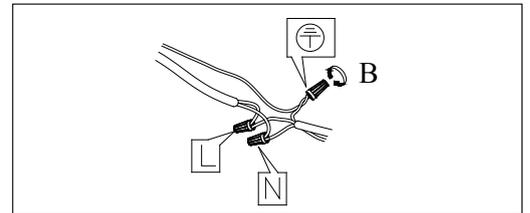


2.)

Step.2: Wire fixture to wires in outlet box.
Green/Copper wire is for Ground.

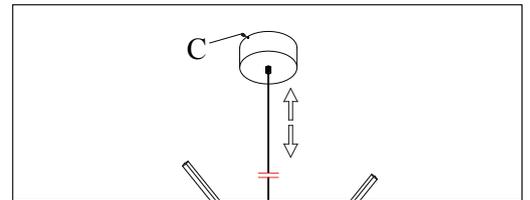

3.)

Step.3: Install fixture to Backplate(A) and tighten Mounting screws (C) to secure.

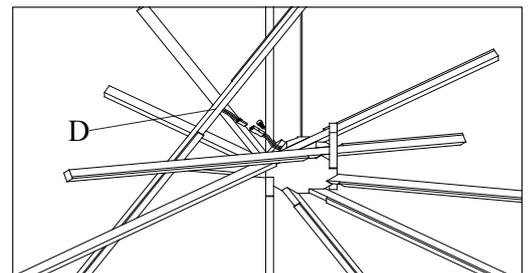

4.)

Step.4: Using the quick connect plug, wire the LED arm (D) to the fixture body. Secure to the body of the fixture using screws provided.

Cleaning & Care:

Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.