


Bathroom cabinet

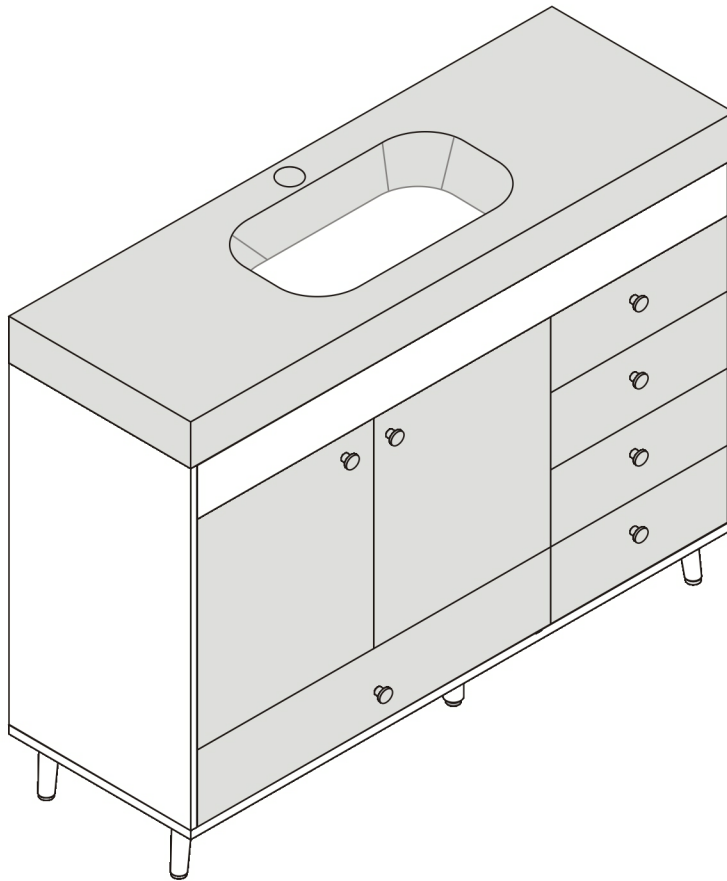


2 Persons


L906*W455*H593MM

Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

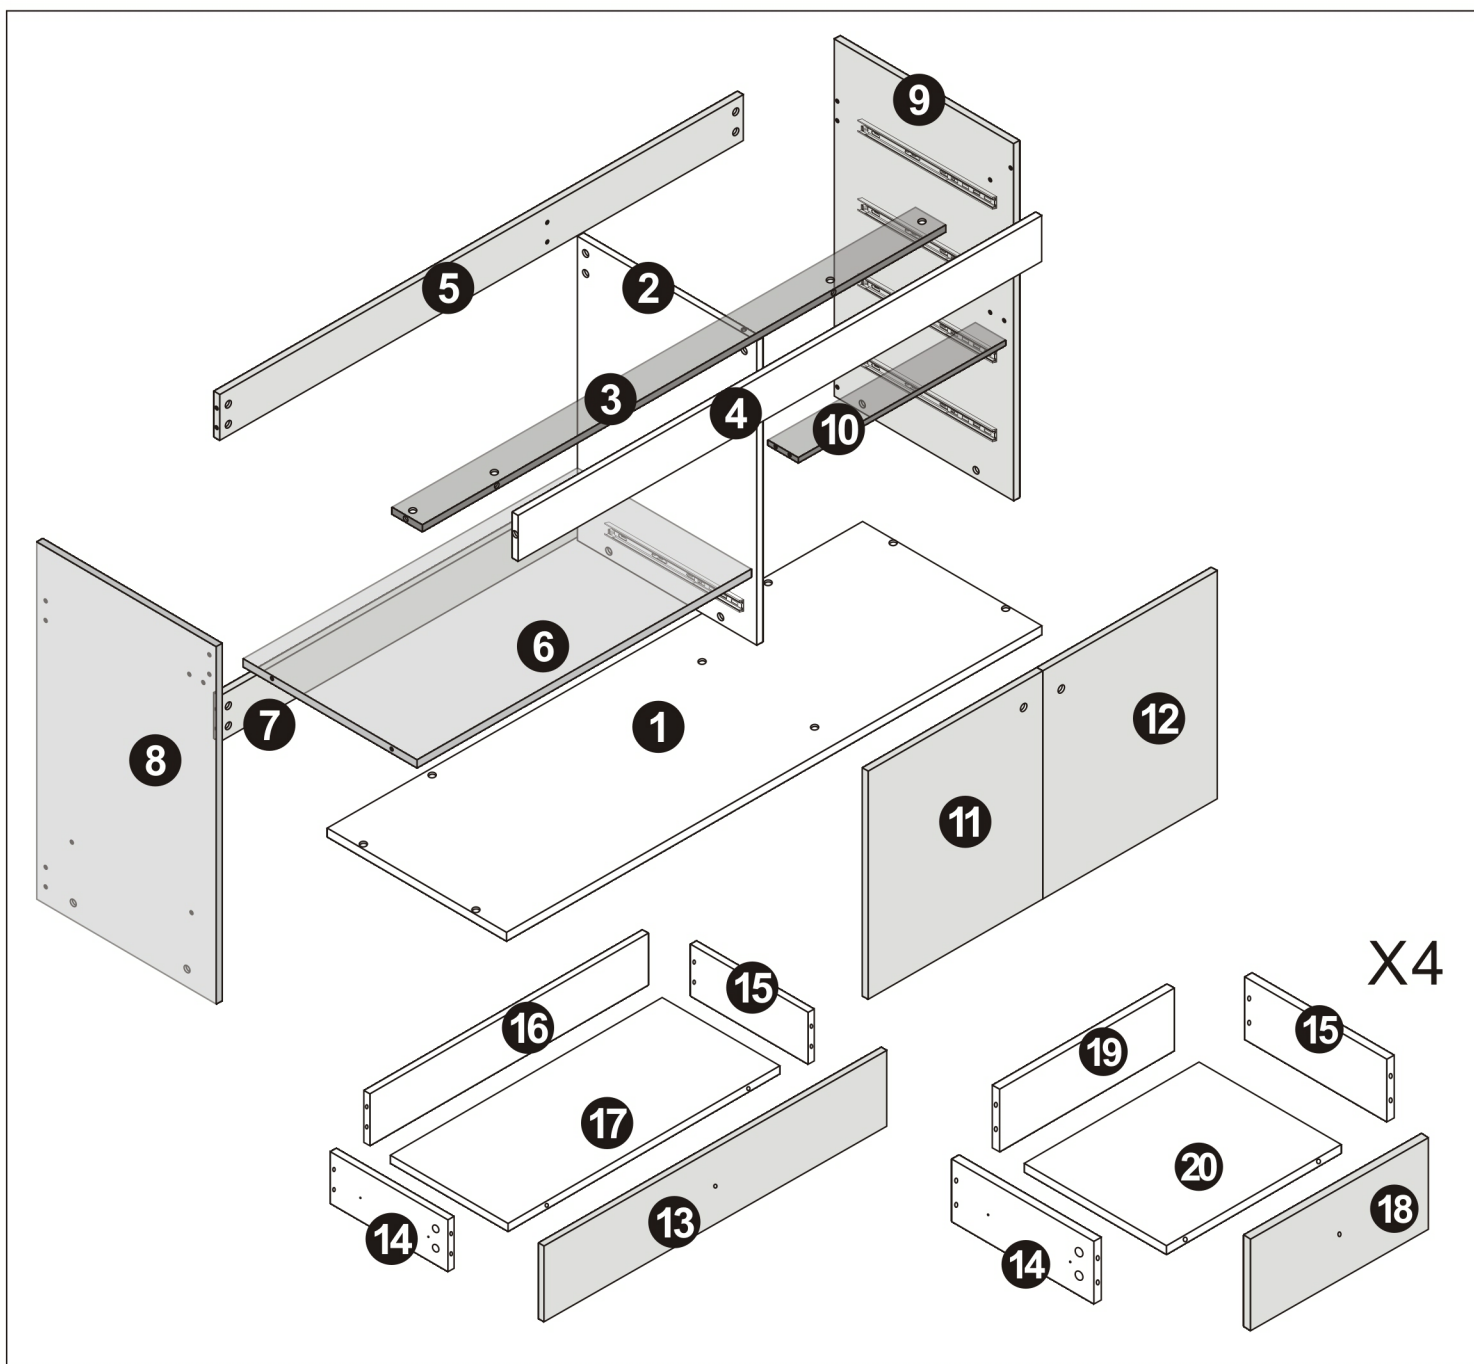


Disassembly and installation of accessories

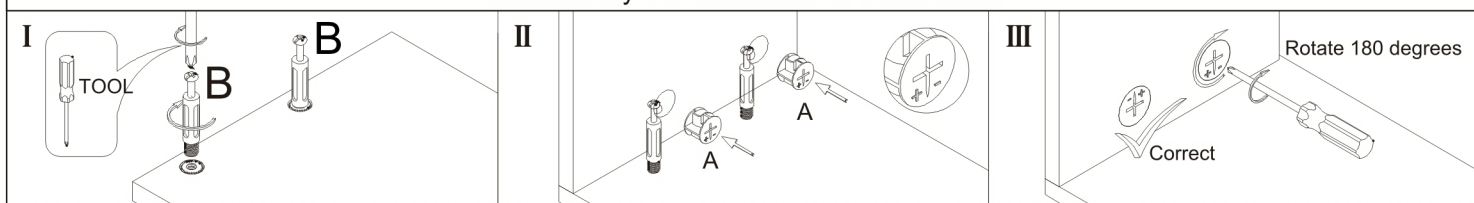

A 63PCS  15*10mm	B 63PCS  6*28mm	C 100PCS  3.5*14mm	D 50PCS  3.5*35mm	E 7PCS  4*20	F 7PCS  Handles	G 4PCS  Sponge Mat	H 2PCS  Middle bend
I 2PCS  Expansion screw	J 2PCS  Corner code	K 5PCS  Three-section Rail	L 4PCS  Hardware Feet	M 1PCS  Hardware Feet	N 2PCS  Mid bend		

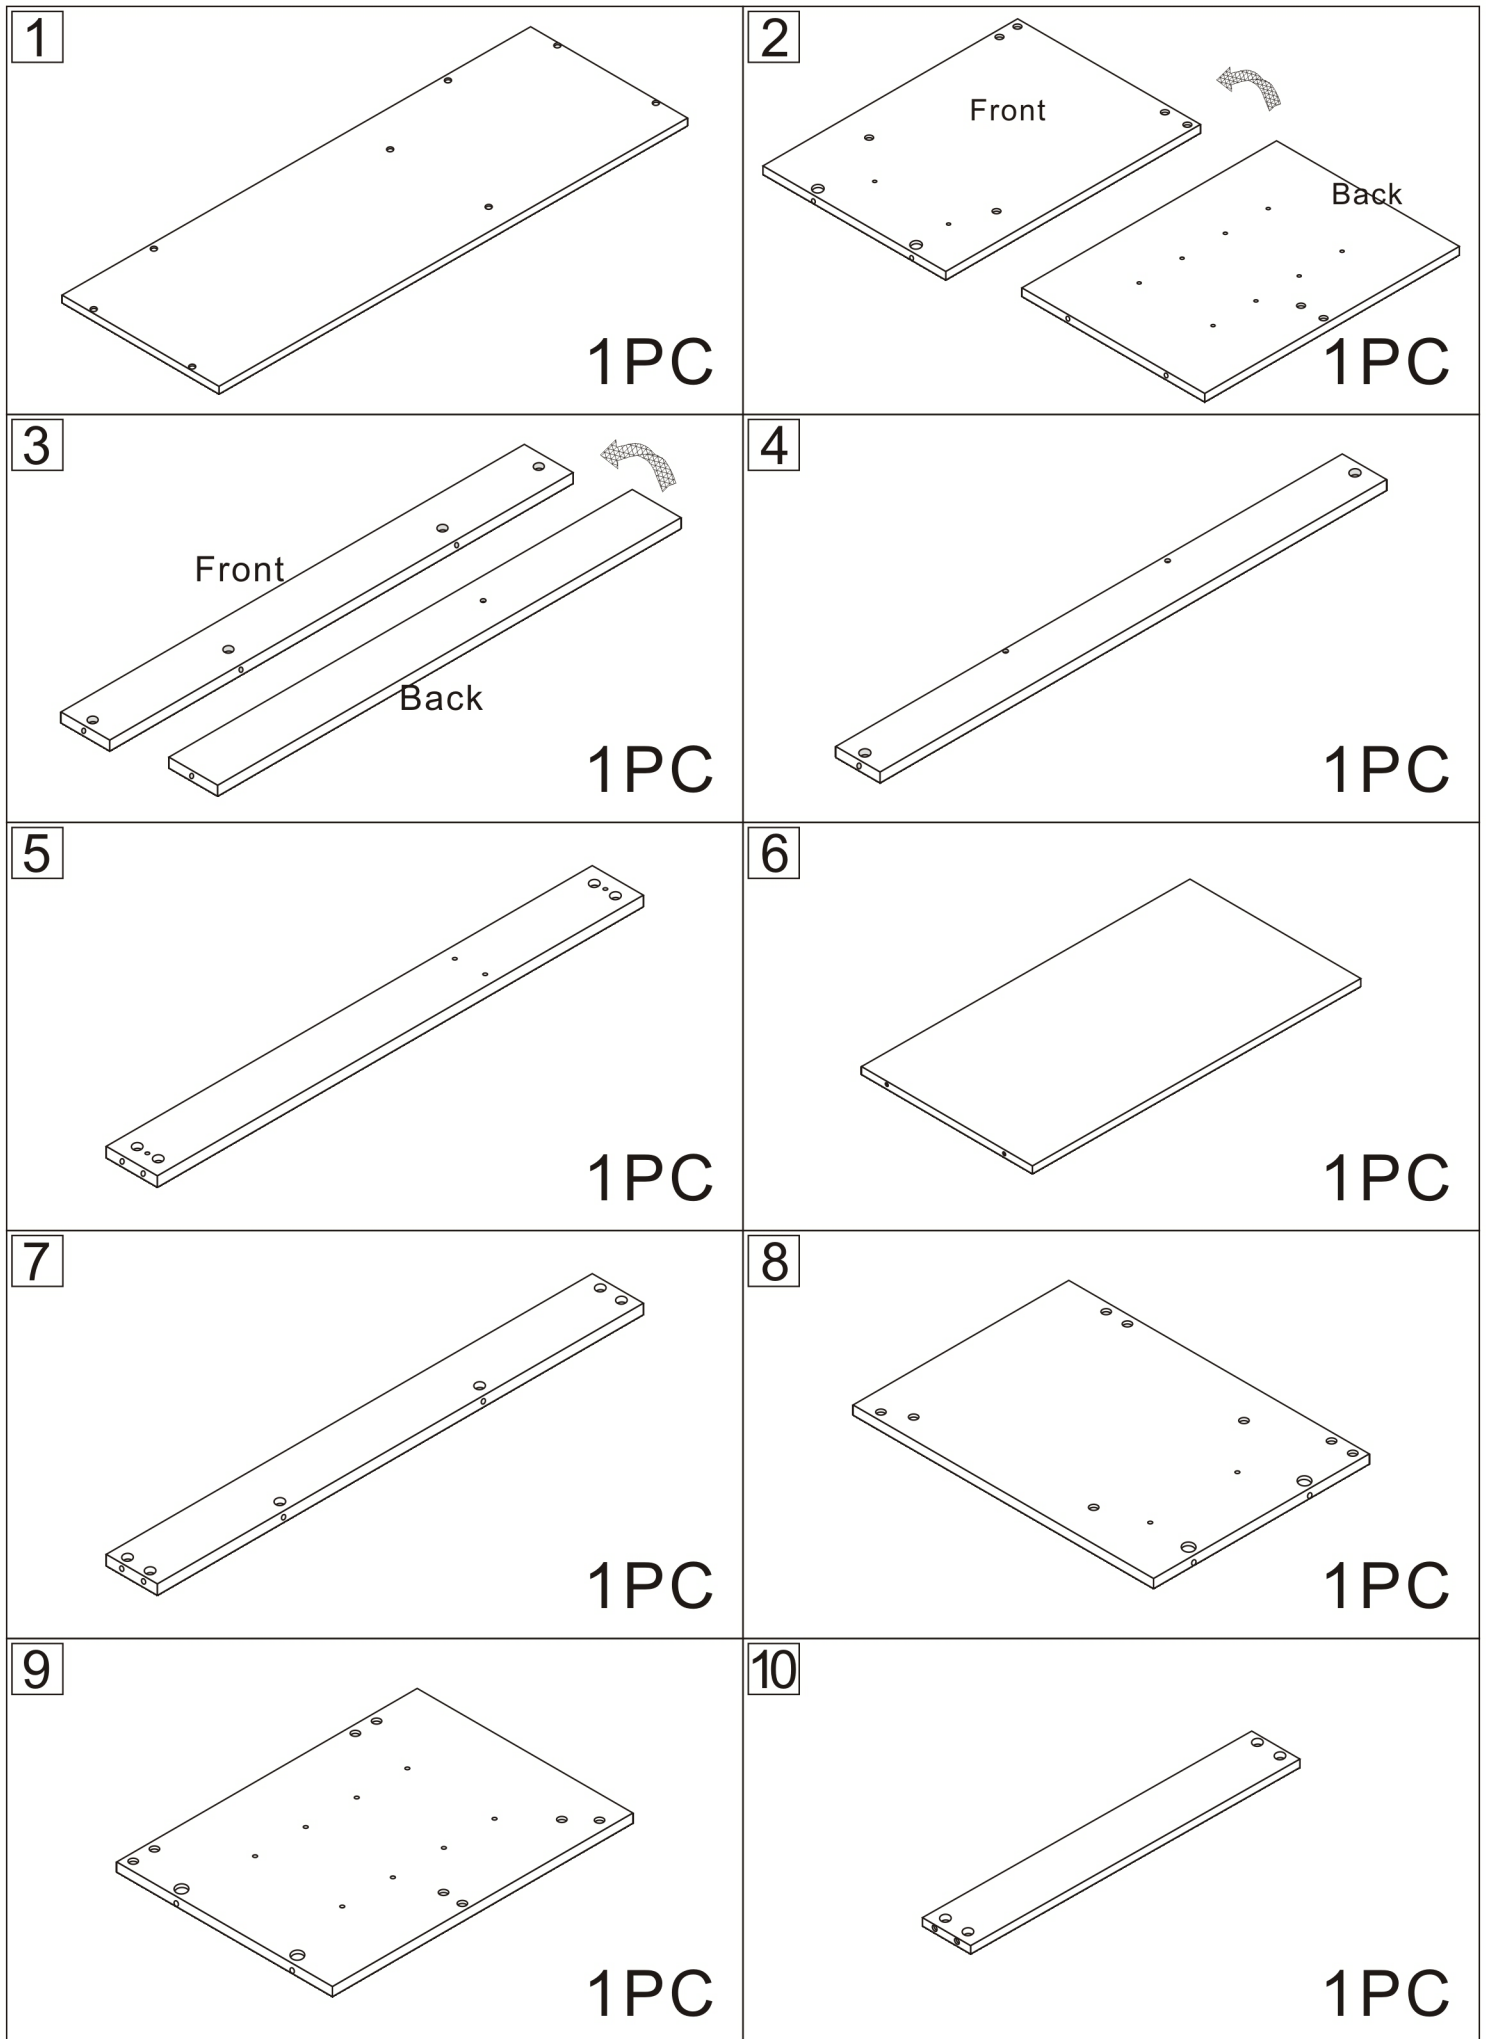


11

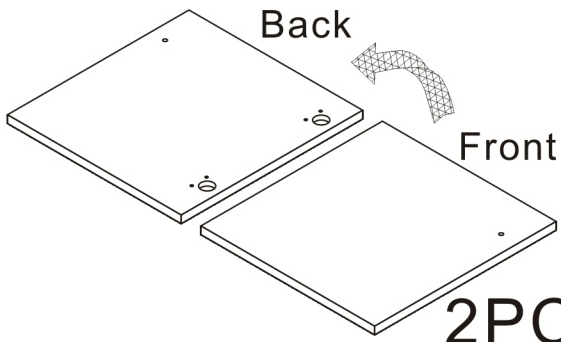


2PCS

12

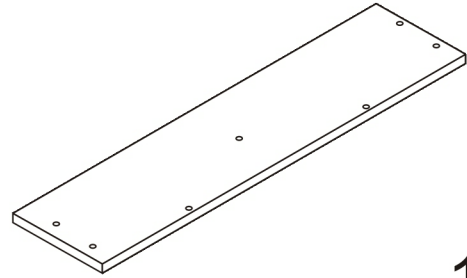


1PC

13

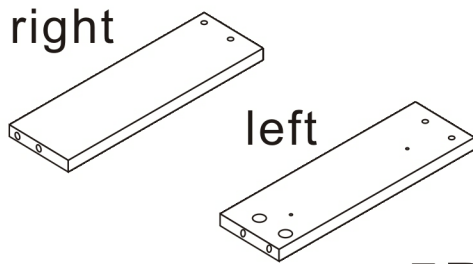


5PCS

14

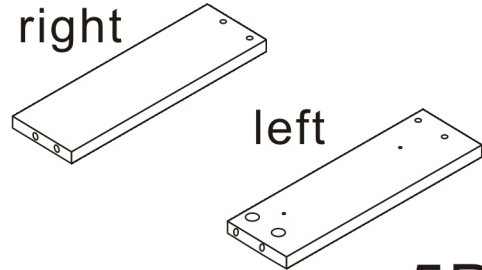


5PCS

15

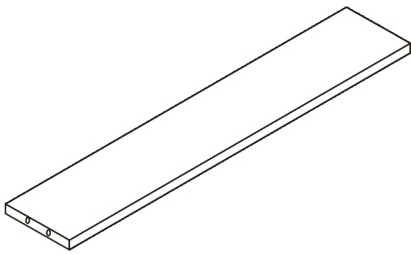


1PC

16

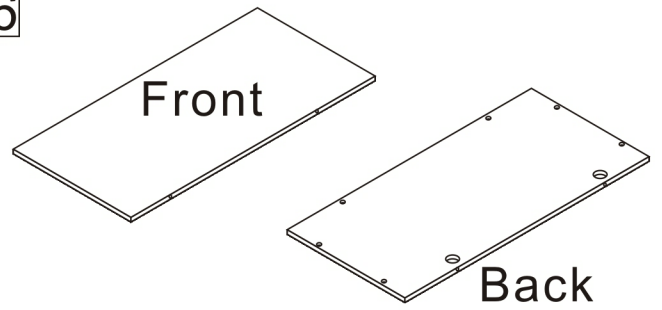


1PC

17

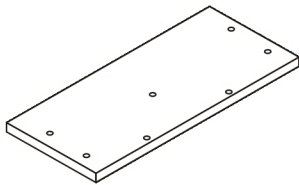


4PCS

18

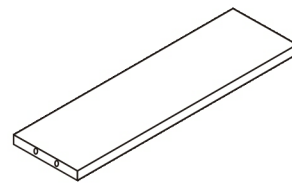










4PCS

19

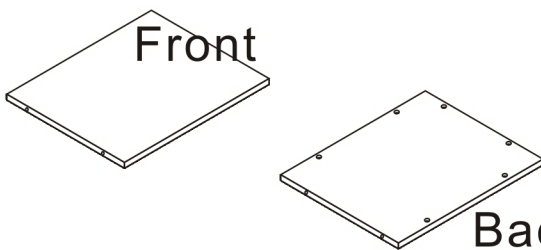


4PCS

1

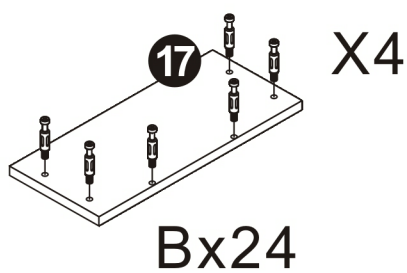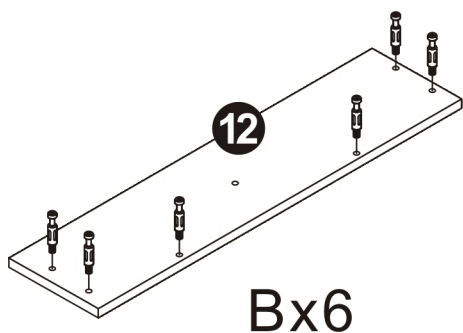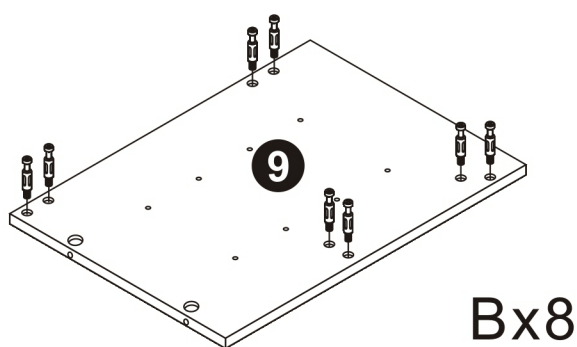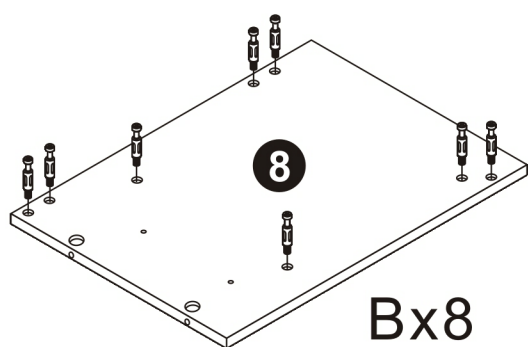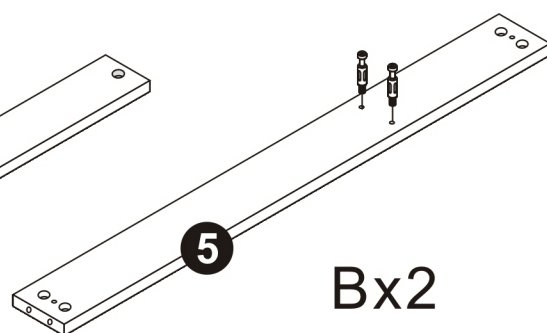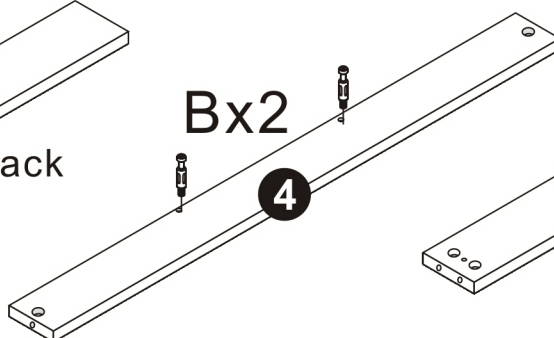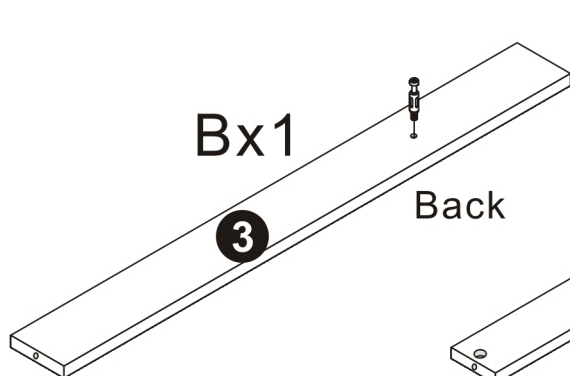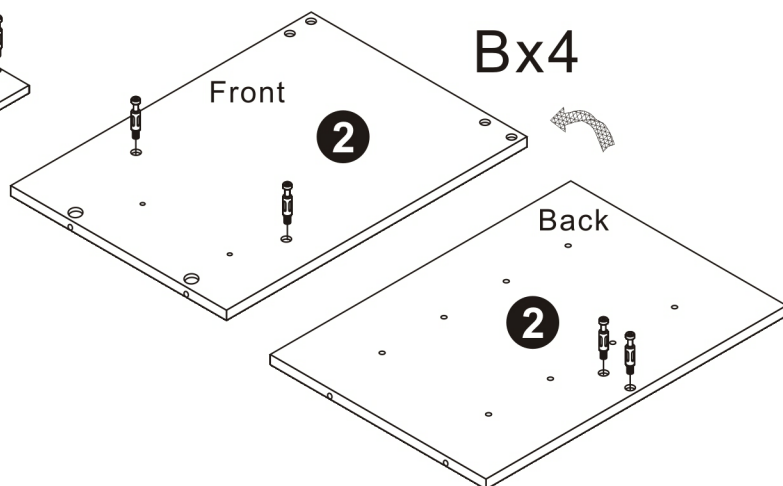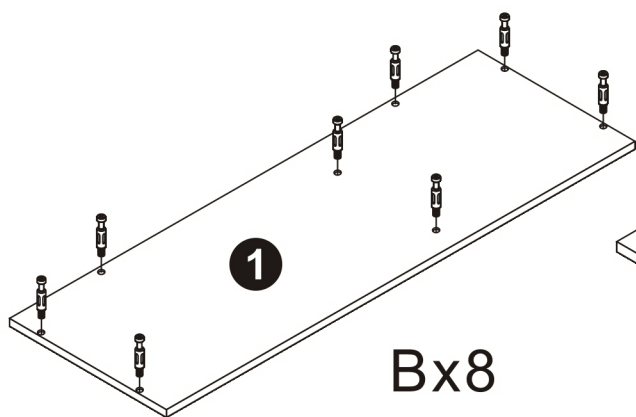


B	63PCS
6*28mm	

2

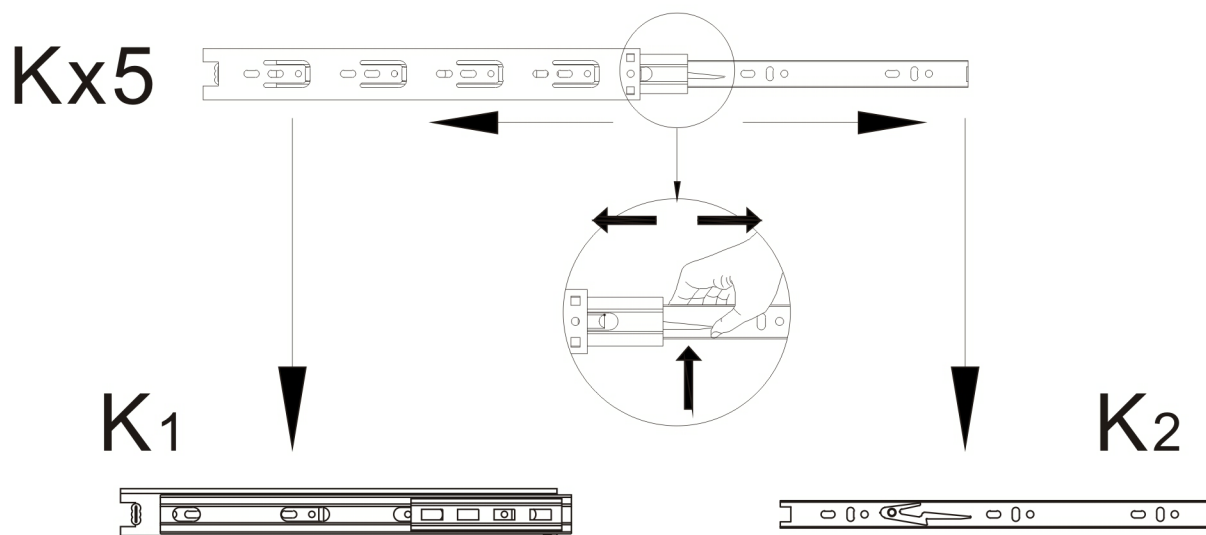

K ₁	5PCS
	
Three-section Rail	


3

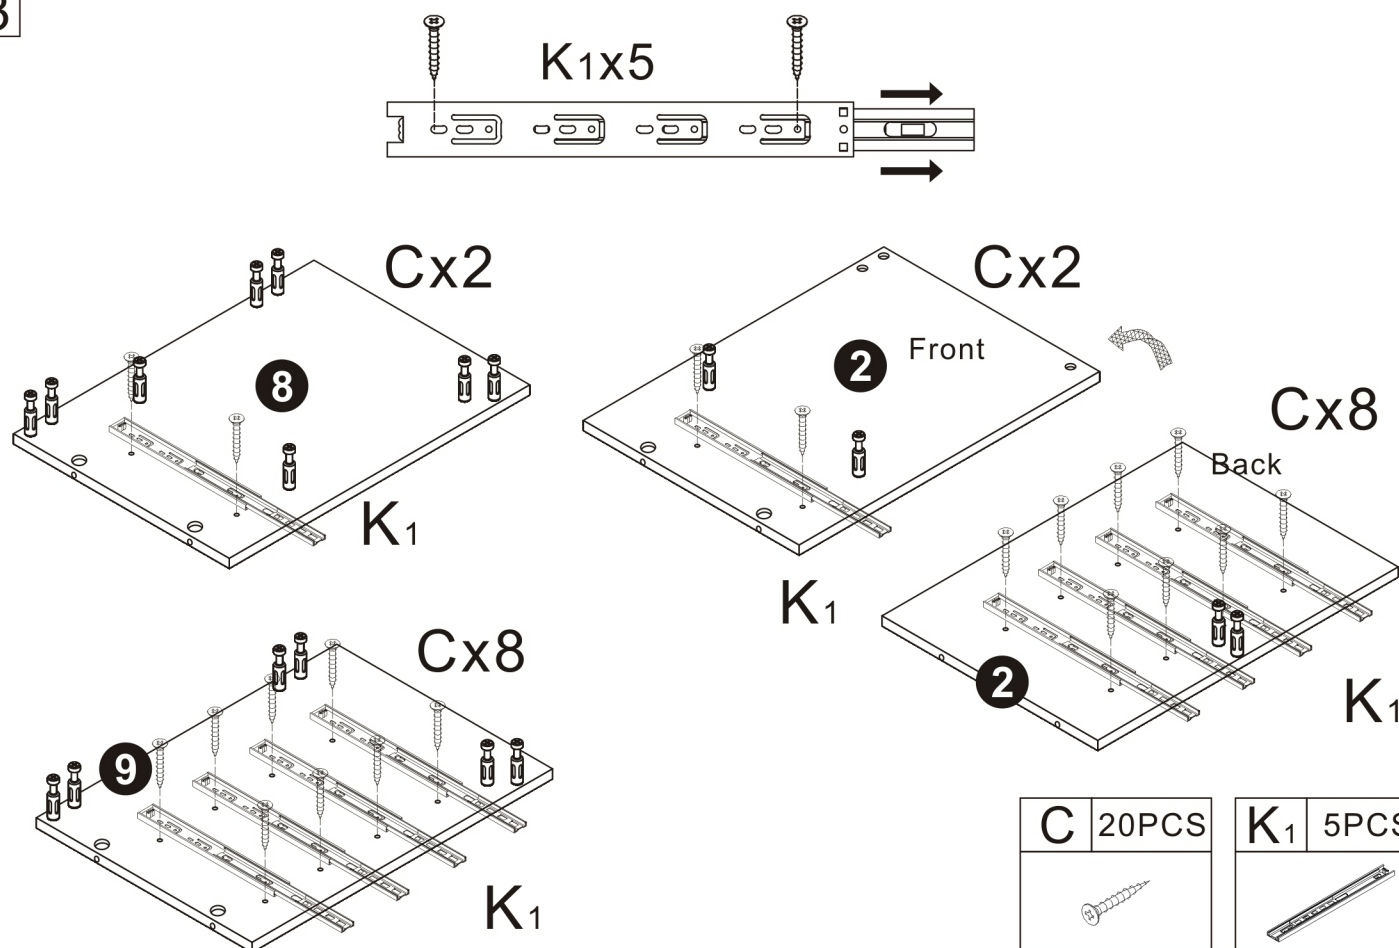

C	20PCS
	
3.5*14mm	

K ₁	5PCS
	
12 inch Three-section Rail	

4

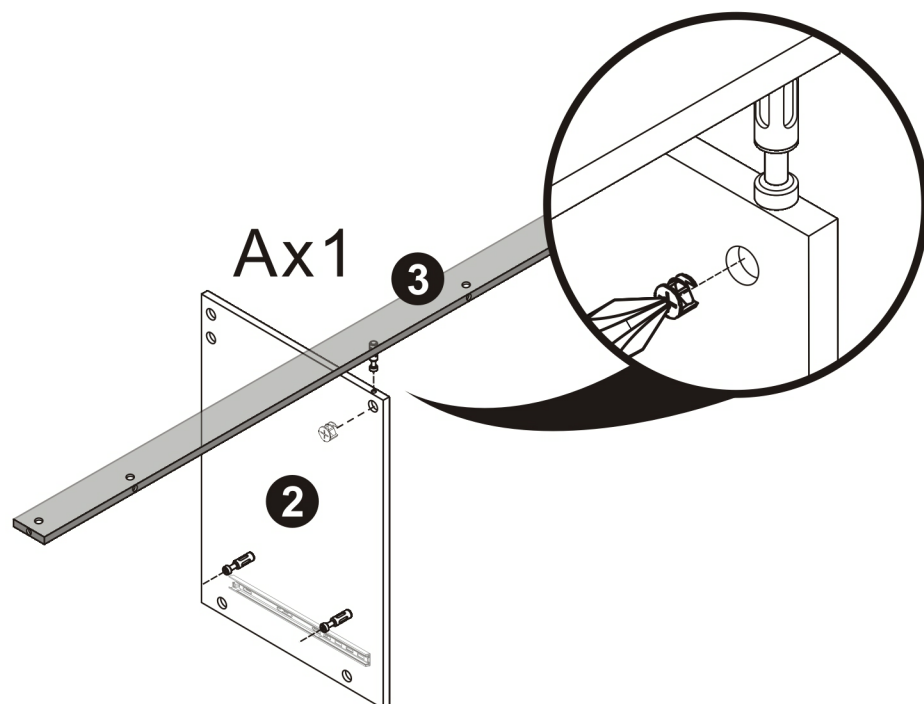


A 1PCS



15*10mm

5

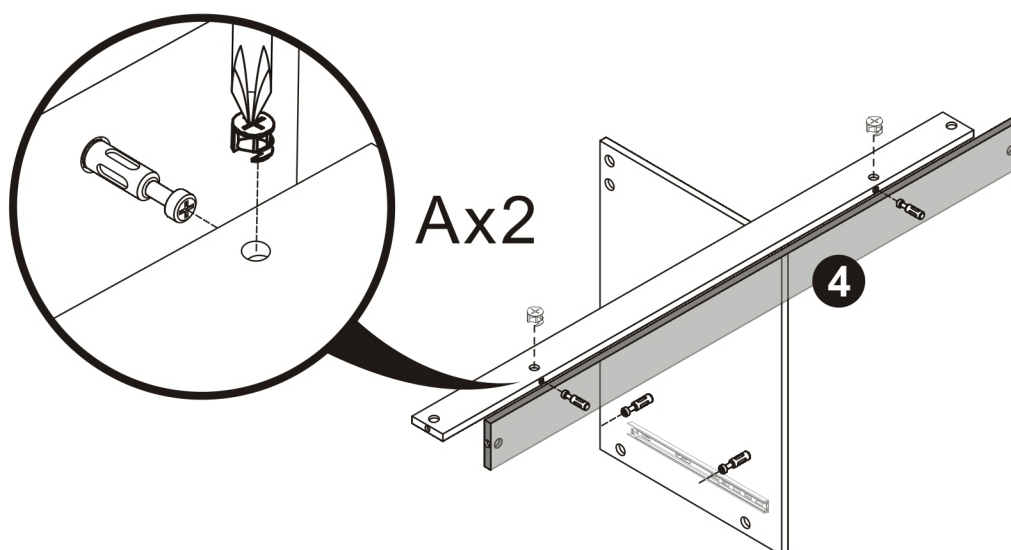


A 2PCS



15*10mm

6

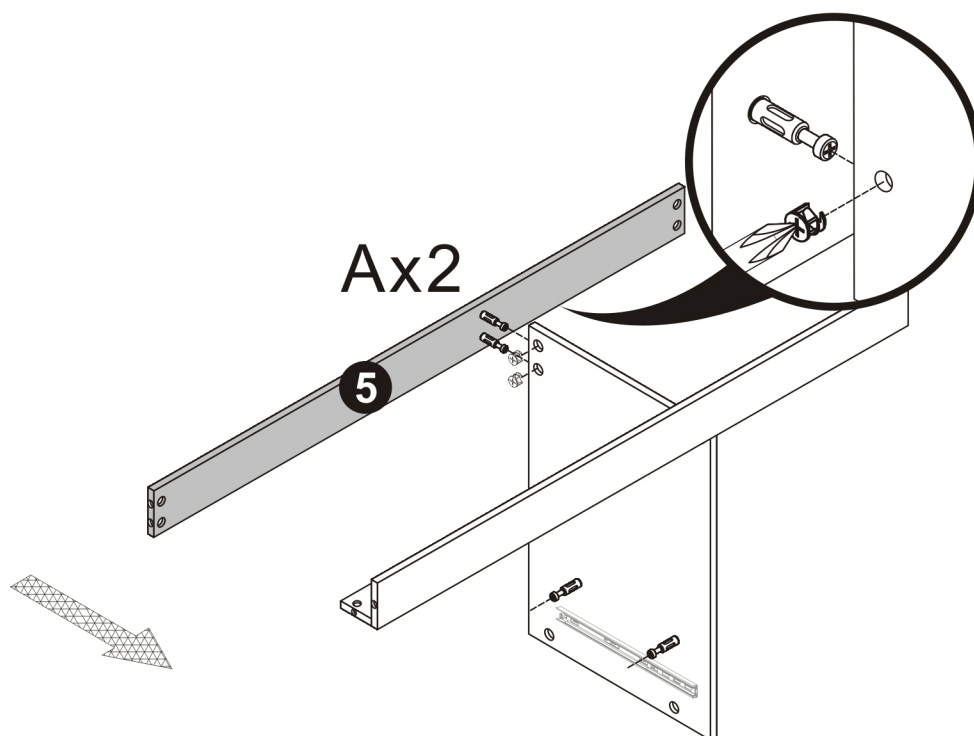


A 2PCS



15*10mm

7

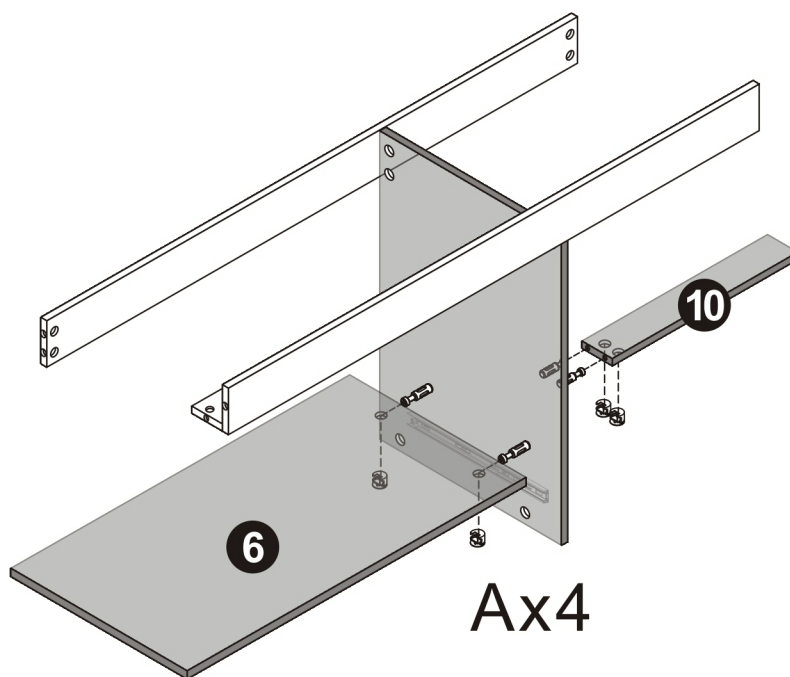


Ax4

A 4PCS



15*10mm

8

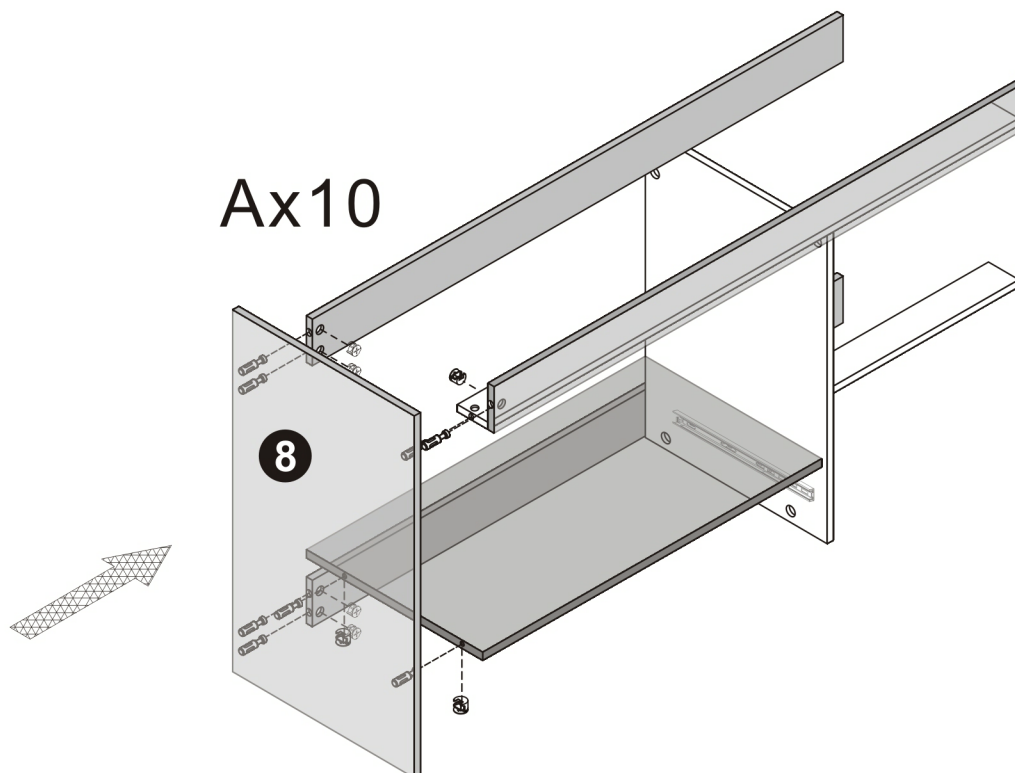


A 8PCS



15*10mm

9

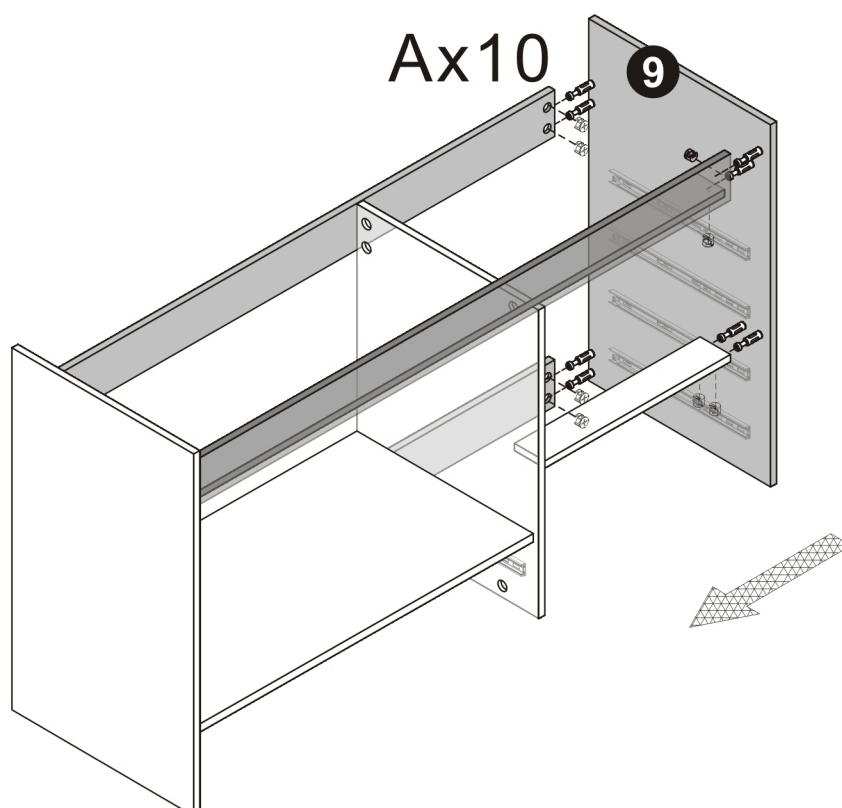


A 8PCS




15*10mm

10

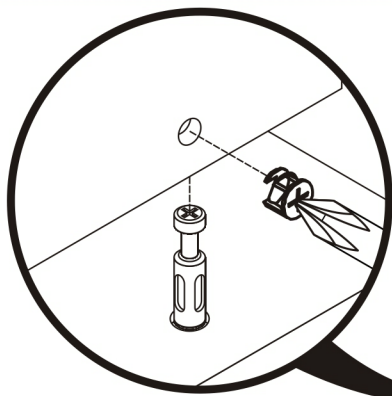

Ax8

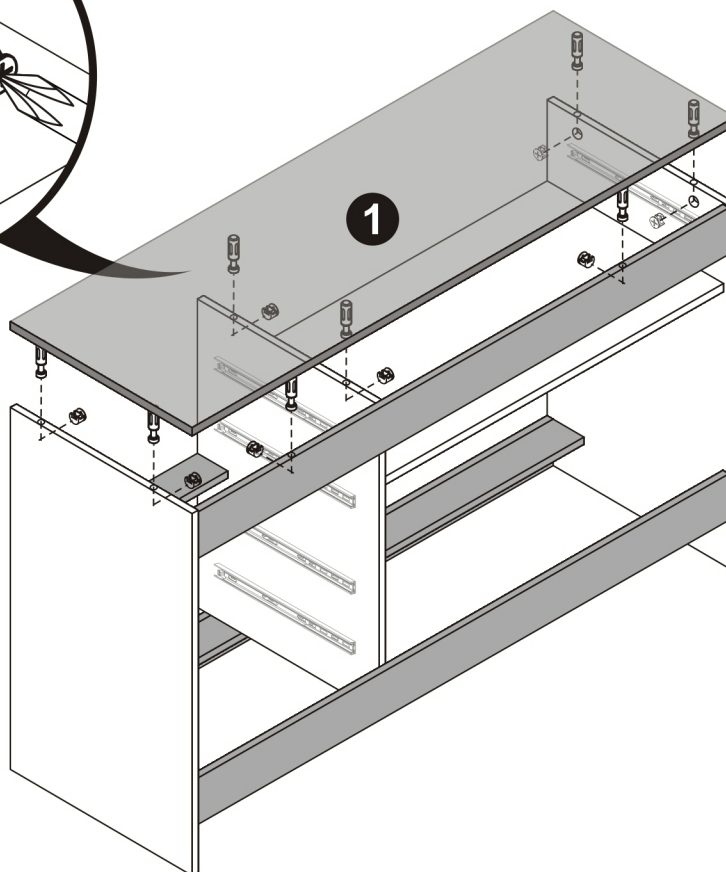

A 8PCS





15*10mm

11

Jx2

Cx16

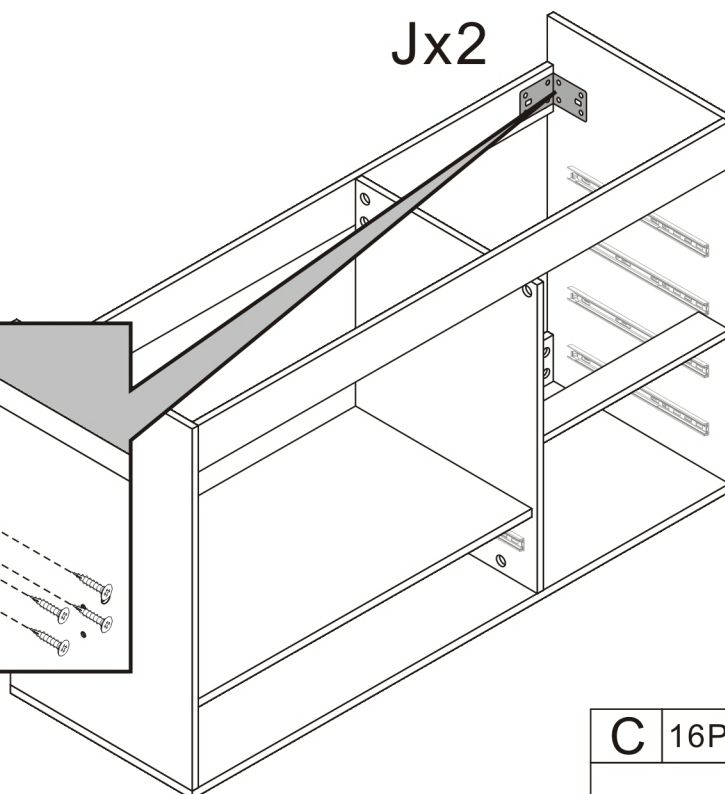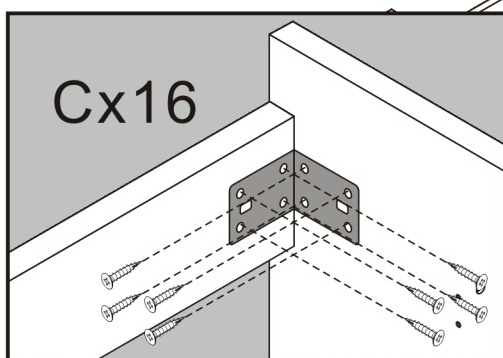

C 16PCS



3.5*14mm

J 2PCS







Corner code

10



Hx2
Cx4

Mx2
Cx4

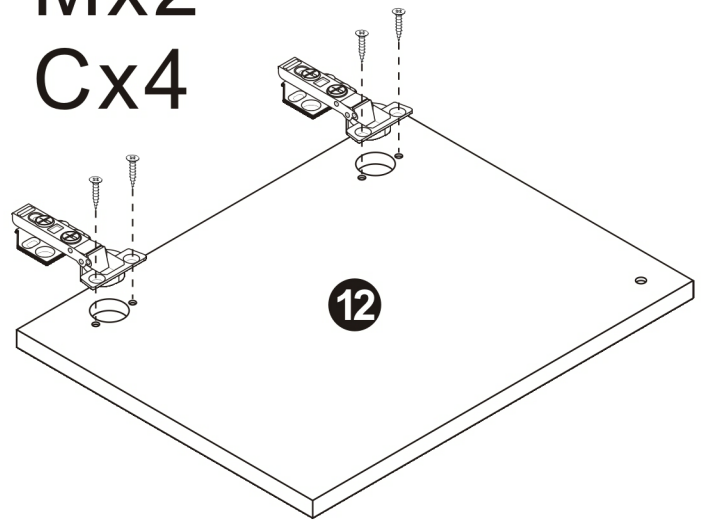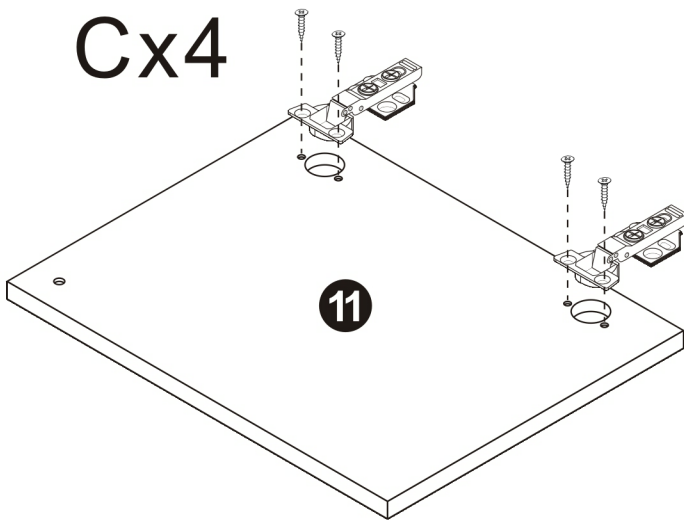

C	8PCS	H	2PCS	M	2PCS
					
3.5*14mm		Middle bend		Straight bend	

11

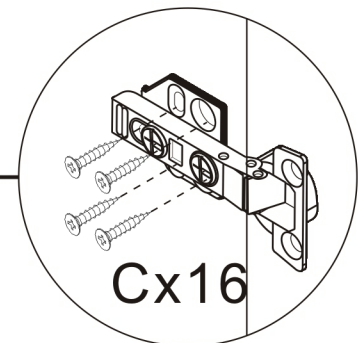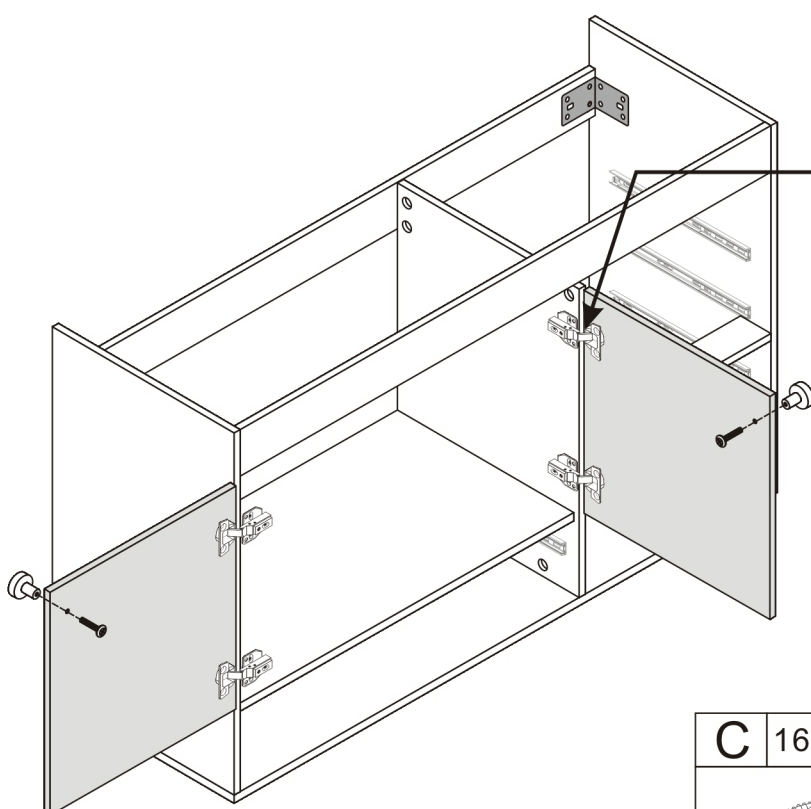

Ex2
Fx2


C	16PCS	E	2PCS	F	2PCS
					
3.5*14mm		4*20		Handles	

SPECIAL TIPS FOR DOOR ALIGNMENT


CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS

CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES


- A. Lateral adjustment (Moving door left-right) by screw adjusting
 Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
 Réglage latéral (porte mobile gauche-droite) par réglage à vis

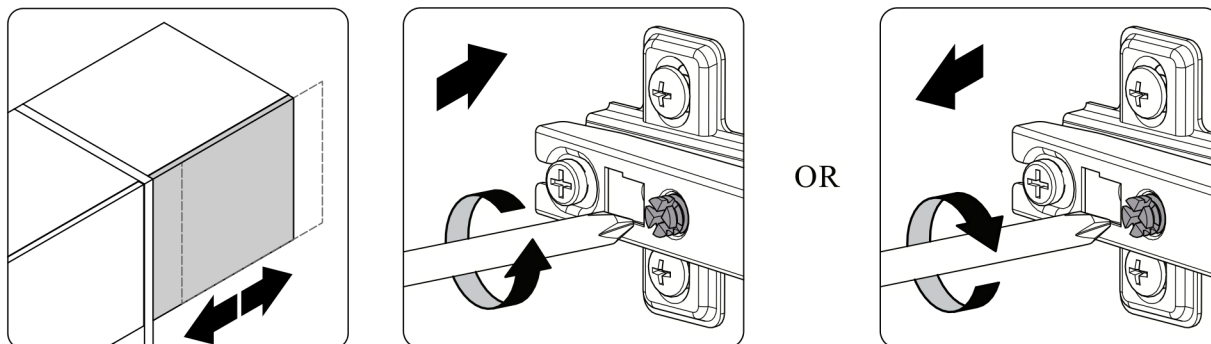


- B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
 Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
 Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

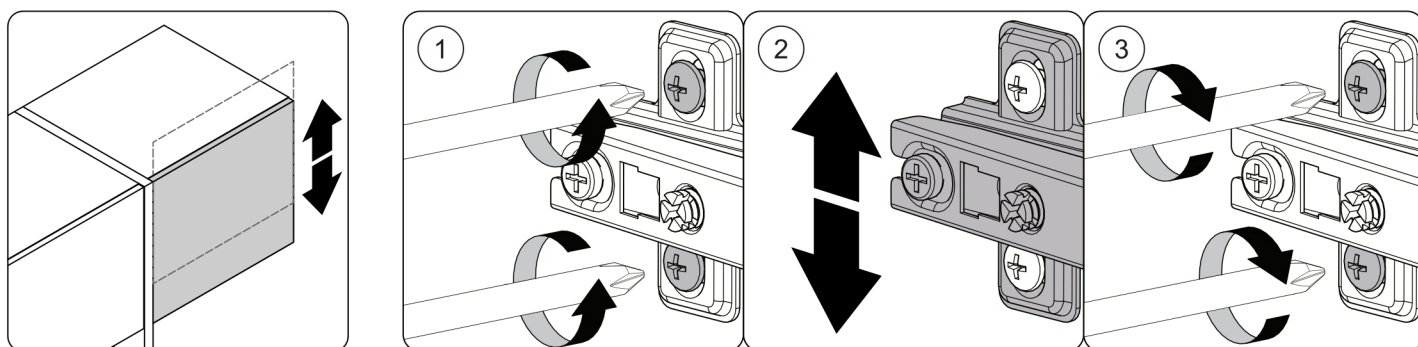

- C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
 Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
 Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

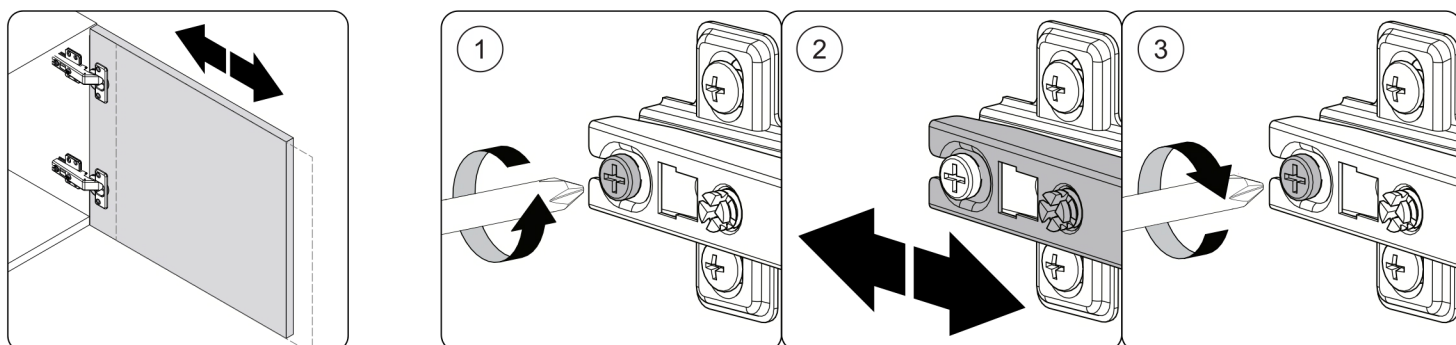


14

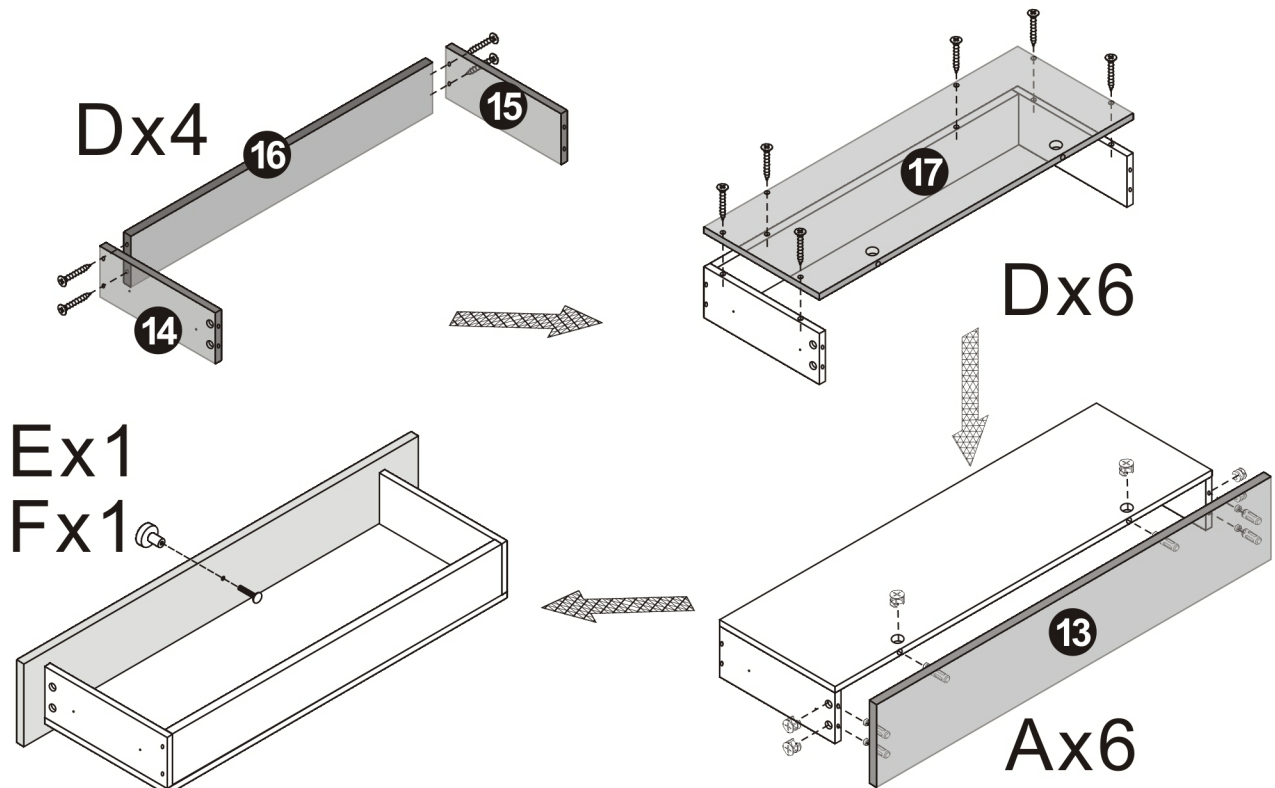


A	6PCS	D	10PCS	E	1PCS	F	1PCS
							
15*10mm		3.5*35mm		4*20		Handles	

15

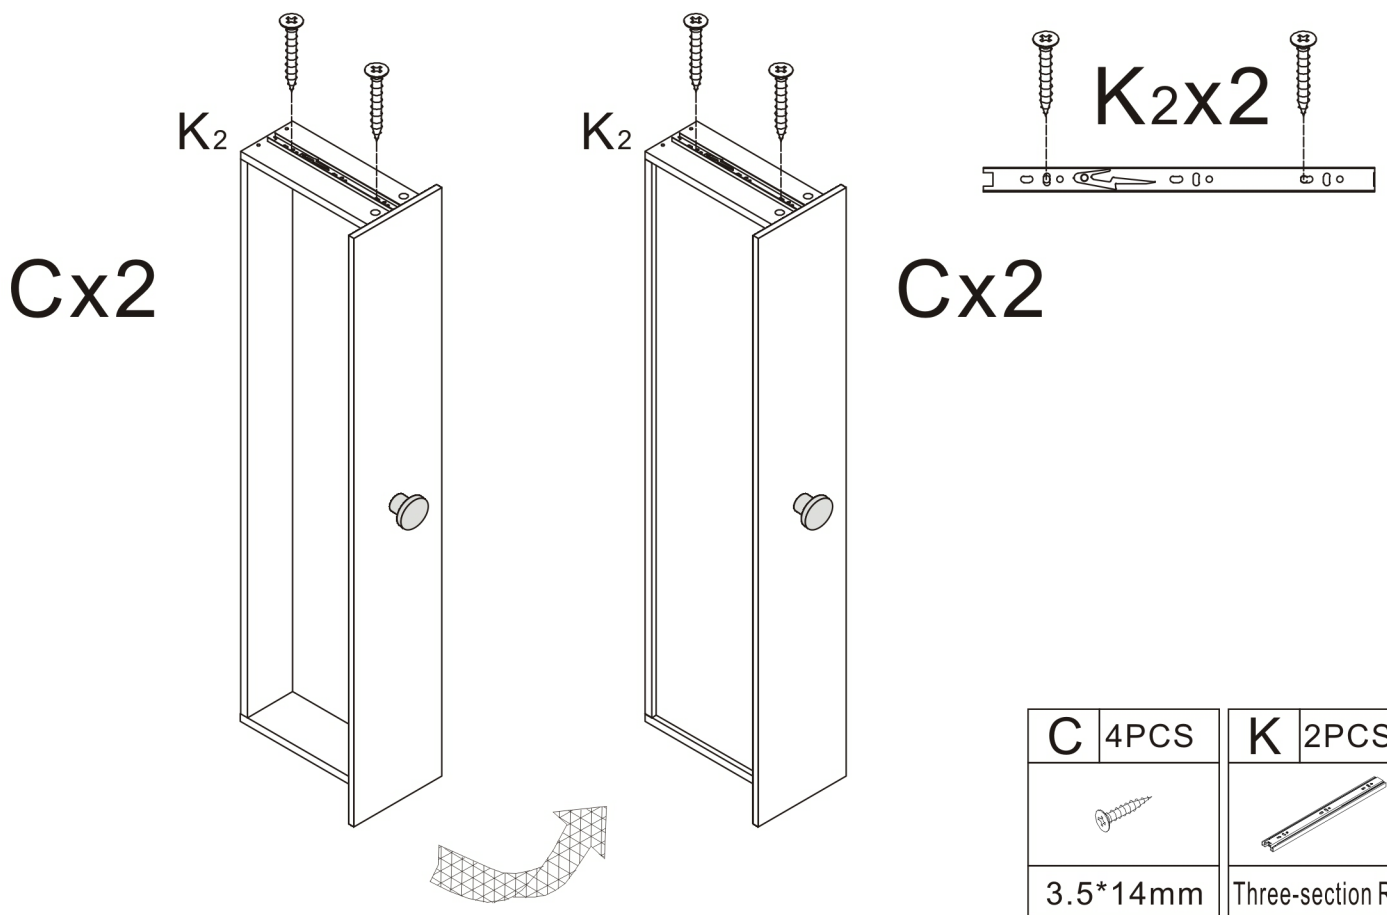

C	4PCS	K	2PCS
			
3.5*14mm		Three-section Rail	


14

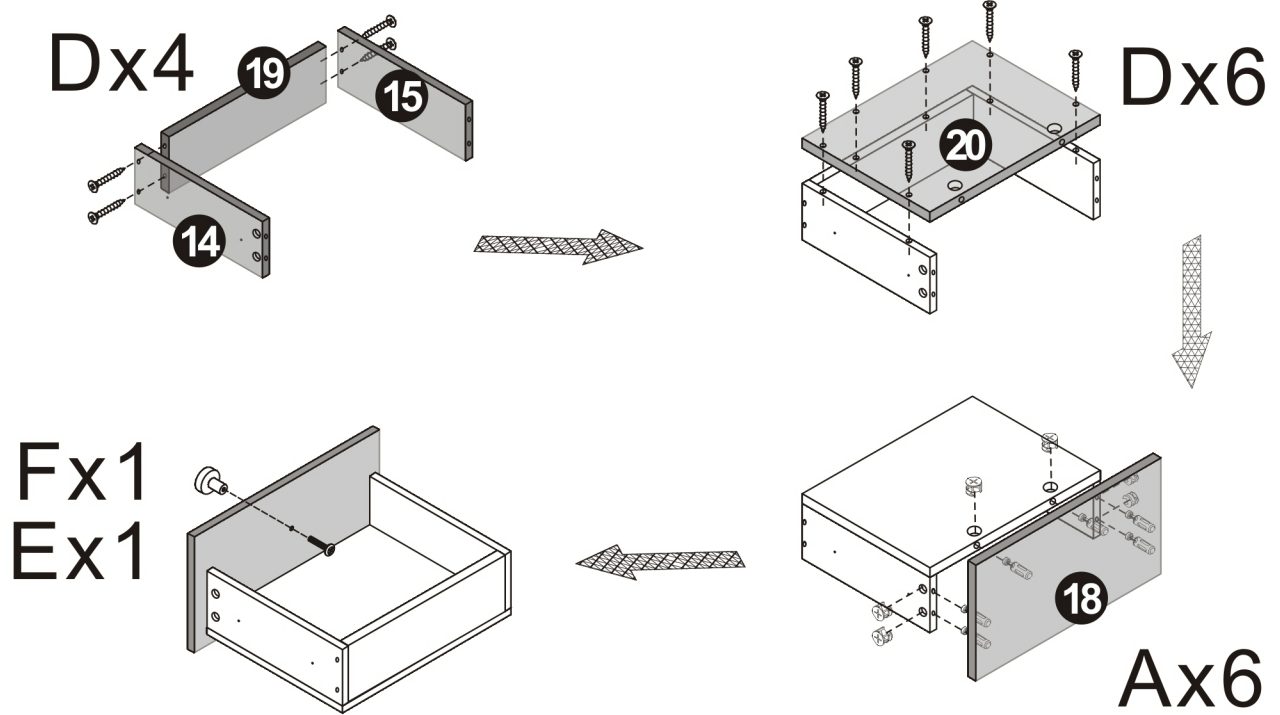

X4


A	24PCS	D	40PCS	E	4PCS	F	4PCS
							
15*10mm		3.5*35mm		4*20		Handles	

15

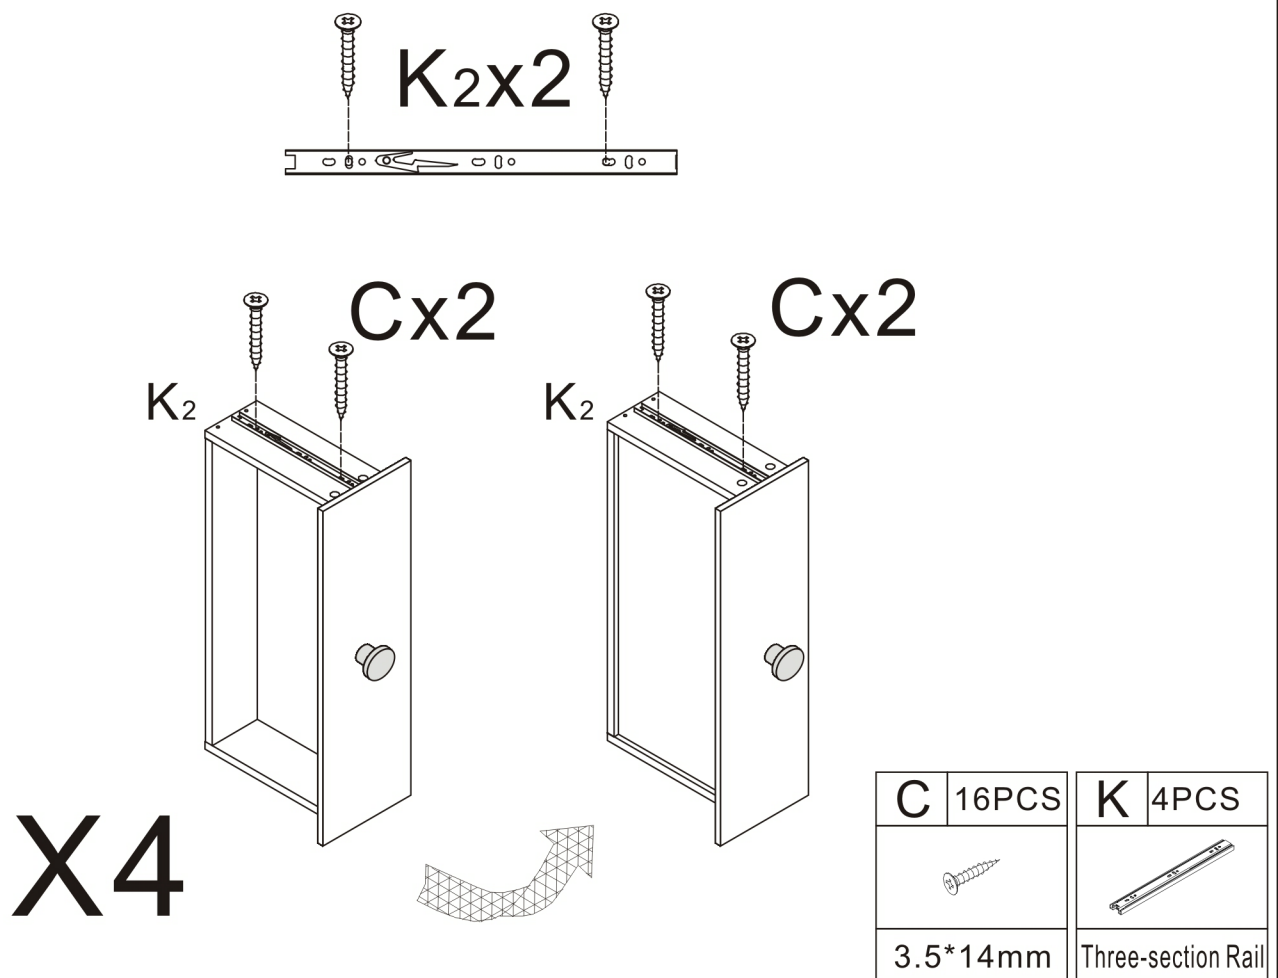

C	16PCS	K	4PCS
			
3.5*14mm		Three-section Rail	


17

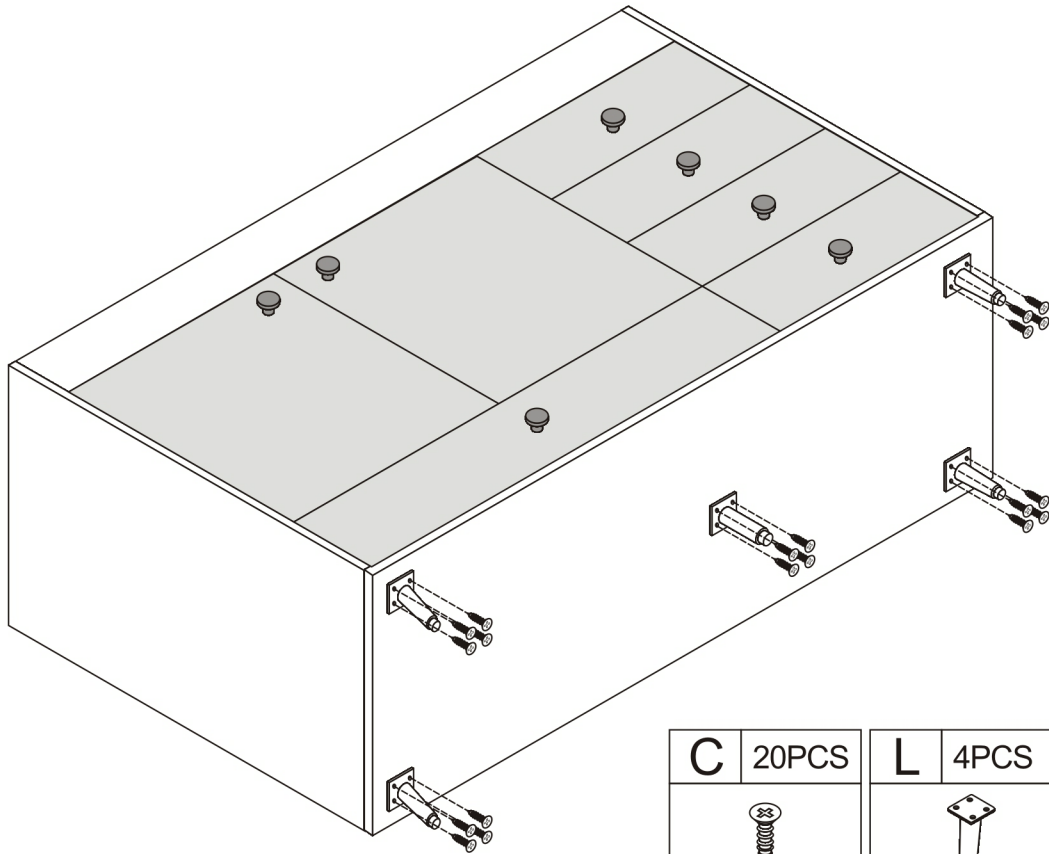

Cx20
Lx4
Mx1


C	20PCS	L	4PCS	M	1PCS
					
3.5*14mm		Hardware Feet		Hardware Feet	

18

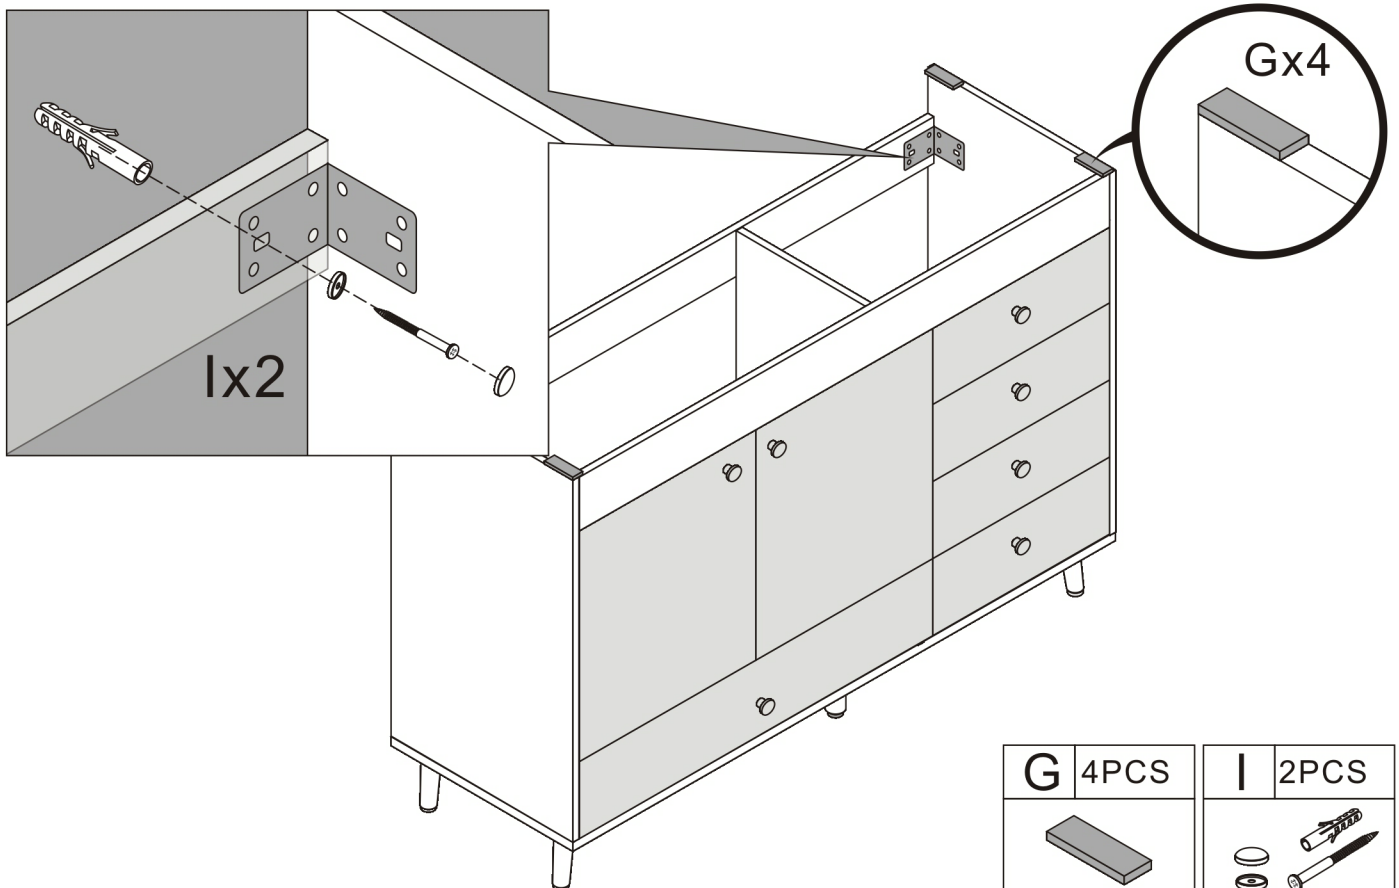


Ix2


Gx4

G	4PCS	I	2PCS
			
Sponge Mat		Expansion screw	

17

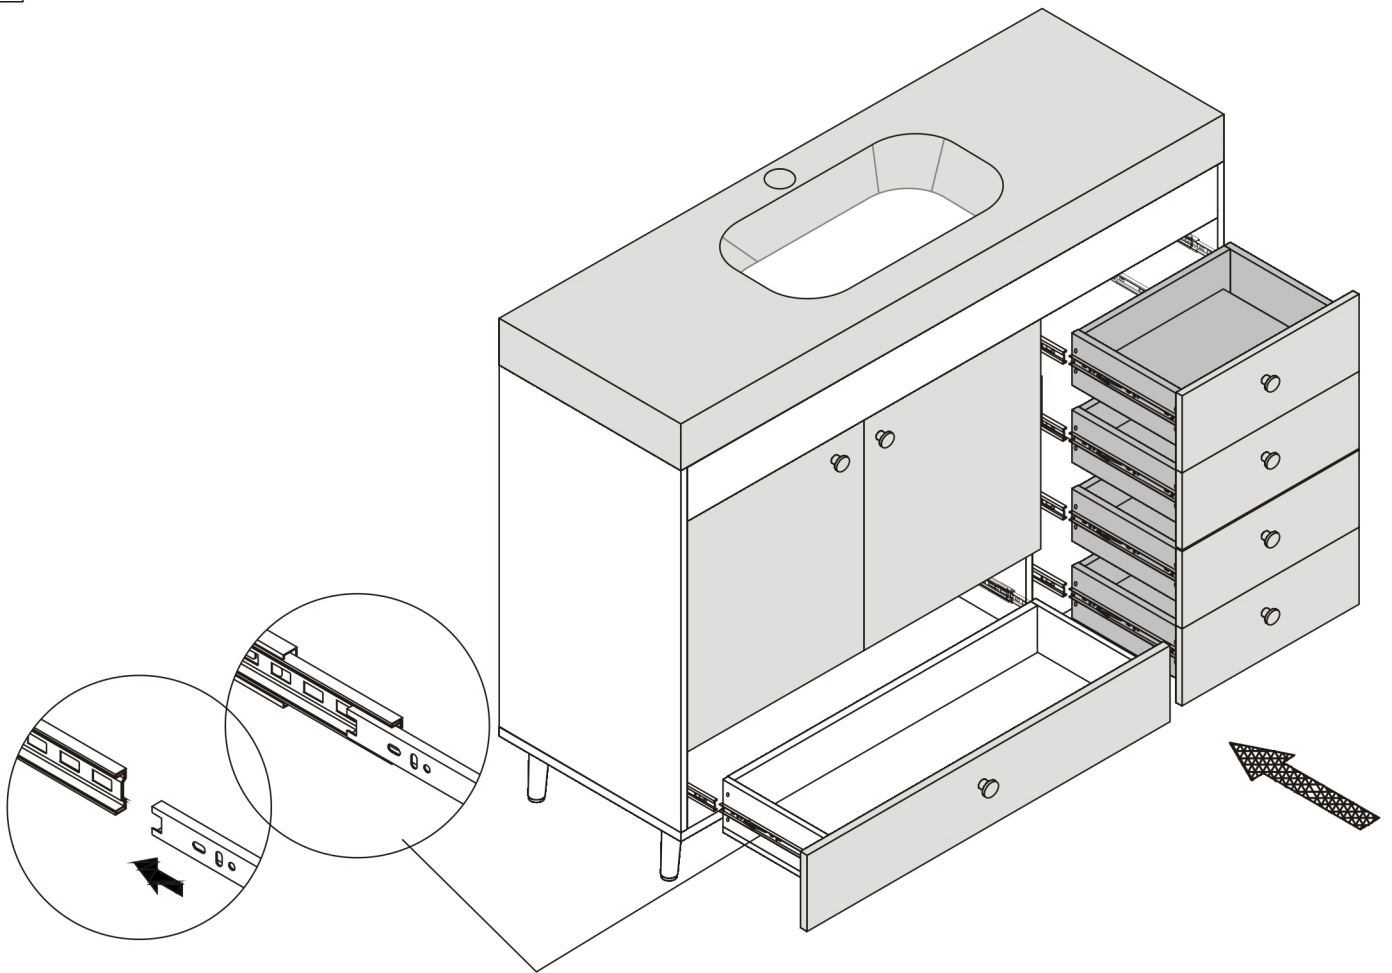

18

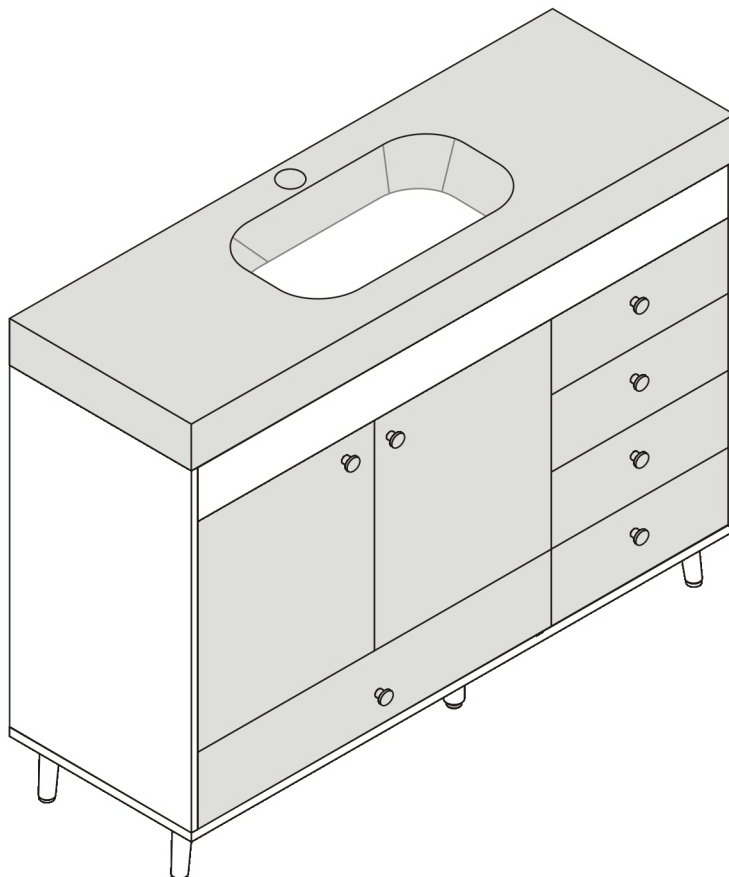

OK