


# Assembly Instructions

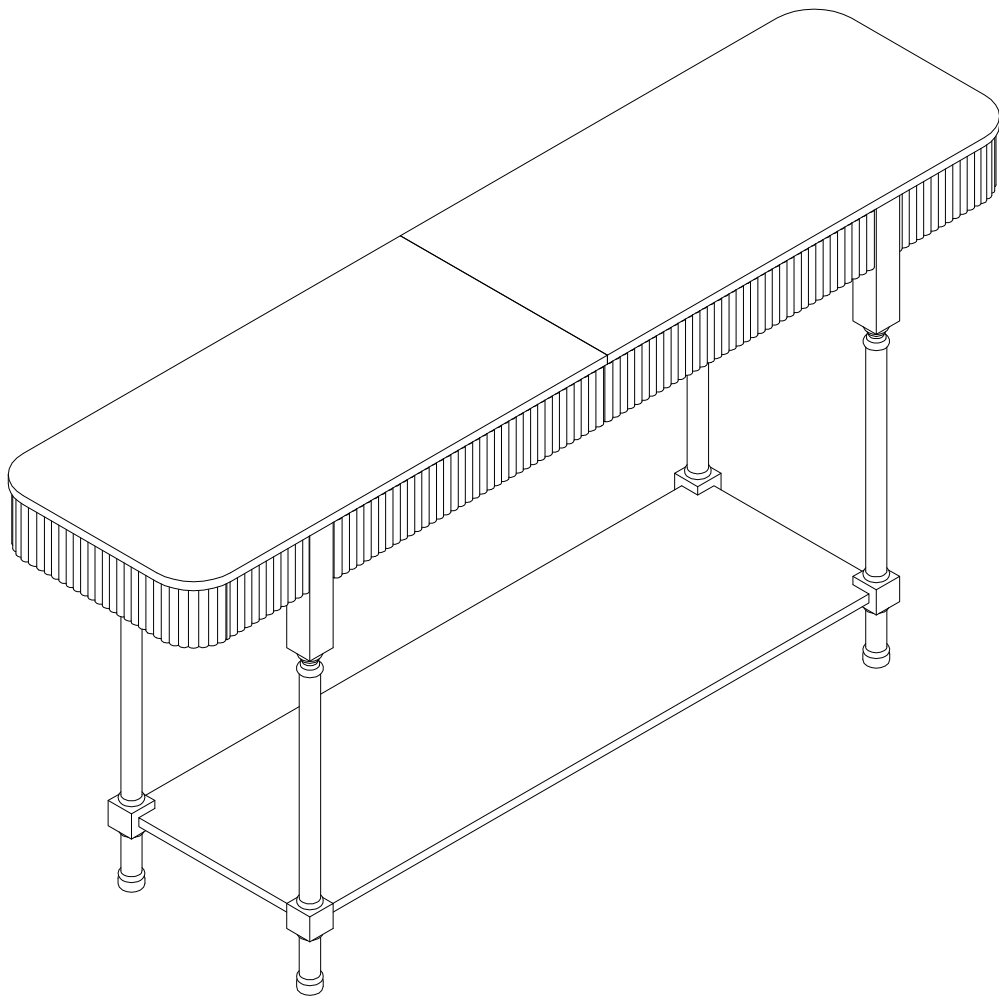


# Before Assembly

## Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

## QUICKFIT

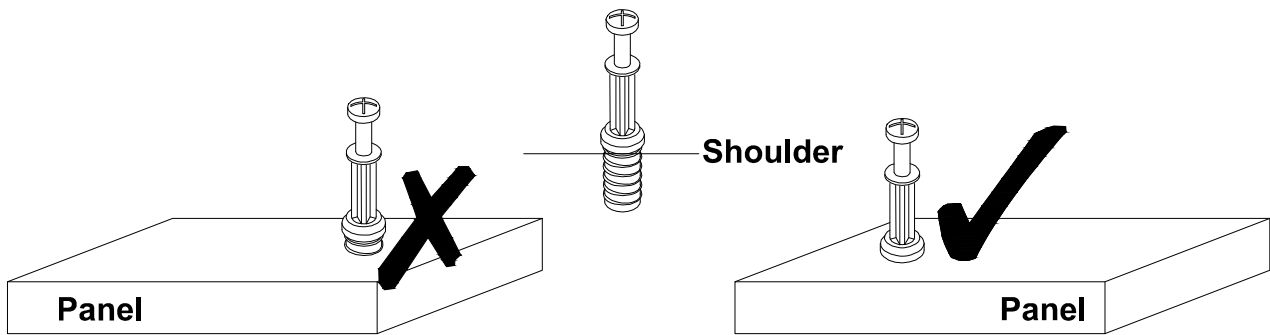

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

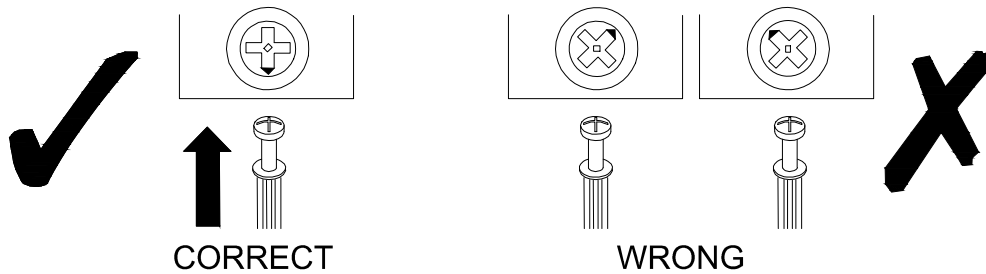

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.


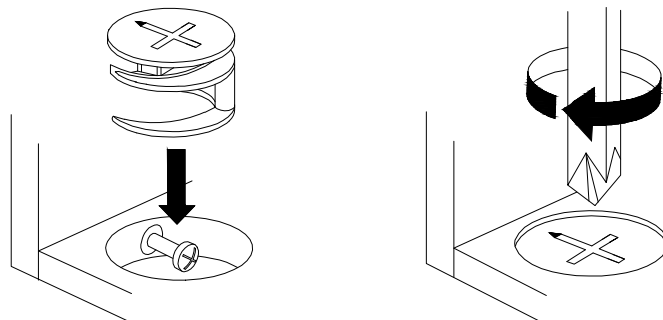


Turn cam lock clockwise to tighten.

# Before Assembly


## Tips Before Your Start

How to separate the drawer slider:

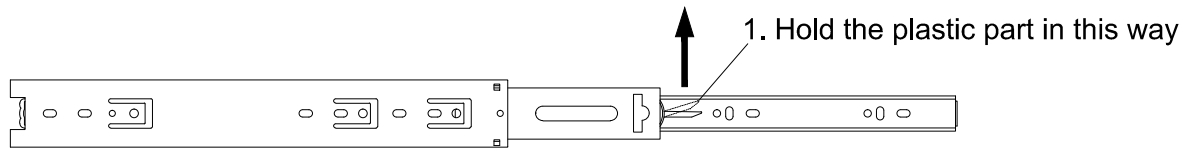


2. Pull out the inner slider for drawer box fixing

## Drawer Front Alignment

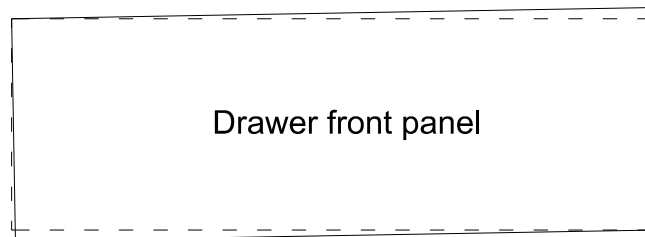


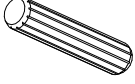
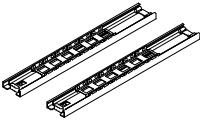



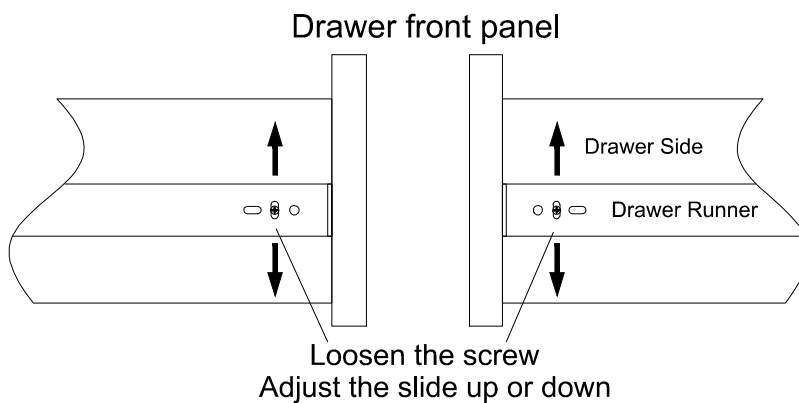



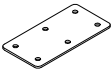


If the drawer front panel is NOT level after being assembled, then...




Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.


# Part List

<p><b>No. A</b> Quantity:52 Pcs Cam Lock Dowel 8*28mm</p> 	<p><b>No. B</b> Quantity:52 Pcs Cam φ15</p> 	<p><b>No. C</b> Quantity:52 Pcs Sticker Ø20</p> 	<p><b>No. D</b> Quantity:8 Pcs Dowel 8*30mm</p> 
<p><b>No. E</b> Quantity:2 Sets Drawer Slider 10"</p> 	<p><b>No. F</b> Quantity:22 Pcs Screw M3.5*12mm</p> 	<p><b>No. G</b> Quantity:8 Pcs Screw M4*30mm</p> 	<p><b>No. H</b> Quantity:18 Pcs Screw M6*40mm</p> 
<p><b>No. I</b> Quantity:4 Pcs Slip Mat Ø20</p> 	<p><b>No. J</b> Quantity:1 Pcs Allen Key 4#</p> 	<p><b>No. K</b> Quantity:1 Pcs Full Thread Screw M8*40mm</p> 	<p><b>No. L</b> Quantity:1 Pcs Adjust The Foot</p> 
<p><b>No. M</b> Quantity:1 Pcs Connect the iron plate</p> 			

# Product structure

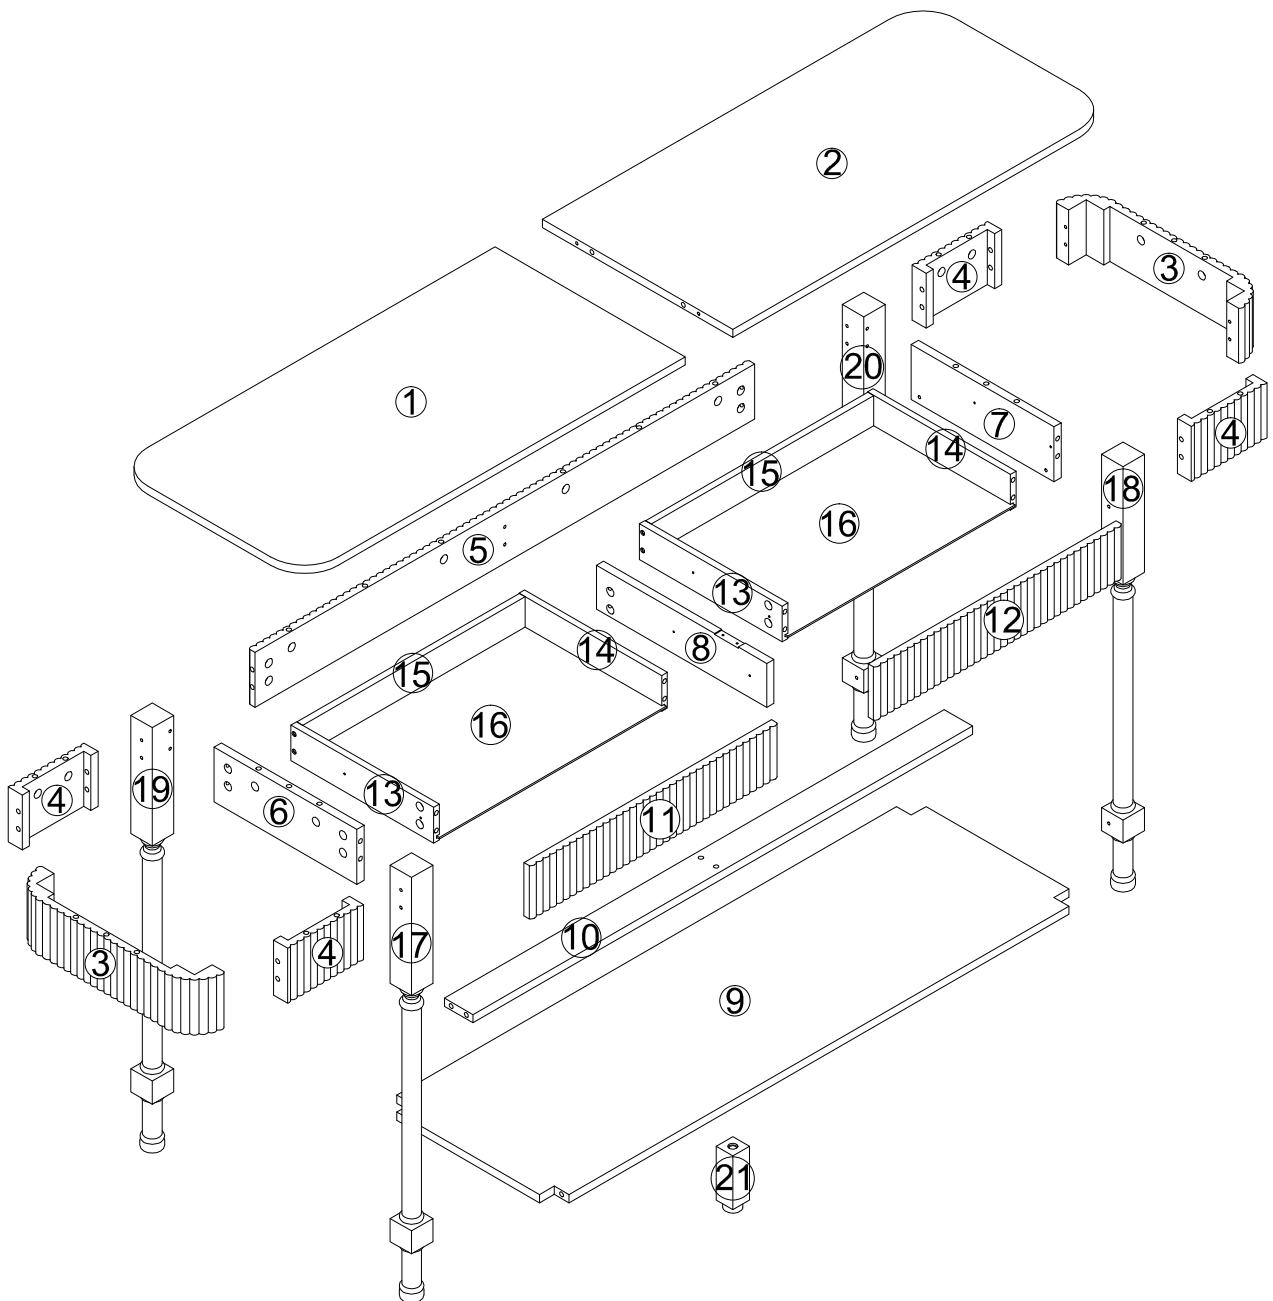


# STEP 1

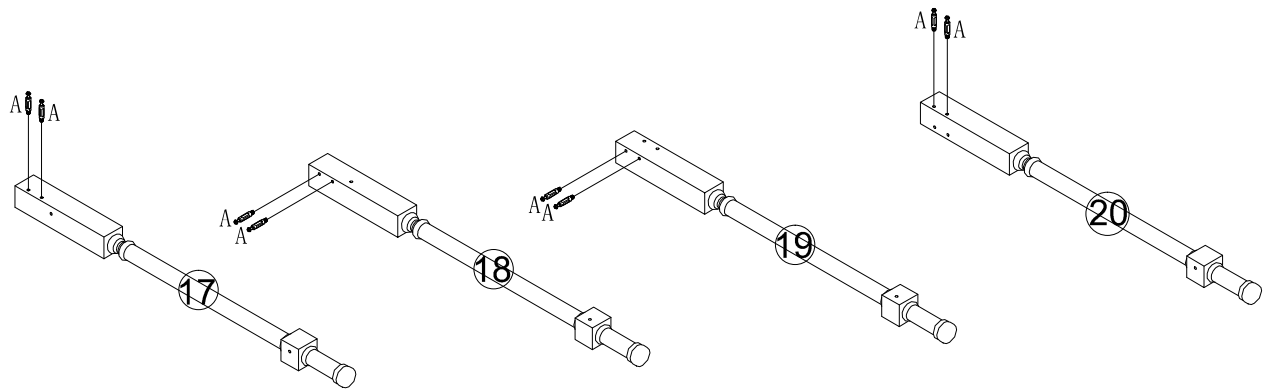

No. A  
Quantity: 8 Pcs  
8\*28 mm




# STEP 2

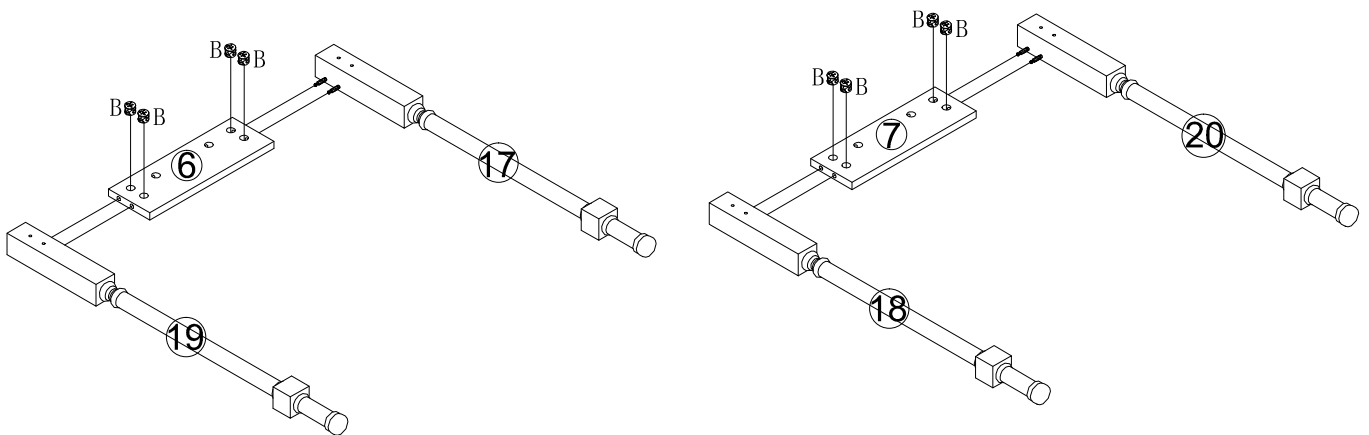

No. B  
Quantity: 8 Pcs  
Ø15




# STEP 3

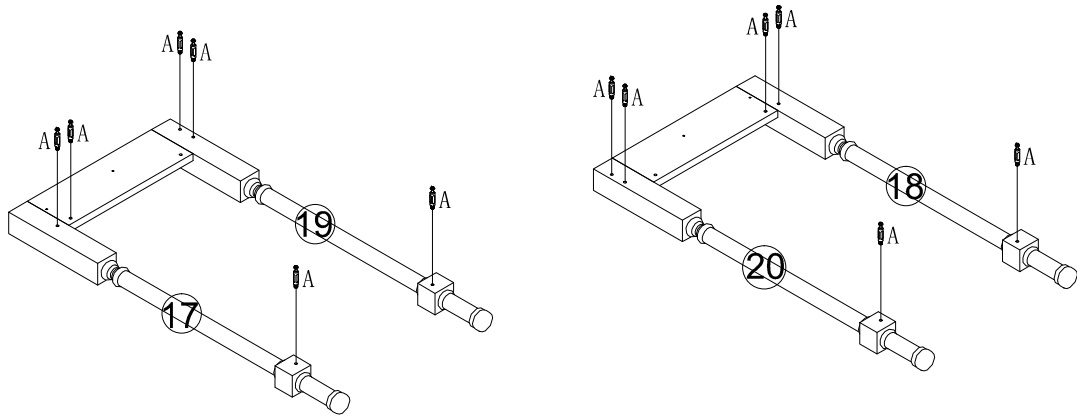

No. A  
Quantity: 12 Pcs  
8\*28 mm



# STEP 4

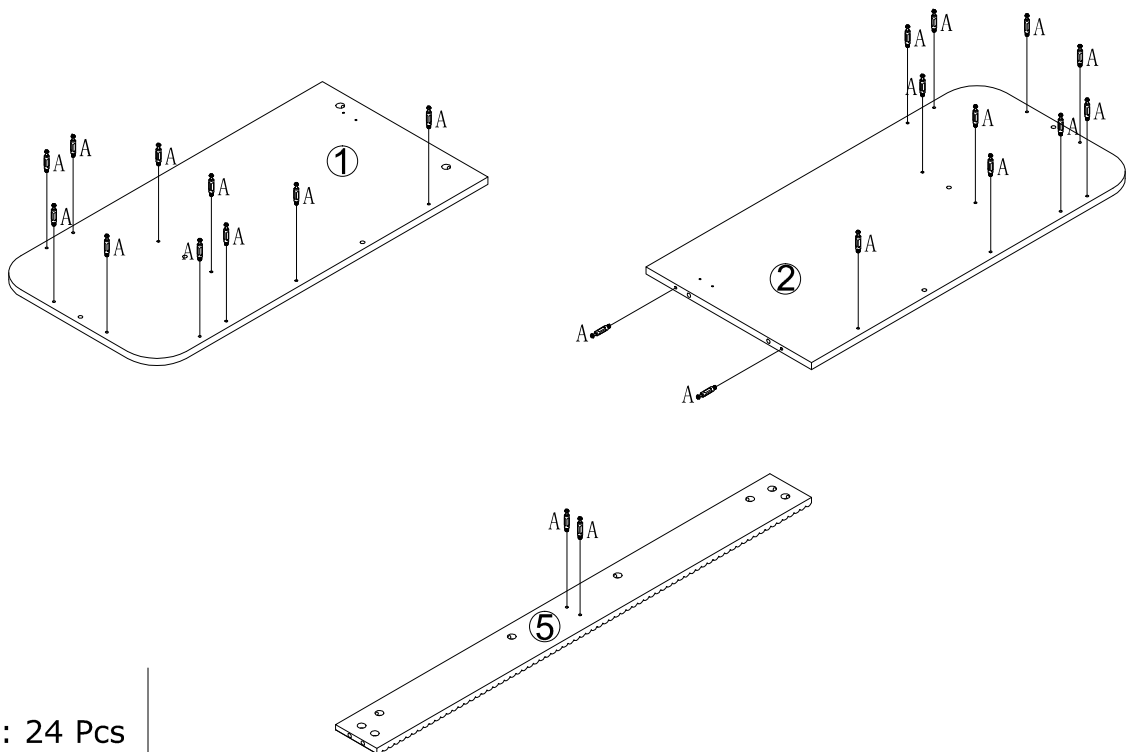




No. A  
Quantity: 24 Pcs  
8\*28 mm




# STEP 5



The first screw hole should correspond with the board location hole

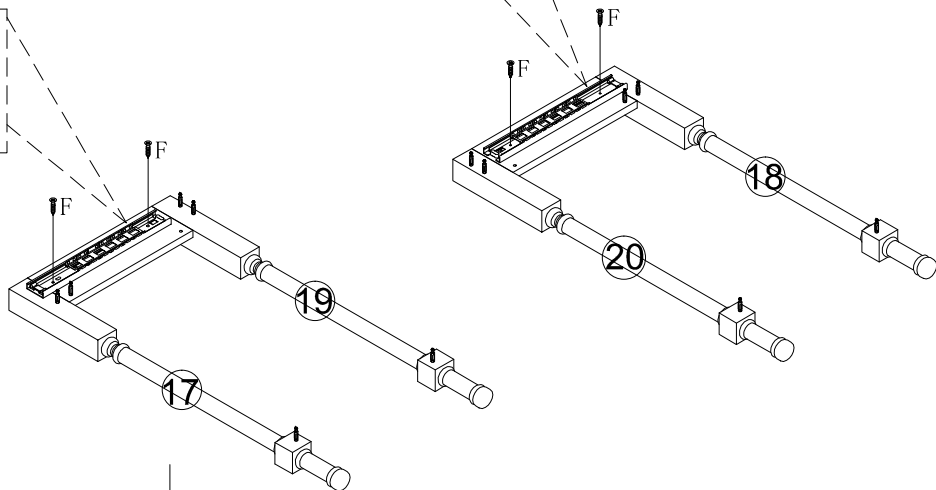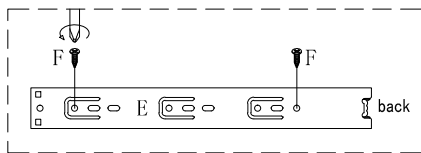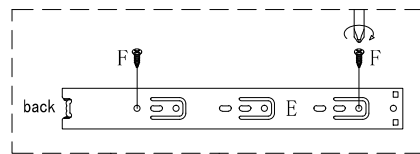


No. E  
Quantity: 1 Sets  
10"





No. F  
Quantity: 4 Pcs  
M3.5\*12mm





# STEP 6




The first screw hole should correspond with the board location hole

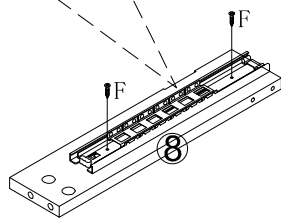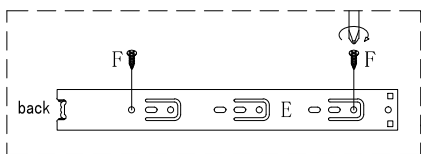

Flip to the other side.

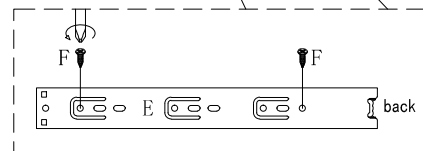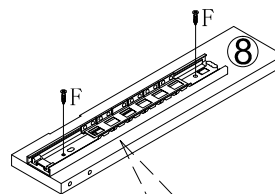


No. E  
Quantity: 1 Sets  
10"



No. F  
Quantity: 4 Pcs  
M3.5\*12mm




# STEP 7

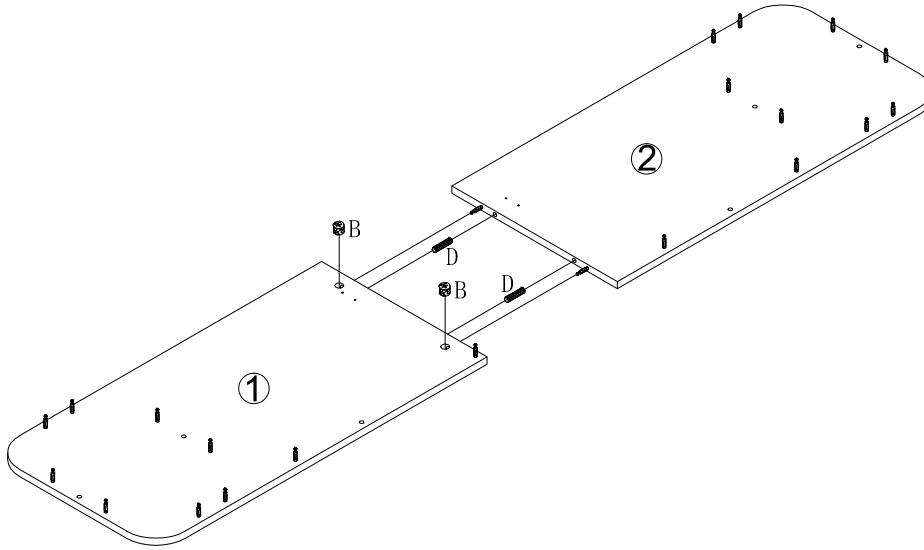


No. B  
Quantity: 2 Pcs  
Ø15




No. D  
Quantity: 2 Pcs  
8\*30mm



# STEP 8

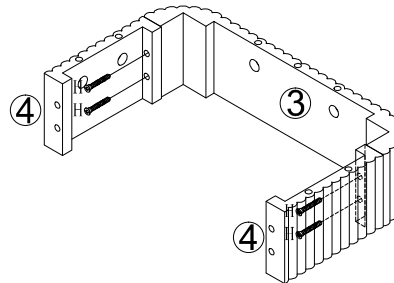


No. H  
Quantity: 8 Pcs  
M6\*40mm



**x2**


# STEP 9

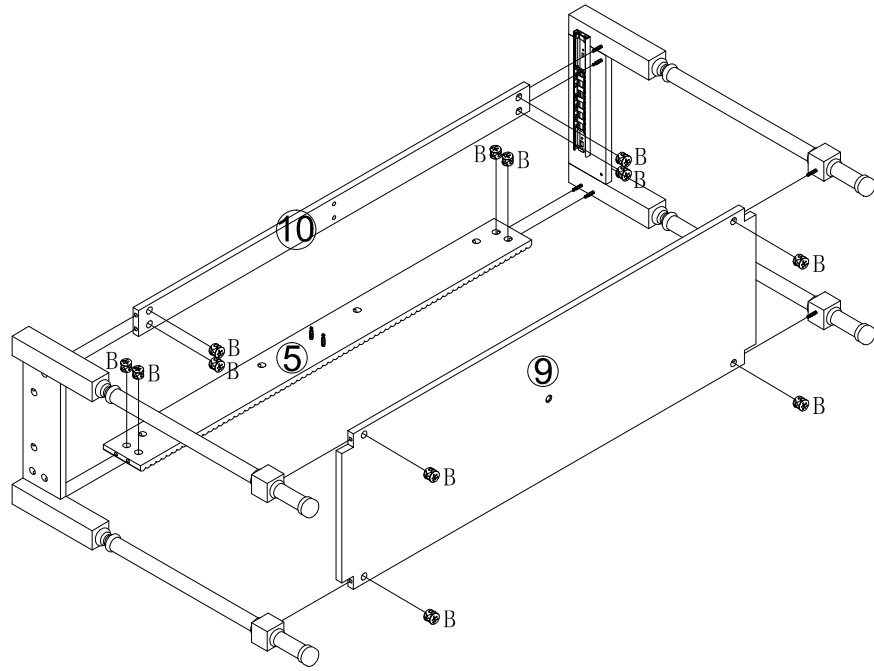

No. B  
Quantity: 12 Pcs  
Ø15




# STEP 10

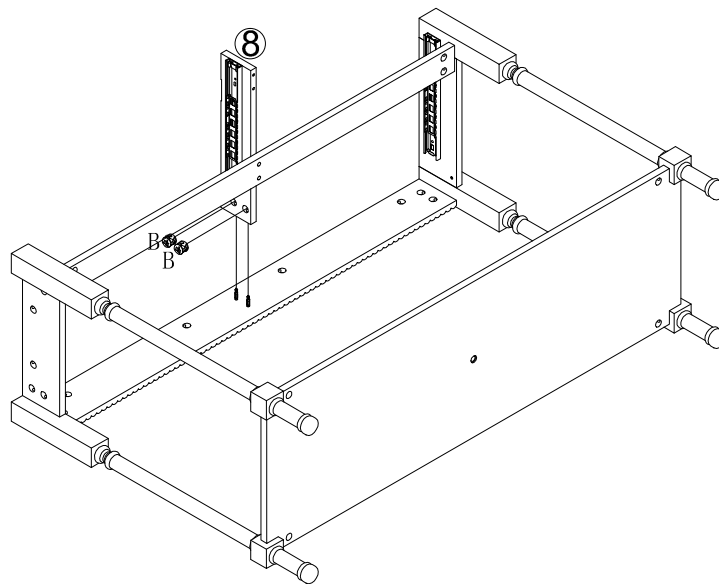


No. B  
Quantity: 2 Pcs  
Ø15




# STEP 11

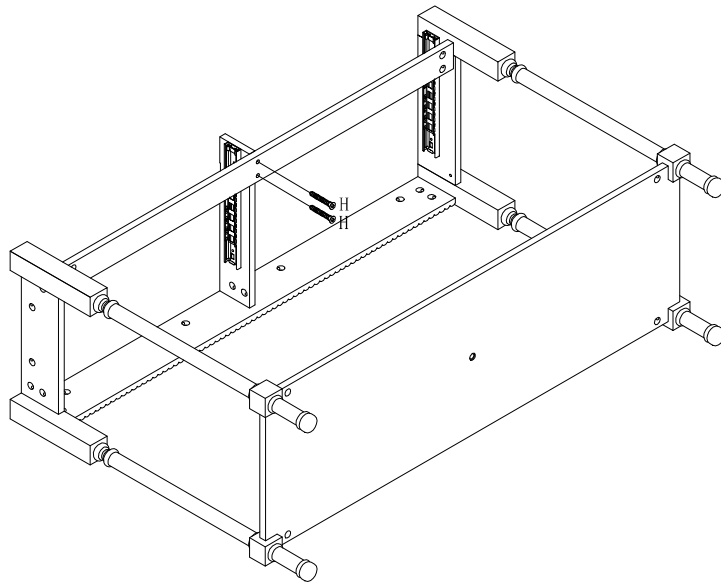

No. H  
Quantity: 2 Pcs  
M6\*40mm



# STEP 12

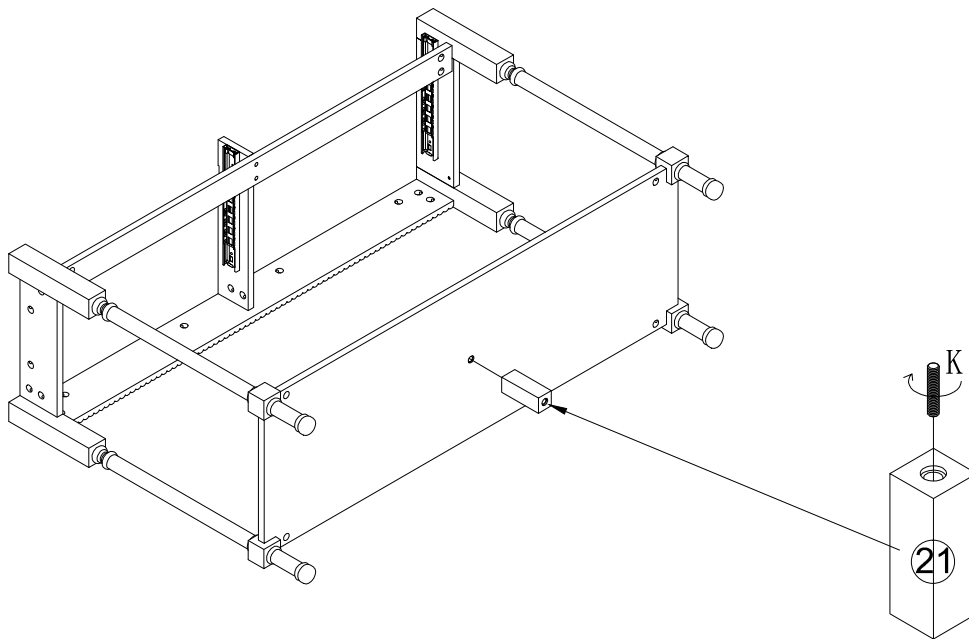


No. K  
Quantity: 1 Pcs  
M8\*40mm



Assemble it first

# STEP 13

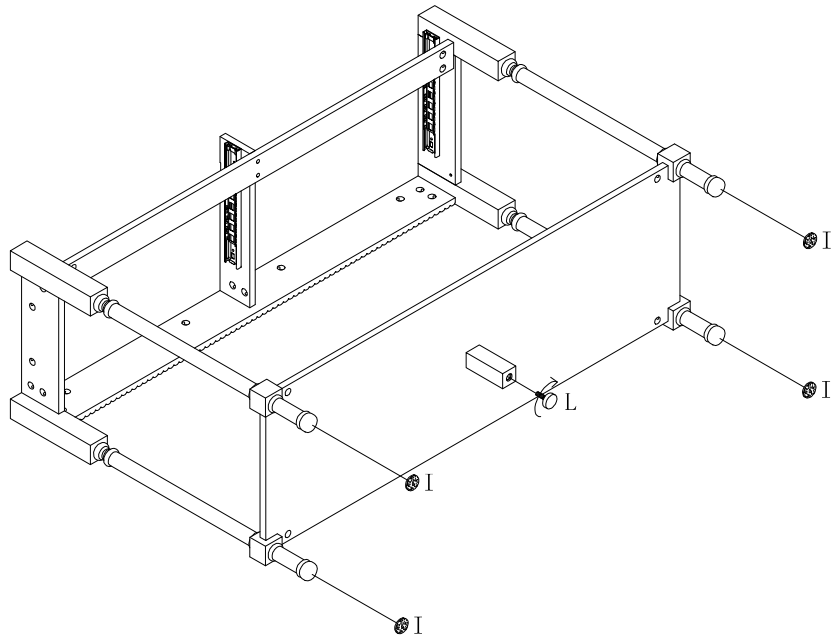


No. I  
Quantity: 4 Pcs  
Ø20



No. L  
Quantity: 1 Pcs




# STEP 14

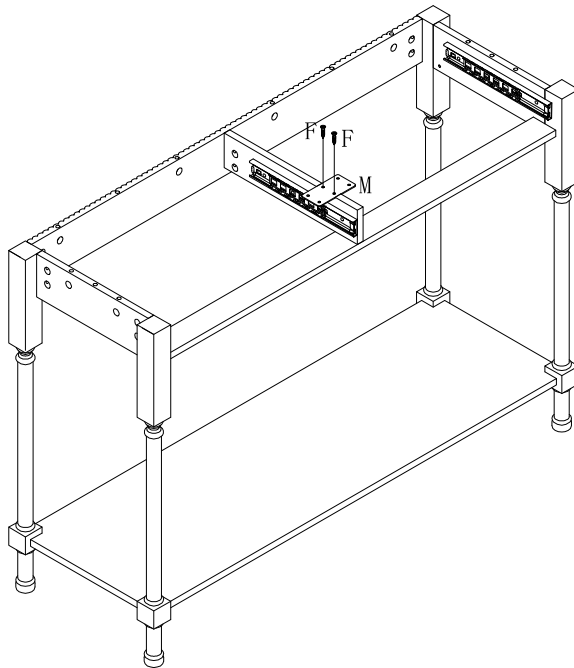


No. F  
Quantity: 2 Pcs  
M3.5\*12mm



No. M  
Quantity: 1 Pcs




# STEP 15

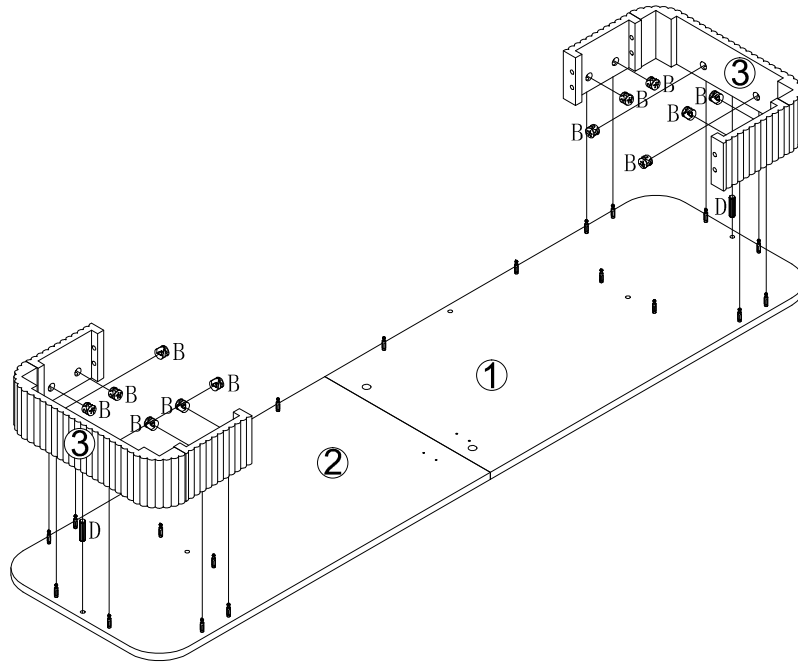


No. B  
Quantity: 12 Pcs  
Ø15



No. D  
Quantity: 2 Pcs  
8\*30mm




# STEP 16

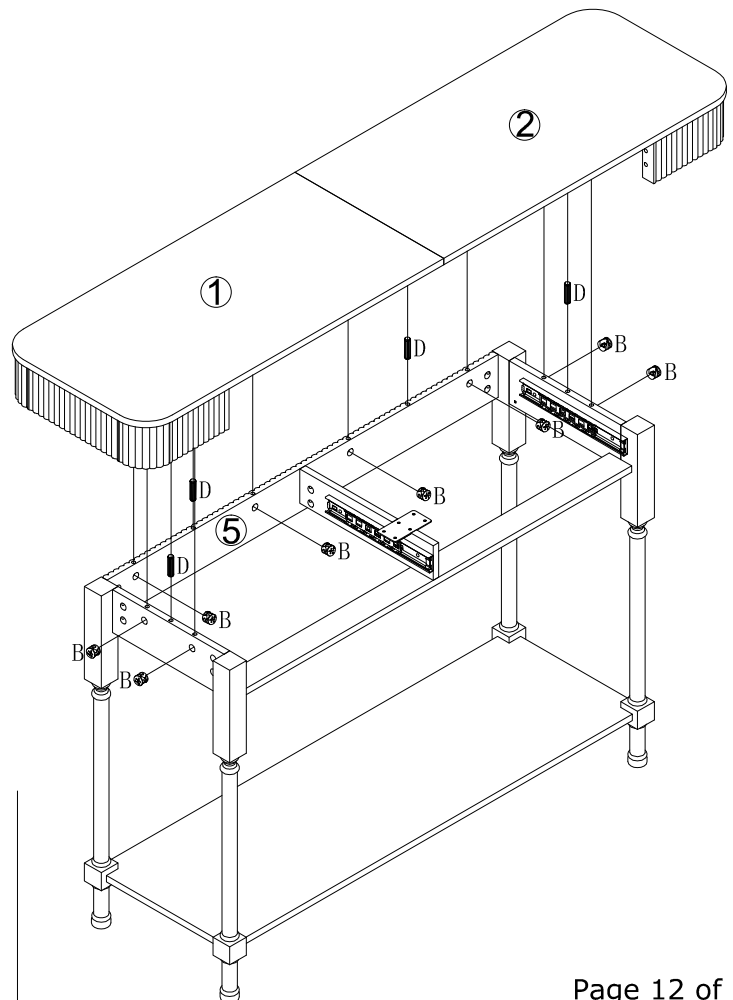


No. B  
Quantity: 8 Pcs  
Ø15




No. D  
Quantity: 4 Pcs  
8\*30mm




# STEP 17

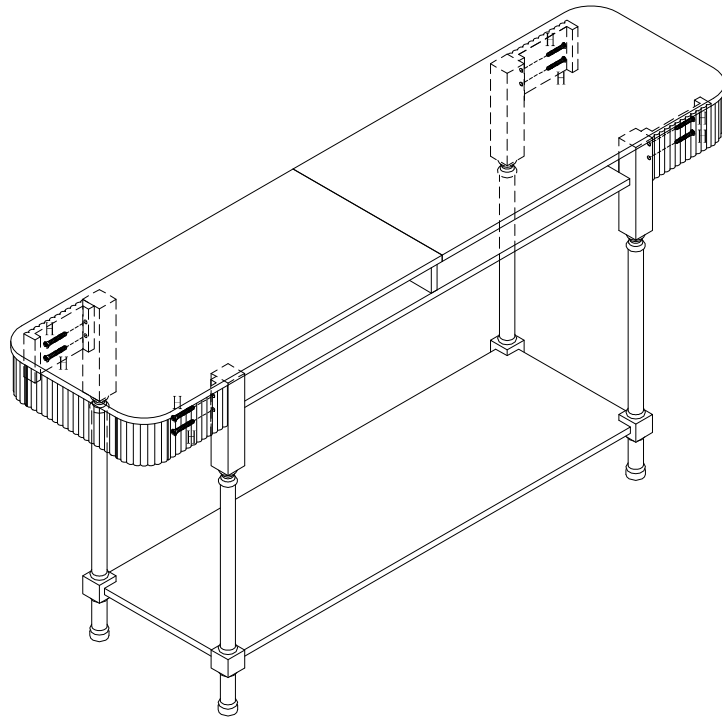

No. H  
Quantity: 8 Pcs  
M6\*40mm




# STEP 18

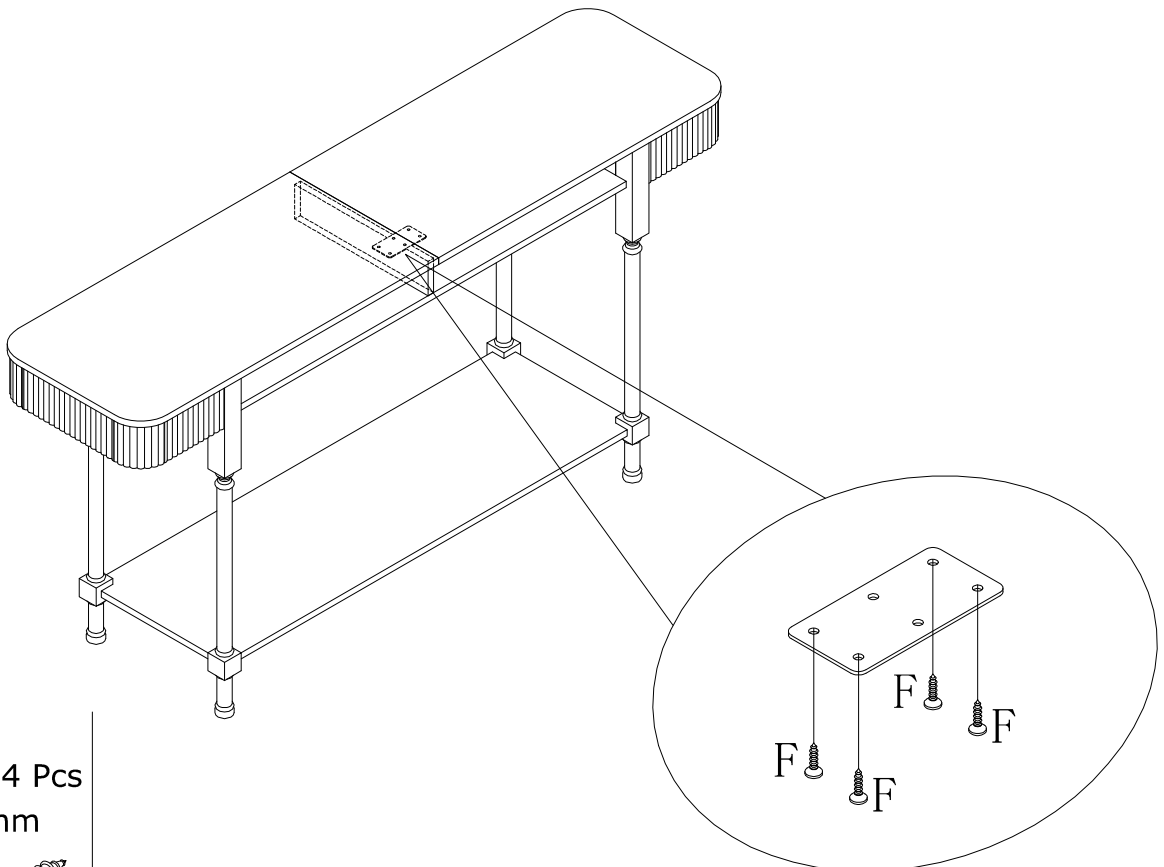

No. F  
Quantity: 4 Pcs  
M3.5\*12mm




# STEP 19

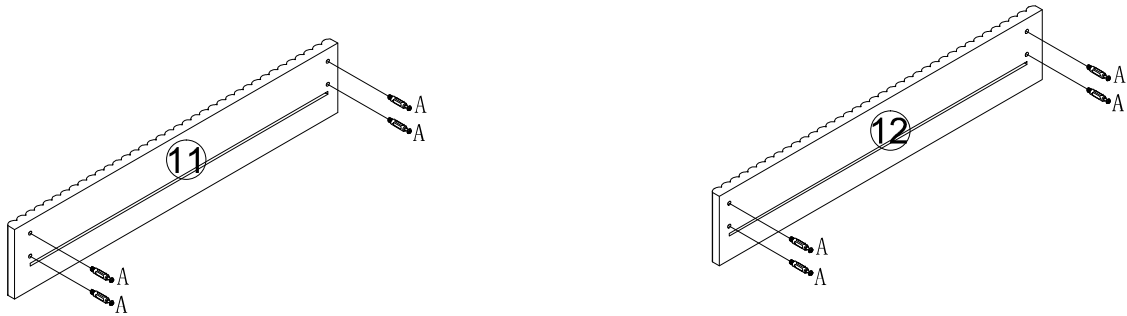


No. A  
Quantity: 8 Pcs  
8\*28 mm



# STEP 20

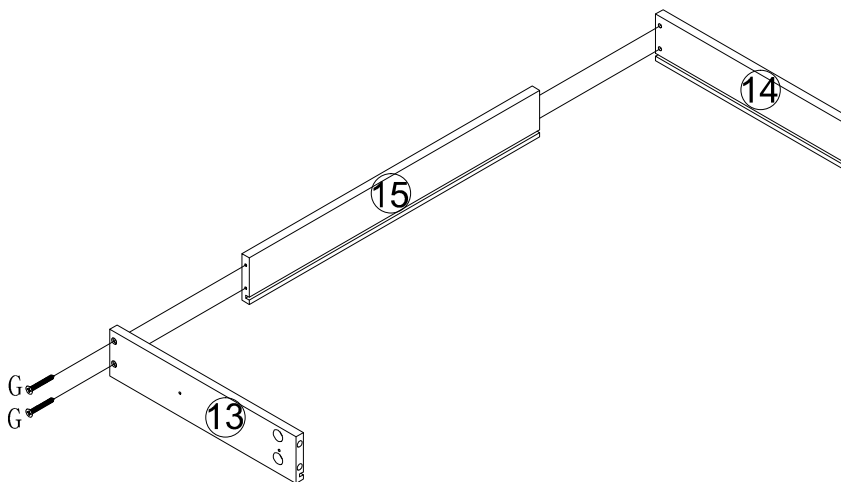


No. G  
Quantity: 8 Pcs  
M4\*30mm





**x2**

# STEP 21

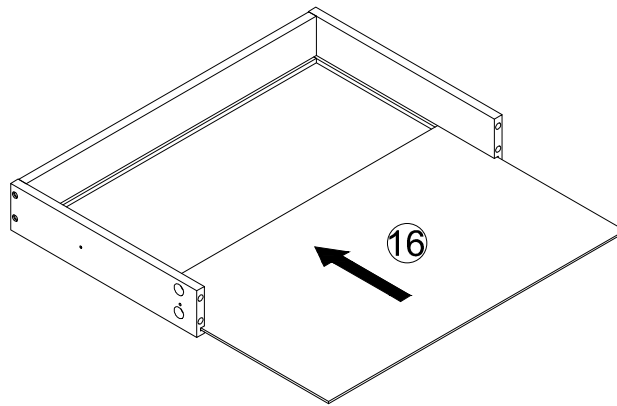

**x2**

# STEP 22

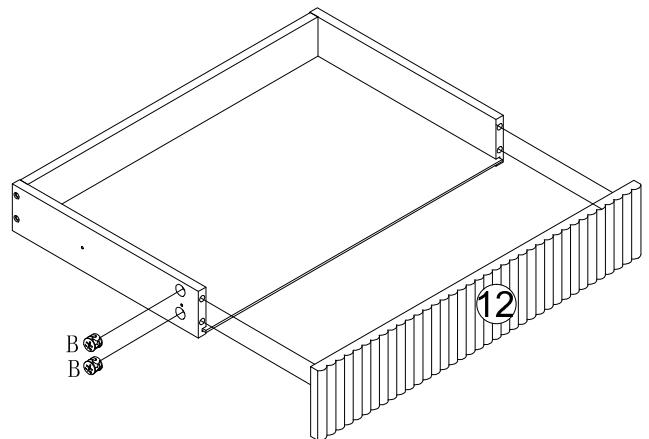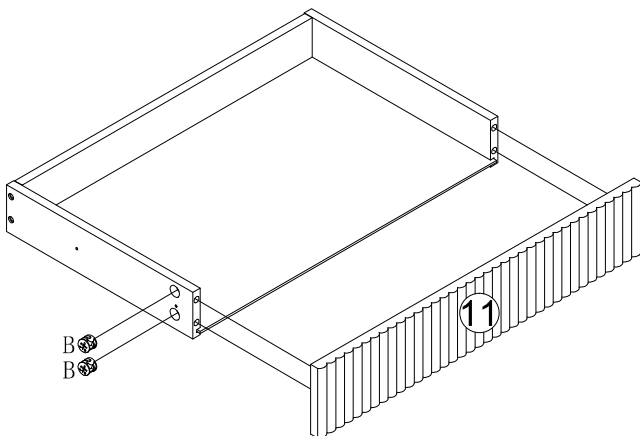


No. B  
Quantity: 8 Pcs  
Ø15




# STEP 23



The first screw hole should corresponded with the board location hole

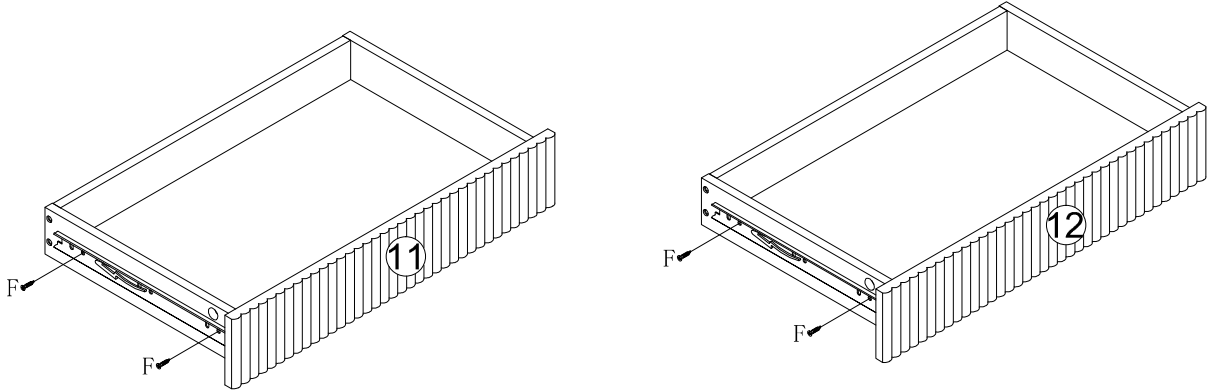

No. E  
Quantity: 2 Sets  
10"



No. F  
Quantity: 8 Pcs  
M3.5\*12mm



# STEP 24

