



Installation Manual

HD01P-48

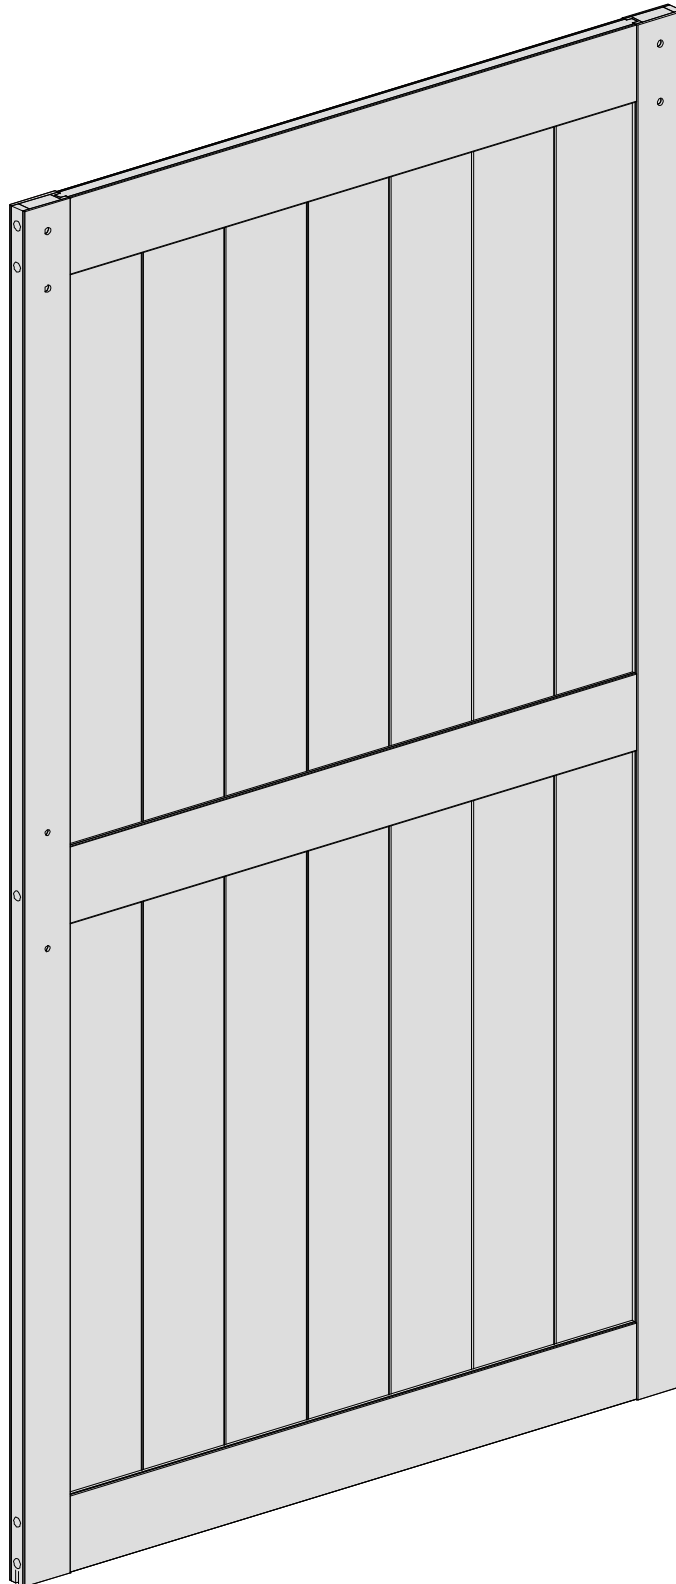

Components list

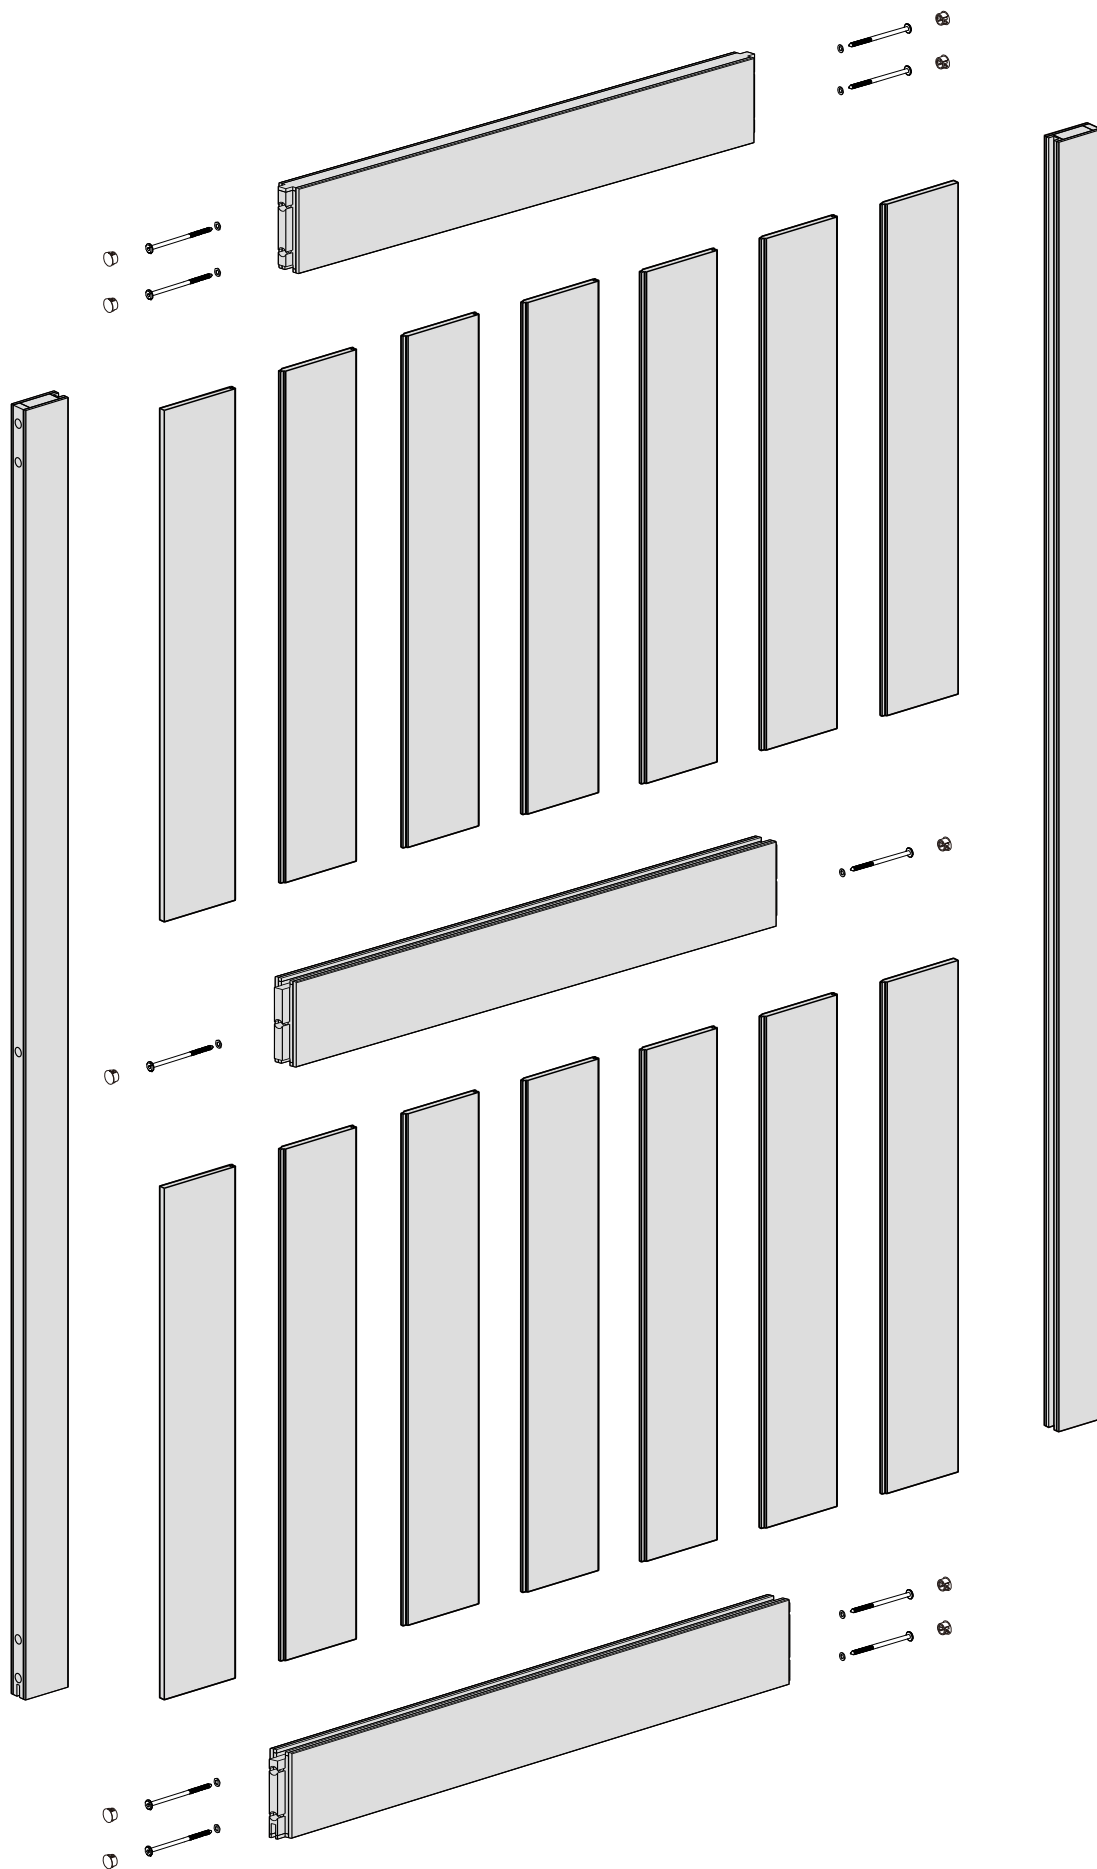


INSTRUCTIONS


Package List

A1A2	Side Stile	*2
B1	Top Rail	*1
B2	Bottom Rail	*1
B3	Middle Rail	*1
C1	Left Side Slat	*2
C2	Middle Side Slat	*10
C3	Right Side Slat	*2
D	Carriage Bolt	*10
E	Plastic Cap	*10
F	Washer	*10
G	Gasket	*4
	Spanner	


Stile and Slat End Views




A1




A2




B1




B3



B2





C1




C2



C3

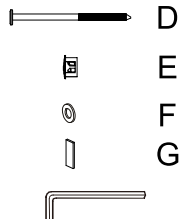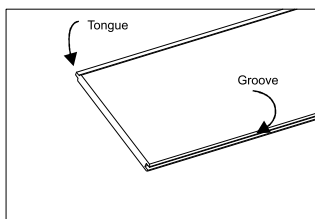


D
E
F
G



A1



G

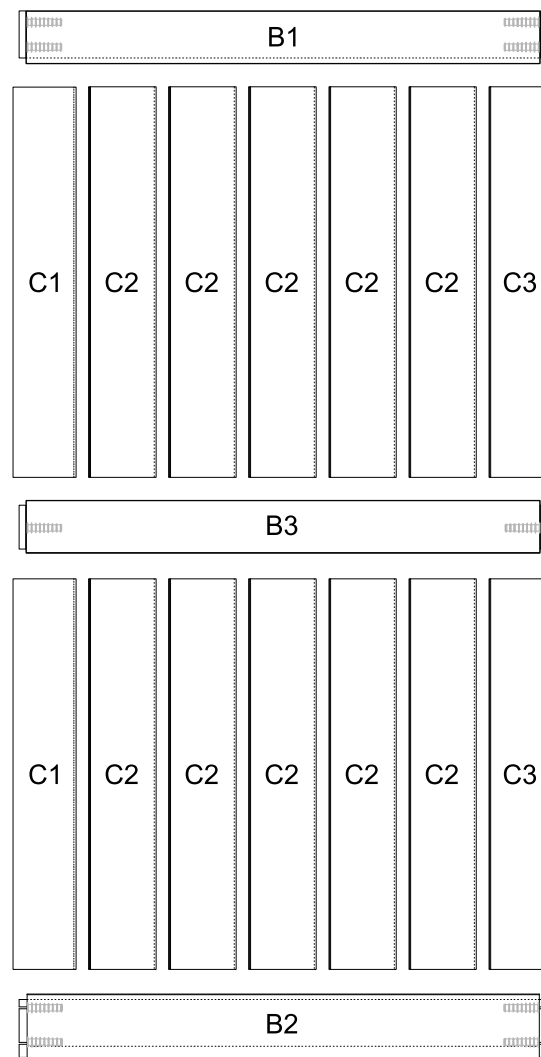

G


Note: Gasket(H) is spare. If the door core board is loose, add 4 gaskets in the groove at bottom of side stile.

To provide feedback on a particular part, please mark it by circling in the instruction manual and kindly send us a photo.

Step 1.

Lay out **Side Stile A1** on flat, clean surface. Make sure the groove side is to the inside.


Attach **B1 Top Rail**, **B2 Bottom Rail** and **B3 Middle Rail** to **Side Stile A1** by inserting the tongues into the groove of A1 and fasten with carriage bolts.

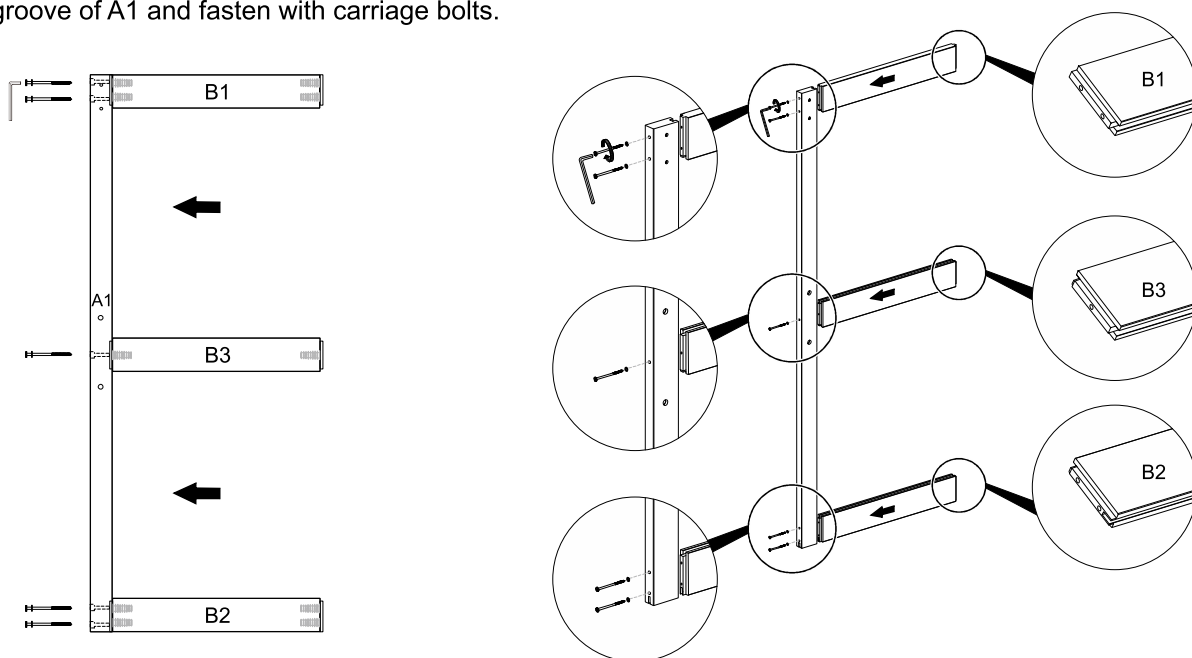

Step 2.


Assemble **C1 LeftSide Slat**, **C2 MiddleSideSlat**, **C3RightSideSlat** as shown in figure.

Make sure C1 tongue facing inside C2, next to C1 with the tongue facing inside, C3 next to the last C2 with flat side inside.

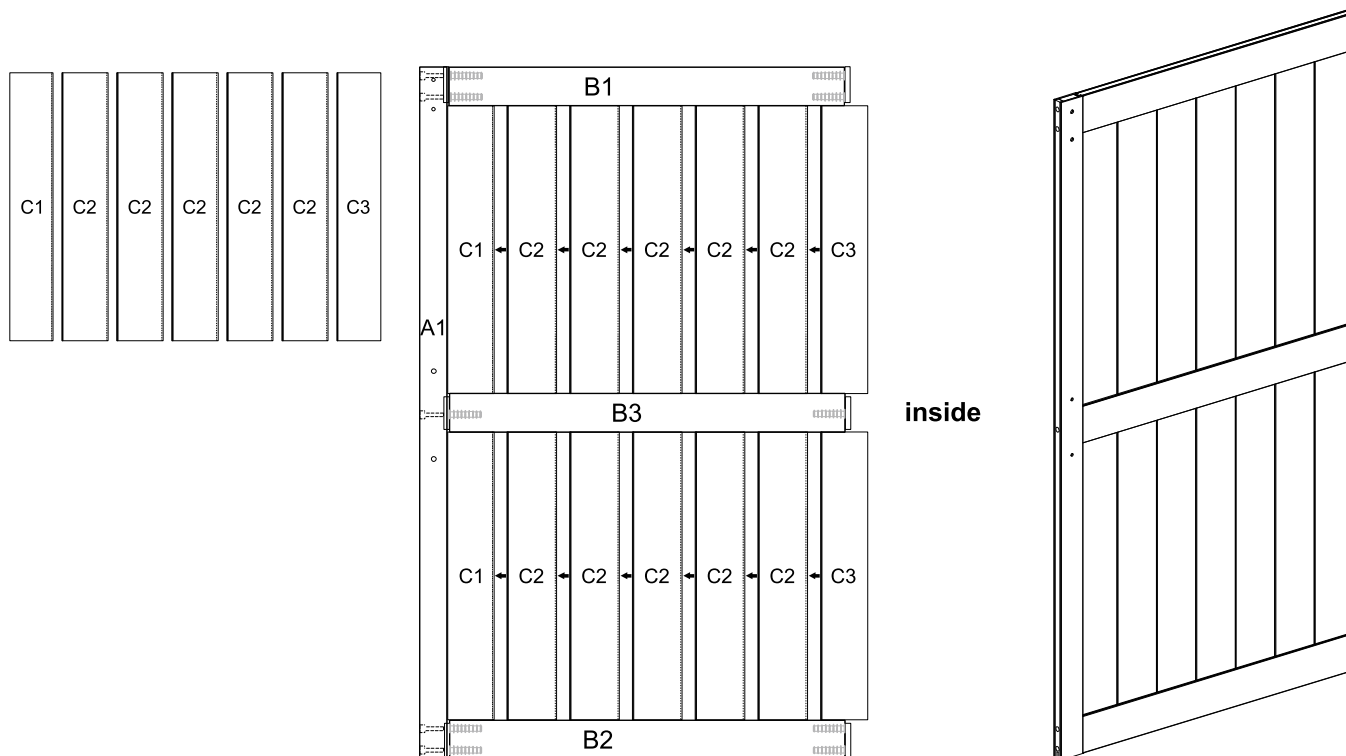

Step 3.

Place the other **SideStileA2** beside the assembled **Rails** and **Side Slats** by inserting the rails' tongues to the groove of **A2** and fasten with carriage bolts.

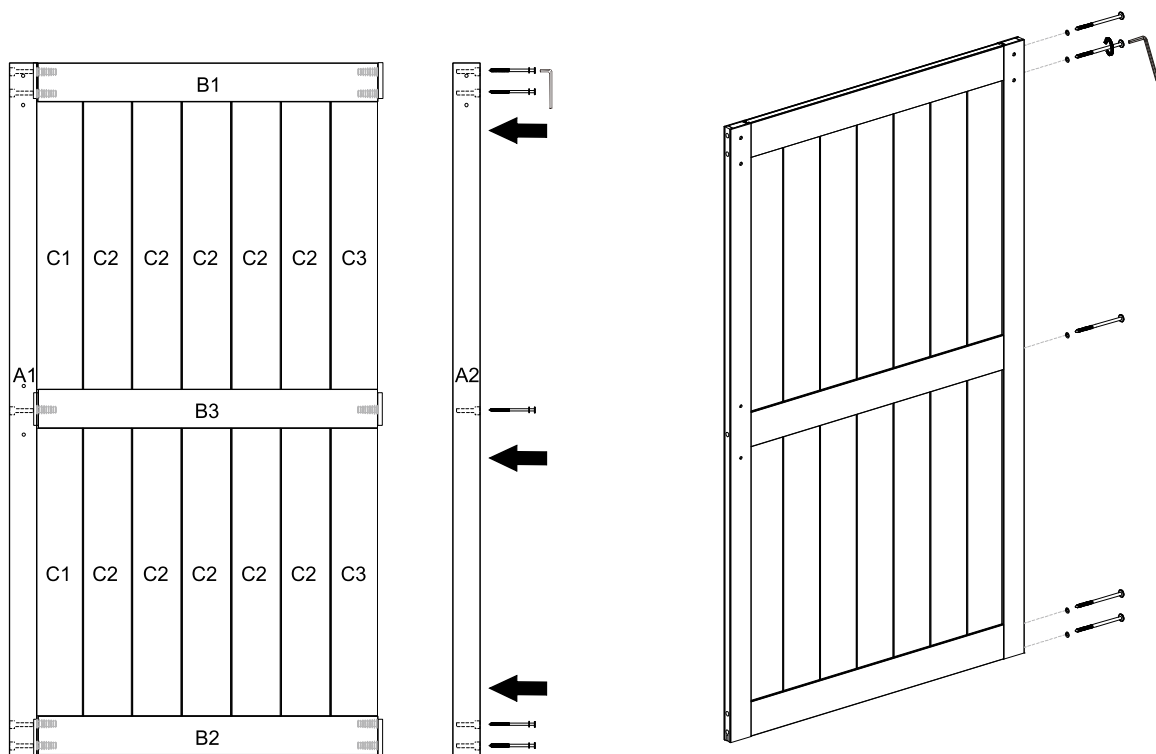

Step 4.

Make sure all bolts are tightened, place **E Plastic Caps** on top of the bolts and flush with Side Stile surface.

