



ASSEMBLY INSTRUCTION

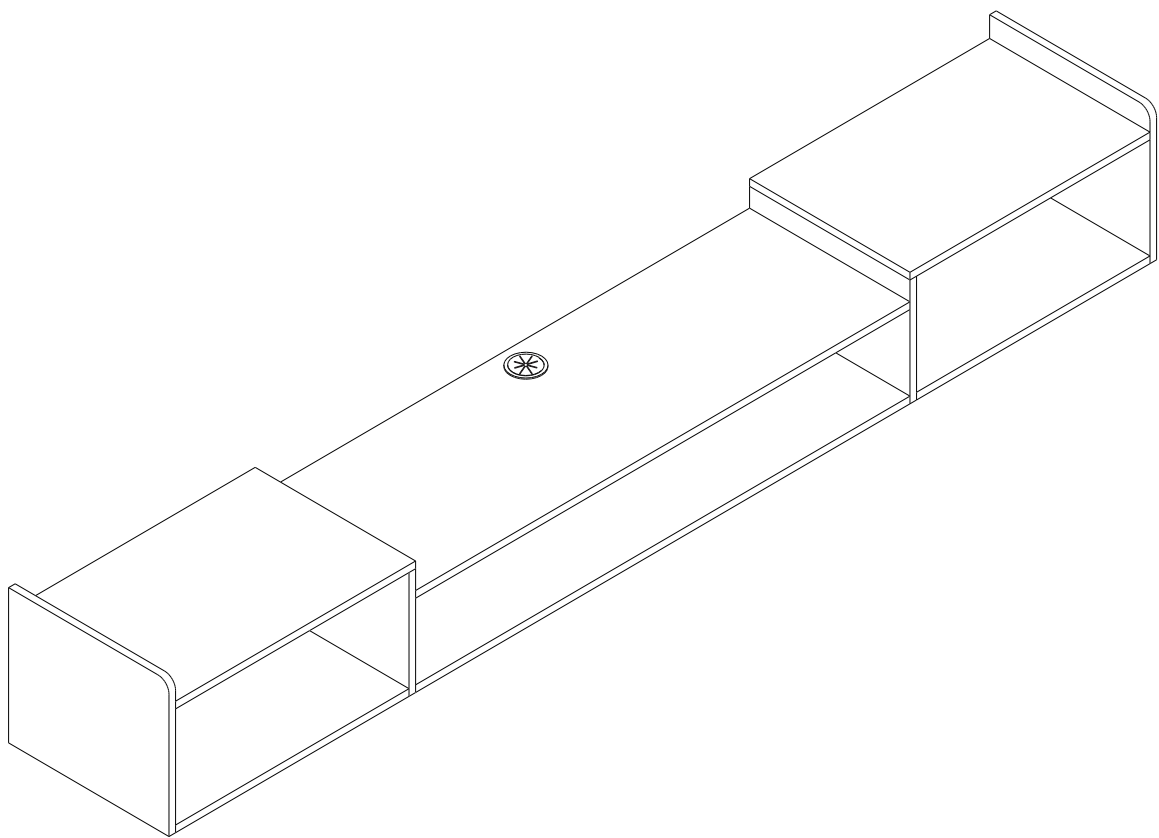




WARNING

Need Two Or More People To Complete

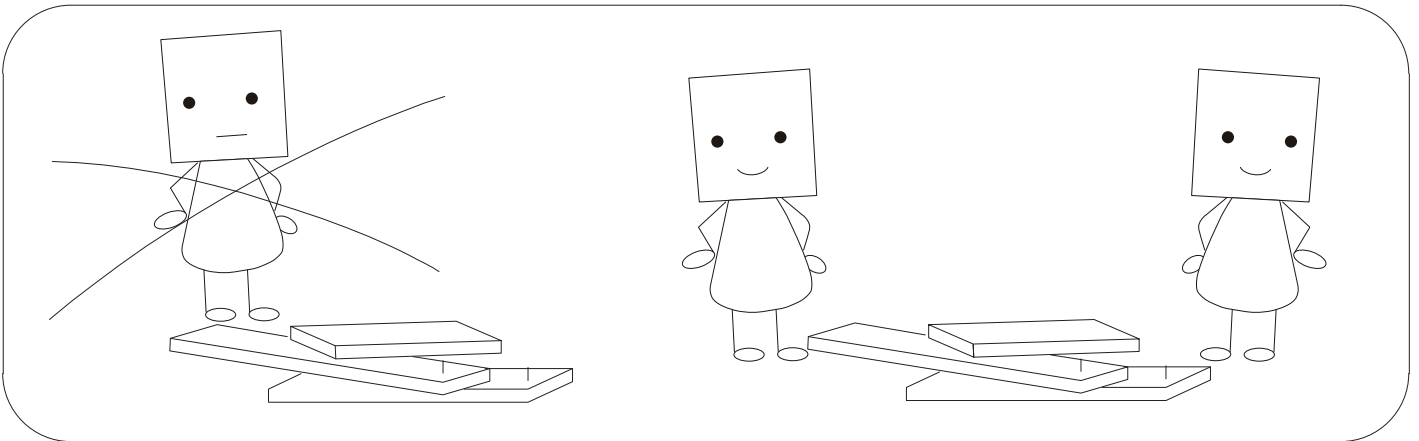


Assemble Item On a Clean Flat Surface

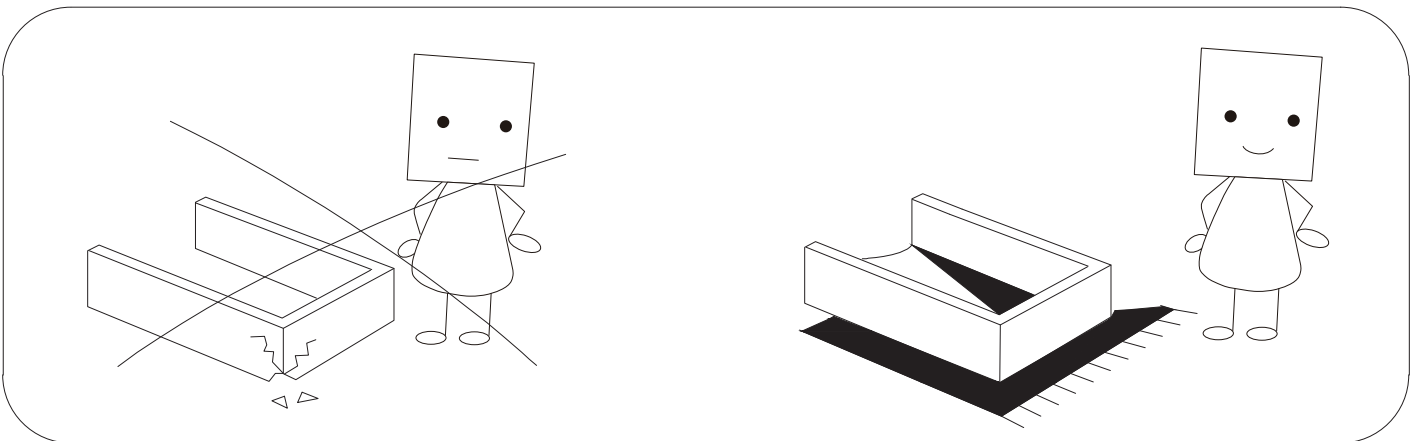



















- Please check you have all hardware before assembling.
- Please ensure you have the name of the item and hardware part required and quantity.
- If you have any questions, please contact us by original purchase platform.
we will reply you ASAP.
- For the safety of you and your family, it is necessary to install Anti-Tip Device Kit.

EXPLODED DRAWING:

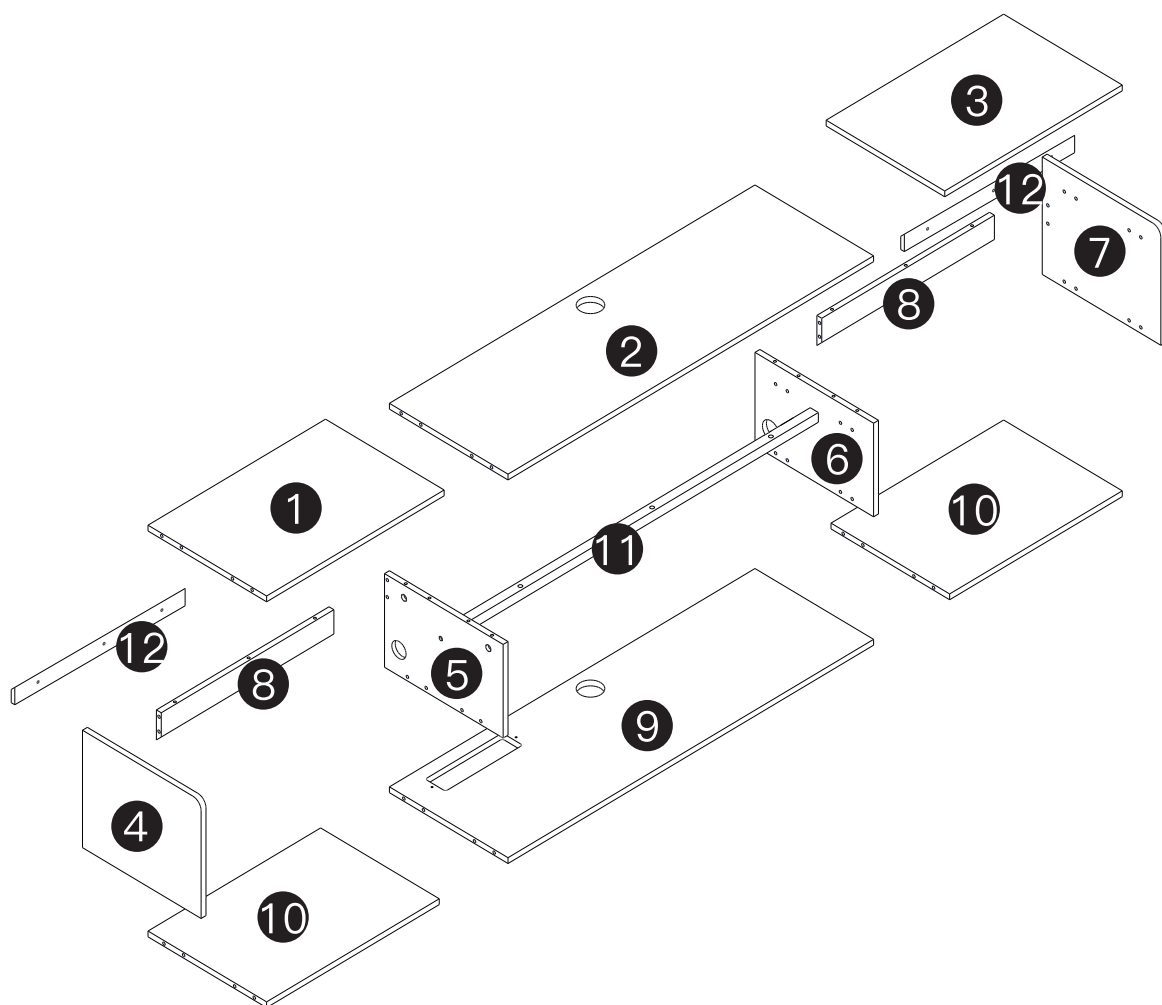


Please check all parts and accessories according to the parts list before assembling, make sure all contents are sufficient and in good condition. If there is any parts missing or defective, please contact us with purchase platform message immediately to get replacement parts.

PARTS:

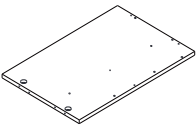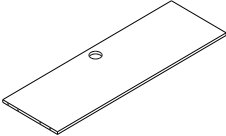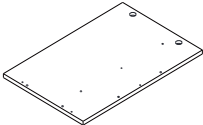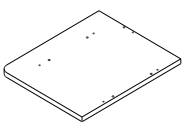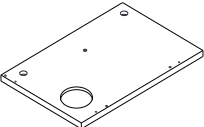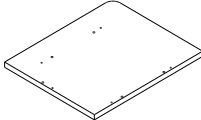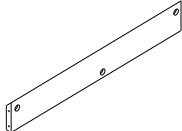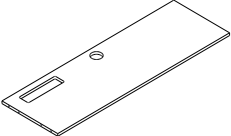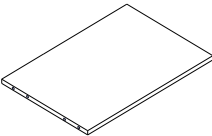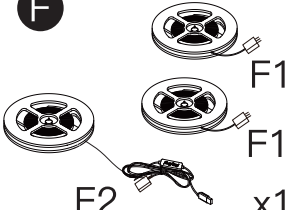
1  x1	2  x1	3  x1	4  x1
5  x1	6  x1	7  x1	8  x2
9  x1	10  x2	11  x1	12  x2
A  x30	B  x30	C  M6x30mm x24	D  x4
E  M3x10mm x10	F  F1 F1 F2 x1	G  x6	H  M4x12mm x12

J




M6×25mm x5

K




x1

L

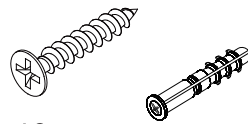


M4×40mm x18

M




M6×50mm x4

N




M3.5×12mm x2

P

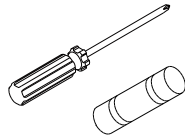

x1

Q





M5×40mm x18

HOW TO INSTALL


NOTICE:

1. Use electric drill for easier installation experience.
2. Please drive the screws in pre-drilled holes.
3. Please strictly follow the instruction and diagram in every step.
4. Make sure every part is on the right position, otherwise it may cause unnecessary problem.
5. Select the proper component via the label on every part while assembling.

REMARK:

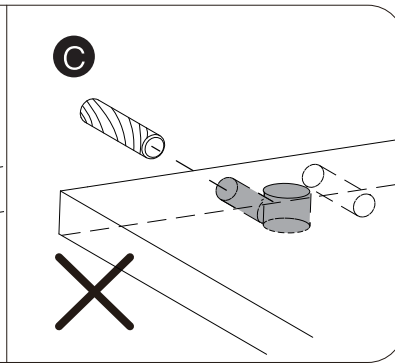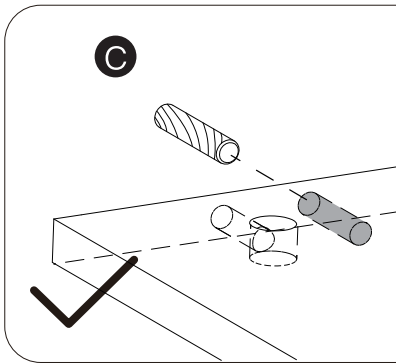



Avoid inserting part C into wrong holes.

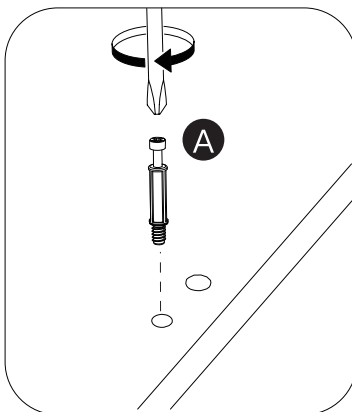



Part A must be installed into the holes with rubber nuts which are smaller than others.

Please ensure that part A is facing the direction of the gap of part B .



When locking part B, please make sure part A is fully inserted.

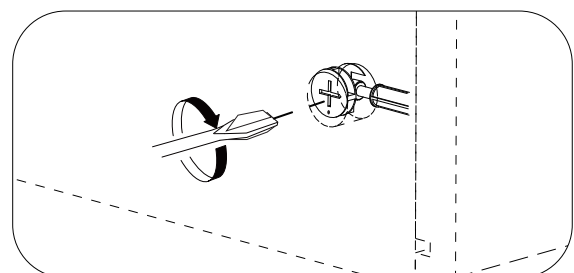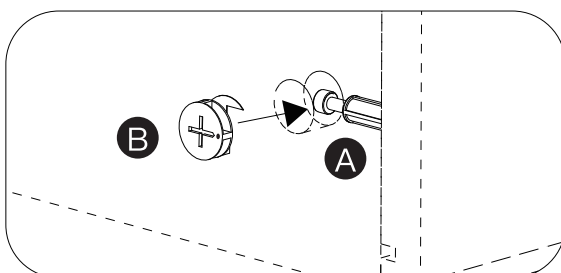






STEP 1

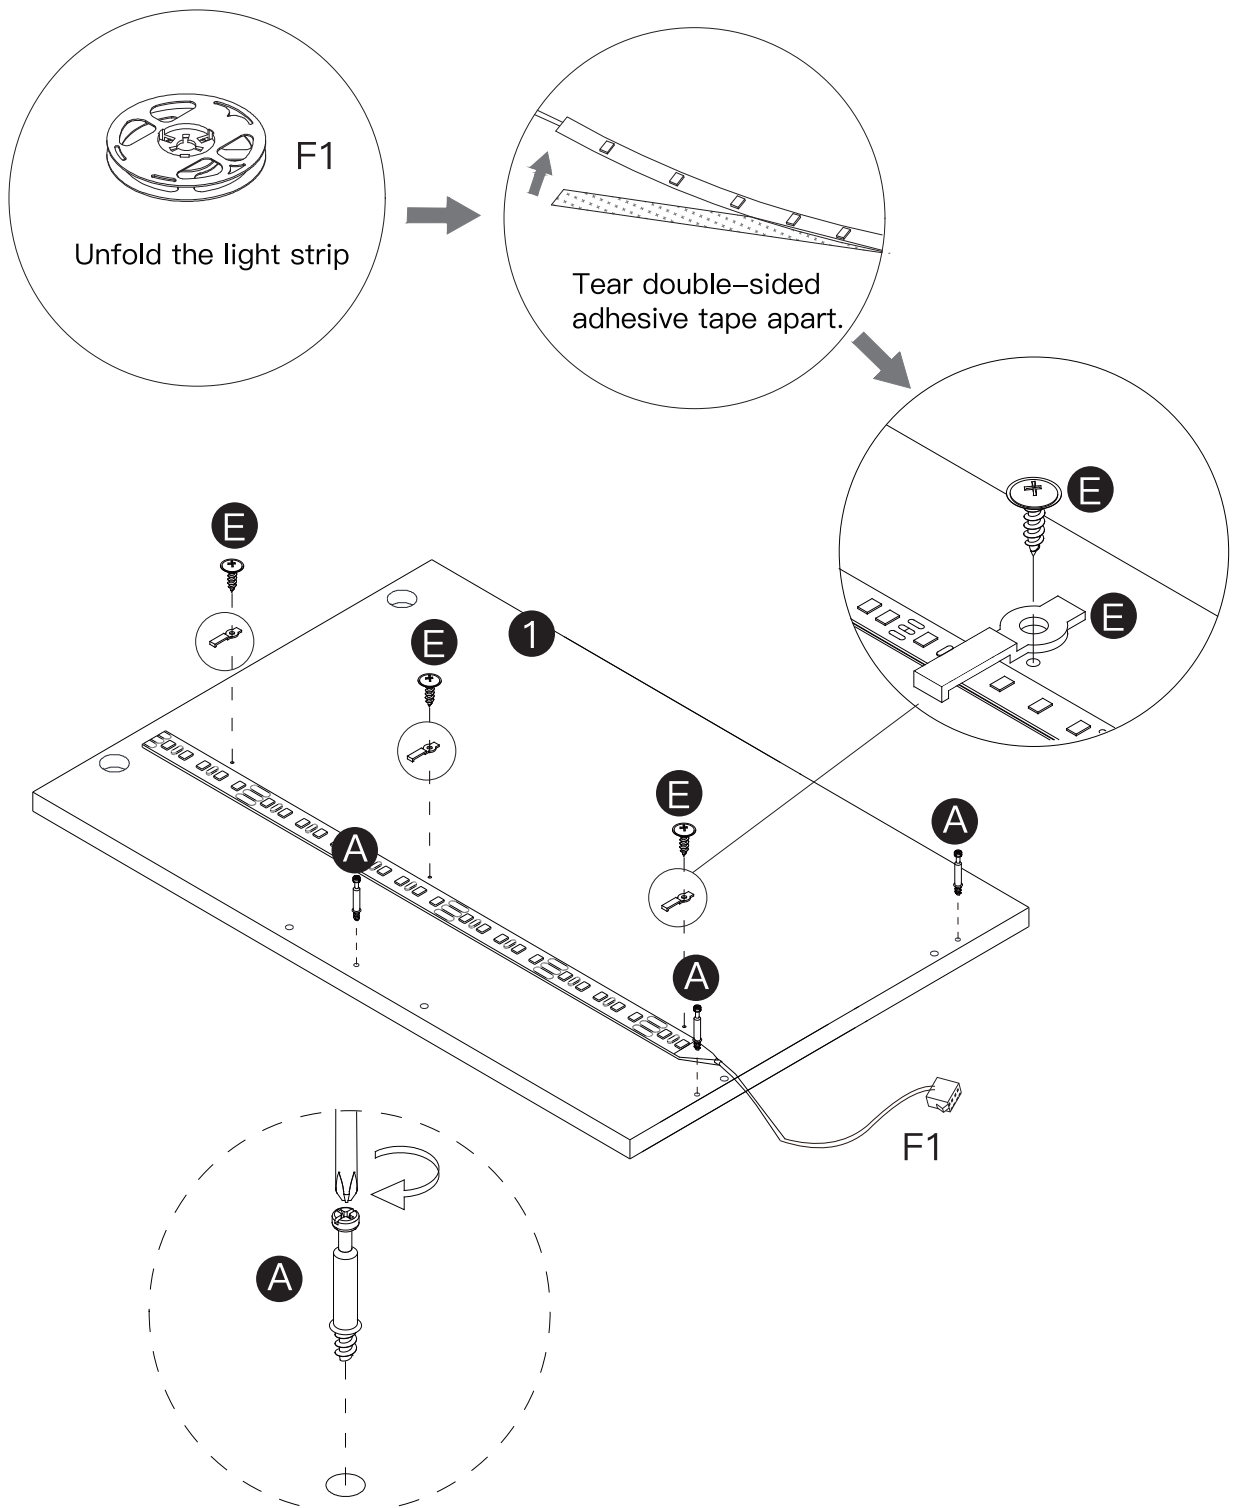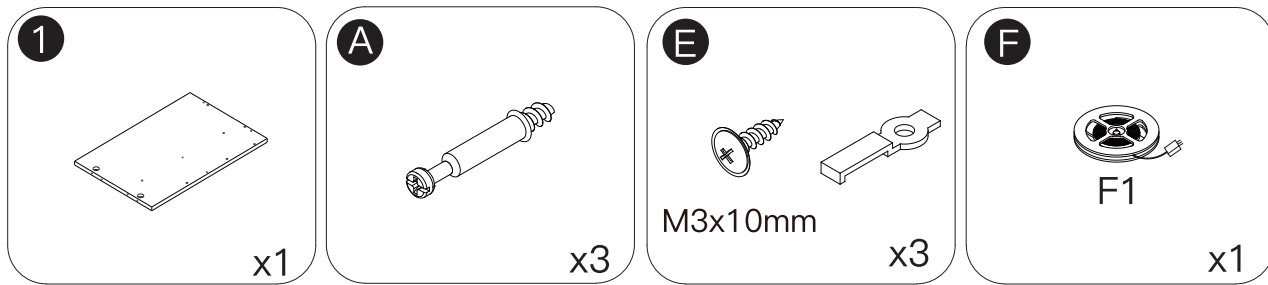



STEP 2

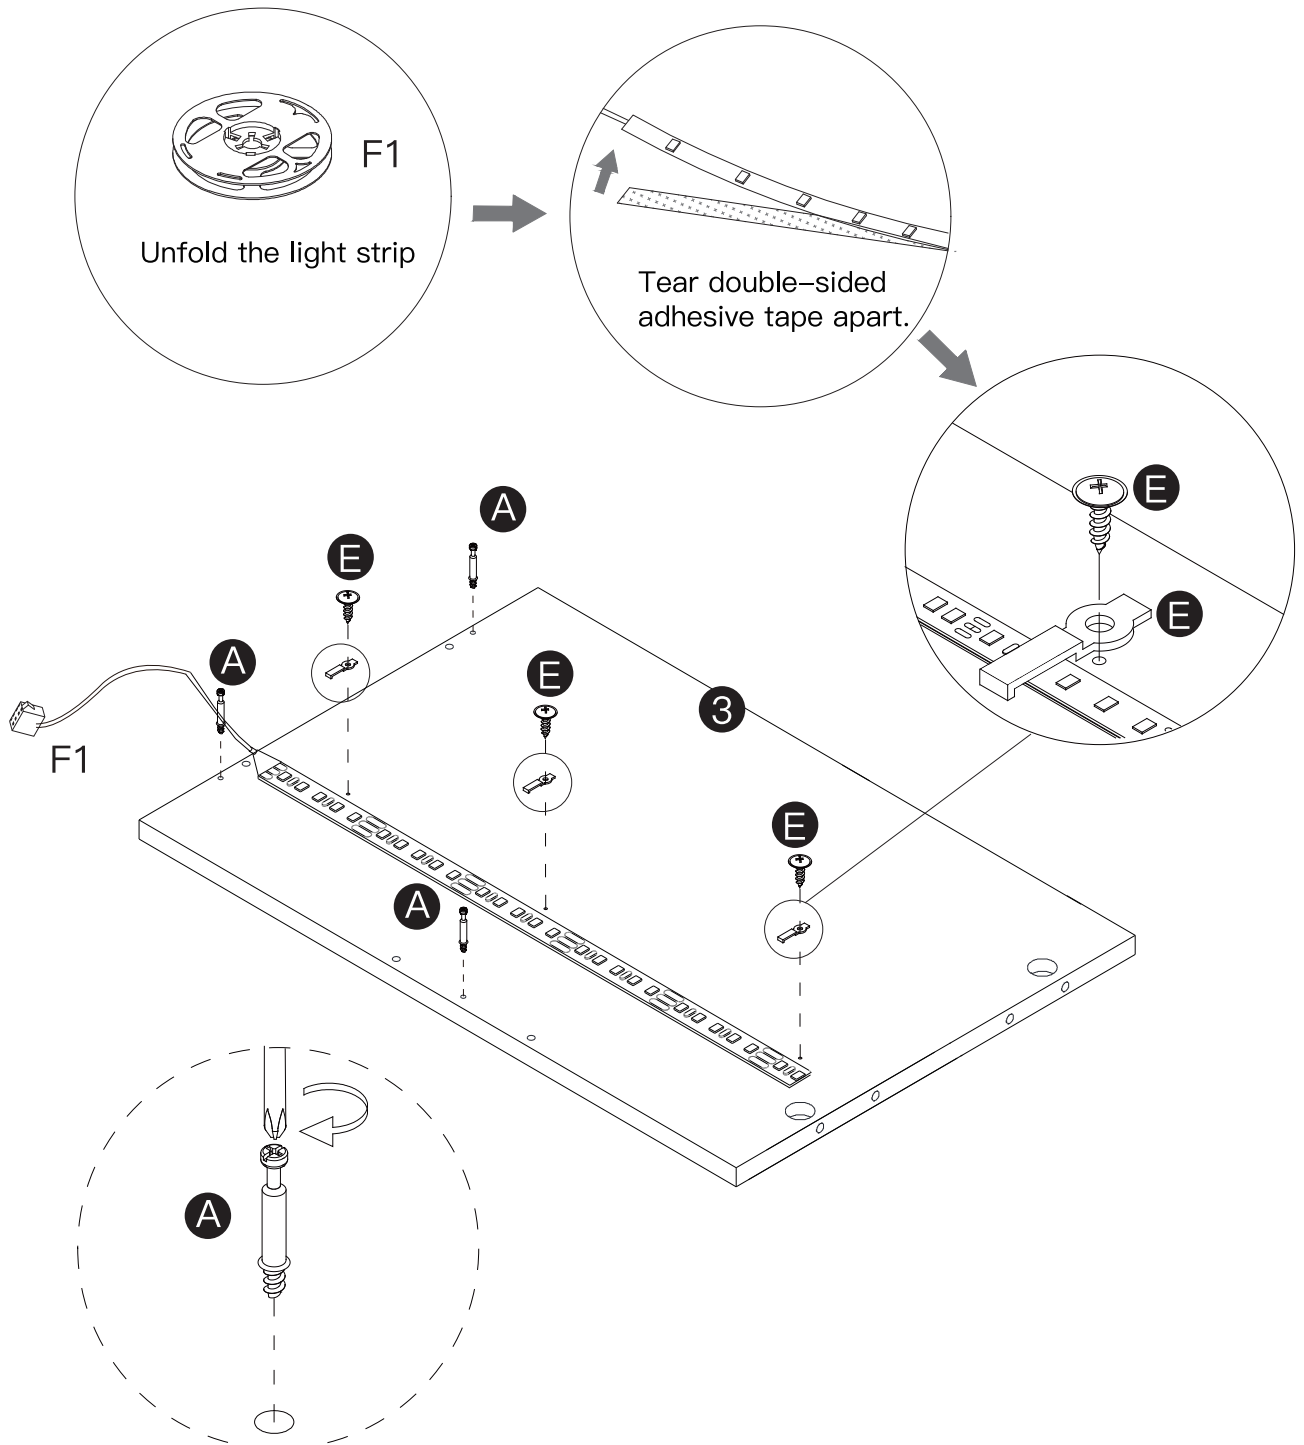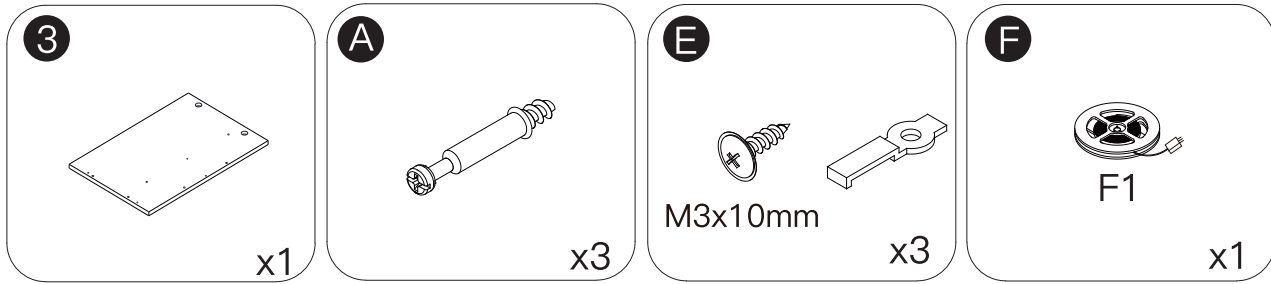




STEP 3

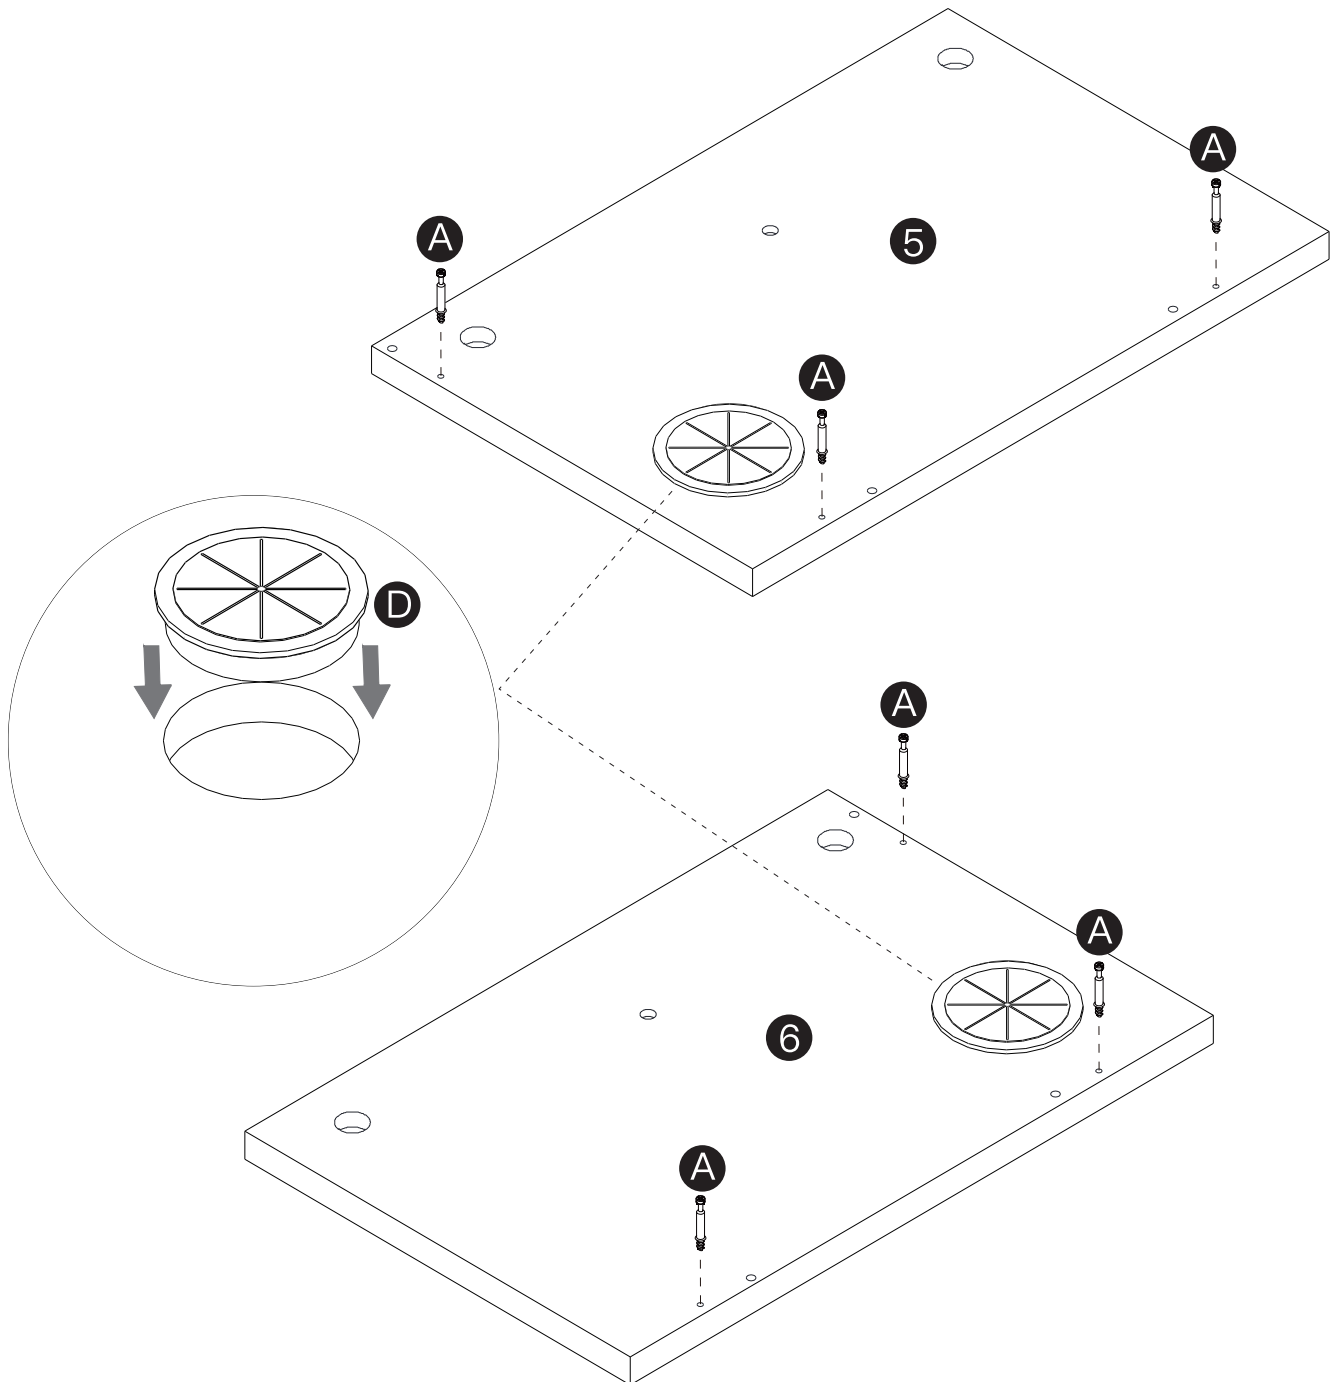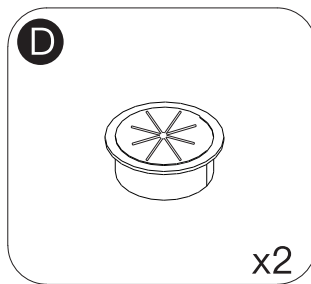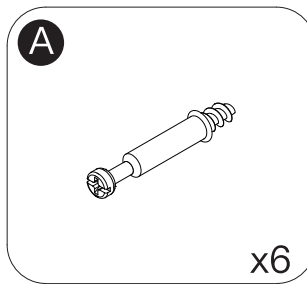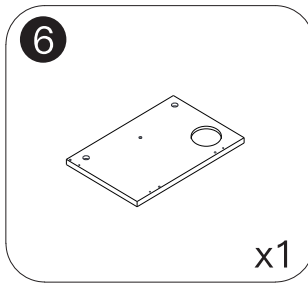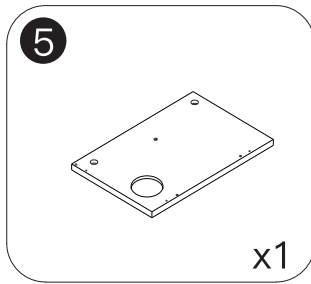

STEP 4

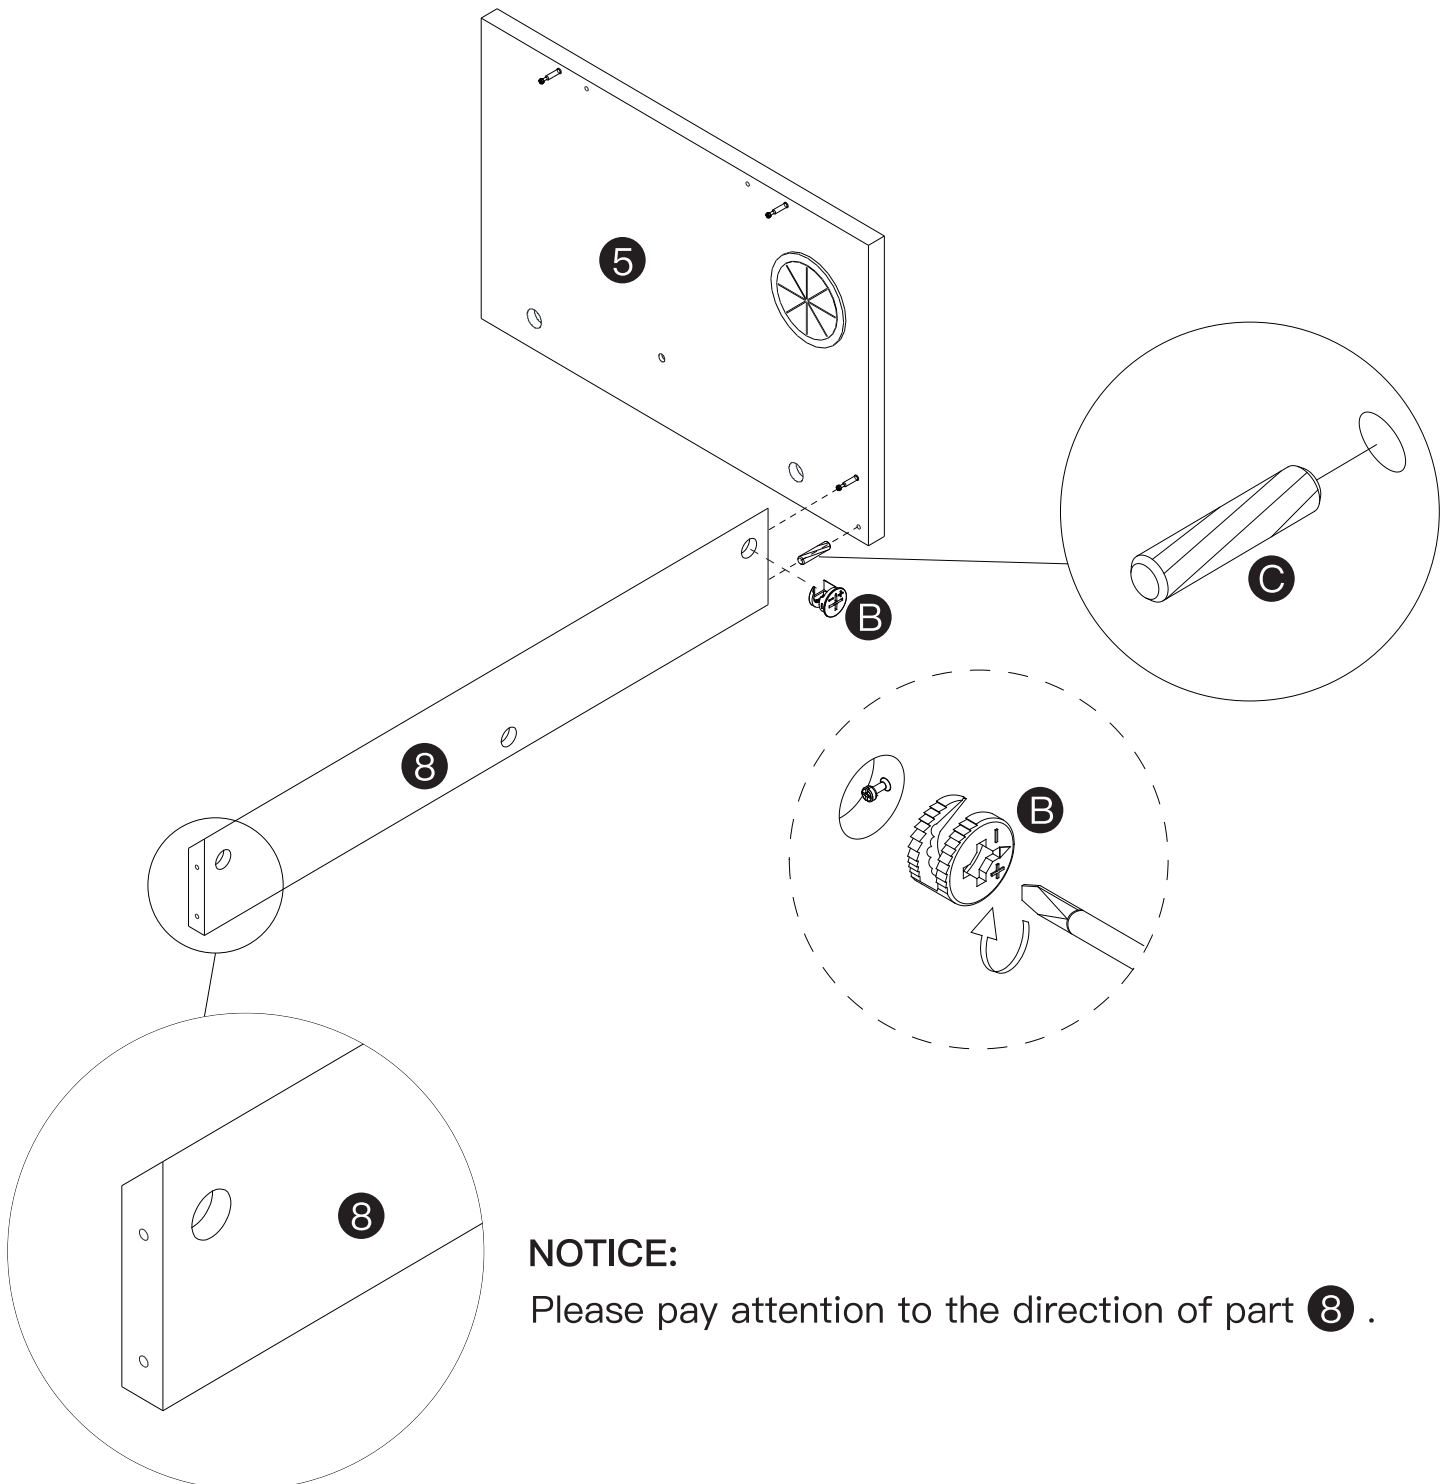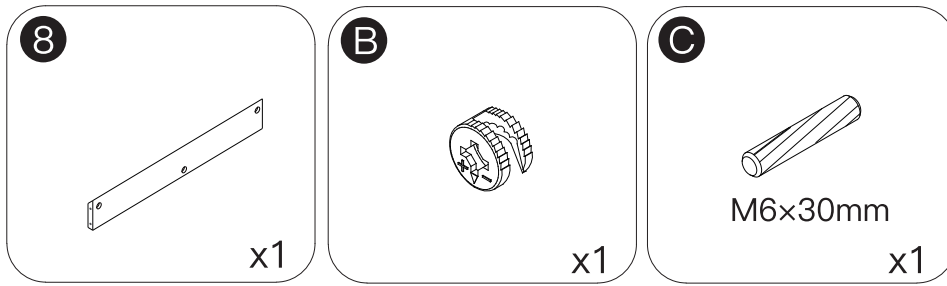

STEP 5

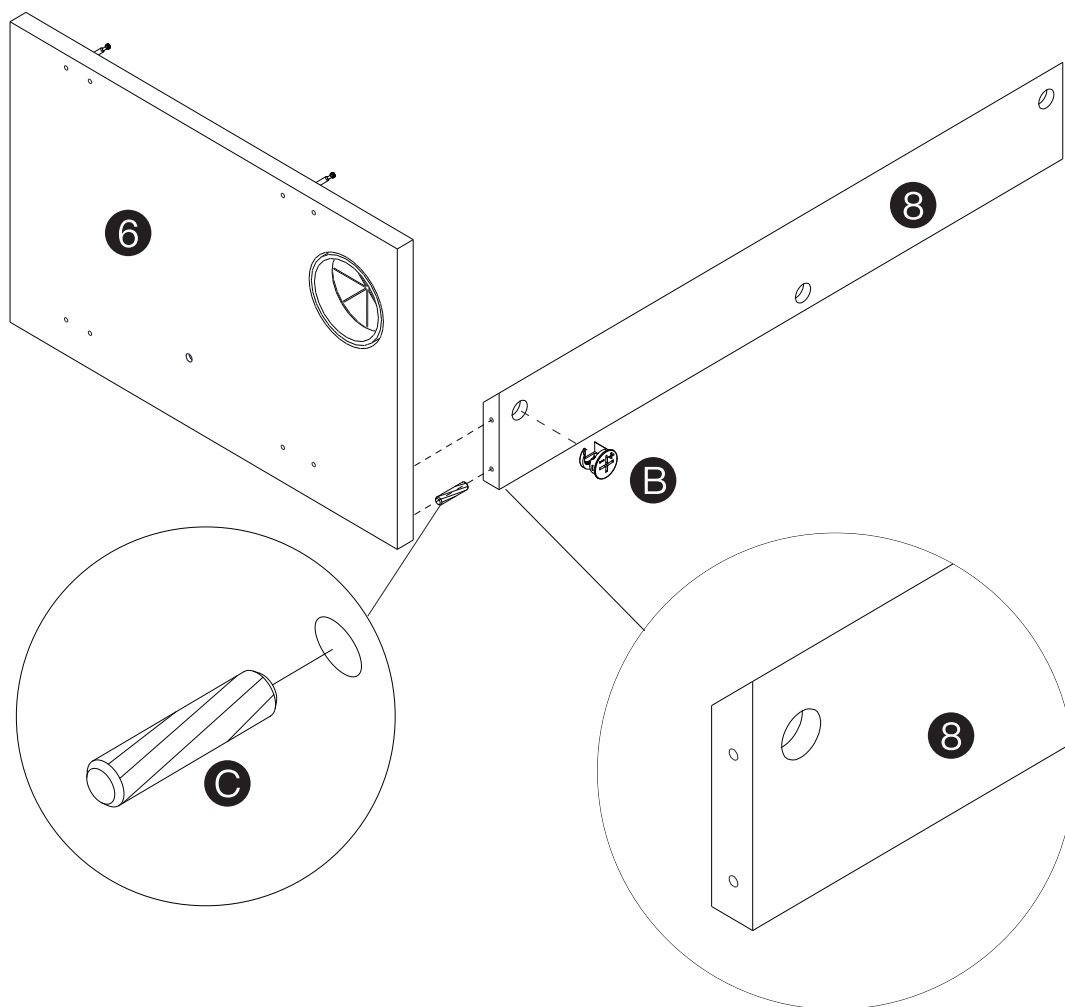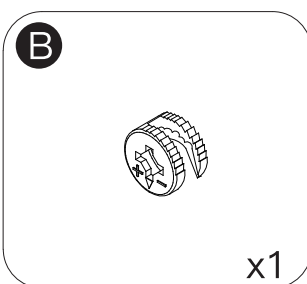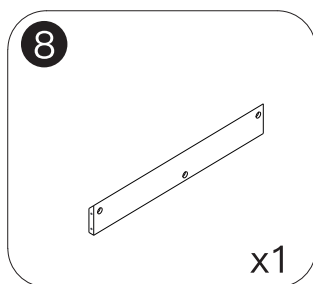

NOTICE:

Please pay attention to the direction of part 8 .


STEP 6

B




x3

C



M6x30mm

x4

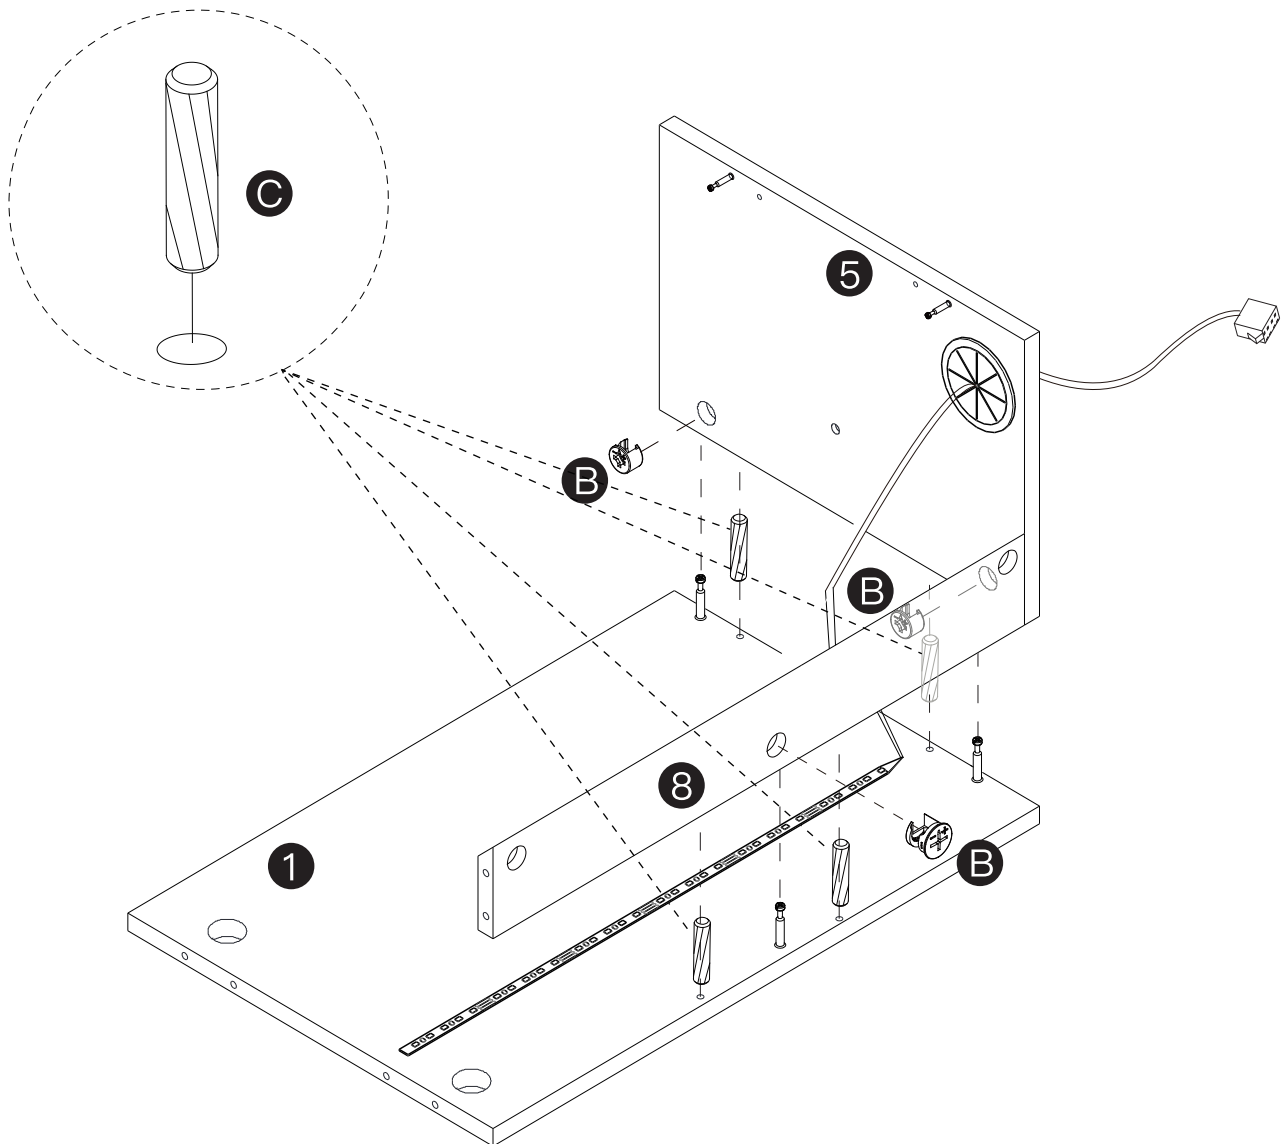


STEP 7

B




x3

C





M6x30mm





x4

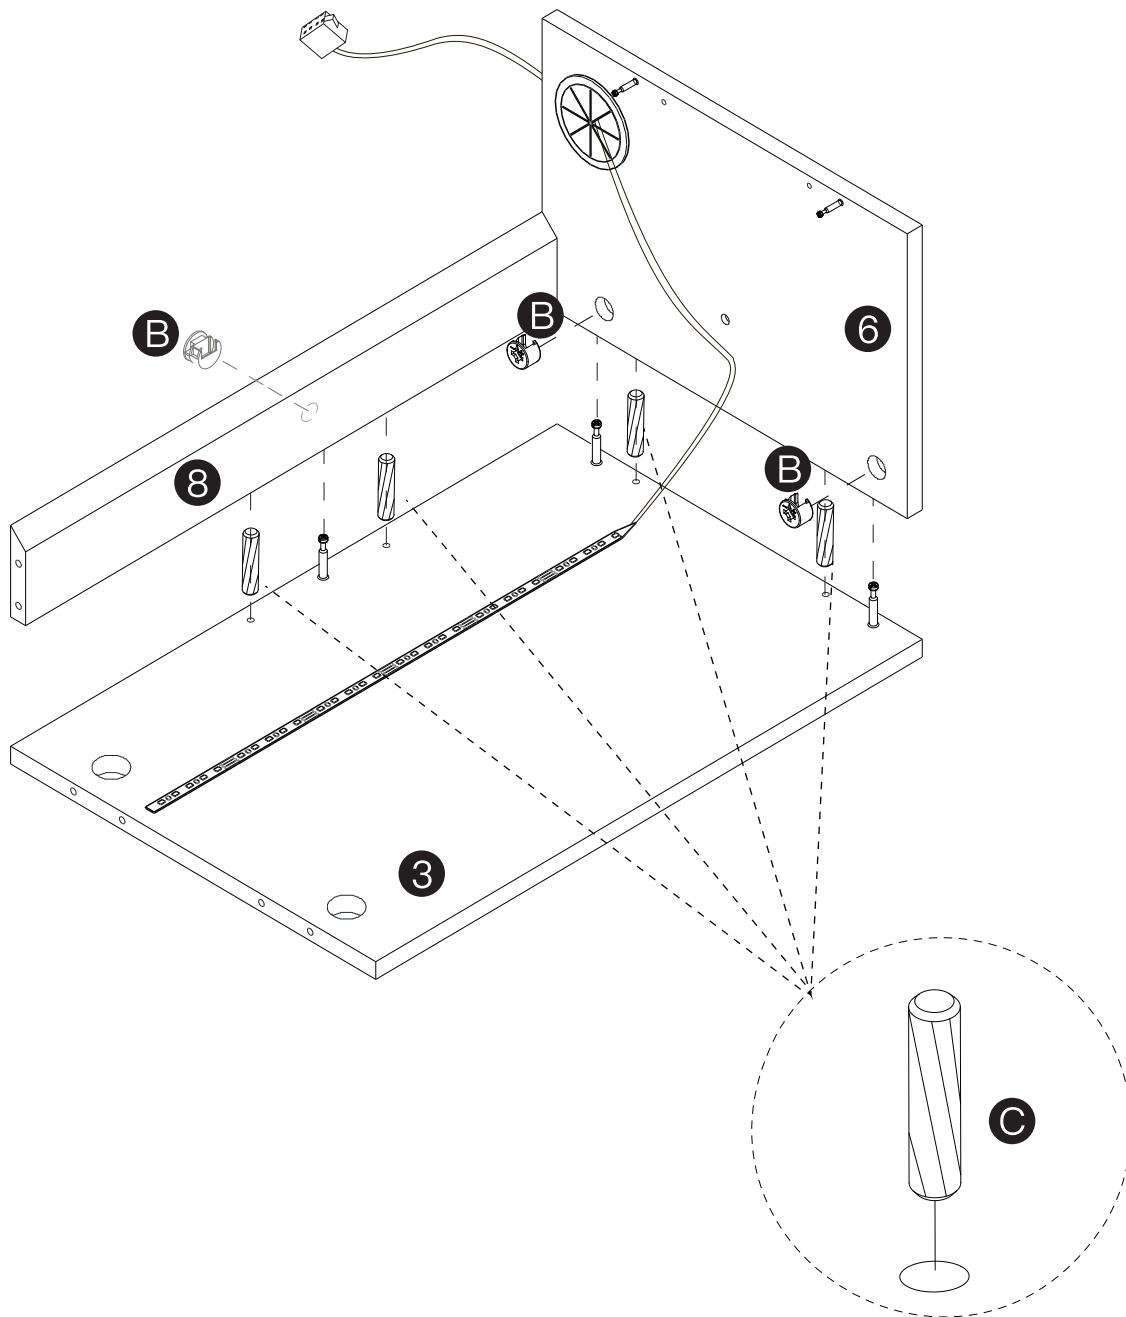

STEP 8

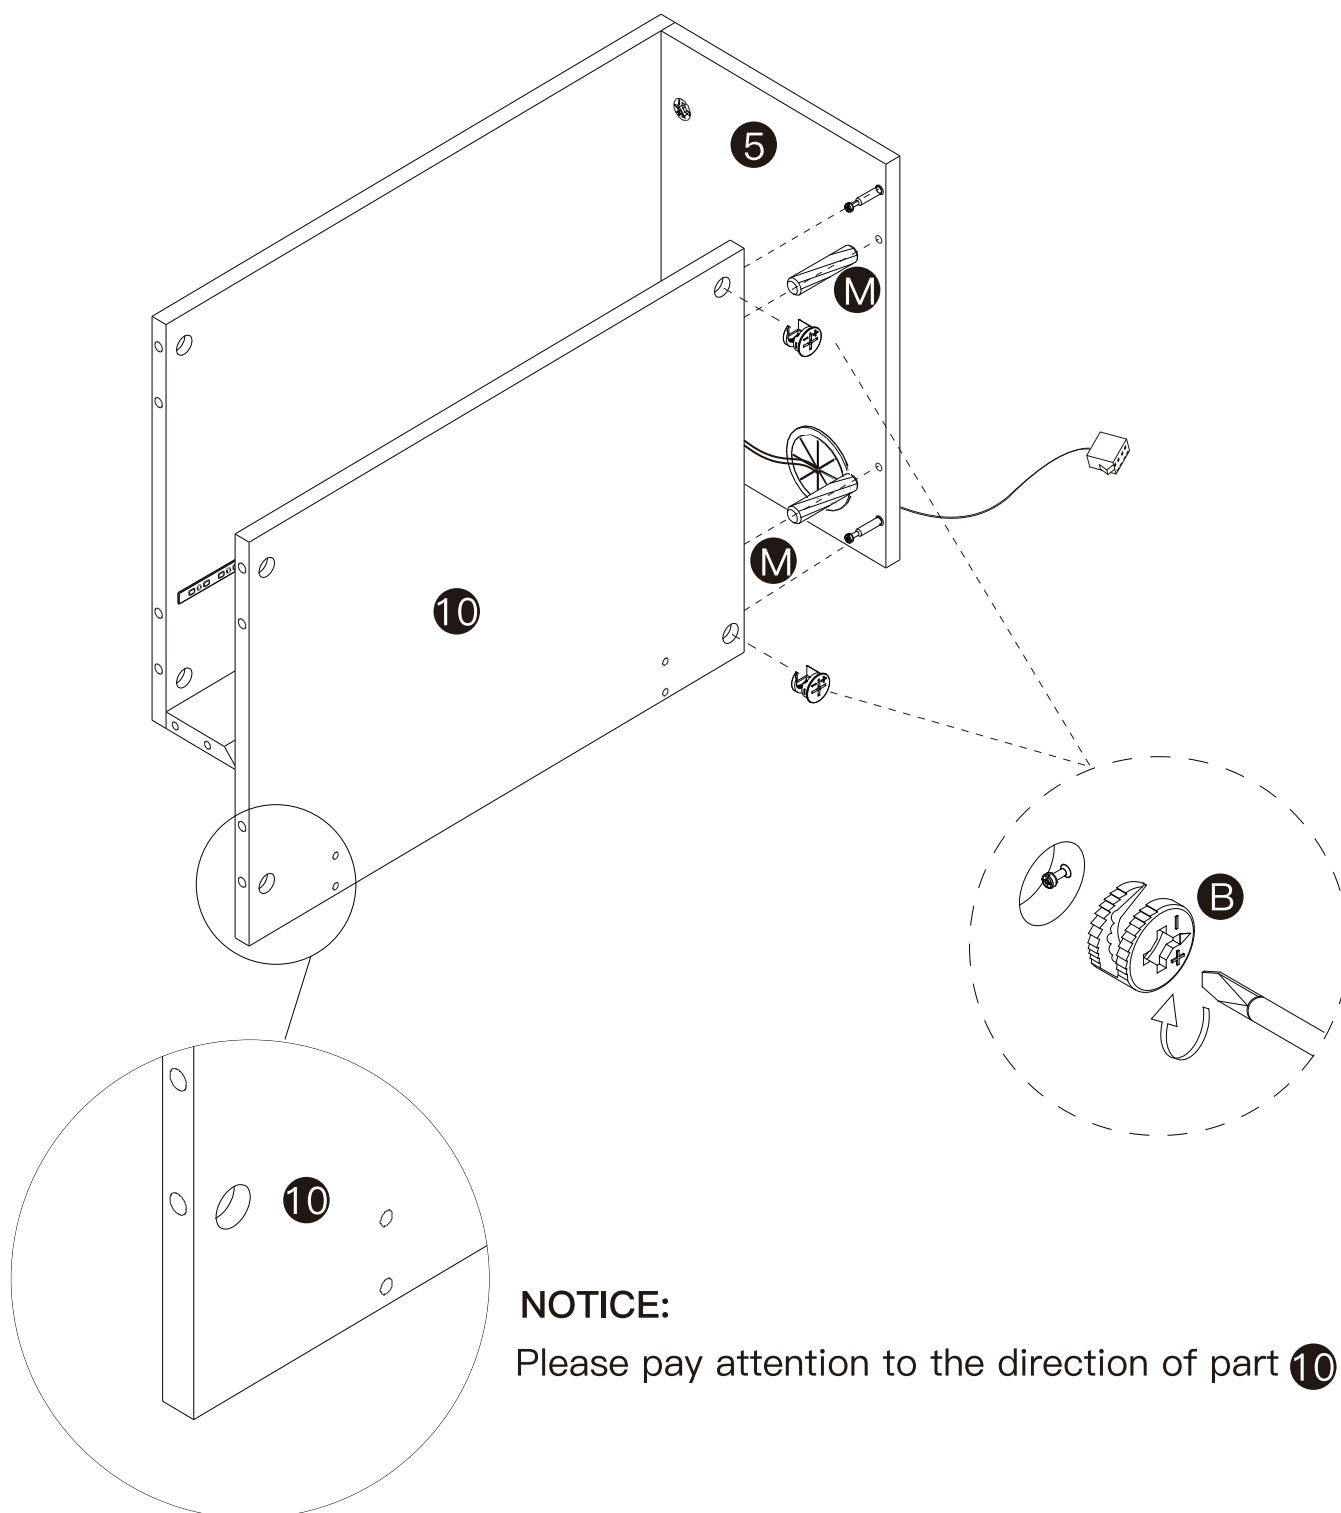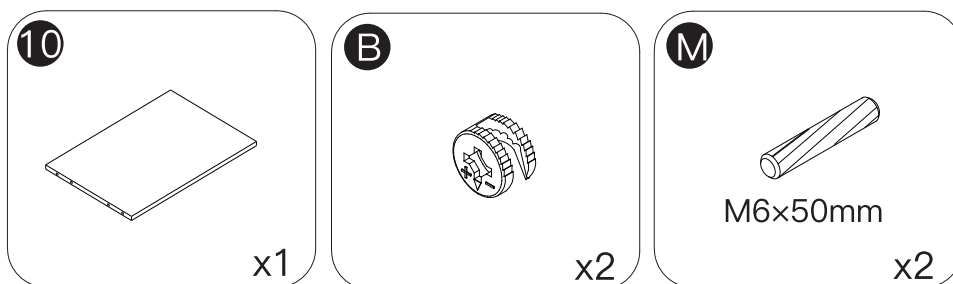







STEP 9

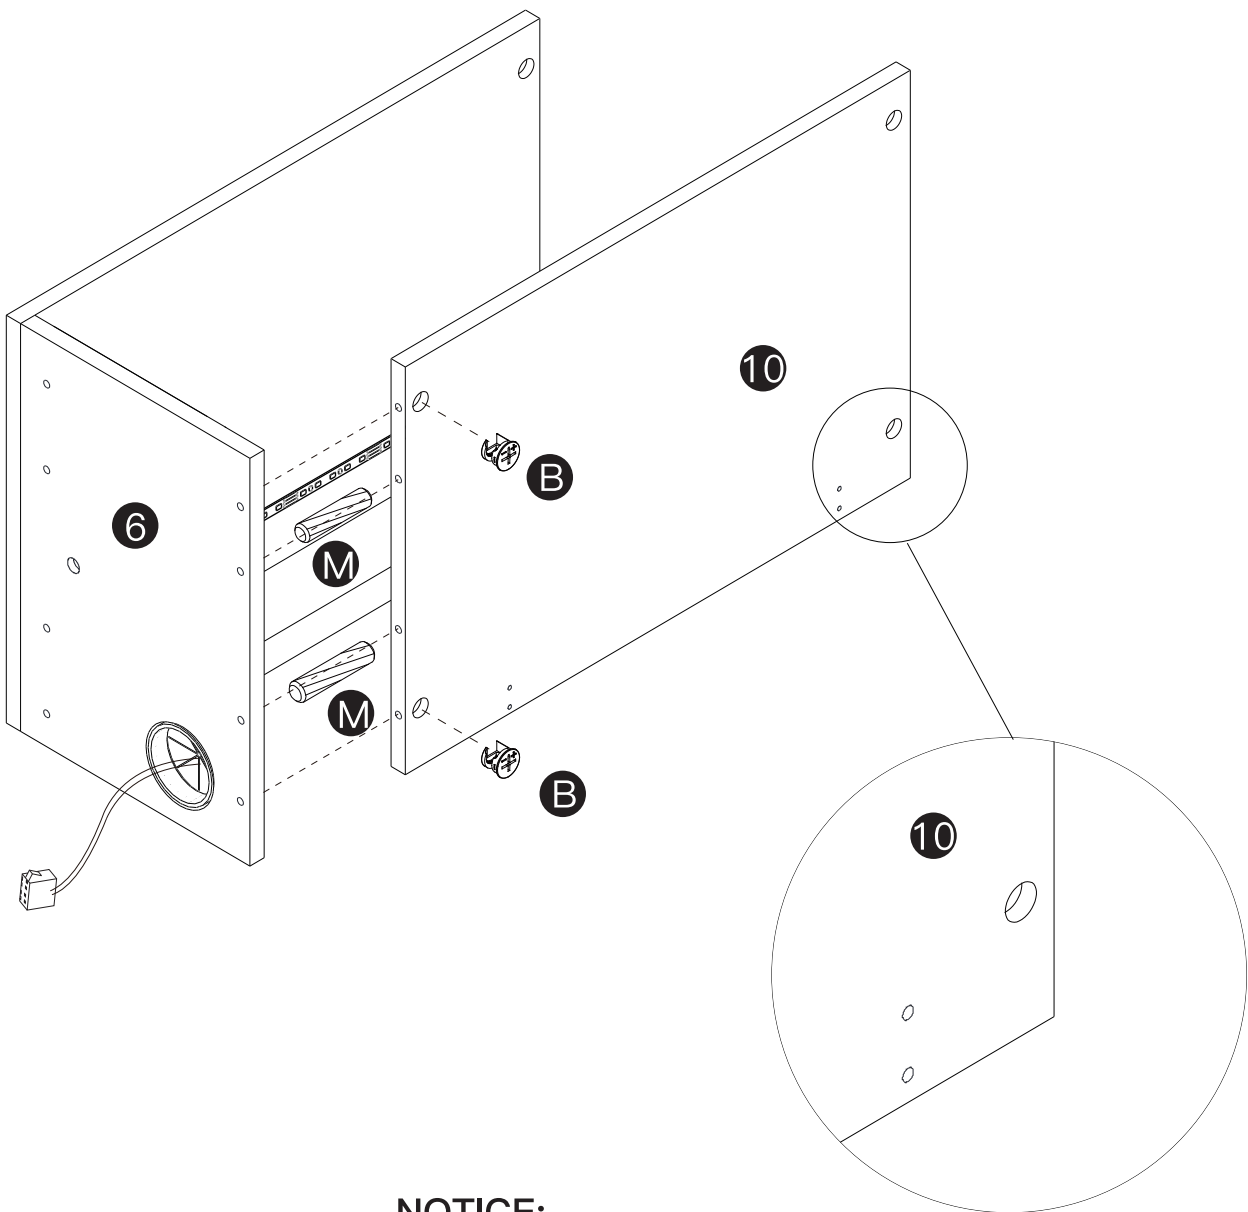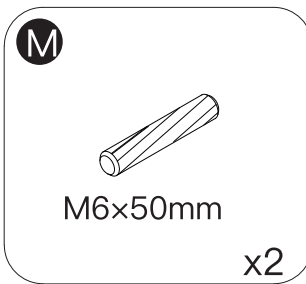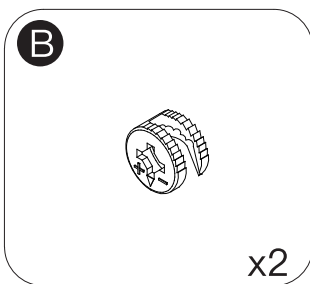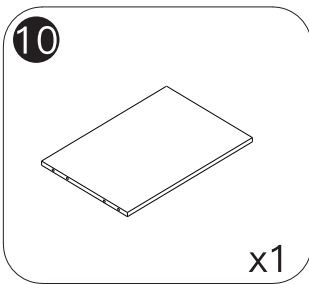



NOTICE:

Please pay attention to the direction of part 10 .

STEP 10

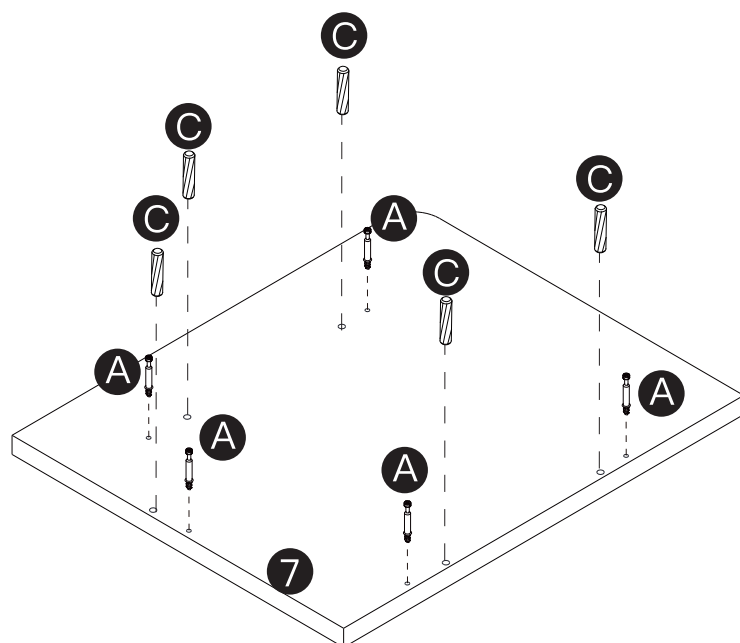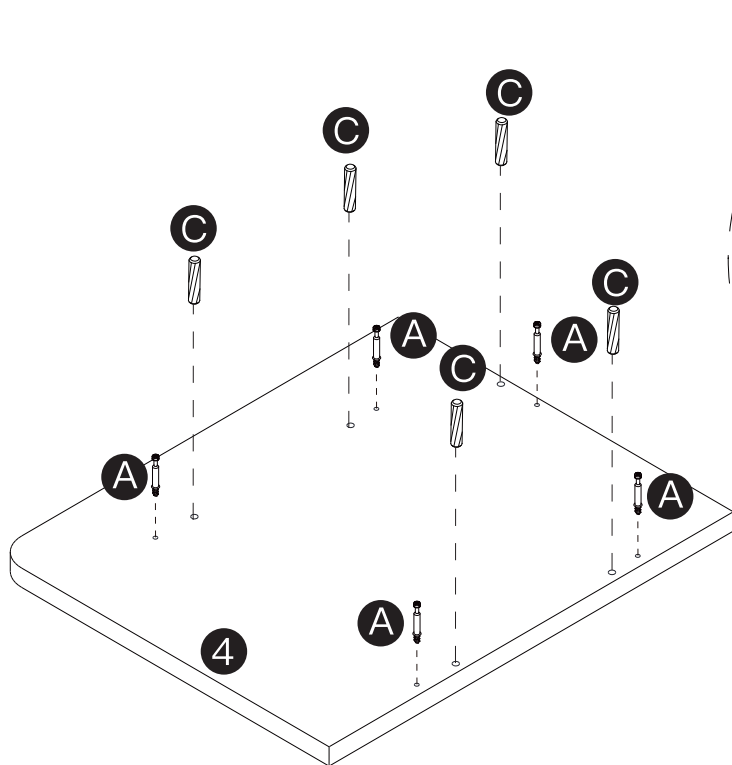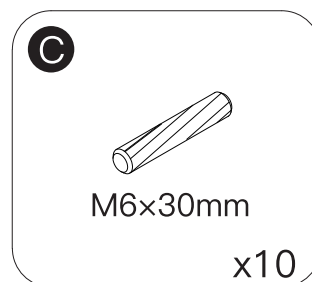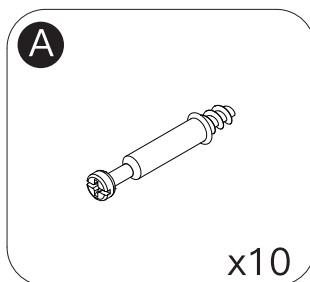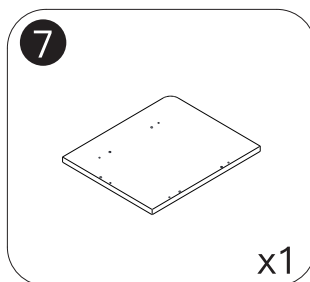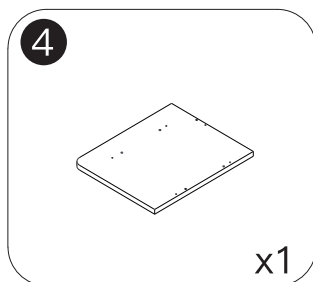



STEP 11

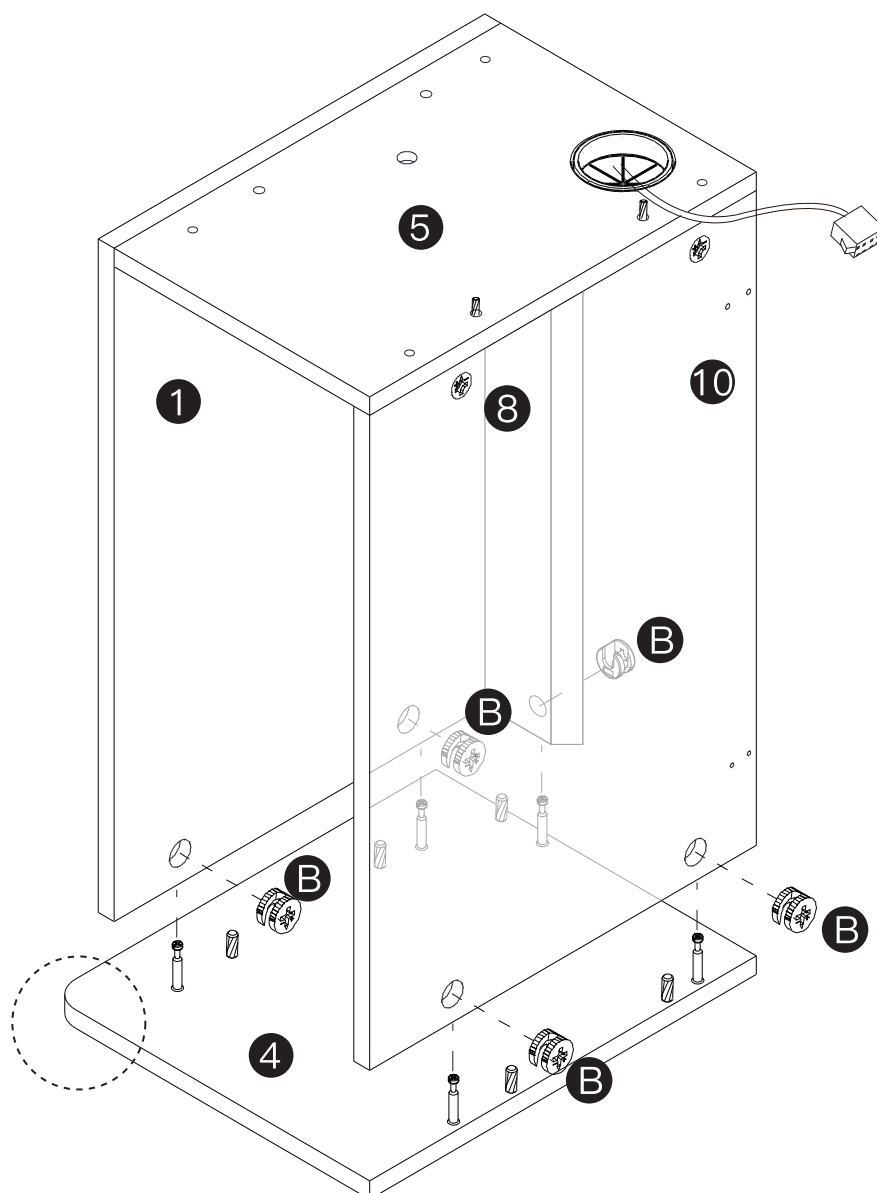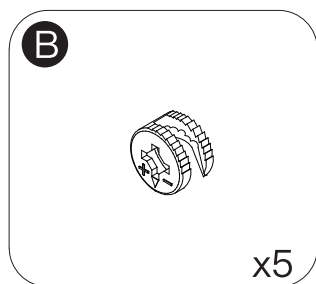



NOTICE:

Please ensure that part ④ is placed in the correct positions before locking.

STEP 12

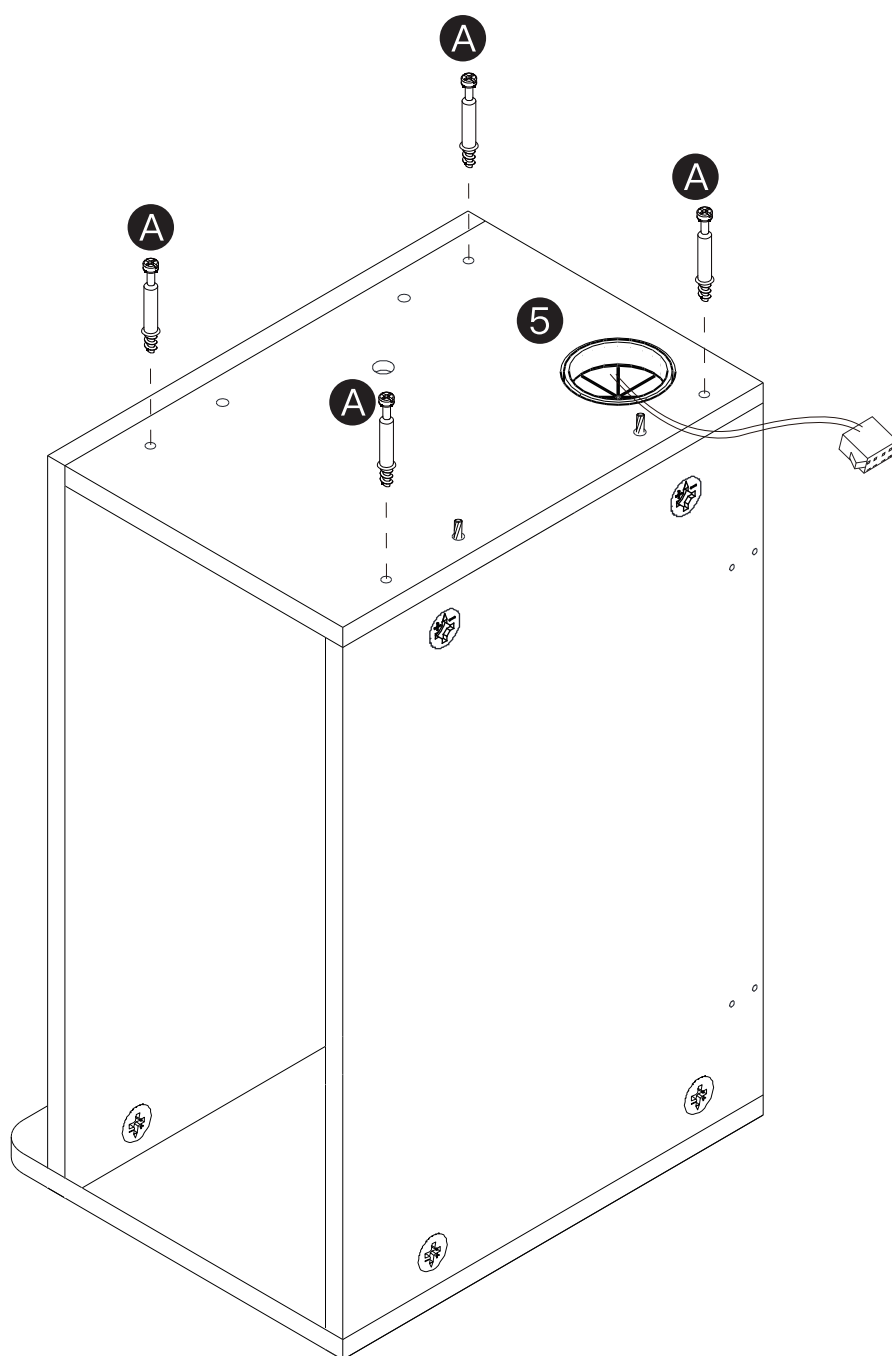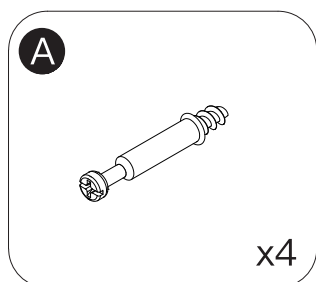



STEP 13

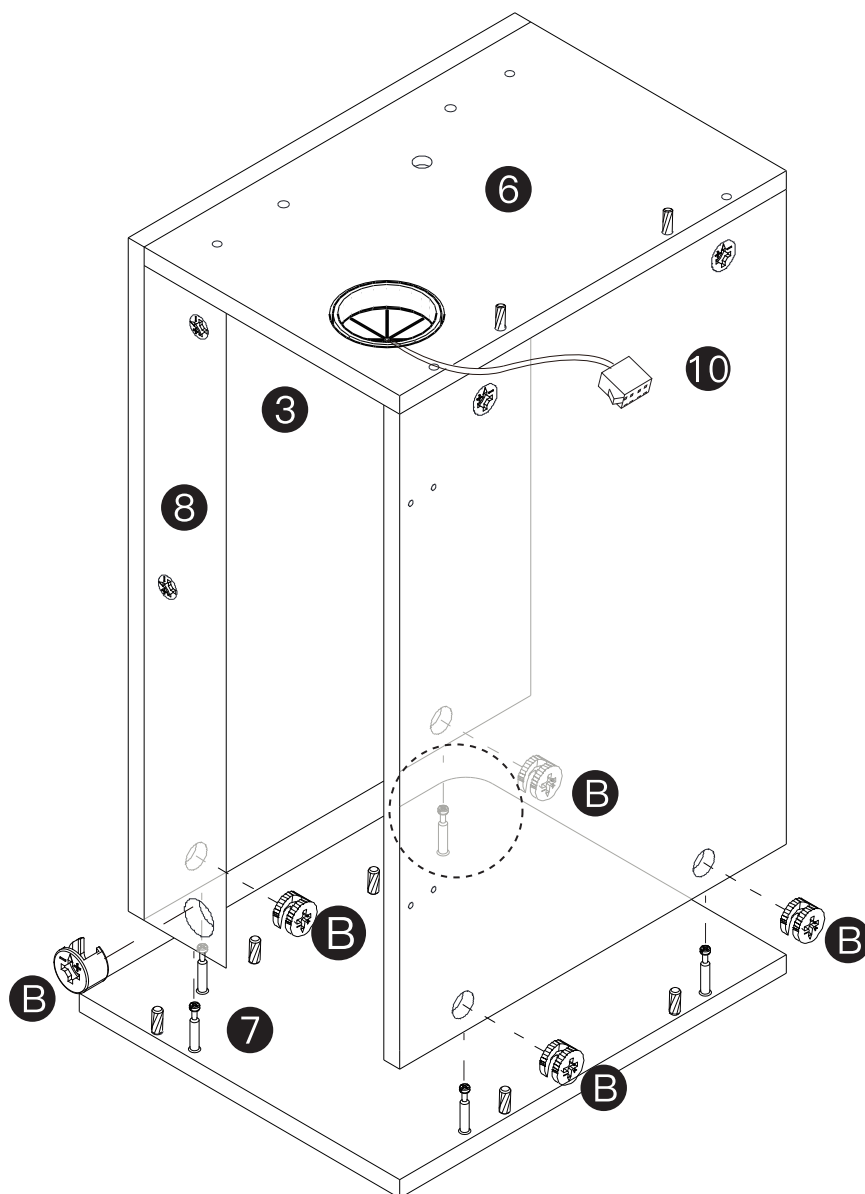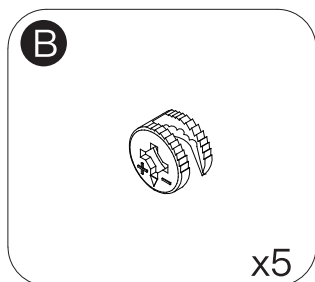










NOTICE:

Please ensure that part **7** is placed in the correct positions before locking.






STEP 14

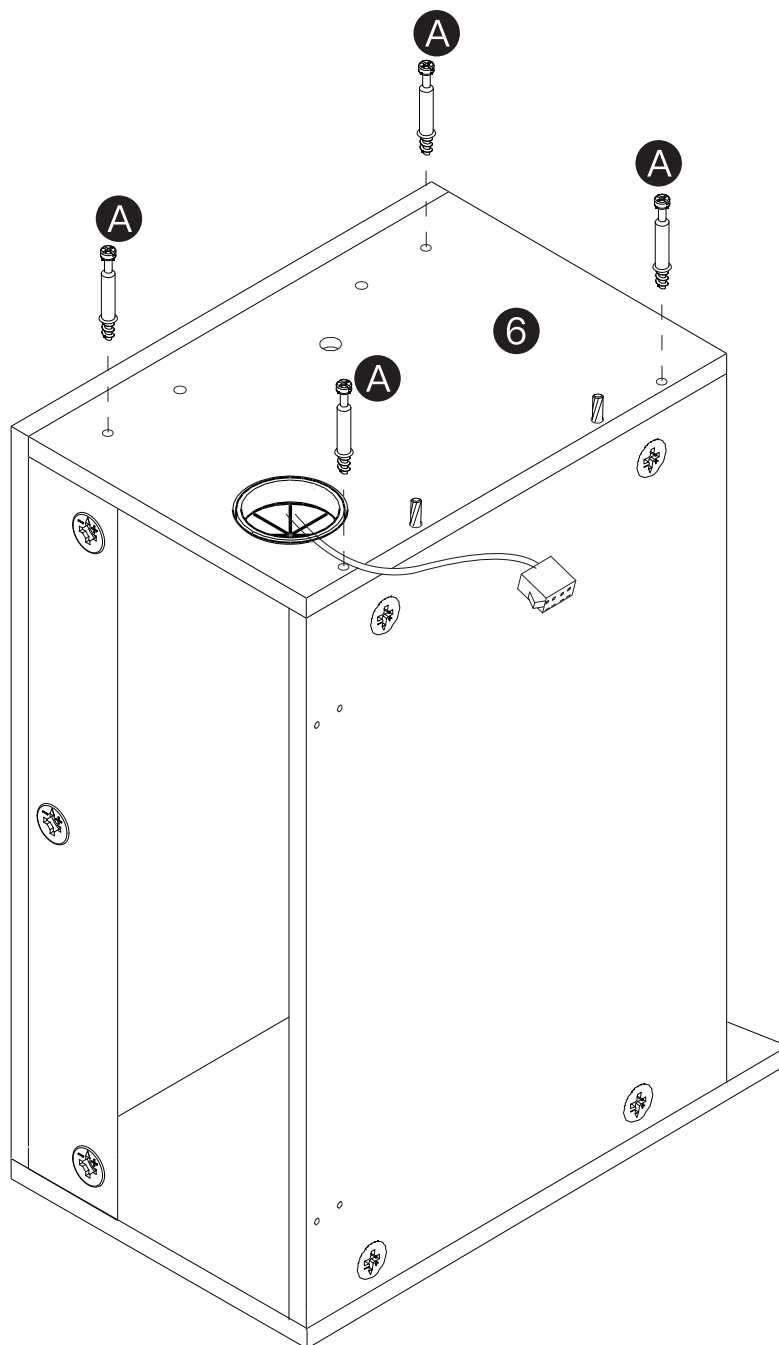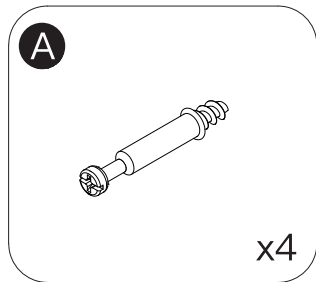





STEP 15

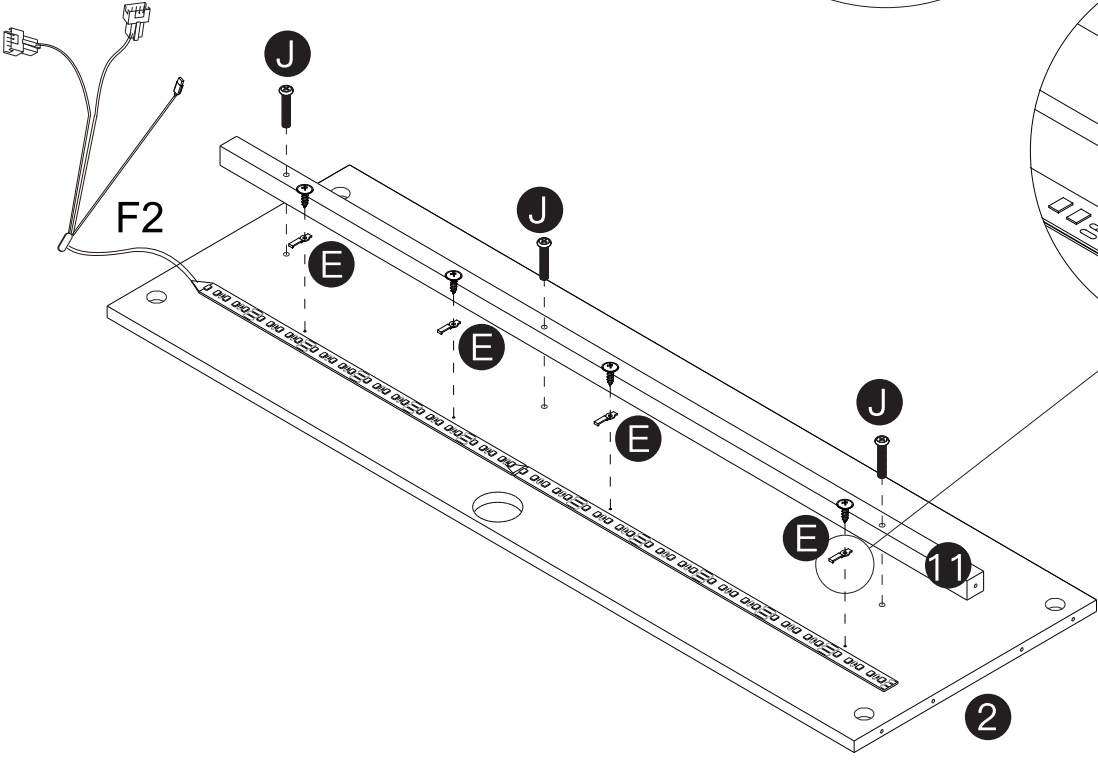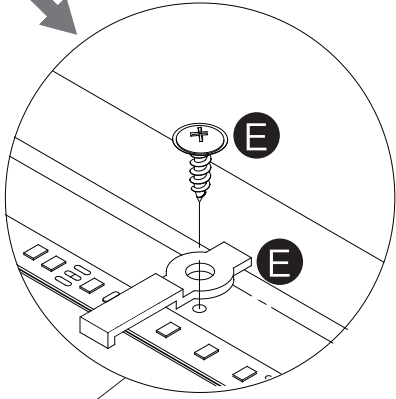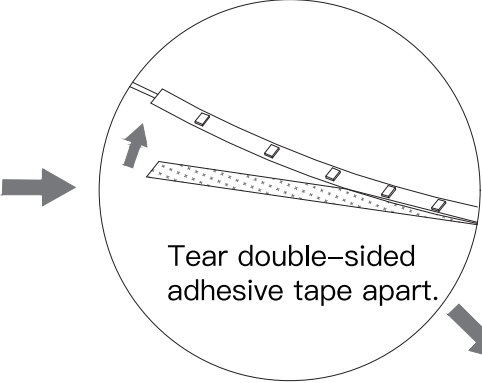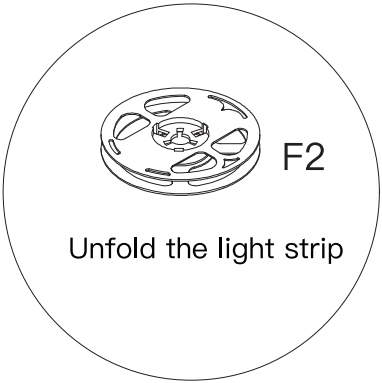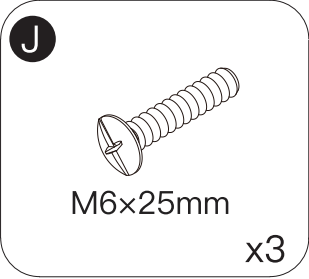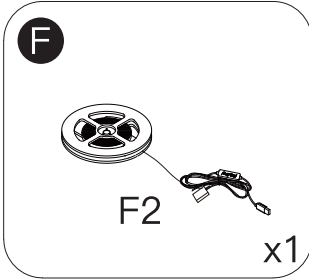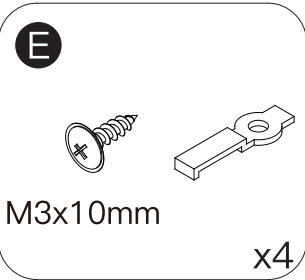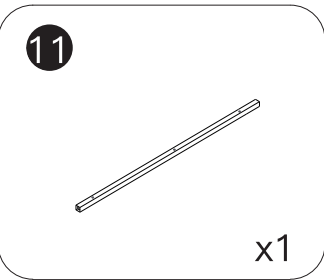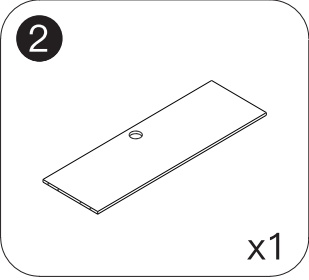





STEP 16

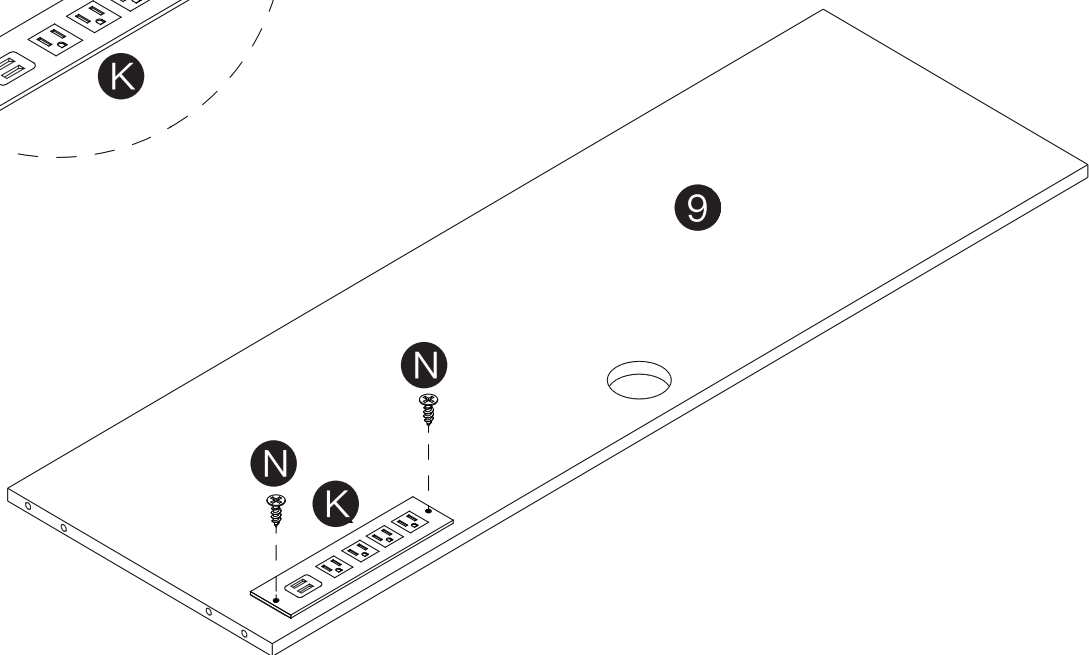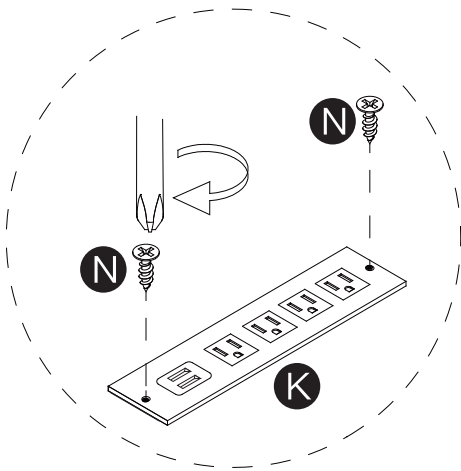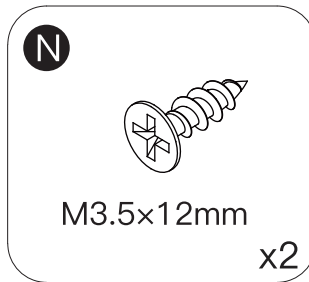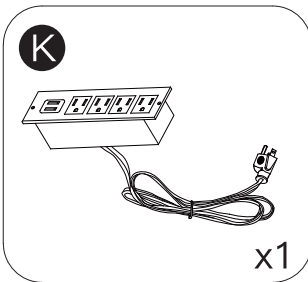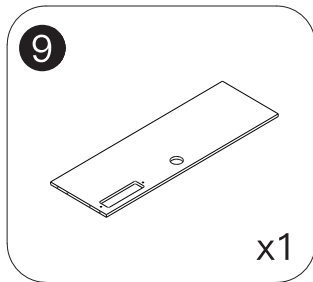





STEP 17

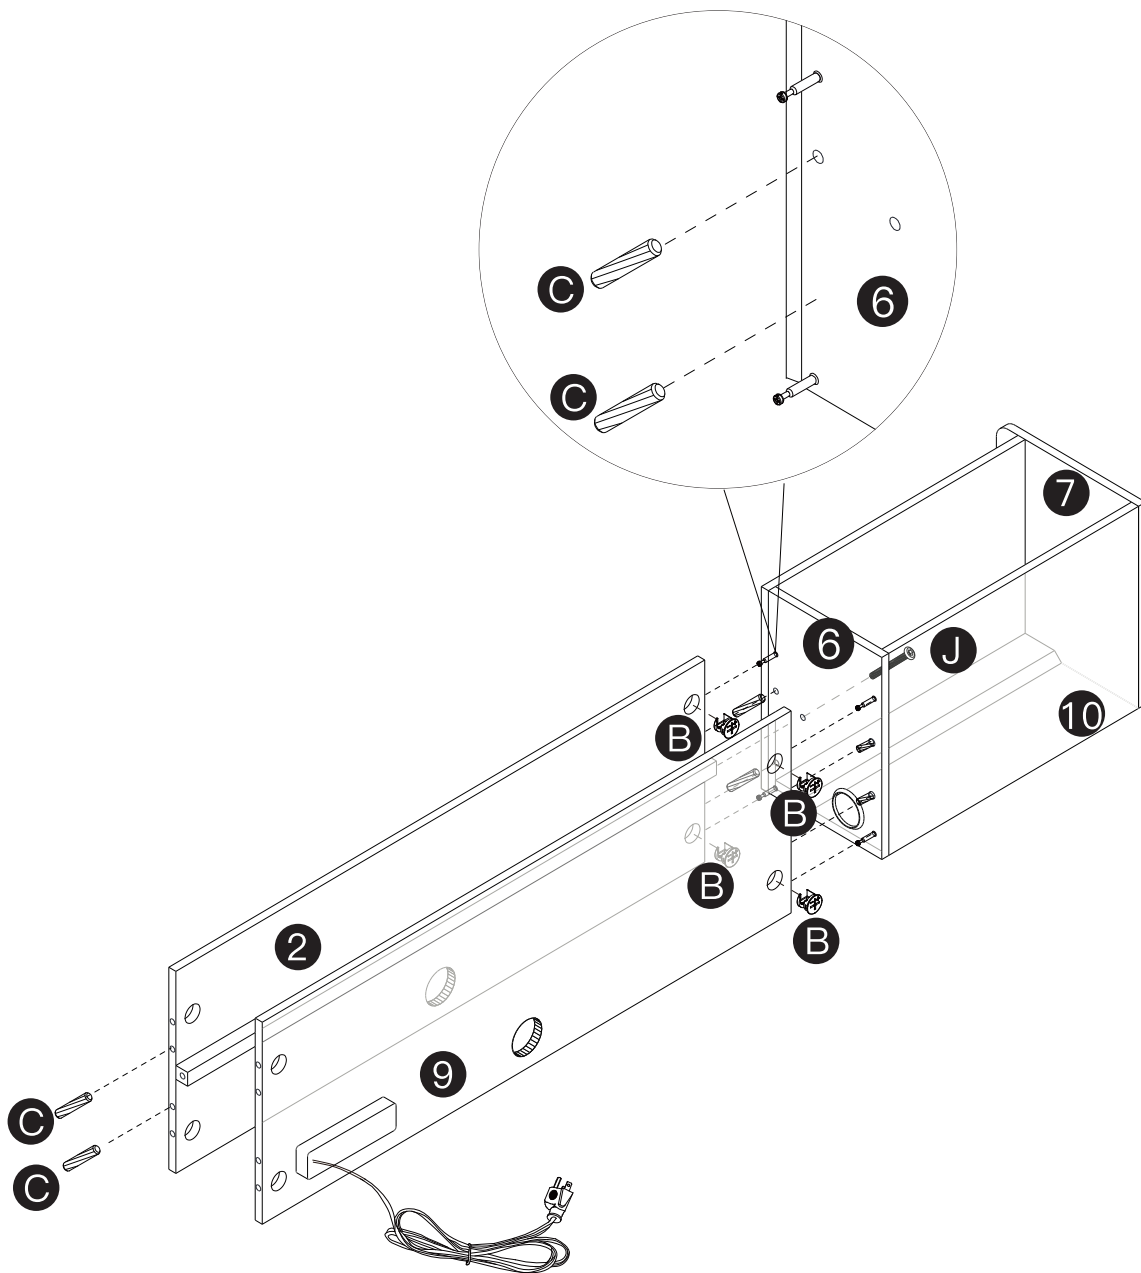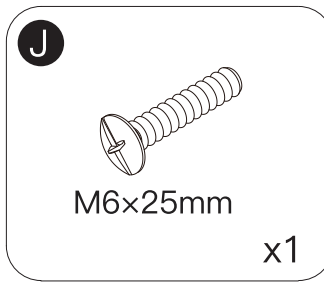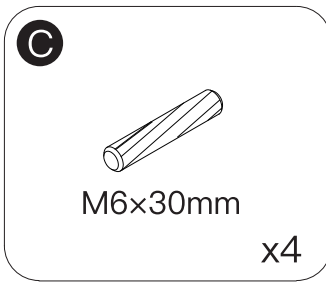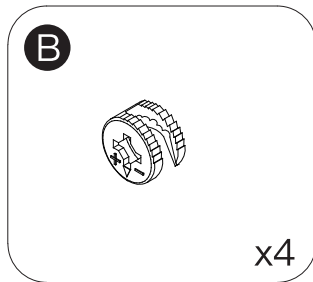




STEP 18

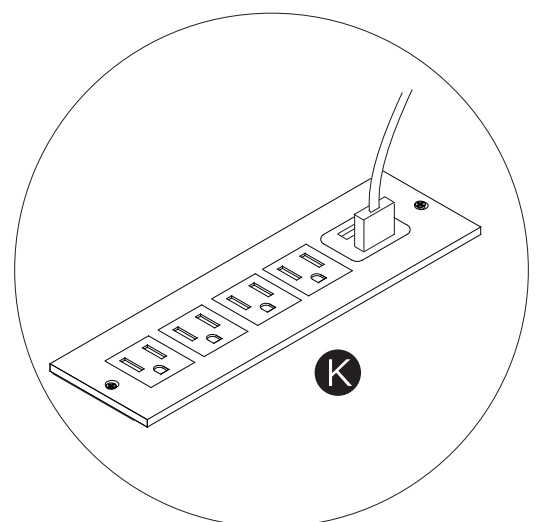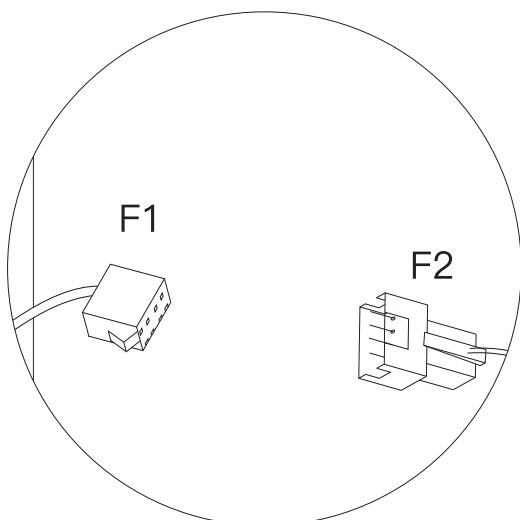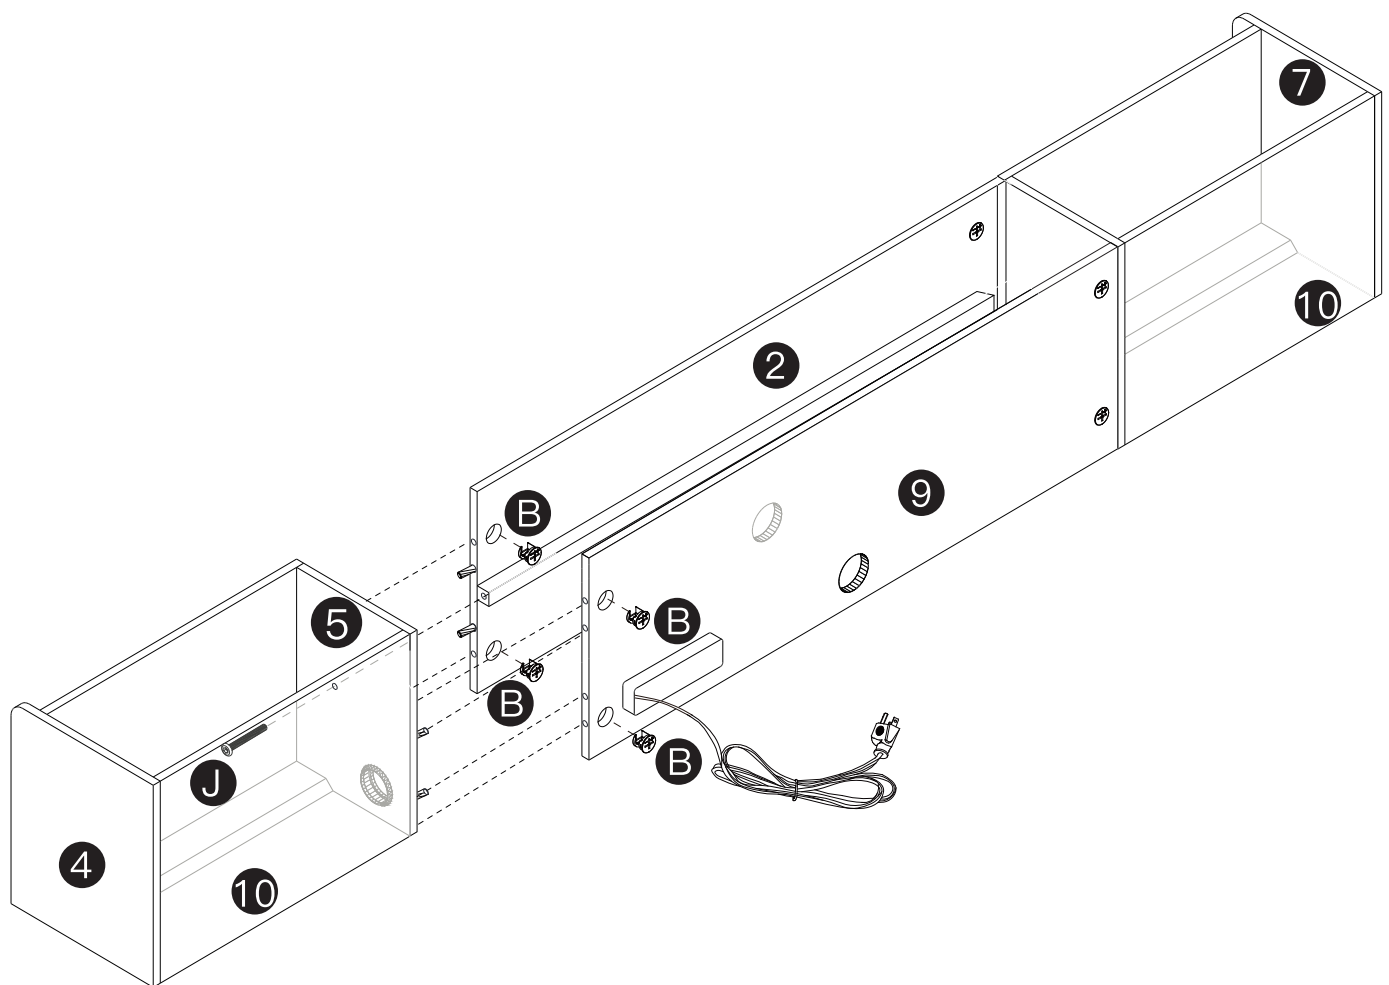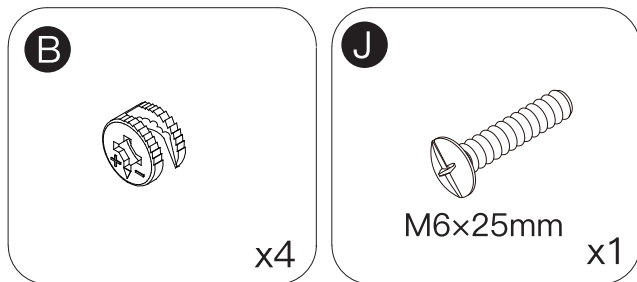


STEP 19

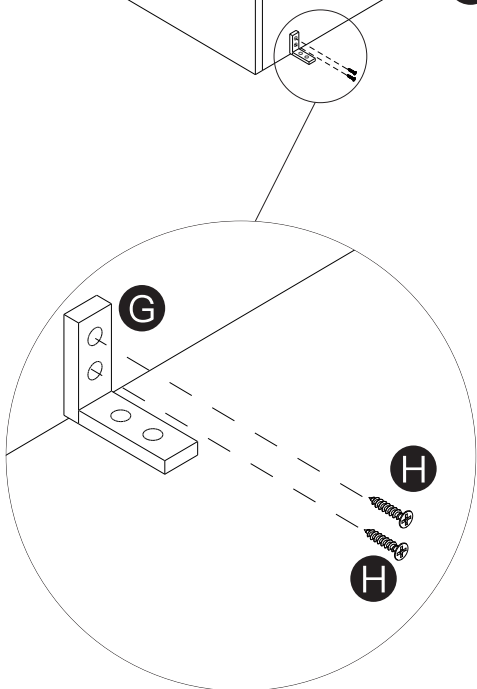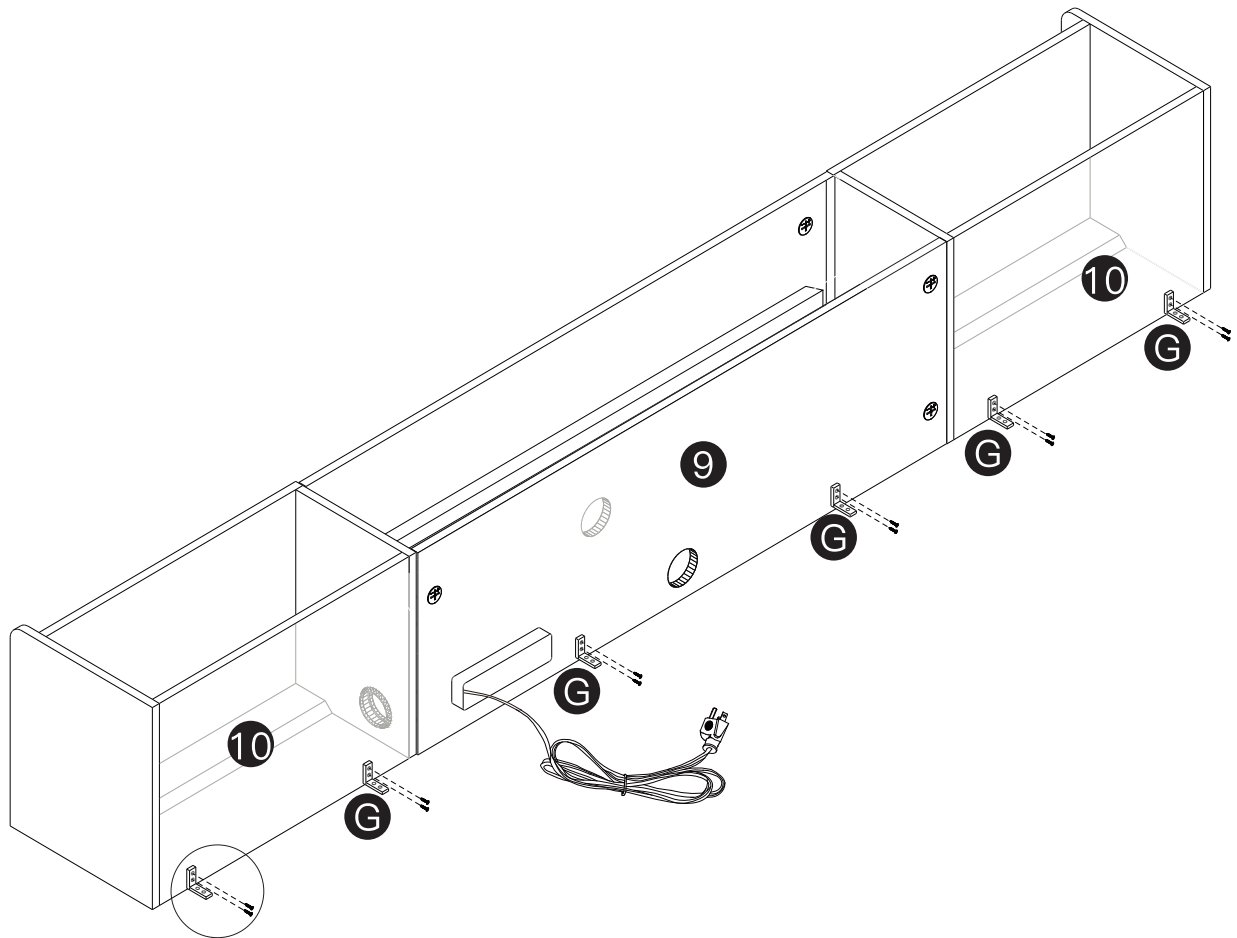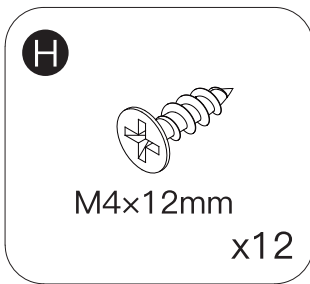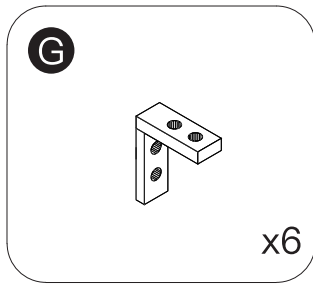

STEP 20

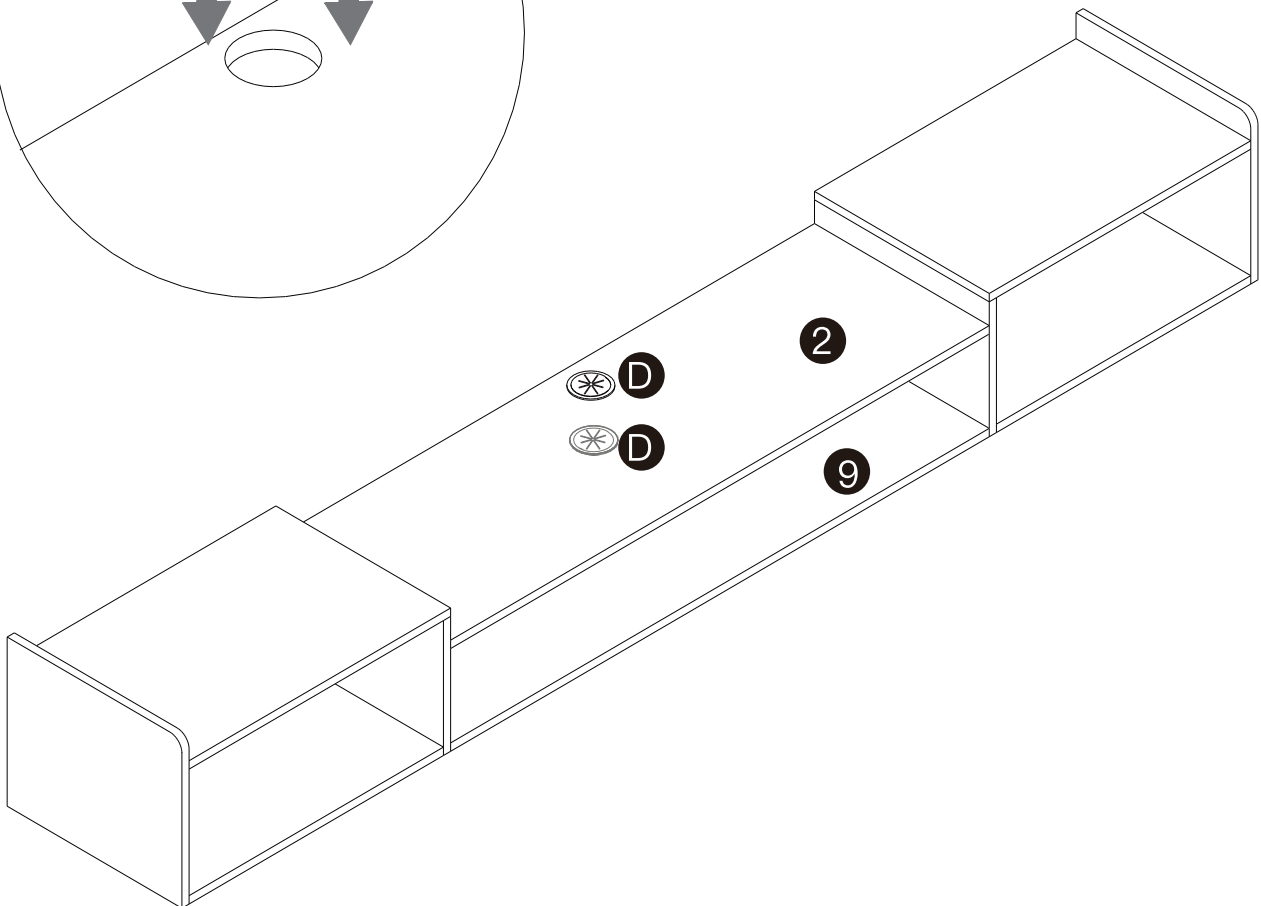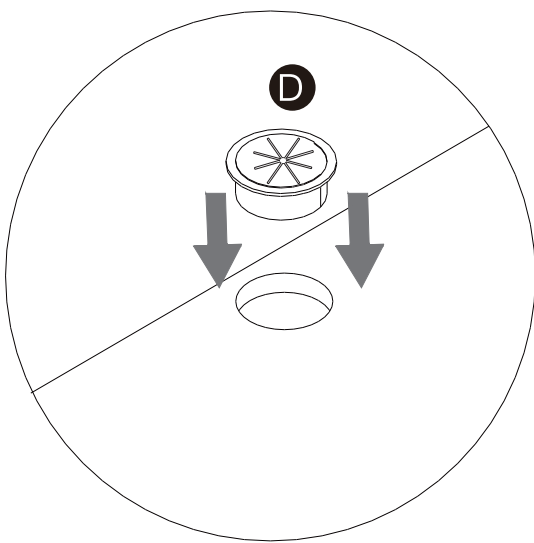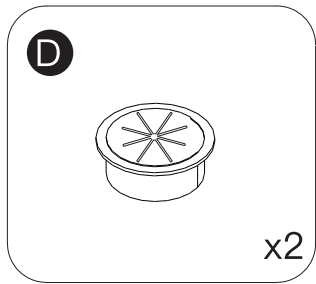


STEP 21

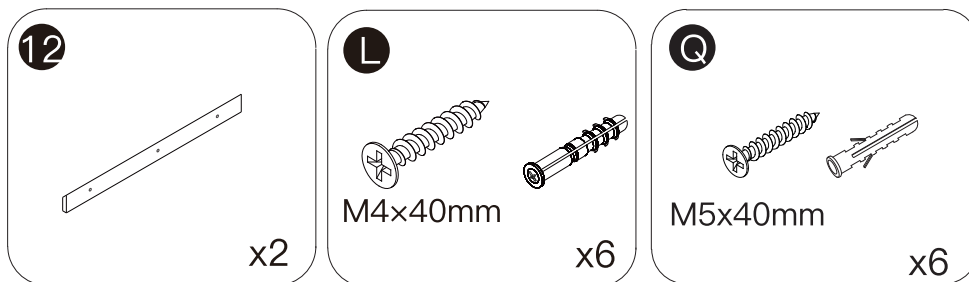


NOTICE:

(1) For the safety of you and your family, it is necessary to install Anti-Tip Device Kit.


(2) Please choose to install part **L** or **Q** based on the actual material of your wall. Part **L** is suitable for gypsum boards, while part **Q** is suitable for bricks or cement.

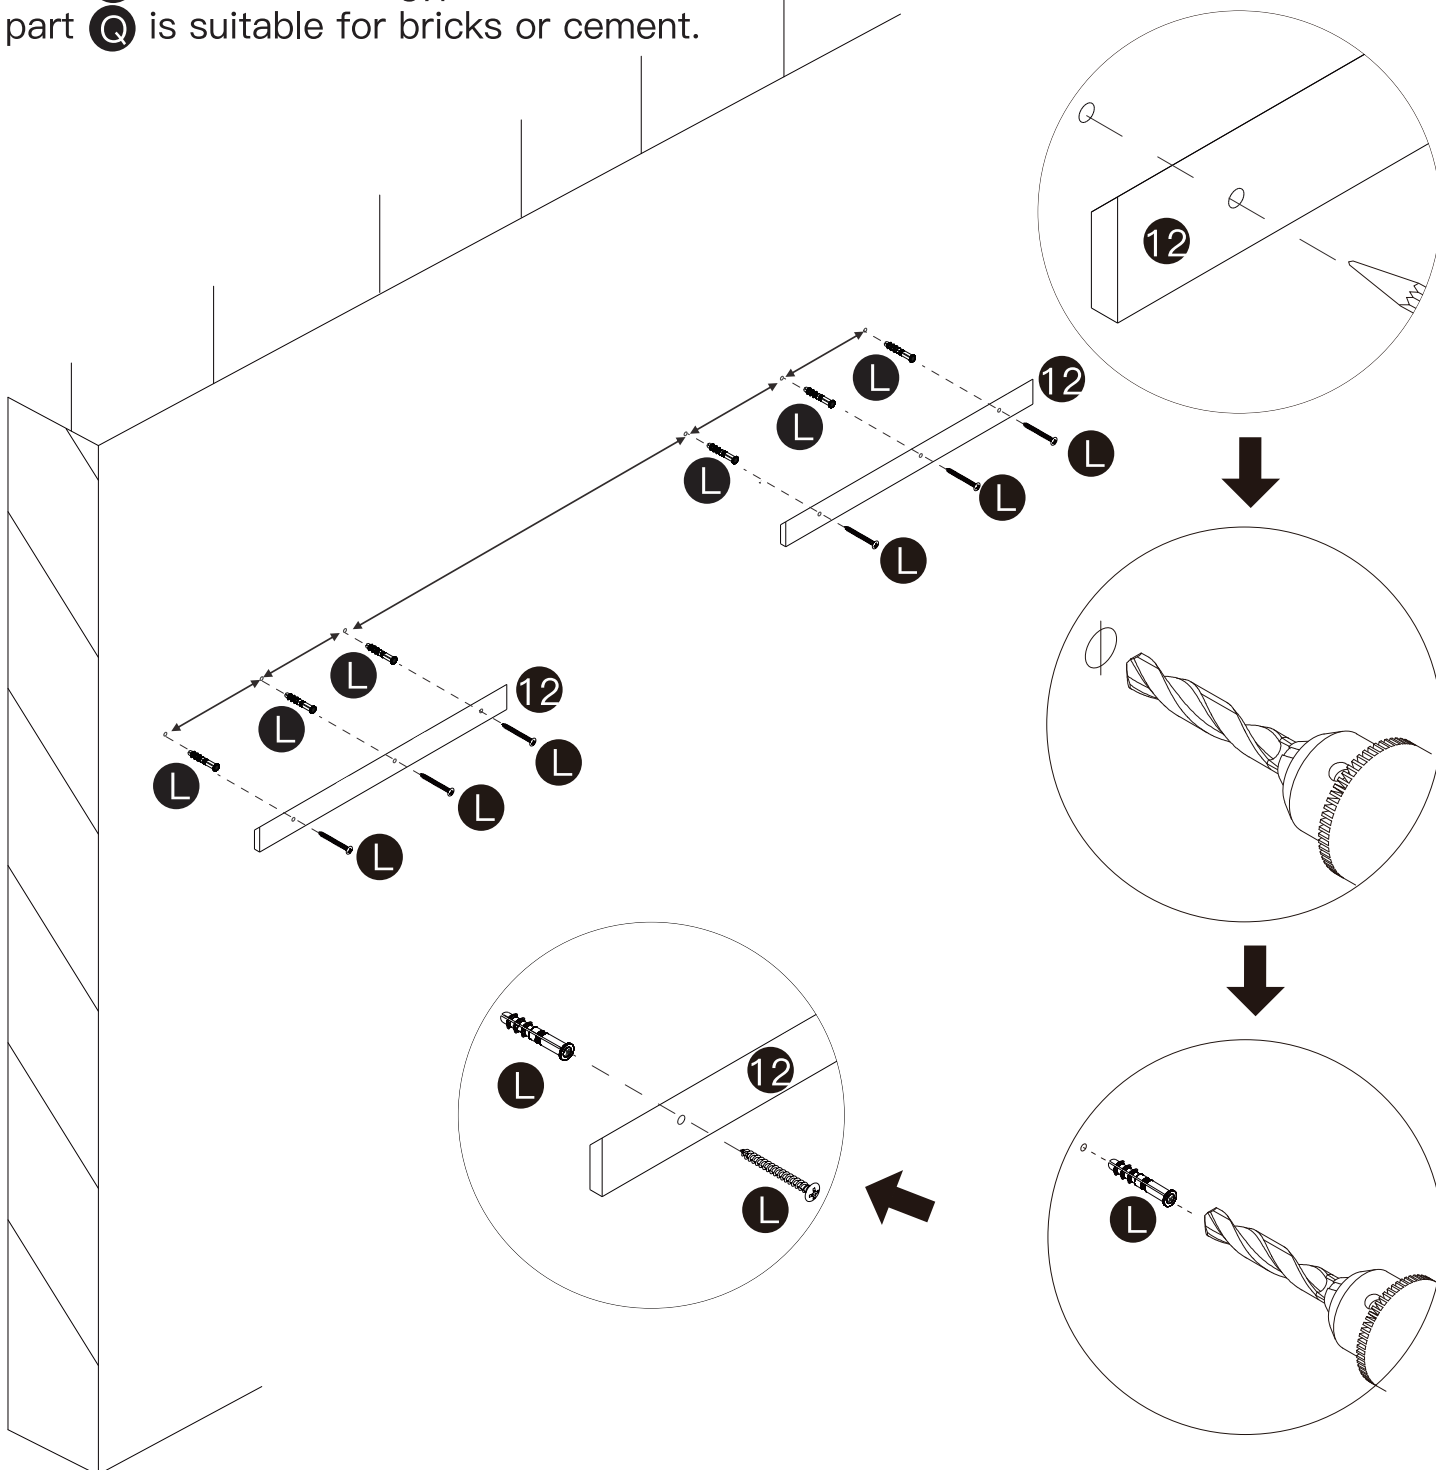

OR

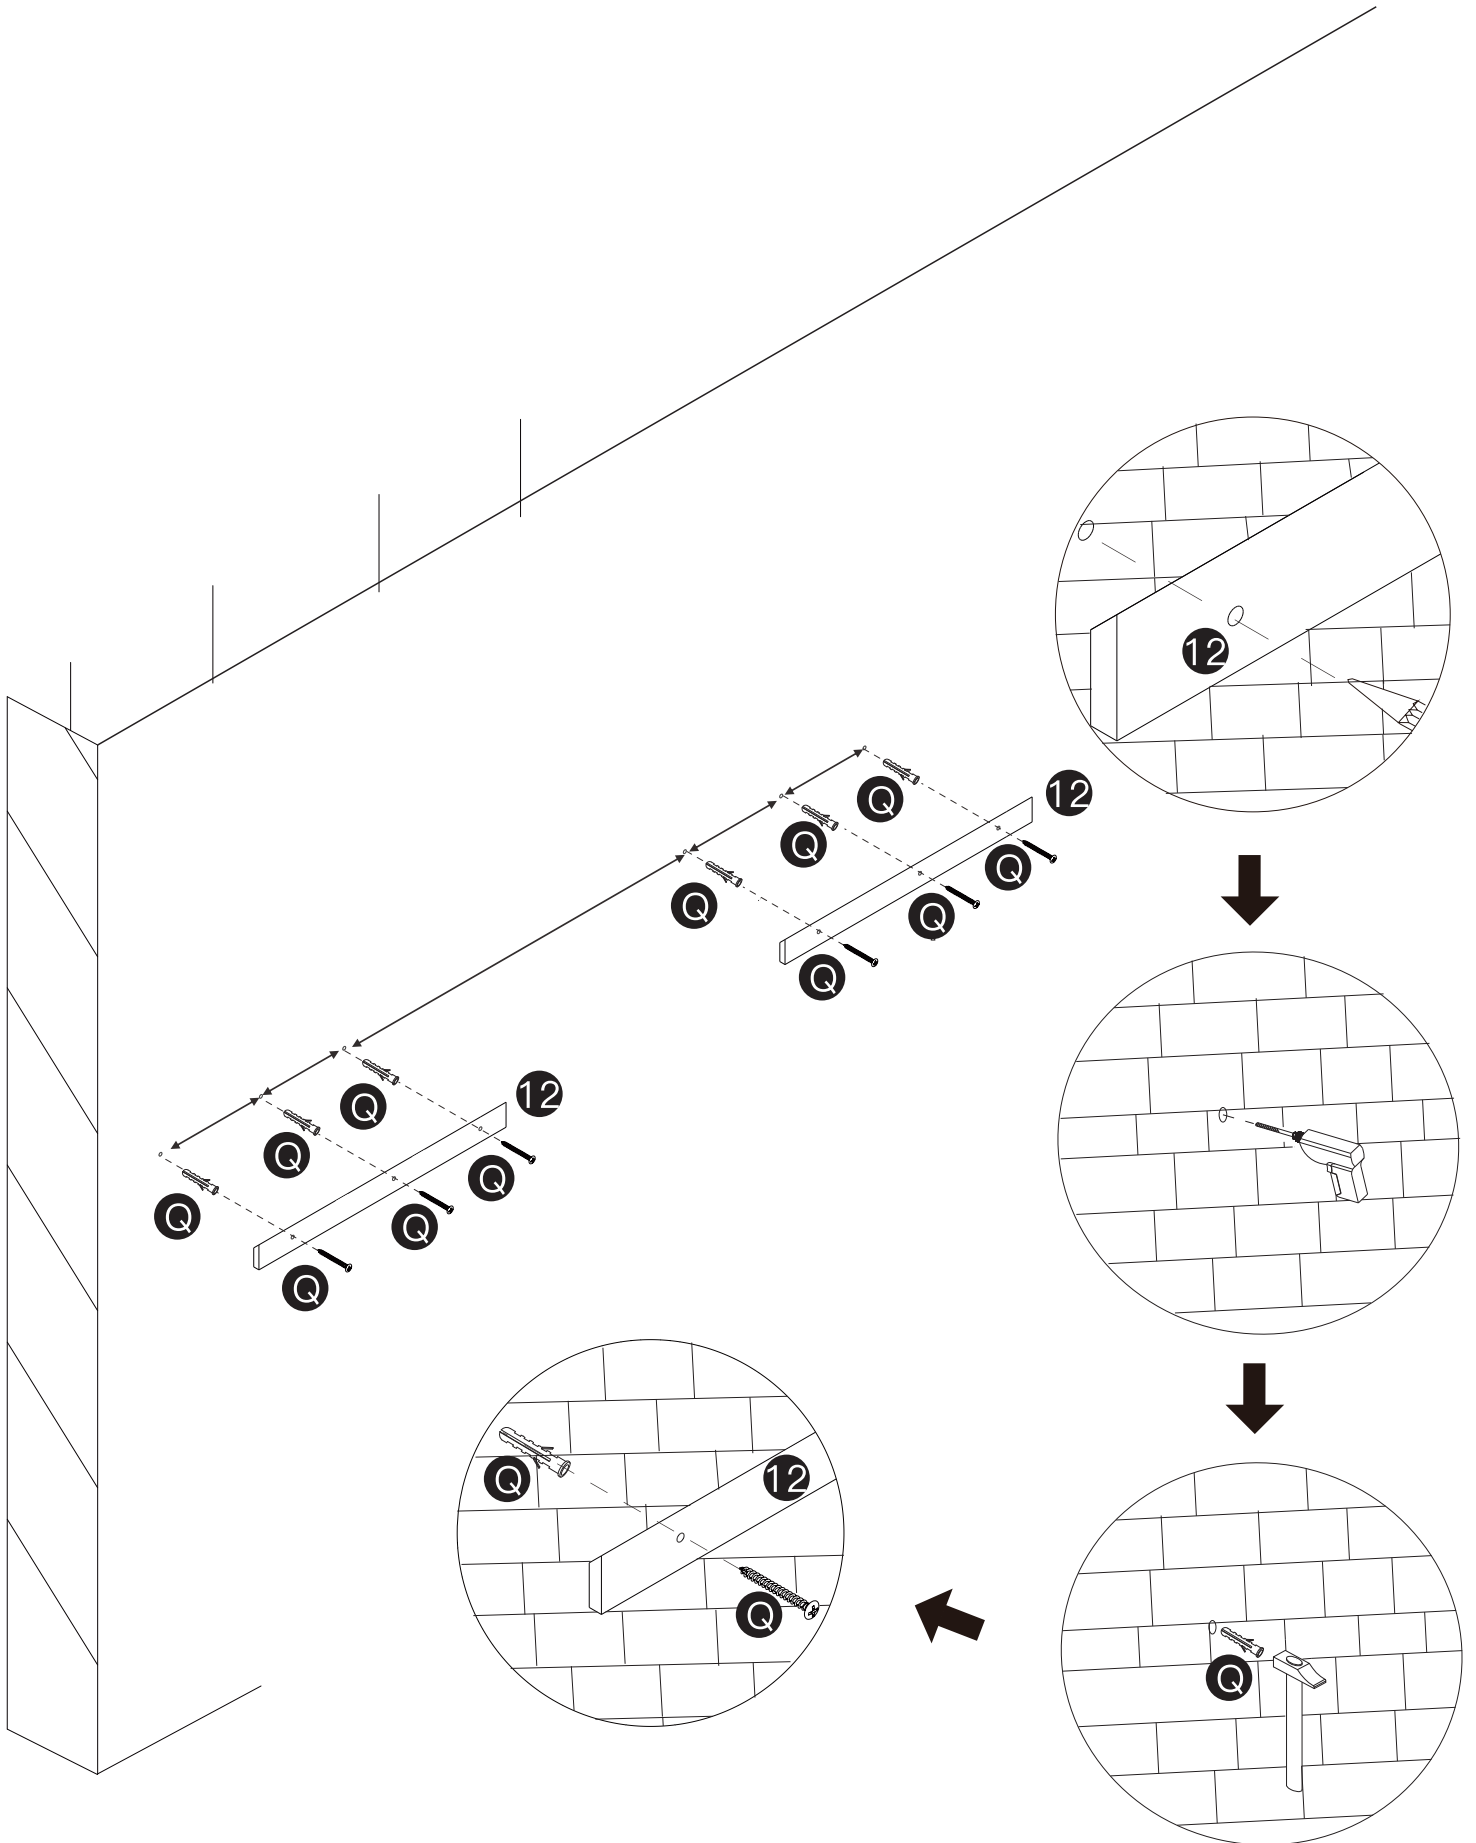

STEP 22

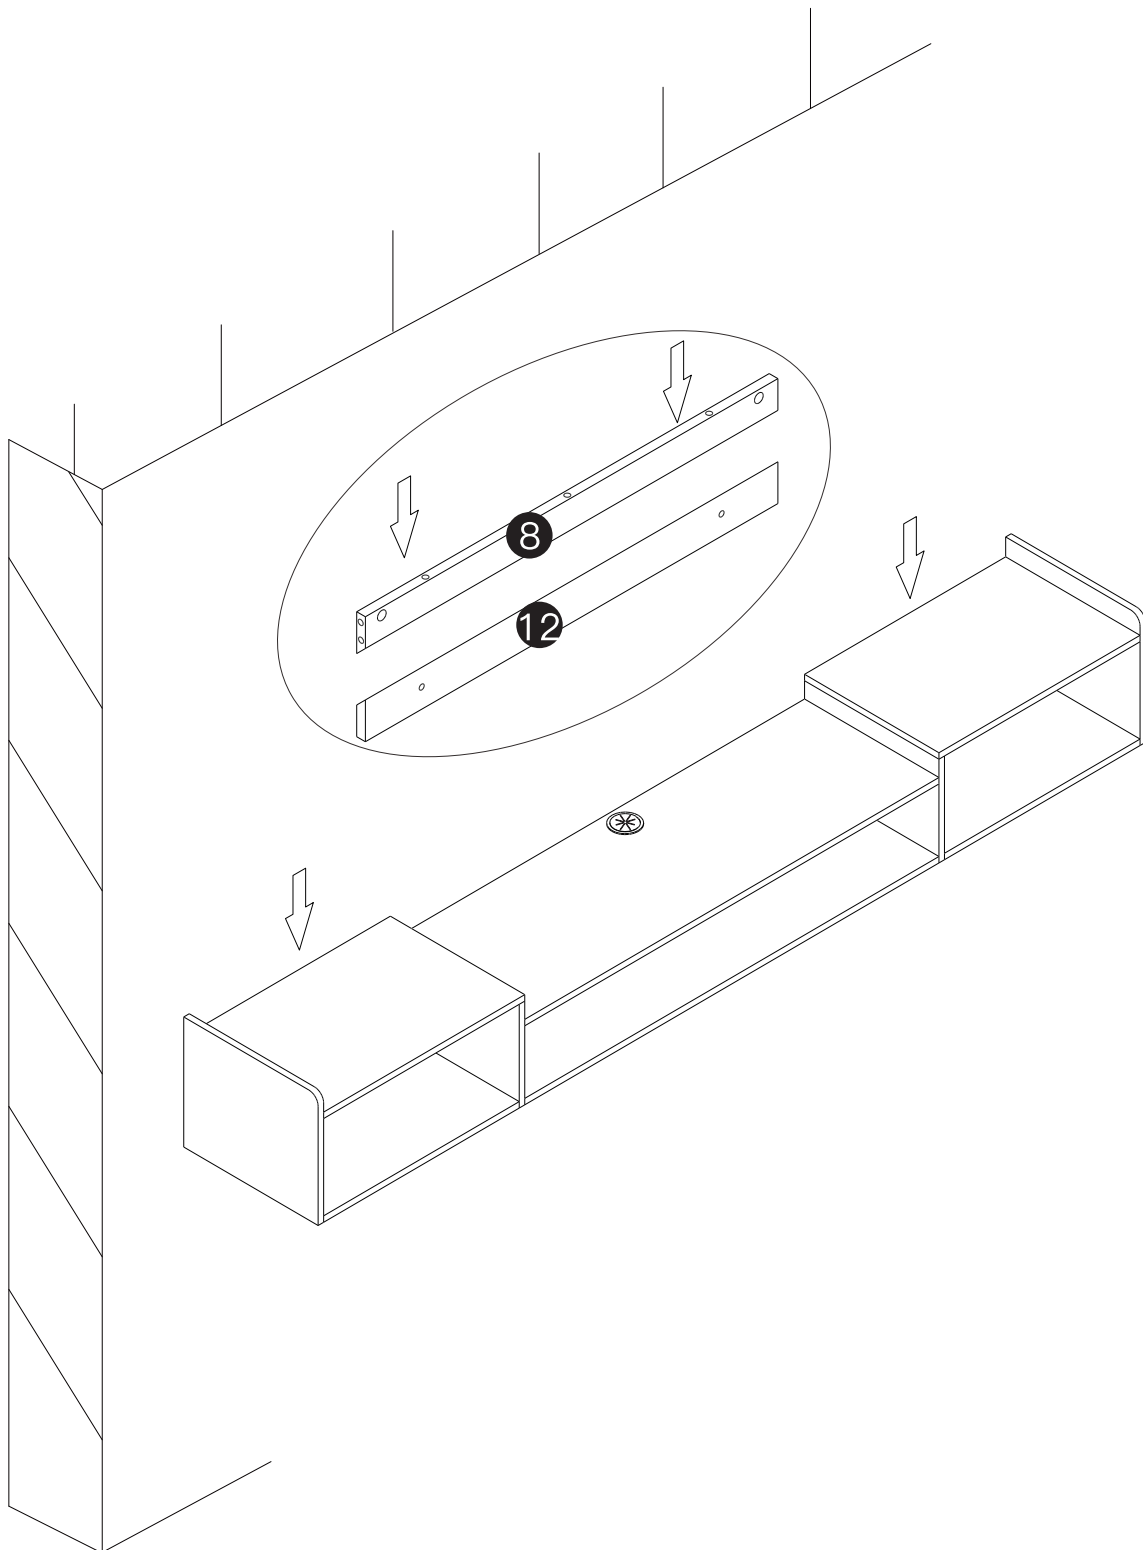

STEP 23

L



M4x40mm

x12

Q







M5x40mm


x12

NOTICE:

Please use the same parts as **Step 21**.

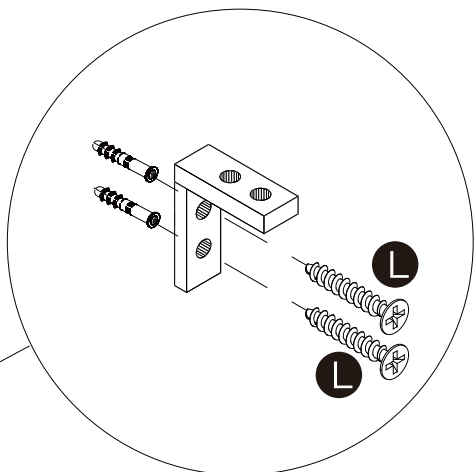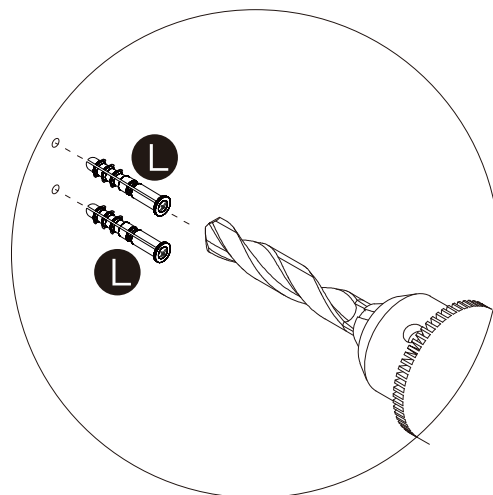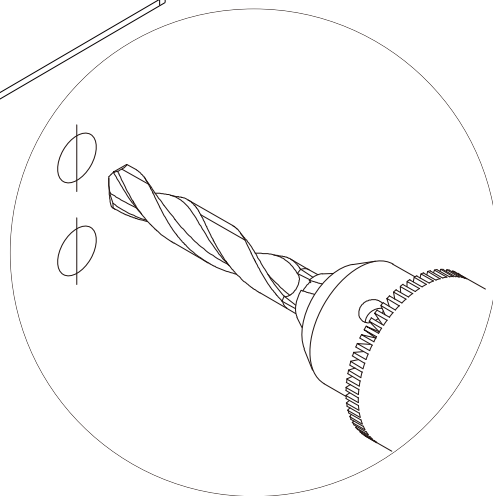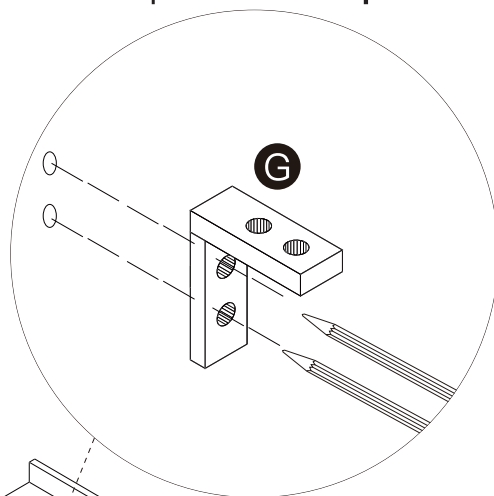

OR

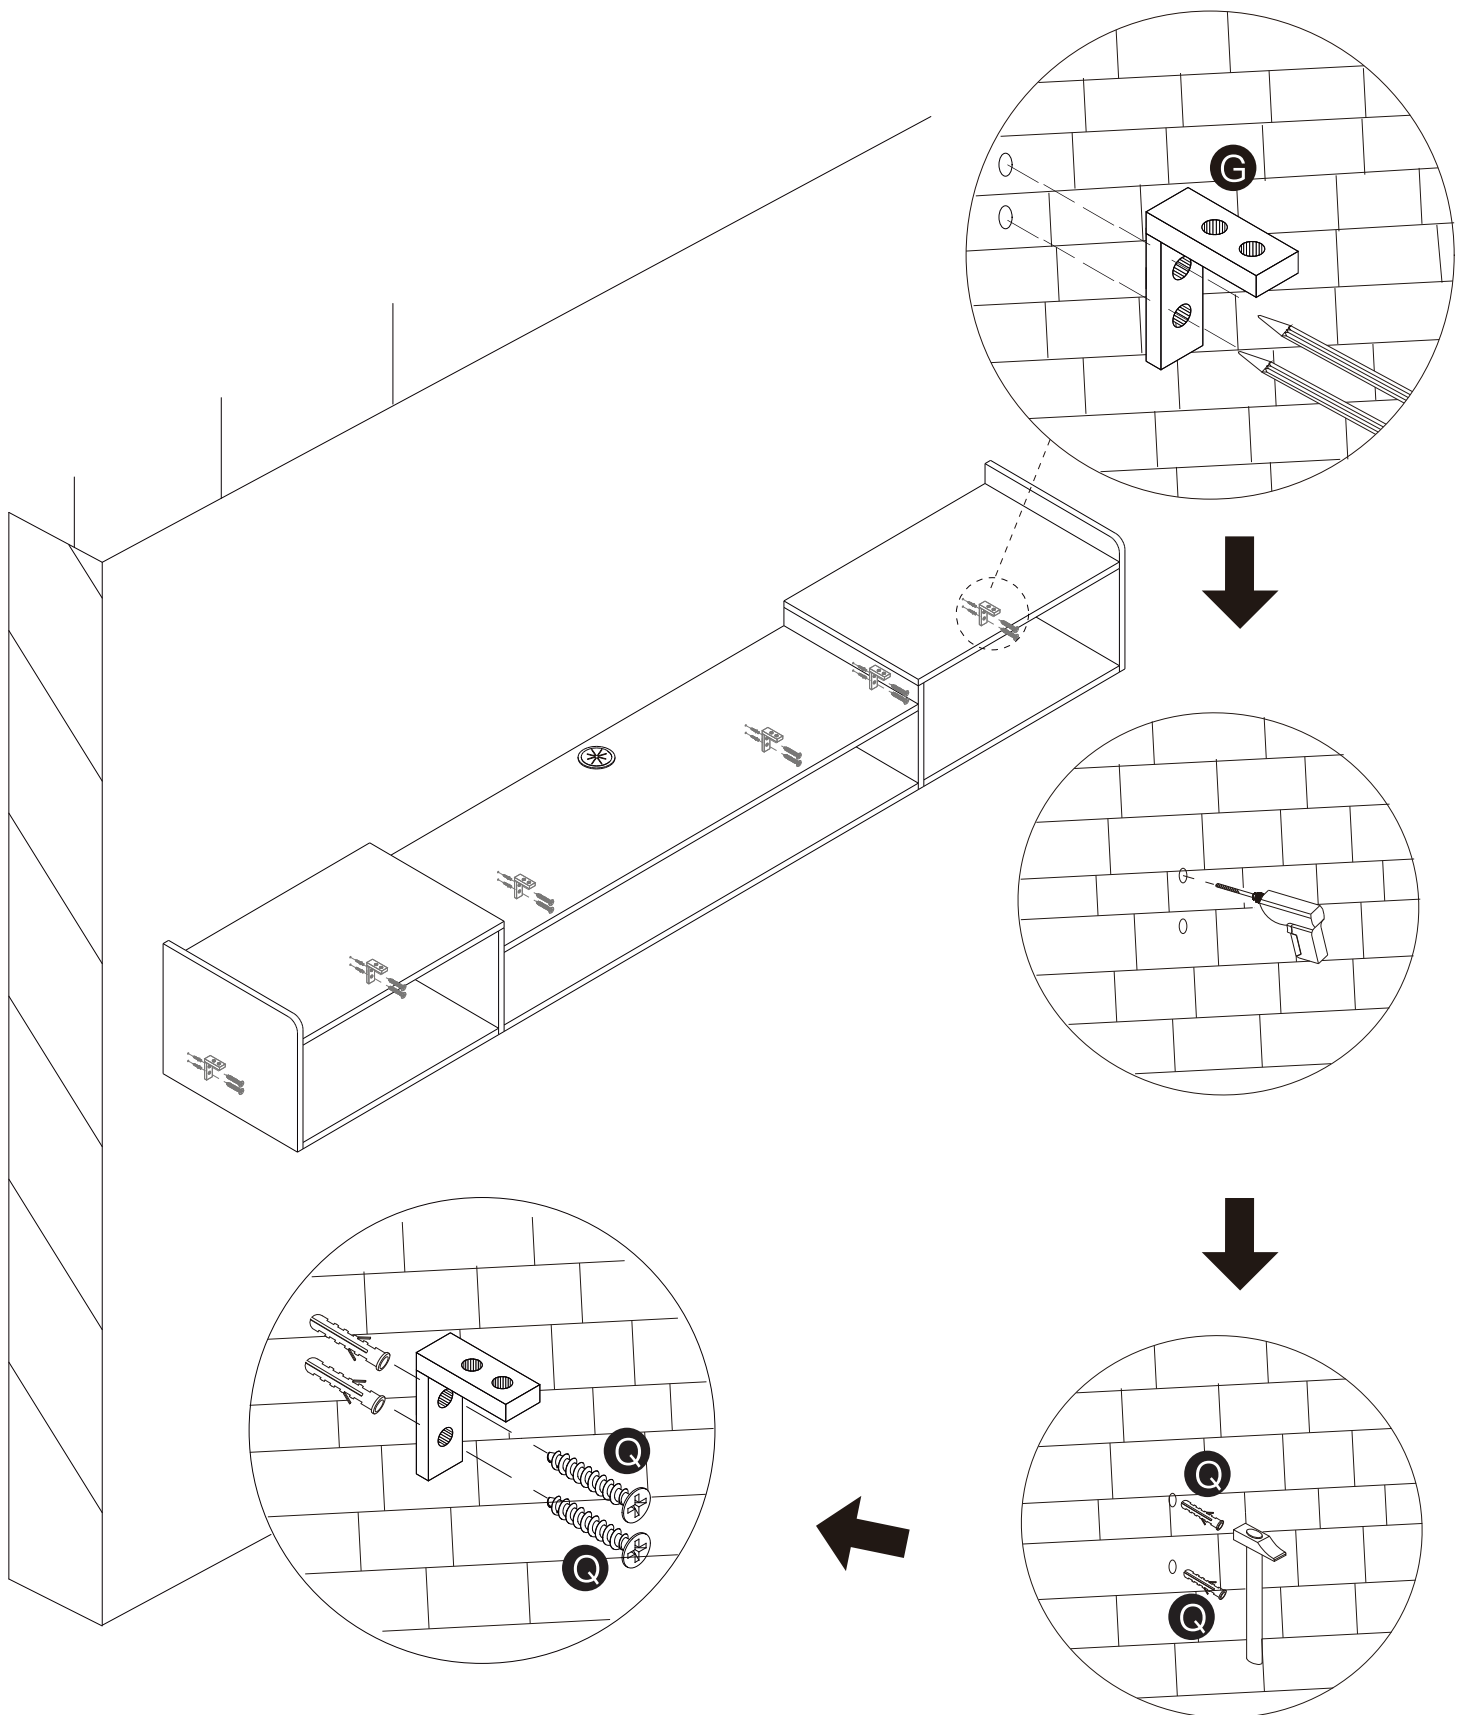

AFTERSALE SERVICE

Dear customer,

Thank you so much for purchasing the product from us, we really appreciate your support.

We are aimed to provide the best shopping experience to our customers. We also want to build a mutually beneficial relationship with our customers, and step further to make our brand both reliable, responsible and recommendable.

We hope that our products could meet your needs and expectations, please consider us again if you need more products for your home and kitchen.

The package would be out of our control during shipping, please contact us through your purchasing channel directly if there is anything wrong with the box or contents. We are always here offering you our service.

We will reply your messages within 24 hours, please kindly wait for the response from our professional service team.

Your comfort and contentment are of utmost importance.

Best Regards,
Customer Care Specialist