


ASSEMBLY INSTRUCTIONS


COFFEE TABLE

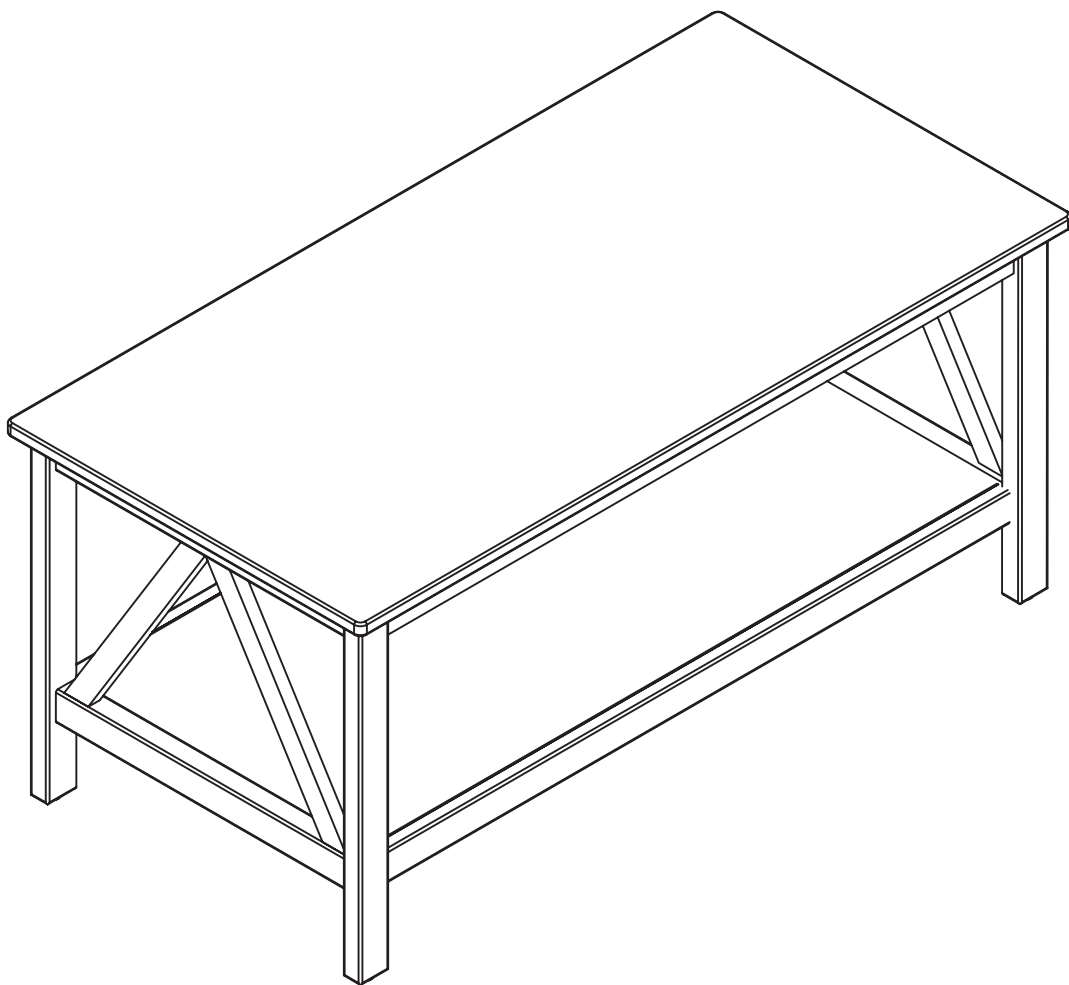

MADE IN CHINA

PARTS IDENTIFICATION






ITEM	DESCRIPTION	QTY
#1	TOP PANEL	01
#2	SIDE PANEL	02
#3	BOTTOM PANEL	01
#4	TOP RAIL	02

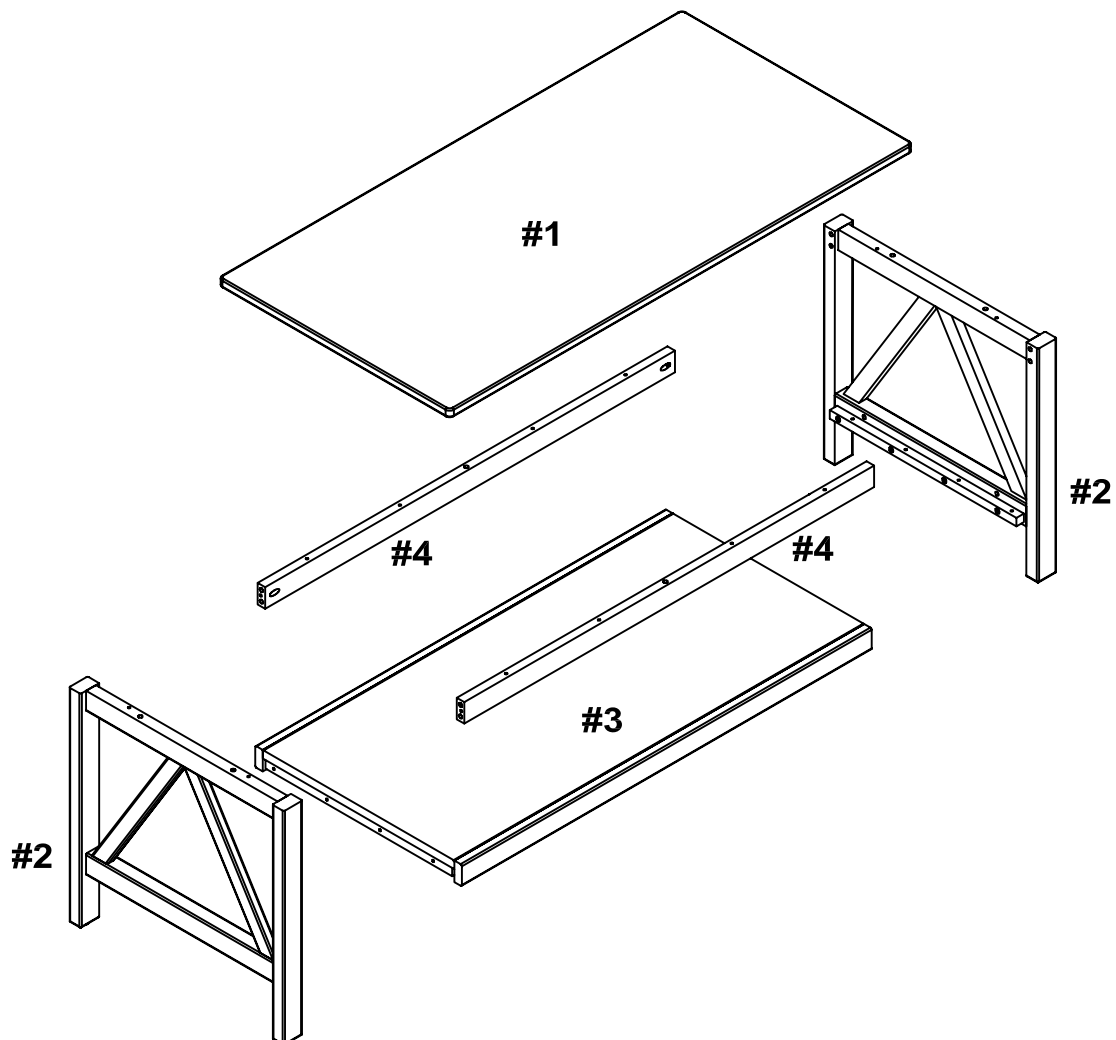

For ease of identification all parts are labeled to correspond to the Step number in which the part is used.

HARDWARE IDENTIFICATION

Please line up the hardware with the correct full size image to make sure you are installing the hardware correctly.

ITEM	PICTURE	DESCRIPTION	QTY
A	  (Ø4x30mm) Full Size	SCREW	12
B	  (Ø4x45mm) Full Size	SCREW	12
C	 (Ø8x30mm) Not to Scale	WOODEN DOWEL	18

Tools required





Long screwdriver



Small
hammer

STEP 1.

knocking the wooden dowels tight by hammer

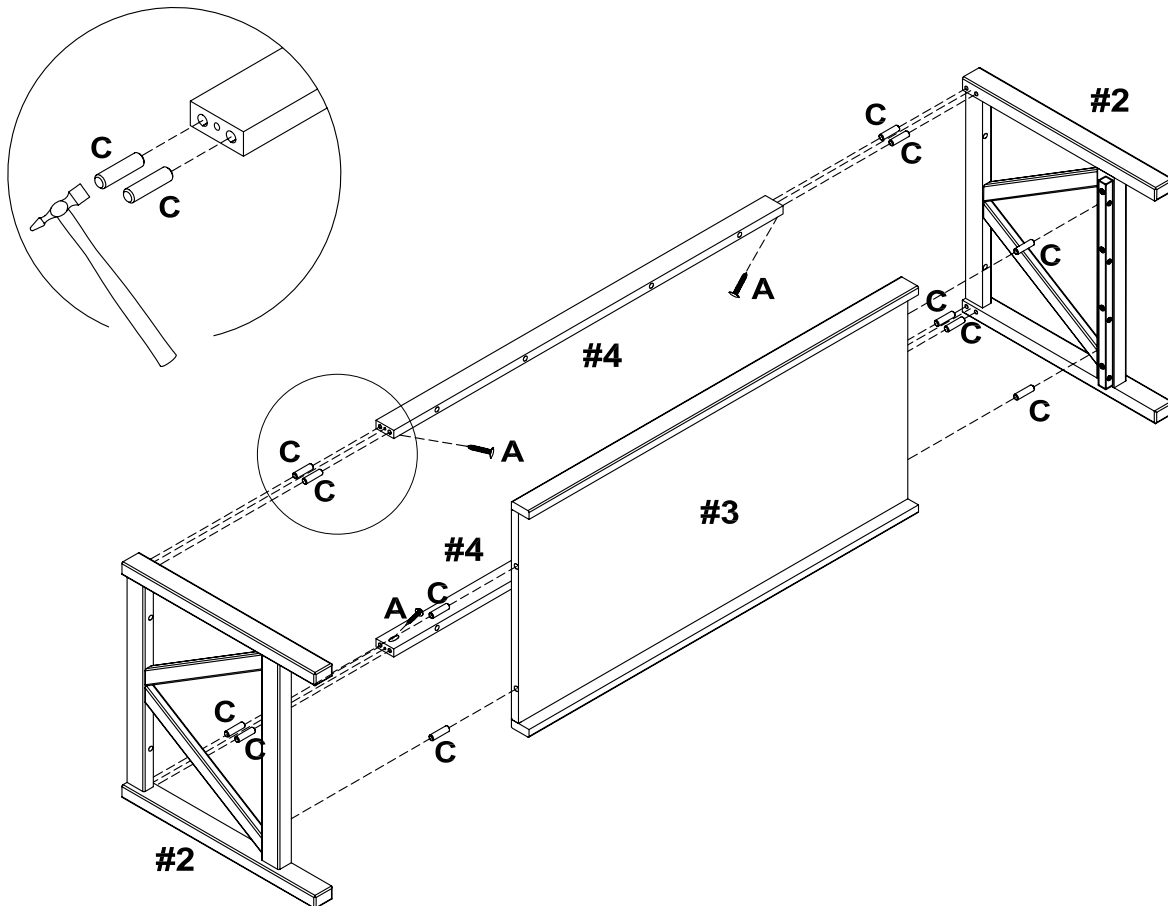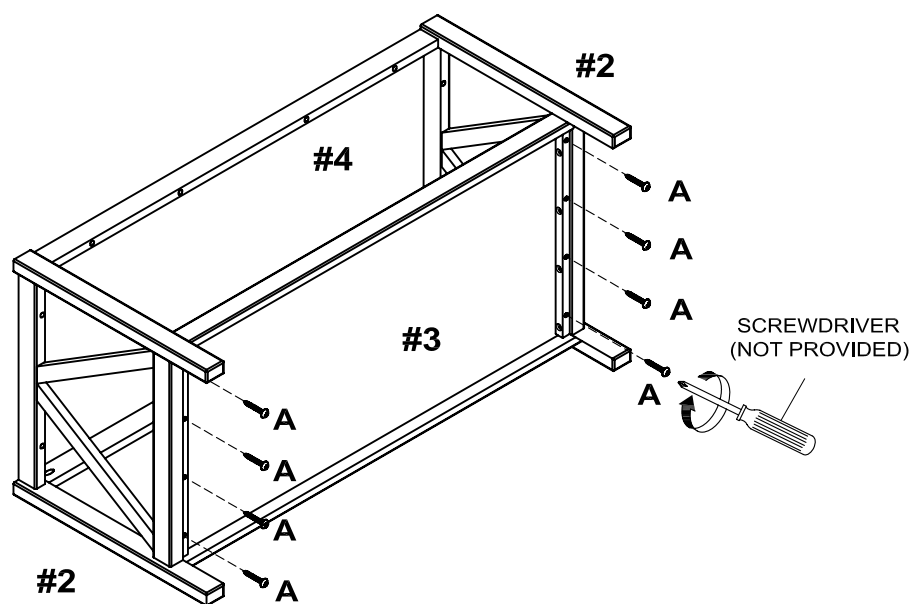**STEP 2.****IMPORTANT:**

1. DO NOT OVER TIGHTEN SCREWS TO AVOID STRIPPING.

STEP 3.

knocking the wooden dowels tight by hammer

