


INSTALLATION MANUAL

SHOE(STORAGE) CABINET

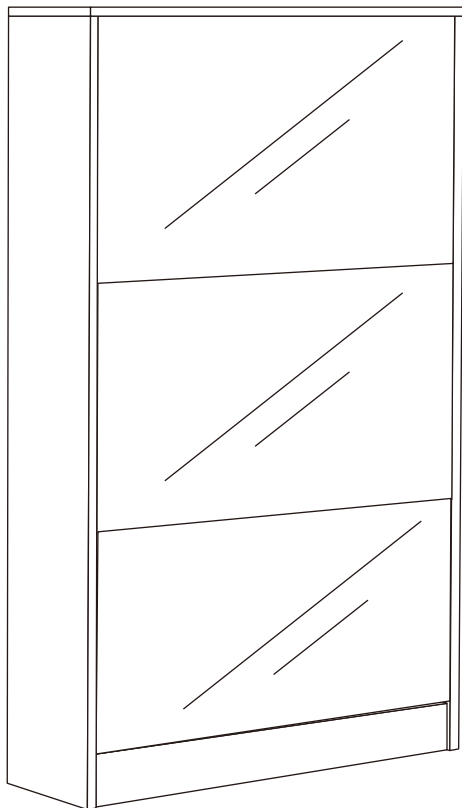

WARNING

**INSTALLATION REQUIRES TWO ADULTS,
KEEP AWAY FROM CHILDREN TO
PREVENT ANY INJURY.**

Tools Required



updated on 07/26/2024

Wooden mirror shoes cabinet


Two adults must be required. Before you begin, please follow Assembly Instruction step by step.

CAUTION:









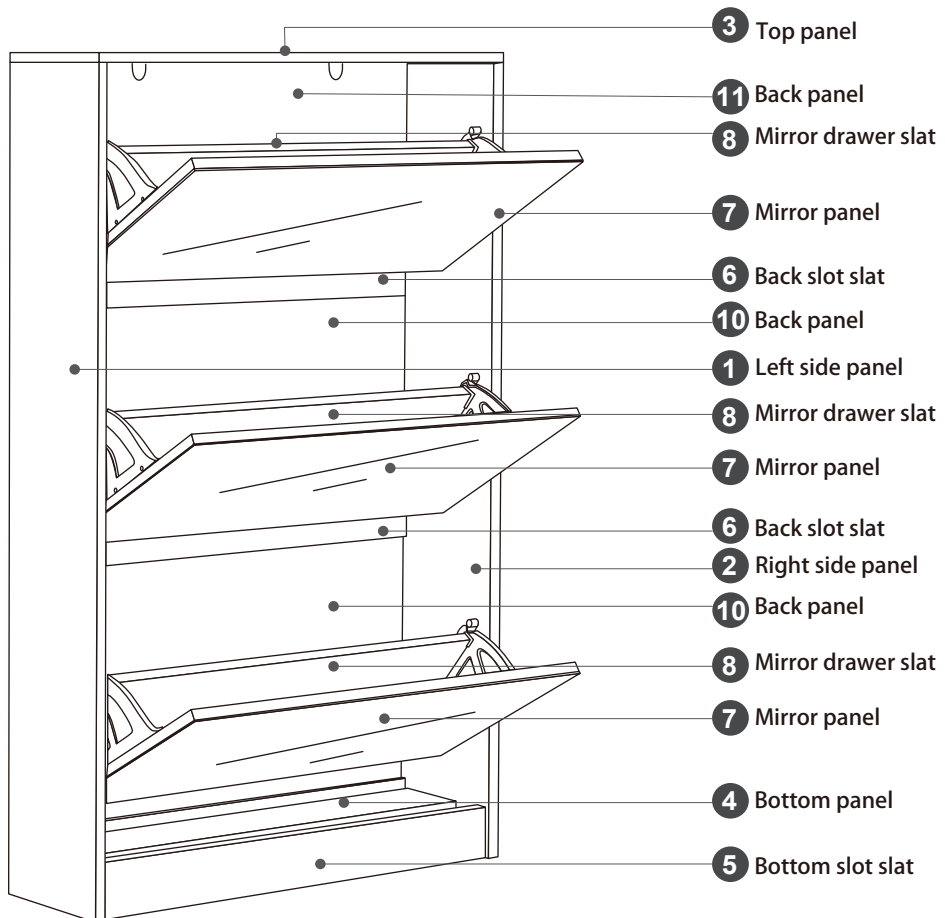


This unit must be fixed to a solid wall by falling prevention screws.
Failure to do so may result in a risk of the cabinet falling over and possible injury/damage to persons or property.

Board Identification














Not Actual Size



MDF Panel parts

 1039*196*15mm 1 Left side panel 1PC	 1039*196 *15mm 2 Right side panel 1PC	 631*198*15mm 3 Top panel 1PC
 600*97*15mm 4 Bottom panel 1PC	 600*67*12mm 5 Bottom slot slat 1PC	 600*76*12mm 6 Back slot slat 2PCS
 595*319*15mm 7 Mirror panel 3PCS	 585*128*12mm 8 Mirror drawer slat 3PCS	 585*47*12mm 9 Mirror drawer slat 3PCS
 606*300*5mm 10 Back panel 2PCS	 606*300*5mm 11 Back panel 1PC	

Hardware fitting


 Left A 3PCS	 Right B 3PCS	 C 6PCS	 D 6PCS	 Ø 3.5x10mm E 18PCS
 Ø 3.5x14mm F 8PCS	 Ø 3.5x16mm G 18PCS	 H 18PCS	 I 18PCS	 J 4PCS
 K 2PCS	 L 2PCS	 Ø 3.5x25mm M 2PCS		

INSTALLATION STEPS


Please read the instructions carefully before assembling the cabinet.

Two adults are required for assembly of this product on a clean, flat surface instead of a rough surface.

STEP 1 | Assemble mirror drawer

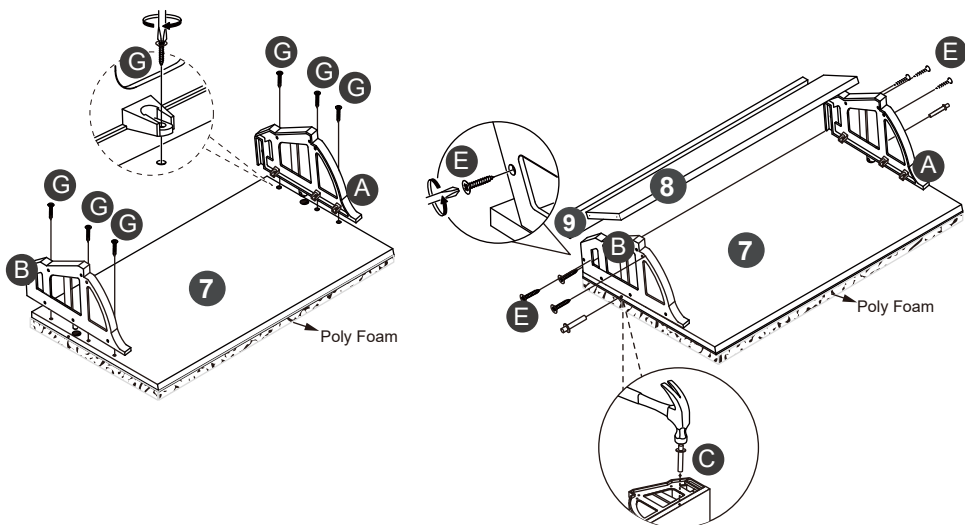


STEP 2 | Screw on the side panels

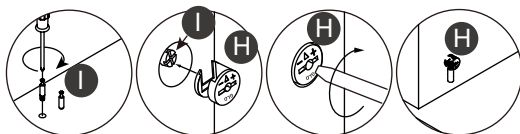


Attention:

Put **H** into the hole, turn **H** to lock **I**.

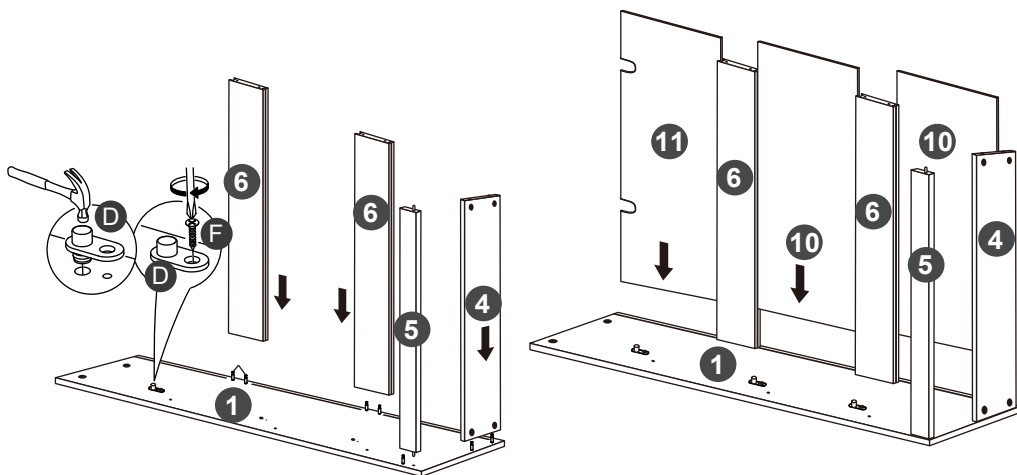


STEP 3 | Assemble the cabinet frame

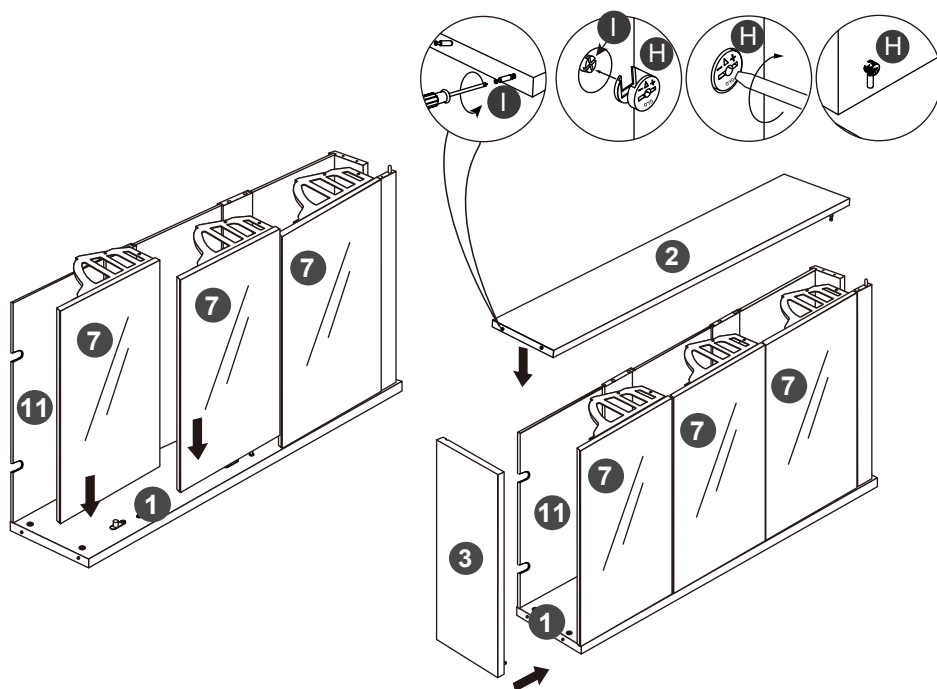

STEP 5 | Lift the shoe cabinet and straighten it

ATTENTION


Place the installed shoe cabinet flat on the ground then raise it up using two people. **Mirror** must on the top when you raise it up. Do not let the moveable door panel fall off.

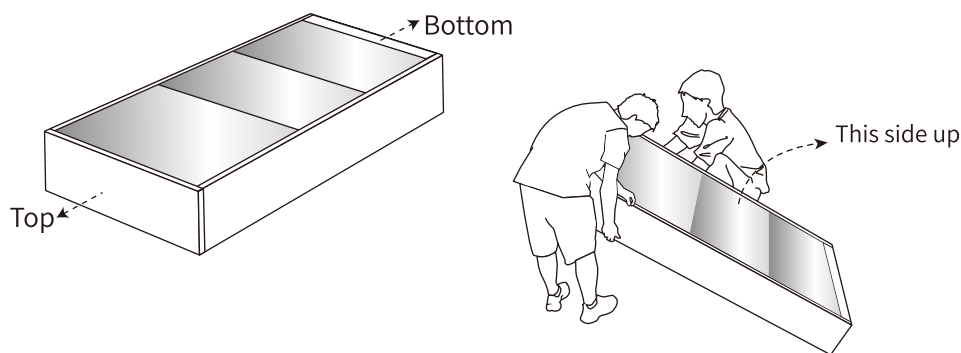



STEP 7 | Insert the anti-falling screws.

⚠ WARNING

To reduce the risk of furniture Tip over"
ALWAYS install anti-tip device provided
-NEVER allow children to stand,
climb or hang on drawers.

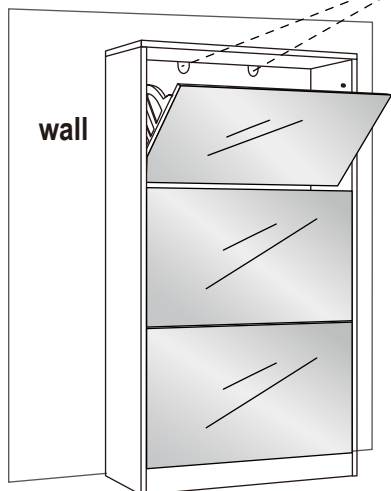


STEP 1

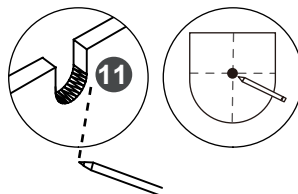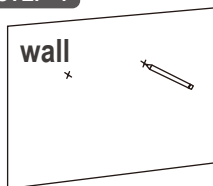



Put the cabinet in an appropriate position, and mark the center of the hole on the cabinet, a total of 2 places.

STEP 2



According to the 2 holes drawn, Put the rubber plug **J** into the wall.

STEP 3

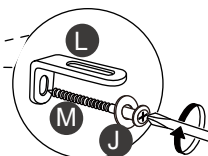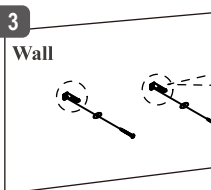

Screw **L** into the top two holes in the wall.

STEP 4

Move the cabinet back to the position of the drawing points, and align to holes.

wall

