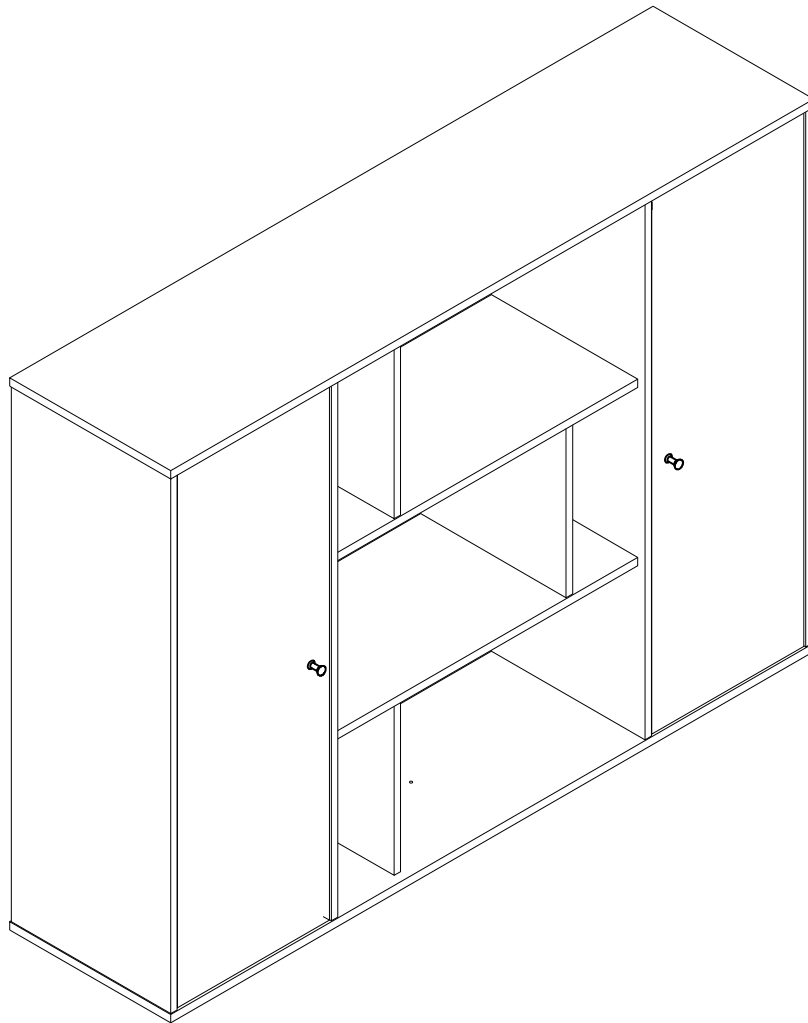




32Cabinet

ASSEMBLY INSTRUCTIONS

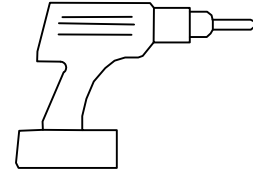
INSTALLATION TIPS



- Please read the instructions carefully before installation.
- After reading, keep them properly for future use.


Please prepare the following tools

- 1.Electric drill (optional, improves efficiency)
- 2.Please use power tools reasonably to avoid injuries.




Assembly Recommendations:

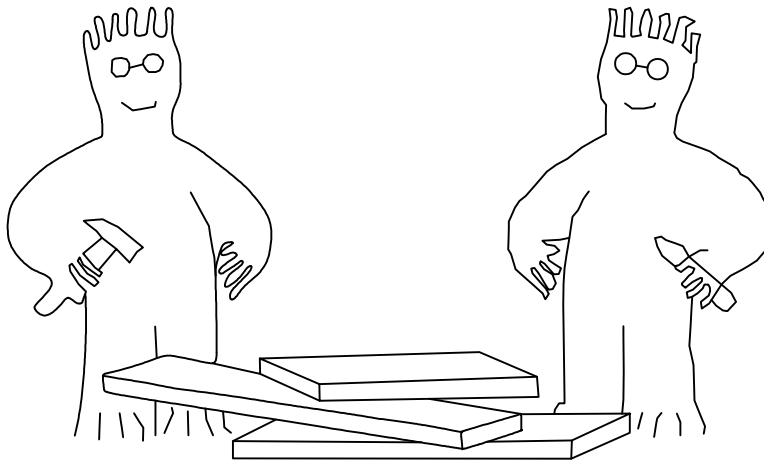- 1.It is recommended that two people work together to install for higher installation efficiency.
- 2.Improve the safety of the assembly process and better complete the alignment and lifting operations.




Installation precautions:

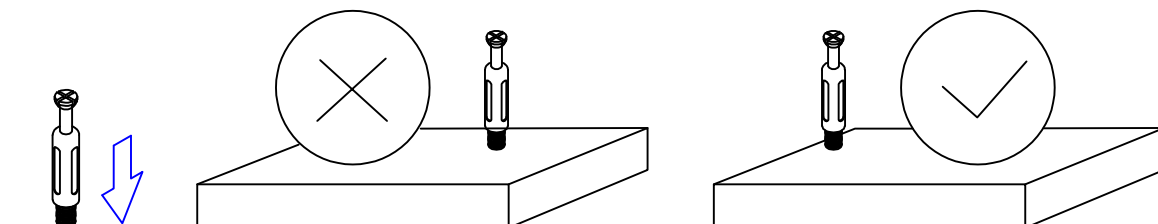When tightening the screws, avoid over-tightening, as this may damage the panel.







INSTALLATION INSTRUCTIONS

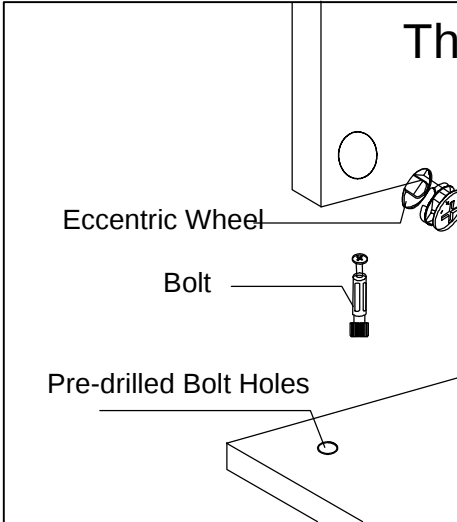



Three-in-One Connector Instructions:

1. Use a screwdriver or a power tool to install screws (at least 10mm deep) at the indicated positions and panels.
2. Screw the bolts into the pre-installed inserts.
3. Insert the assembled bolts into the corresponding holes on the other panel, then press the eccentric wheel into the 15mm diameter hole on the side with the hole alignment.
4. Use a Phillips screwdriver to tighten the eccentric wheel clockwise.







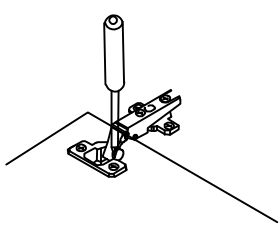
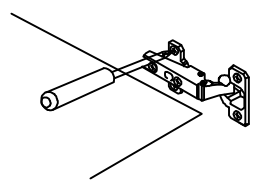
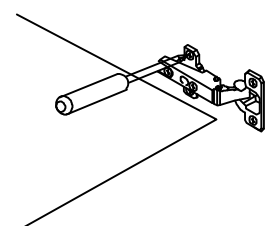
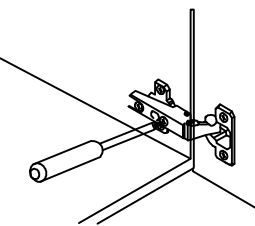
Hinge Installation & Adjustment Instructions:

	Attach the Hinge to the Cabinet		Install the Hinge on the Door
	Adjust the Door Height		Adjust the Door Gap Alignment







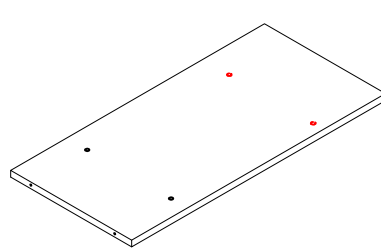
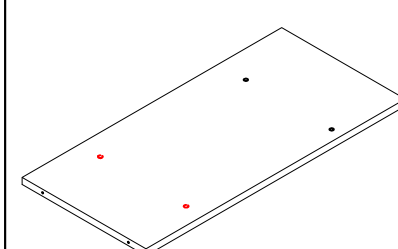
ACCESSORIES LIST

① X1 	② X1 	③ X2 
---	---	---

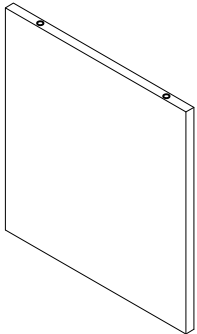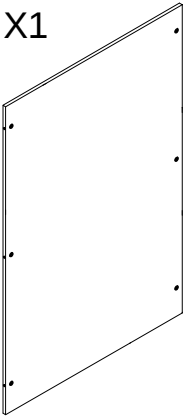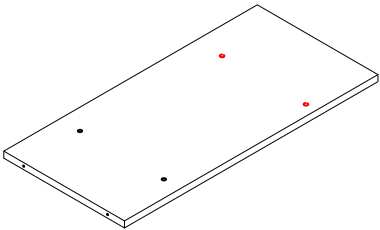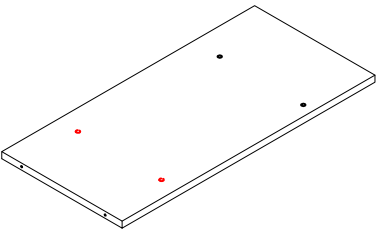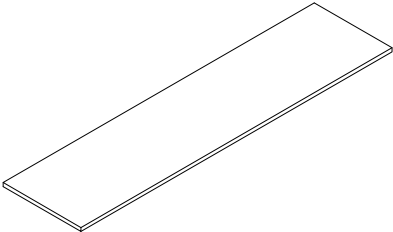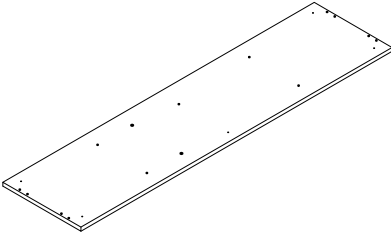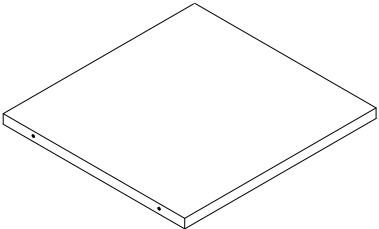ACCESSORIES LIST

④ X2 	⑤ X2 	⑥ X2 
⑦ X1 	⑧ X1 	⑨ X1 
⑩ X1 	⑪ X1 	⑫ X4 
⑬ X2 		

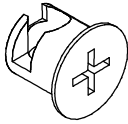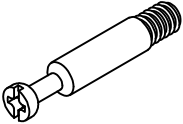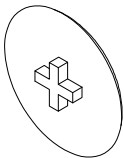
ACCESSORIES LIST


Ⓐ X24 	Ⓑ X24 	Ⓒ X18 
Ⓓ X18 	Ⓔ X4 	Ⓕ X2 
Ⓖ X4 	Ⓗ X24 	Ⓘ X16 
Ⓙ X28 		

INSTALLATION STEPS

1 Combine (1) (2) (3) (4) (5) (6) (7) (8) (9)
and A B C D L K together


(A)  x8	(C)  x18	(I)  x16
(B)  x8	(D)  x18	(J)  x8

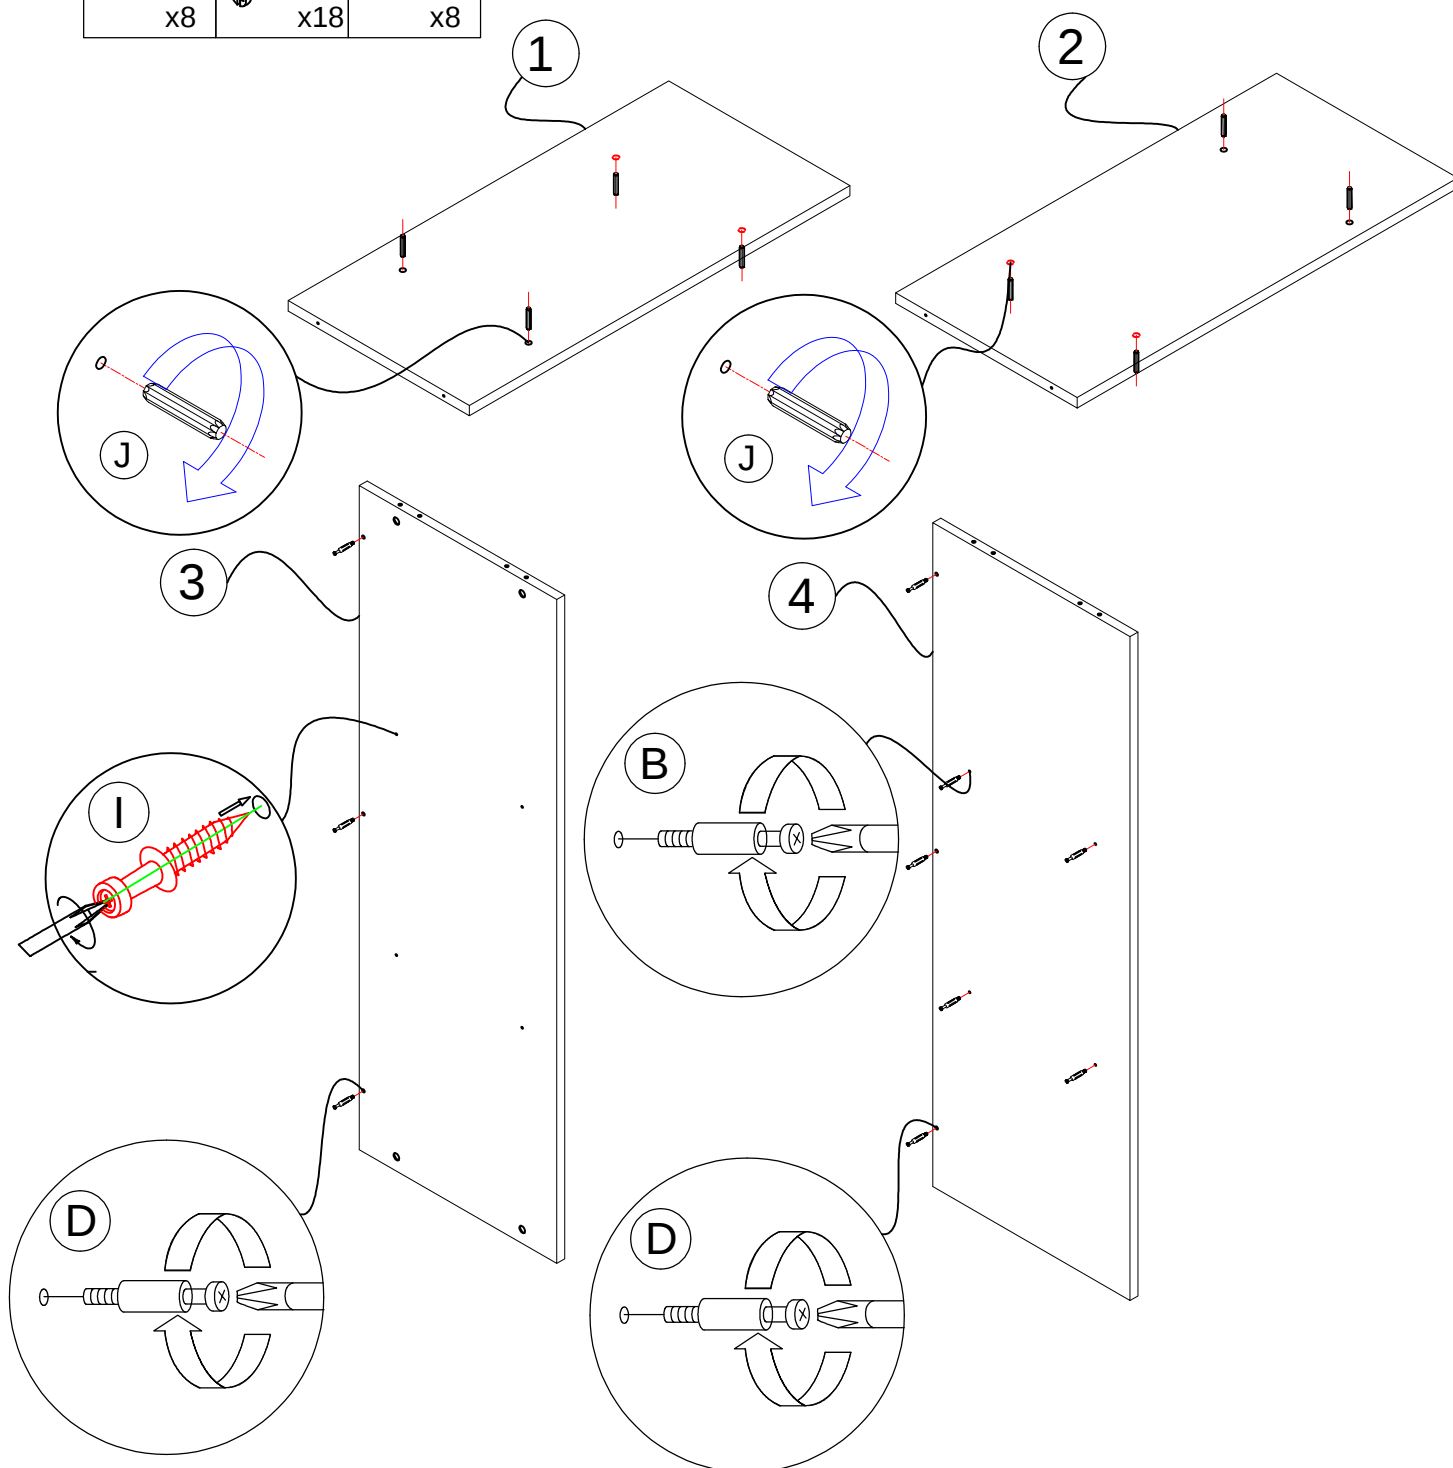


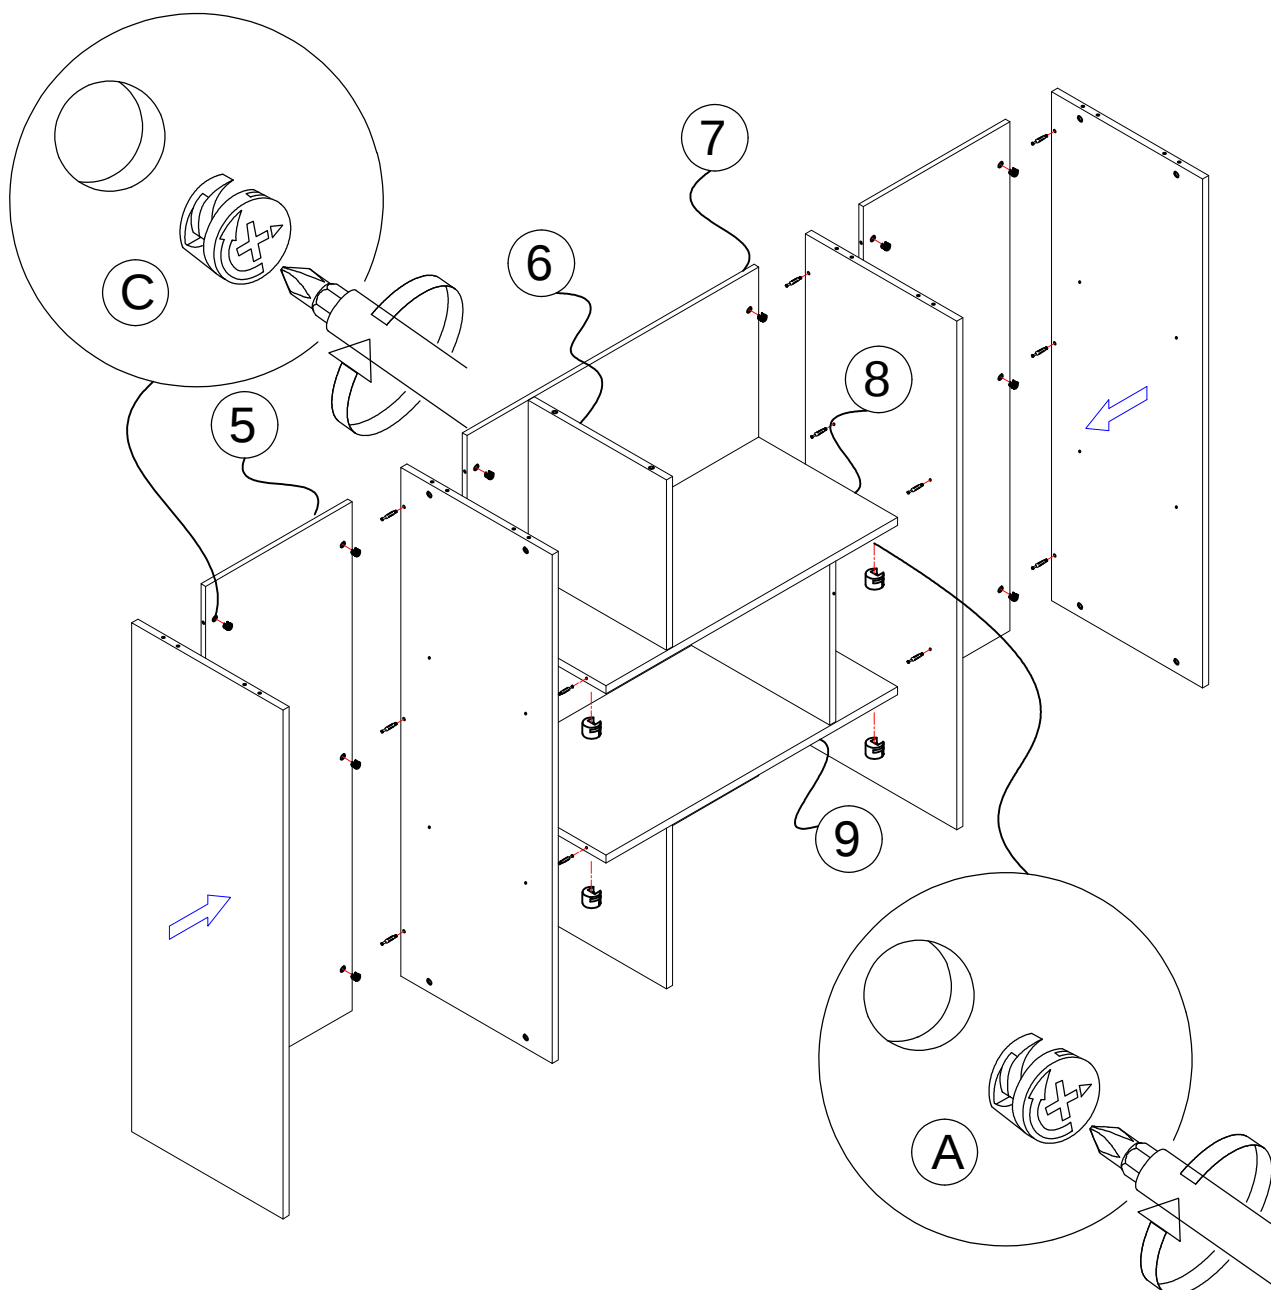

INSTALLATION STEPS


2 Combine (10) (11) step1 and A B L together

(A)  x16	(J)  x20
(B)  x16	(E)  x6

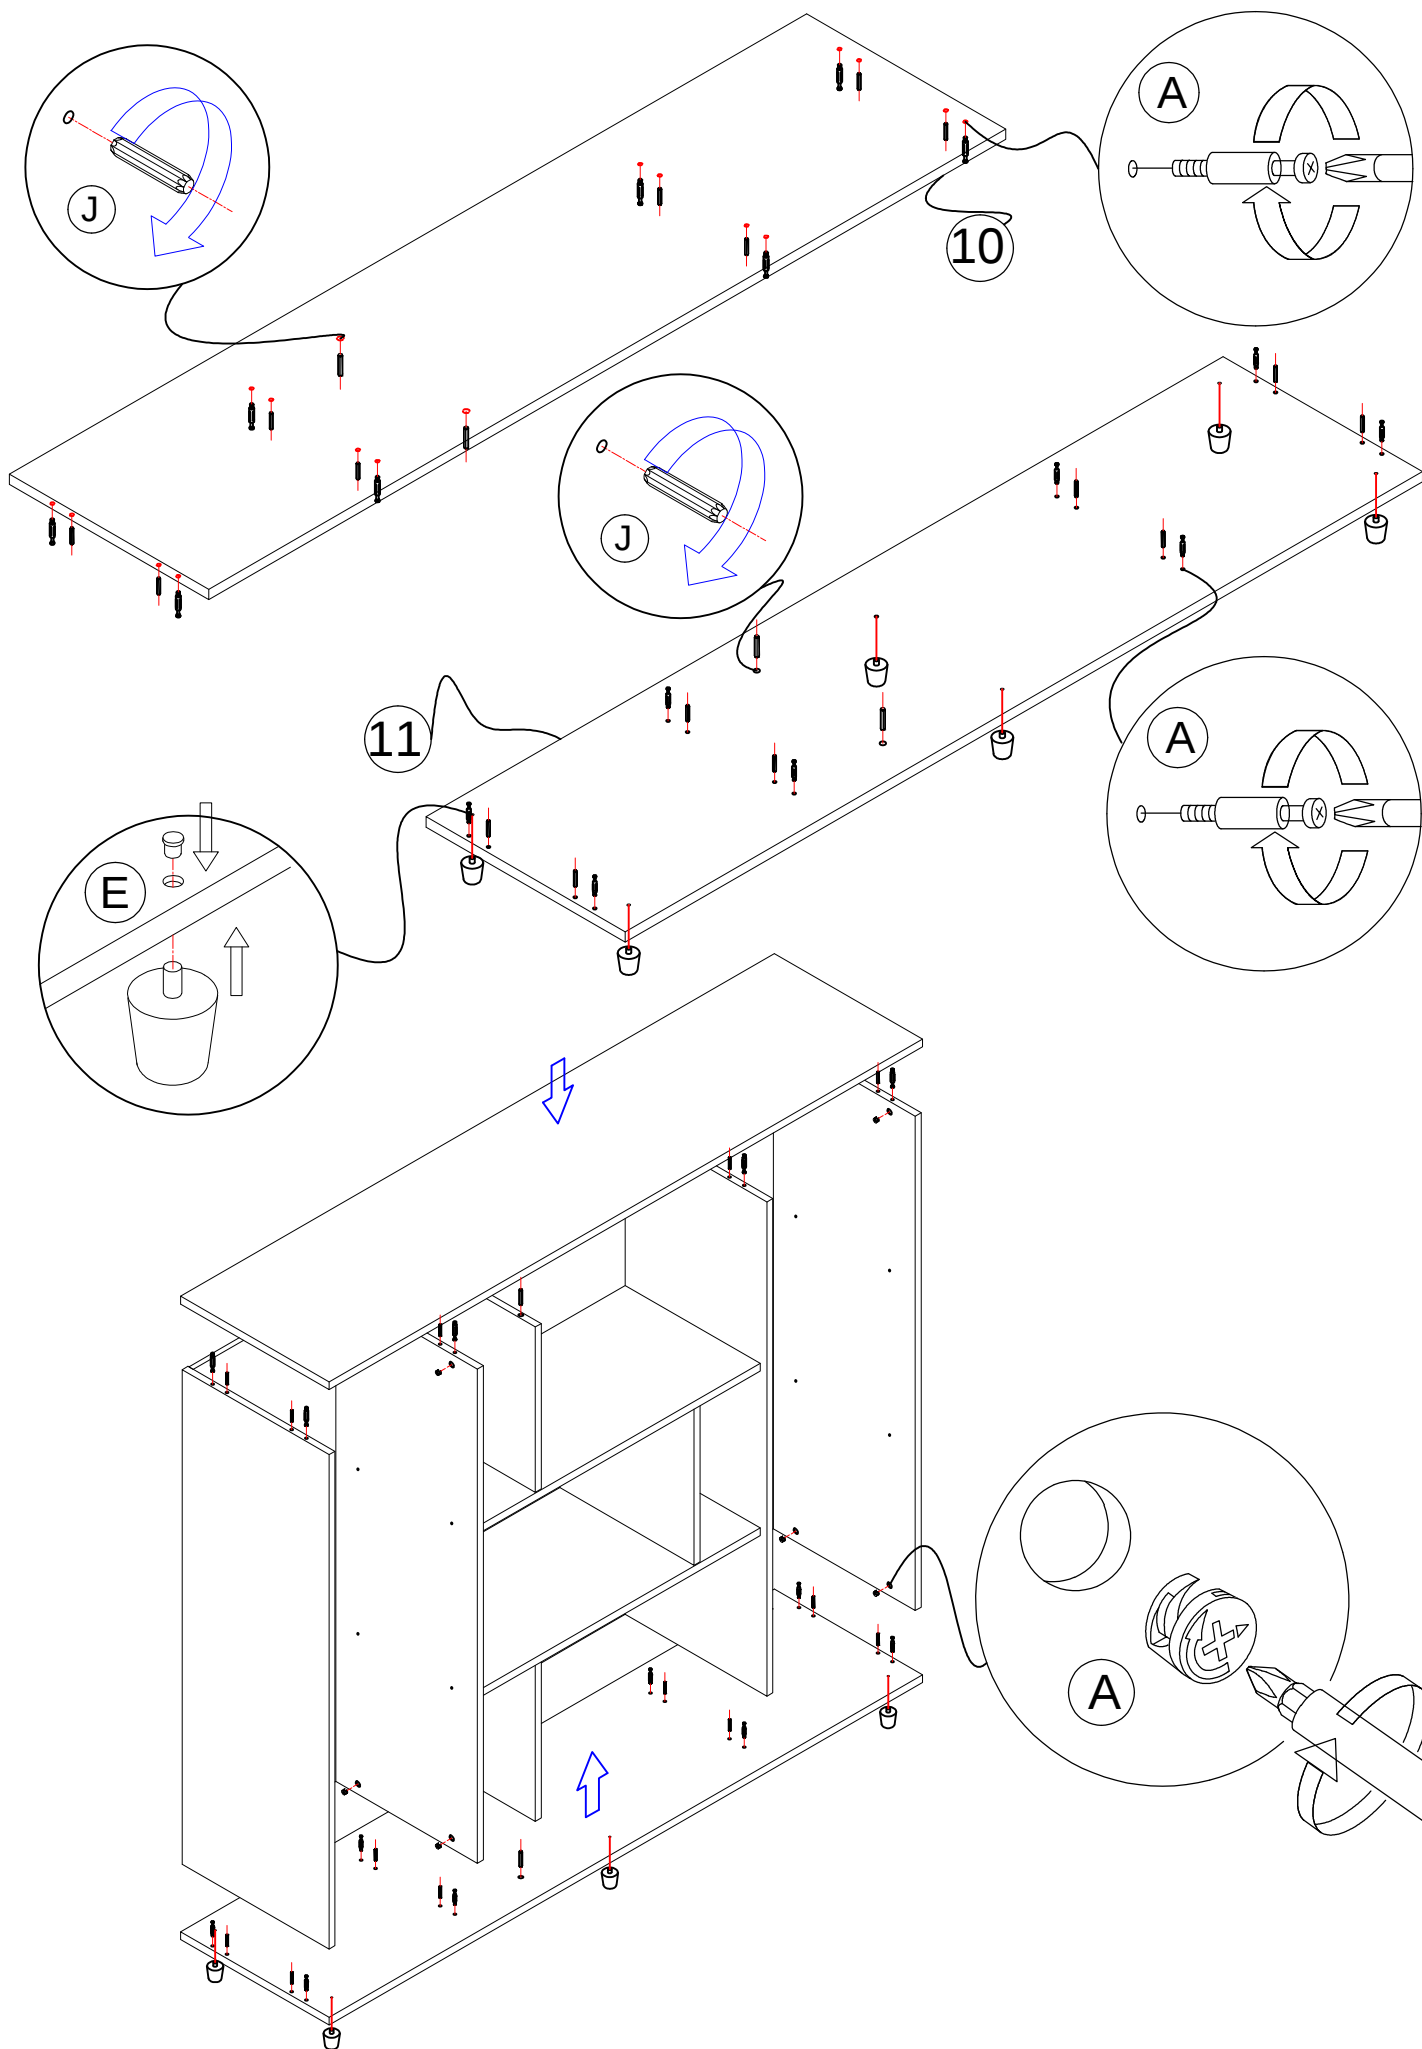

INSTALLATION STEPS

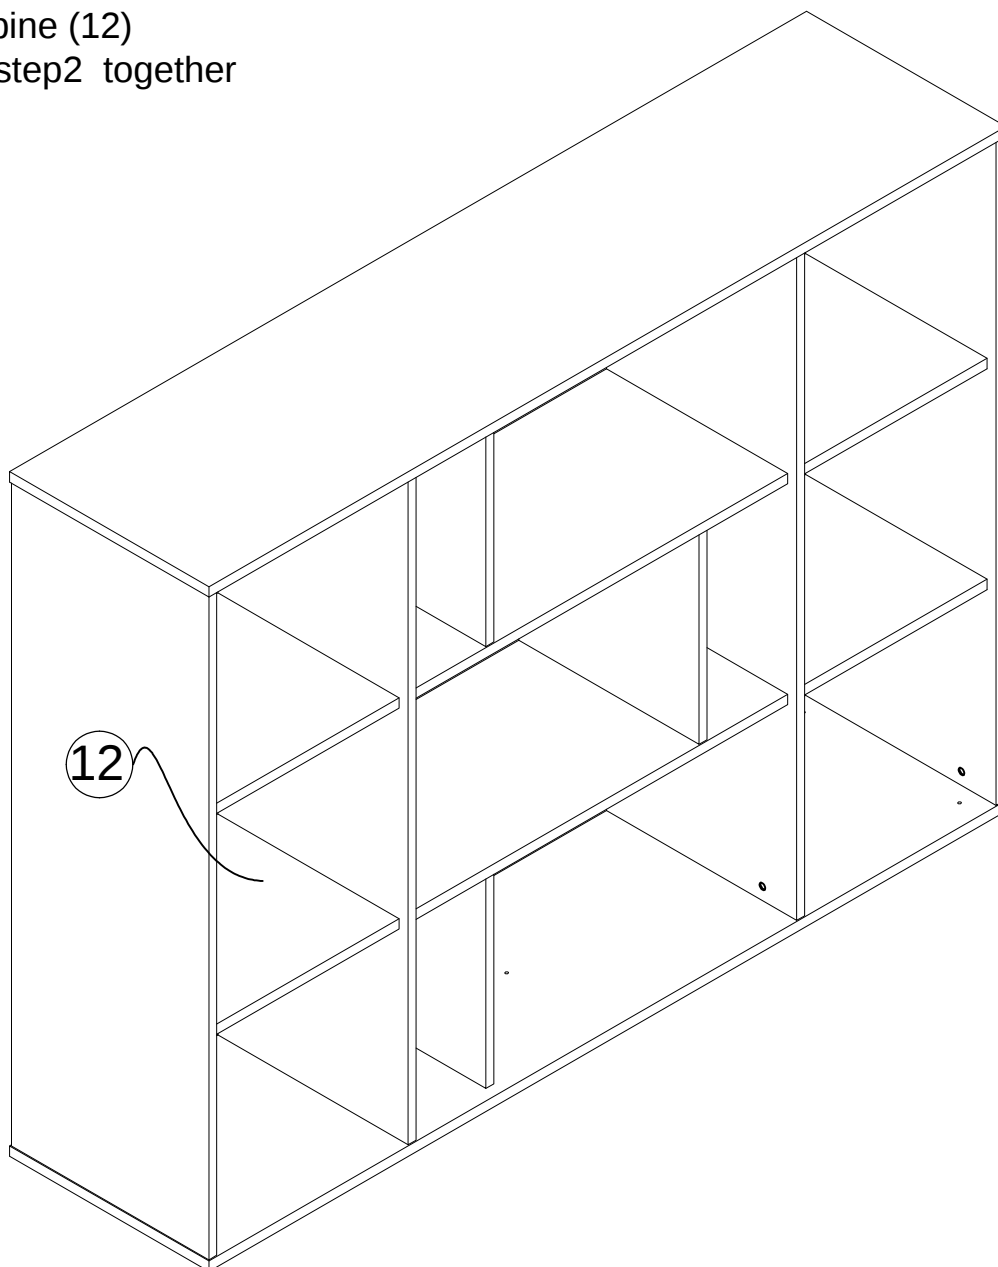3 Combine (12)
and step2 together



INSTALLATION STEPS

4 Combine (13) step3 and F G H together

