



ASSEMBLY INSTRUCTION

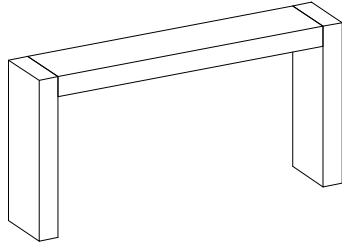

If there is any missing, please kindly send us messages to let us know the name of missing part regarding to the first page of instructions. We will send replacement to you asap. We are concerned about each customer's experience, if there is any loss or damage, please contact us at any time, we will provide effective solutions.




15MIN

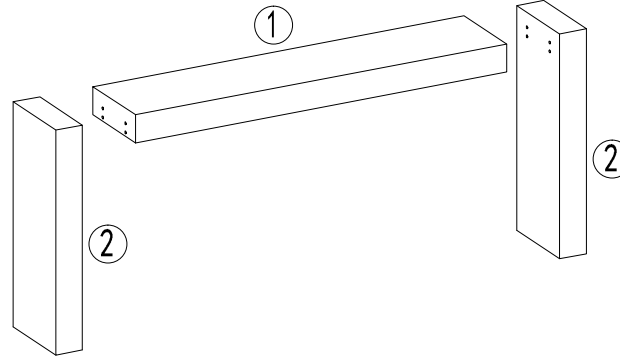

A M8x40mm x8+1	B x8+1	C x8+1	D x8+2
E Ø4x14mm x2+1	F x2	G x2	H Ø4x35mm x2
 5mm x1			


STEP 1

Note: Please tighten the bolts to 70% first, and tighten bolts to 100% after all bolts assembled.

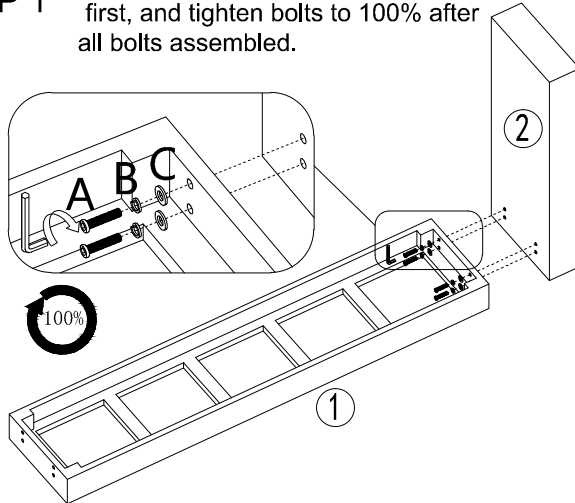


STEP 2

Note: Please tighten the bolts to 70% first, and tighten bolts to 100% after all bolts assembled.

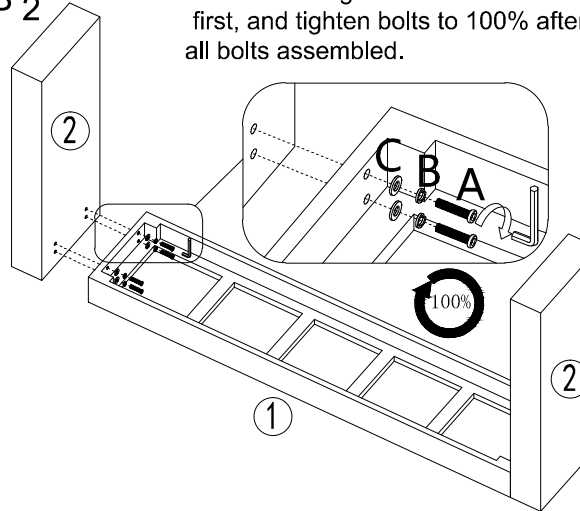


STEP 3

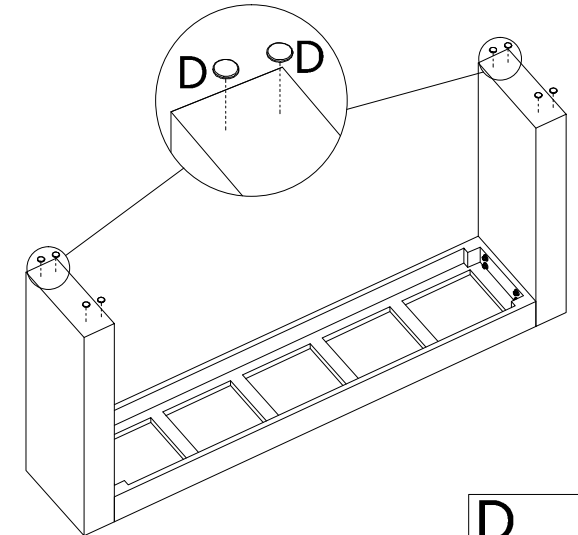

A M8x40mm x4	B x4	C x4	 5mm x1	A M8x40mm x4	B x4	C x4	 5mm x1	D x8
-------------------------------	--------------------	--------------------	---------------	-------------------------------	--------------------	--------------------	---------------	--------------------

ASSEMBLY INSTRUCTION

STEP 4

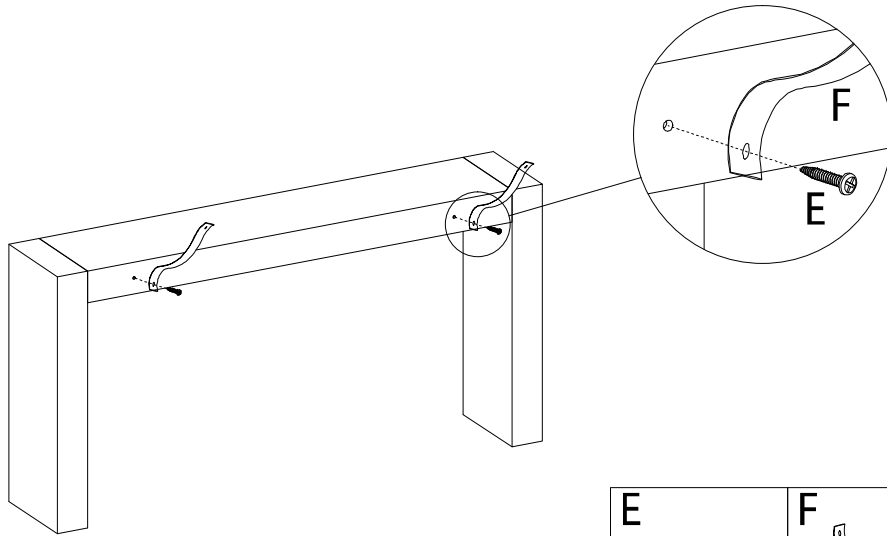

E


Ø4x14mm
x2


F

x2

STEP 5

Note: To reduce the risk of furniture tipover,
Always install tipover restraint provided

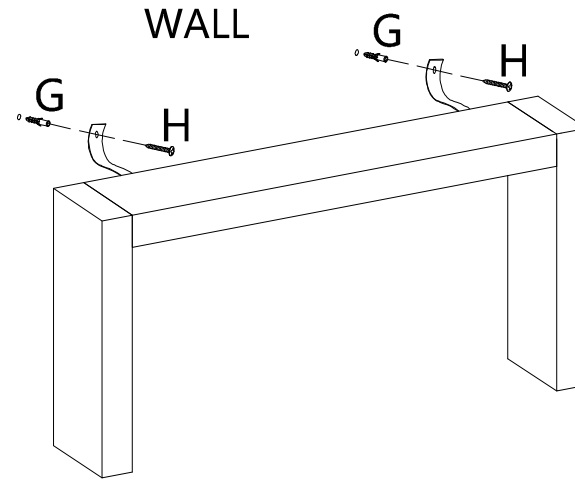

G

x2

H

Ø4x35mm
x2

