


ASSEMBLY INSTRUCTION

N723P380002
N723P380003
N723P380004

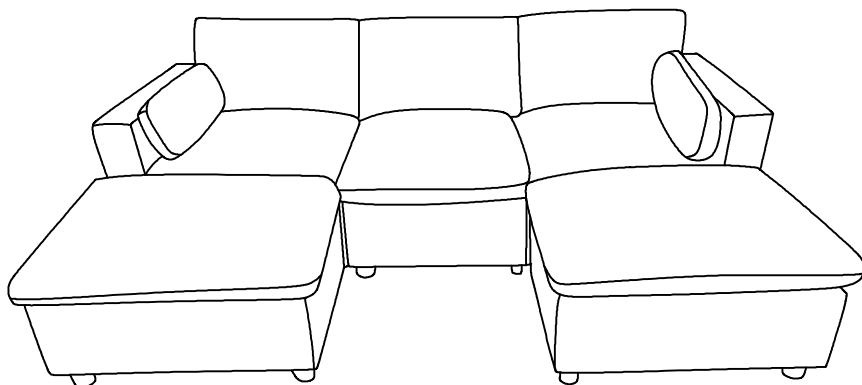

Sets often ship in multiple boxes and delivery date may vary.

CUSTOMER SERVICE

Questions, Missing parts, Assembly help?

No need to return the product, we will gladly help and ship your replacement parts free of charge.

PRE-ASSEMBLY INFORMATION

Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

NOTICE

1. Please assemble it AFTER all boxes are received.
2. Please do not throw away any of the packages or the instruction until the sofa is fully assembled.
3. Please keep children away from the plastic bags or any small pieces of stuff.
4. Some key parts of our product may be stored and hidden inside of other parts. Please open any zippered or hook & loop storage compartments to take out all parts.
5. Please do not open the compressed packages until your sofa frame is completely assembled.
6. As the cushions are all vacuum compressed, there will be some wrinkles. Please give them up to 72 hours to reach its original size and the wrinkles will basically disappear.
7. DO NOT INSTALL THE SCREWS ALL THE WAY IN THE BEGINNING. Place each screw into their proper hole and use your hand to twist the screw halfway. Twist all the screws in halfway to ensure the holes will match up properly and the product is level on the ground. When everything seems fitted, then tighten the screws.
8. Do not over tighten screws and bolts to avoid stripping.



2 adults recommended




Takes about 1.0 Hours to assemble



Weight capacity of each seat: 330LBS


COMPONENTS

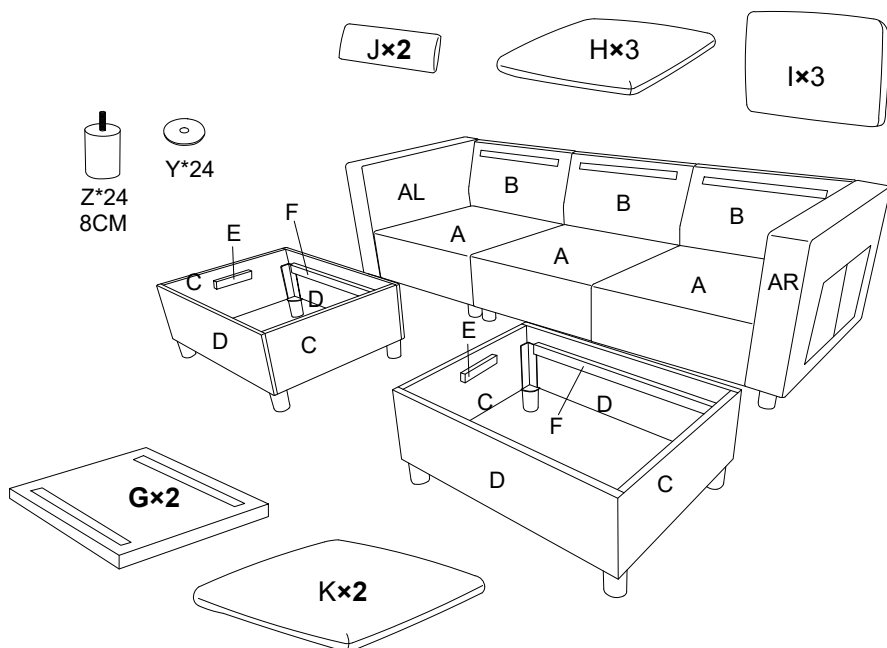


HARDWARE			
NO	DESCRIPTION	SKETCH	QTY
①	Screws 6*40mm		37
②	Washers		21
③	Nuts M6		6
④	Leg irons		8
⑤	Screws 6*15mm		32
⑥	Wrench		1

COMPONENTS

N723P380002

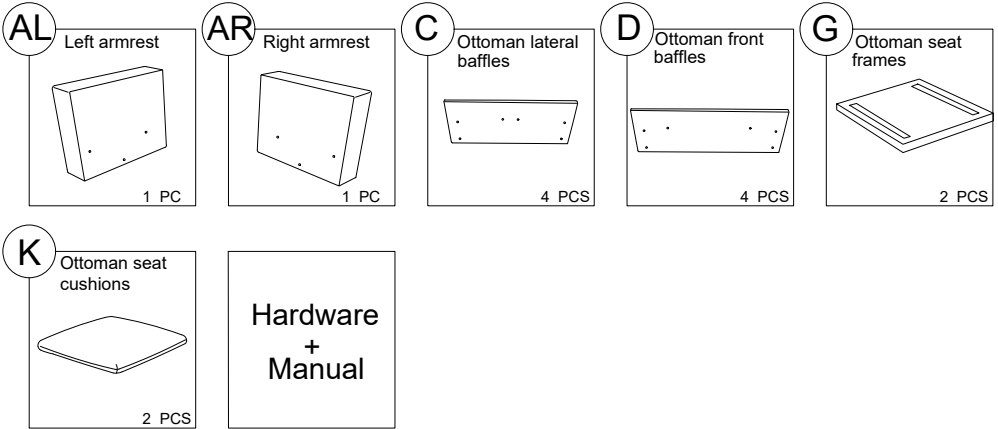


N723P380003

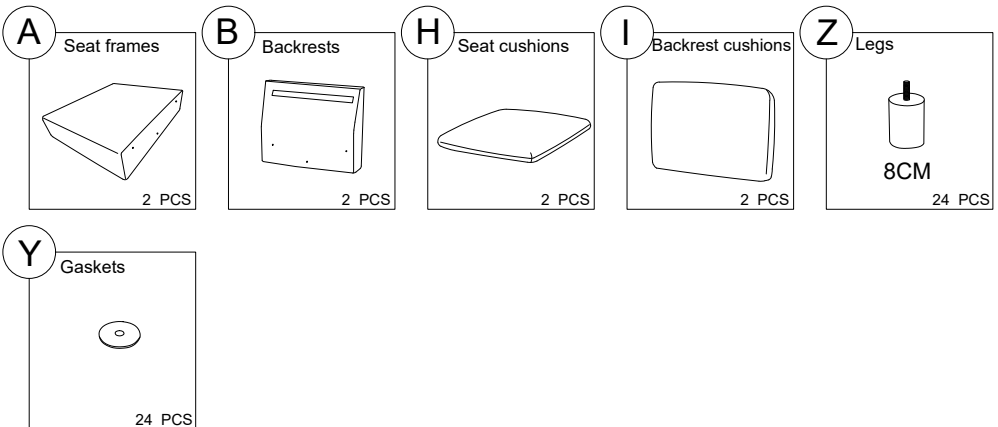


COMPONENTS

N723P380004

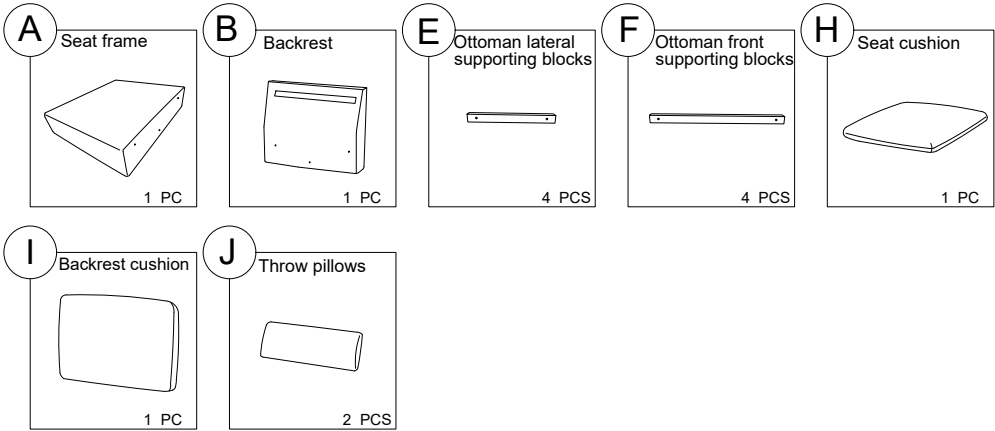

ASSEMBLY STEPS



STEP 1 Install seat frame (A) on backrest (B) with screws 6*40mm① and washers② by wrench⑥.

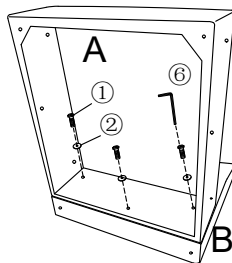

×3

①×9	
②×9	
⑥×1	

STEP 2 Install left armrest (AL) and right armrest (AR) on seat frame (A) with screws 6*40mm① and washers② by wrench⑥.

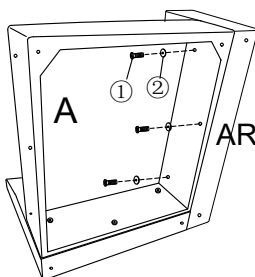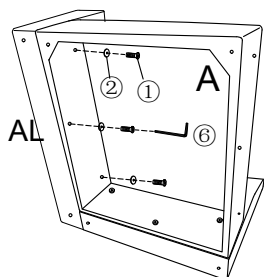

①×6





②×6



⑥×1



STEP 3 Use wrench ⑥, nuts M6 ③, washers② and screws 6*40mm① to link the seat frames.

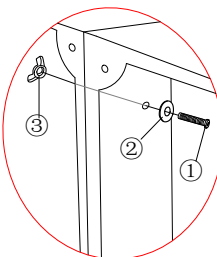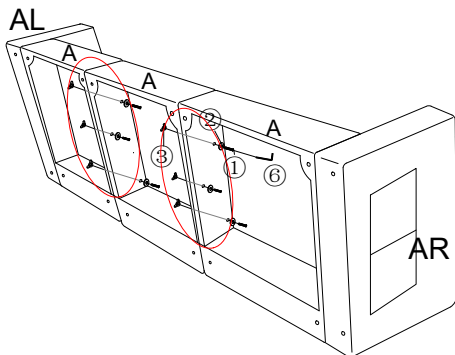

①×6



②×6




③×6



⑥×1



STEP 4 Use screws 6*15mm ⑤ to link leg irons ④ to ottoman front baffles (D), then tighten the screws with a wrench⑥.
(Note that the screws in this step can only be tightened 70 %)

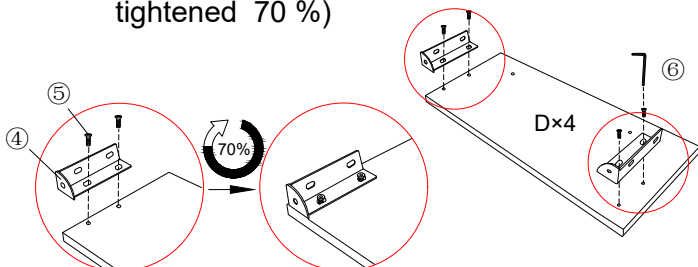

④×8



⑤×16



⑥×1





STEP 5 Use screws 6*15mm ⑤ to link leg irons ④ to ottoman lateral baffles (C), then tighten the screws on the ottoman front baffles (D) and ottoman lateral baffles (C) with a wrench ⑥.

⑤×16



⑥×1

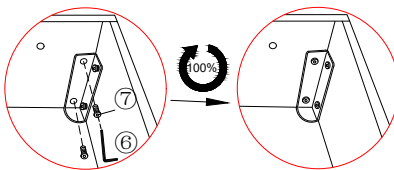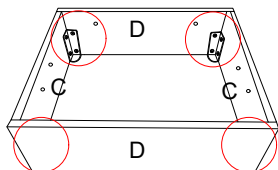



×2

STEP 6 Use Screws 6*40mm ① to link ottoman lateral supporting blocks (E) / ottoman front supporting blocks (F) to ottoman lateral baffles (C) / ottoman front baffles (D). Tighten the screws with a wrench.

①×16



⑥×1


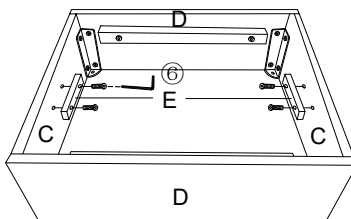
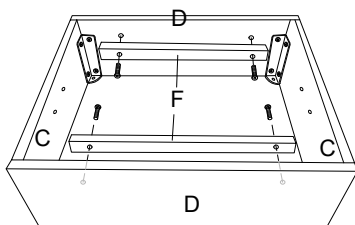


STEP 7 Attach legs (Z) and Gaskets (Y) to the seats

Y×24





Z×24

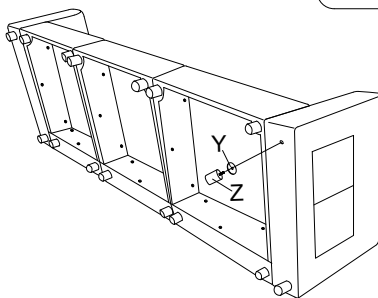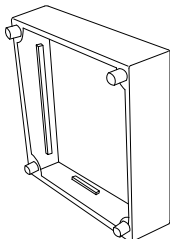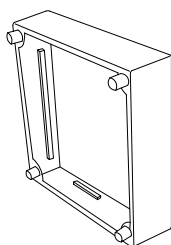

STEP 8


Open the vacuum bag and take the Throw pillows/ Backrest cushions(J/I), Seat cushions/OttomanSeat cushion(H/K) out. To restore the original shape, follow the steps below.

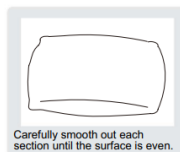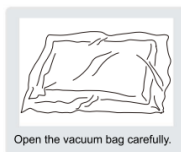

After packing up, place them in somewhere dry and ventilated. After about 72-96 hours. It can be restored to the best use condition.

STEP 9

Put the cushions and pillows on the sofa

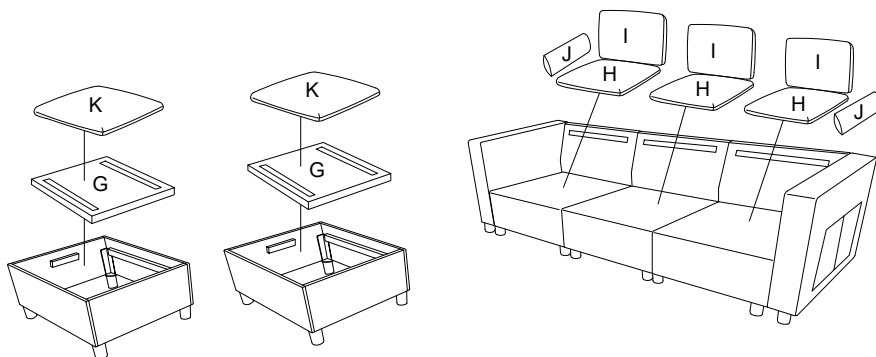**STEP 10**

Complete

