







ASSEMBLY INSTRUCTION RECLINER SOFA


NOTE: Do not use power tools for assembly .Power tools increase the risk of over tightening which leads to splitting or cracking the wood .

PARTS LIST

NO	DRAWING	DESCRIPTION	QTY
Ⓐ		LEFT EAR	1PC
Ⓑ		RIGHT EAR	1PC
Ⓒ		LEFT BACKREST	1PC
Ⓓ		MIDDLE BACKREST	1PC
Ⓔ		RIGHT BACKREST	1PC
Ⓕ		SEAT	1PC


STEP #1

Insert both ears to the back rest, align and insert female grooves at the back onto the male brackets at the seat as shown in drawing.

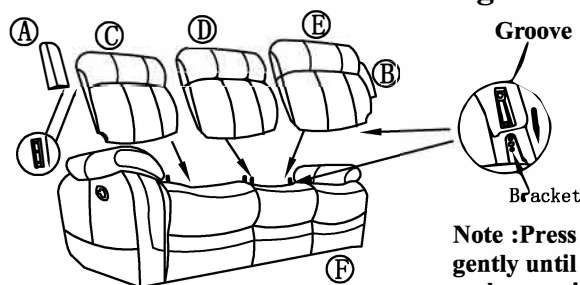

Note : Press down seat back gently until you hear a "click" to make sure it is locked in place.

STEP #2 THE SOFA IS NOW READY. ENJOY!

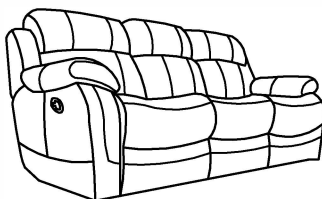

Care instruction for bonded leather.

In order to maintain the original appearance of your upholstery furniture, please follow below simple care procedures:

. Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage bonded leather. Do not place your upholstery furniture too close to windows, radiators, or vents, and be sure to use window treatments to block the sun's rays.

. Vacuum or wipe with a cloth regularly to remove dust.

. Blot (Do) all spills immediately with a clean, dry white cloth.
 . Clean bonded leather with a damp cloth and mild soap & water. Do not use any abrasive or corrosive cleaners as they will damage the furniture.