


BAR STOOLS

ASSEMBLY INSTRUCTIONS

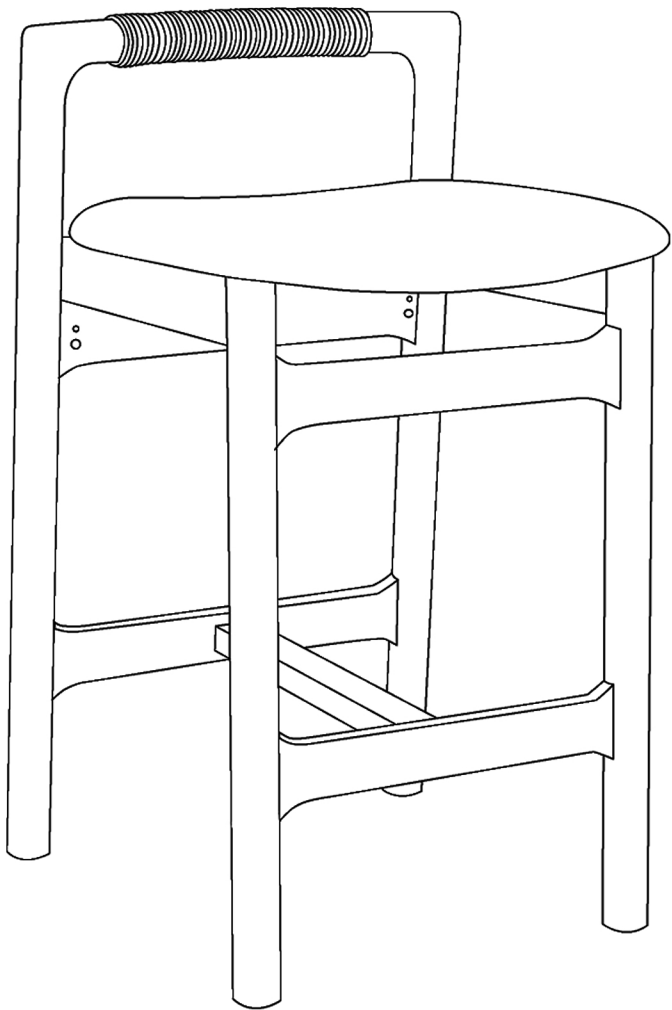

Need help? Contact us through the shopping platform.
Or email: service.furniture@outlook.com

HALF HOUR
ASSEMBLY TIME

2 PEOPLE
REQUIRED FOR ASSEMBLY

1 X 1 M
FLOOR SPACE REQUIRED

INSTALLATION SUGGESTIONS

PLEASE READ ALL THE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING AND USING THE PRODUCT.





- 1. Please check whether all parts are complete according to the installation instructions.
- 2. Please ensure that the installation space is clean and flat to avoid dirt and damage to the product parts.
- 3. In each step, do not tighten bolts/screws completely until all bolts/screws are lined up and tightened 70% separately. Do not over tighten bolts/screws to avoid stripping.
- 4. We recommend that all assembled parts should be placed near the assembly location to avoid loss or forgetting while assembling.

TIPS FOR GIVING FEEDBACK

Please provide helpful information. We will give you feedback within 24h.

- 1. Describe your problem in detail and explain it with some clear multi-angle photos of the problem area.
- 2. Send your order ID and the letter number and quantity of the part in question from the parts list.
- 3. A clear photo of the side of the box that has the product information or the label on the bottom of the cushion.


PARTS AND HARDWARE LIST

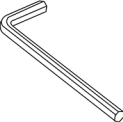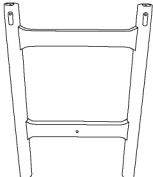 M6*40mm A*5	 M6*45mm B*6	 M6*60mm C*2	 M6*16mm D*4	 E*2	 F*2	 G*1
 H*1	 I*1	 J*1	 K*1	 L*1	 M*1	 N*1


ASSEMBLY STEPS

Assembly tip: Just tighten the screws to 70% before all of them are aligned. After all the screws are aligned, tighten the remaining parts.


Tip: Make sure that the letter labels on the wooden poles correspond to the rear leg frame(I)

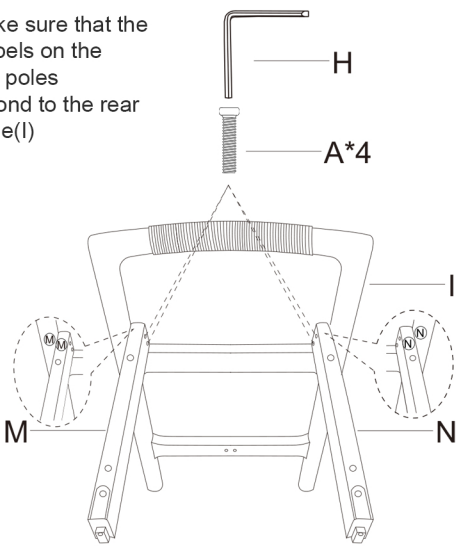


STEP 1.
Secure the wooden poles (M & N) to the rear leg frame (I) using screws (A*4).

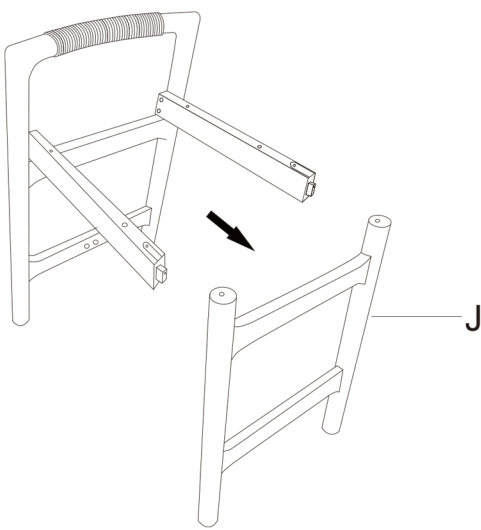

STEP 2.
Insert the wooden poles (M & N) into the front leg frame (J).

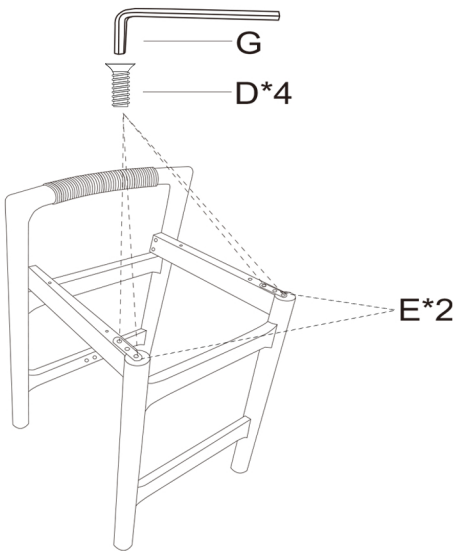


STEP 3.
Use screws (D*4) to attach the metal reinforcement plates (E*2) to the wooden poles (M & N) and the front leg frame (J).

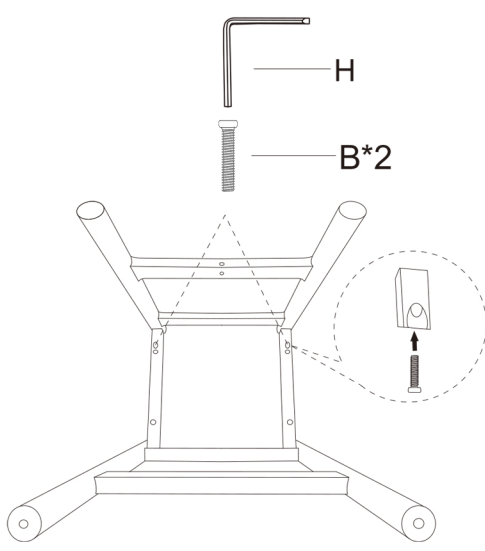


STEP 4.
Secure the wooden poles (M & N) and the front leg frame (J) using screws (B*2).


Tip: Use a wrench to fully push the nut to the bottom of the hole, then rotate the nut until the hole in the nut aligns with the hole on the side of the wooden pole.

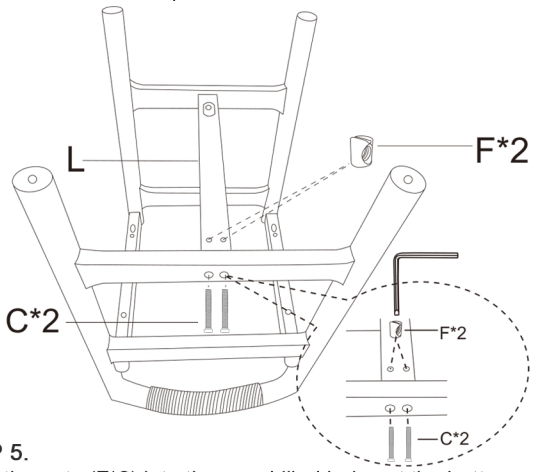


STEP 5.
Insert the nuts (F*2) into the pre-drilled holes at the bottom of the wooden pole (L), then use screws (C*2) to secure the wooden pole (L) to the rear leg frame.

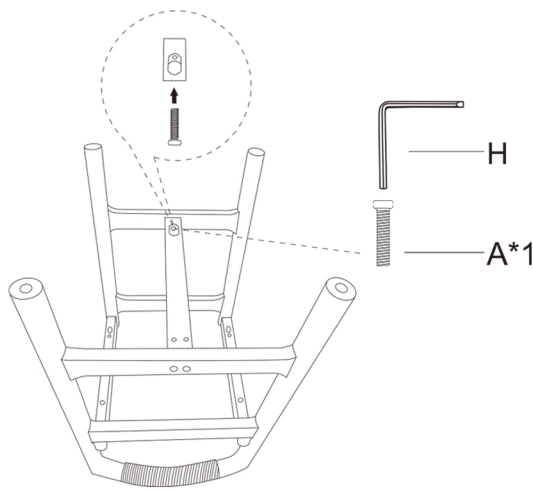

STEP 6.
Secure the wooden pole (L) and the front leg frame (J) using screws (A*1).

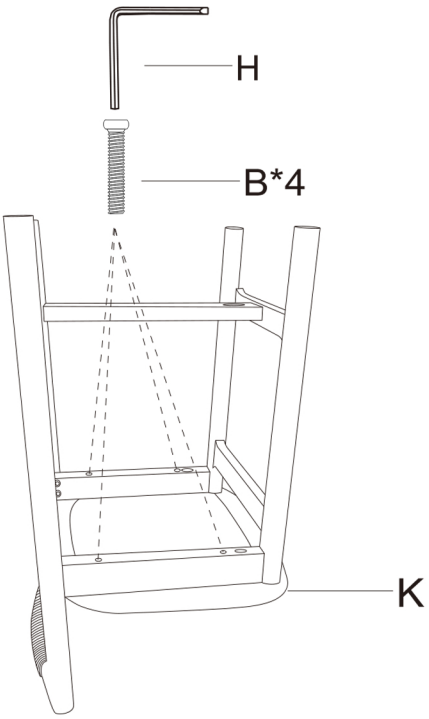

STEP 7.
Secure the seat cushion (K) to the frame with screws (B*4).

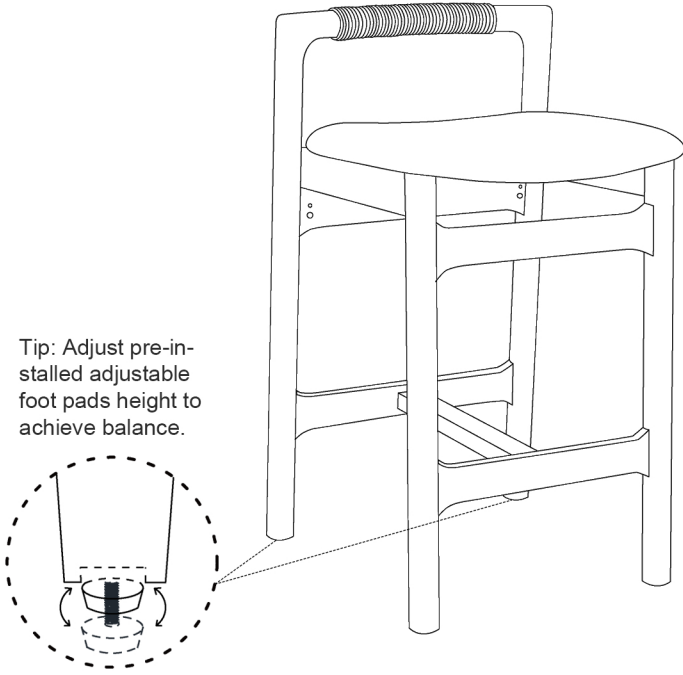

Tip: Adjust pre-in-
stalled adjustable
foot pads height to
achieve balance.

STEP 8.
Congratulations! You have possessed an exquisite barstool.

WARRANTY TERMS & CONDITIONS

- 1. We provide warranty for the product for one year.
- 2. The warranty period starts on the delivery date.
- 3. If the product has quality problems, contact us and we promise we will solve it for you.

CORRECT SITTING POSITION

