

Assembly Instruction


DESTAR®

1




6 PCS

2

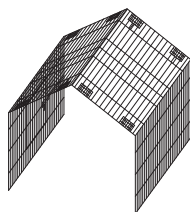


1 PC

3

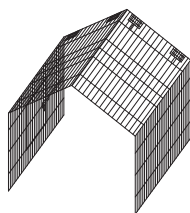


1 PC

4

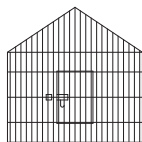


2 PCS

5

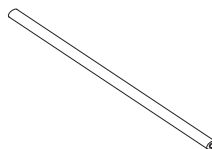


1 PC

6






1 PC


Step 1

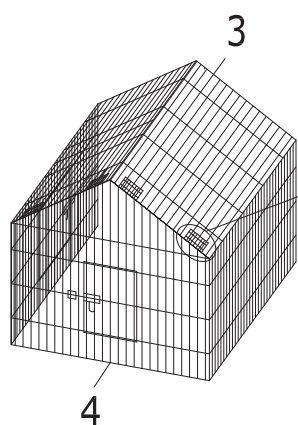

Pull the spring, fasten each spring buckle and attach them.

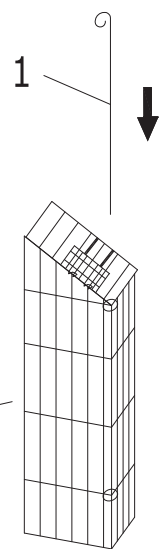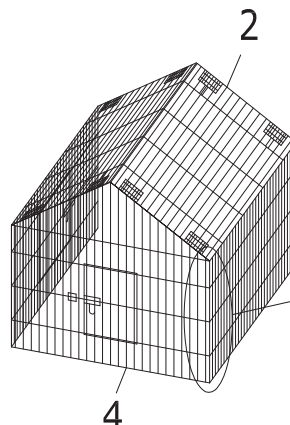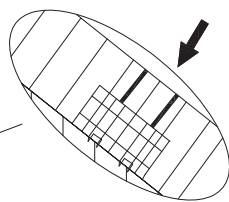


Step 2

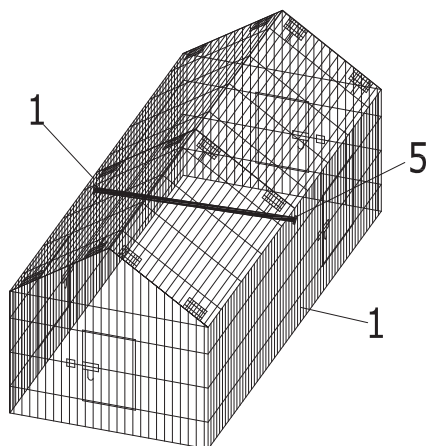

Install the support rod

Step 3

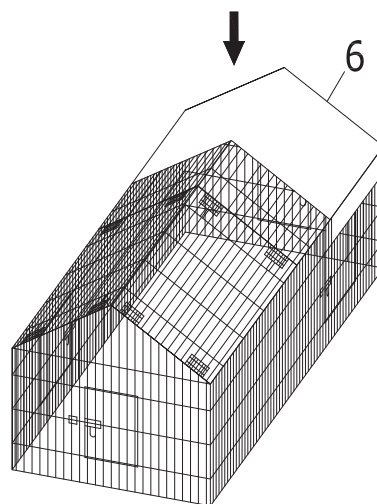

Cover with sunshade