


ASSEMBLY INSTRUCTIONS

PARTS:


(2) Top/Bottom Pieces

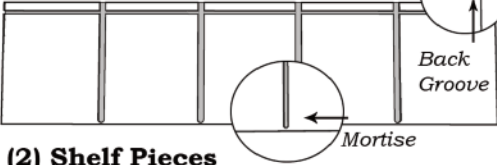

(2) Side Pieces



(2) Center Shelf Pieces

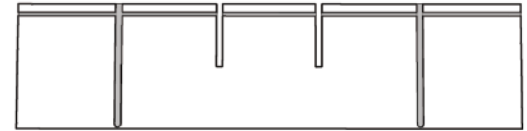


(2) Shelf Pieces



(2) 5/8" Thick Dividers



(4) Shelf Dividers

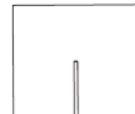

(2) Single Dividers



(2) Large Back Pieces



Center Back Piece




24 Hex Screws

1 Allen Wrench




NOTICE - KEEP BACK GROOVES ALIGNED


Step 1: Insert edge of **top** piece into mortise of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes in side piece and tighten down halfway.

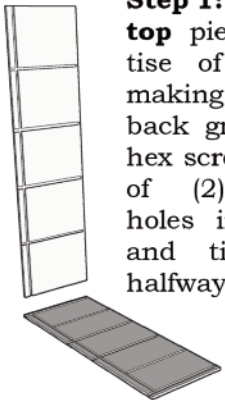


Step 2: Insert edge of **bottom** piece into remaining mortise of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

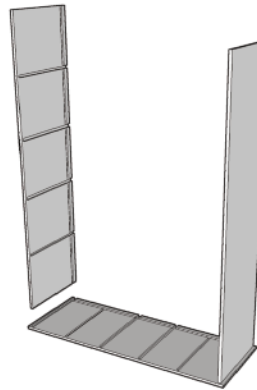


Step 3: Insert edge of **center shelf** piece into one of the center mortises of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

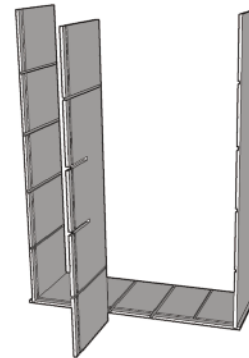


Step 4: Insert edge of remaining **center shelf** piece into remaining of the center mortise of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

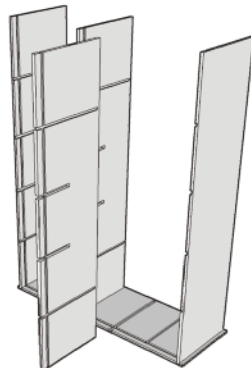


Step 5: Slide edges of 5/8" **divider** into lower mortises of **top** and **bottom** pieces, so that notches intersect with those of **center shelf** pieces.

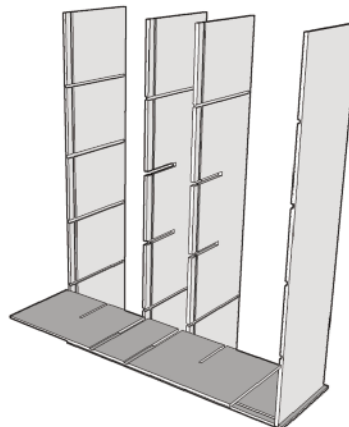


Step 6: Insert remaining 5/8" **divider** into upper mortises of **top** and **bottom** pieces, so that notches intersect with those of **center shelf** pieces.

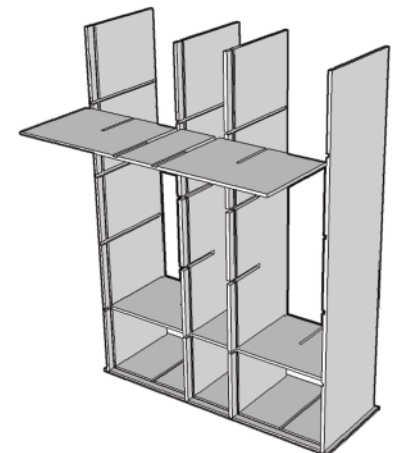



ASSEMBLY INSTRUCTIONS

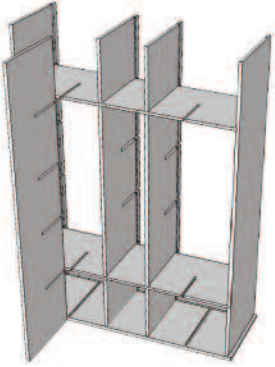


Step 7: Insert edge of **shelf** piece into one of the remaining mortises of **side** piece, so that notches intersect with those of **5/8"** dividers.

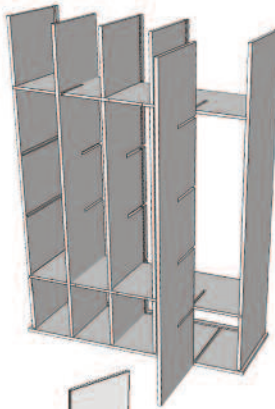


Step 8: Insert edge of remaining **shelf** piece into the remaining mortises of **side** piece, so that notches intersect with those of **5/8"** dividers.

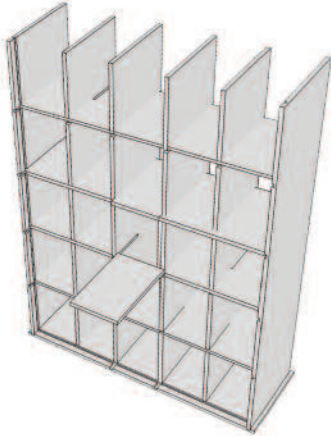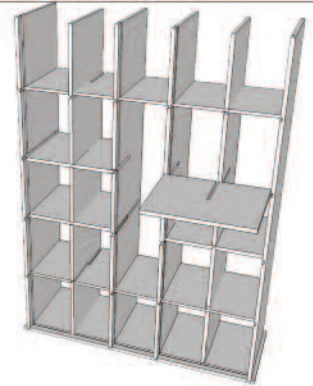

Step 10: Slide each of (2) **center divider** pieces into mortises of **center shelf** pieces.

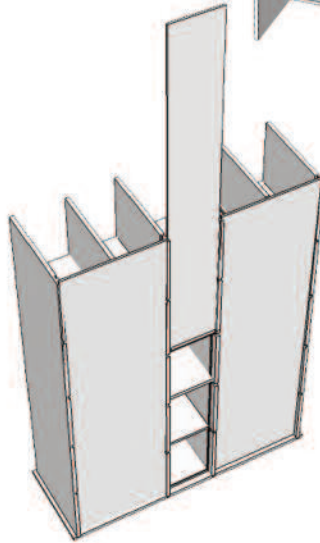


Step 11: Slide sides one **back** piece into back grooves of **top** and **center shelf** until edge rests firmly in back groove of **side** piece. Repeat for remaining **back** piece and smaller **center back** piece.

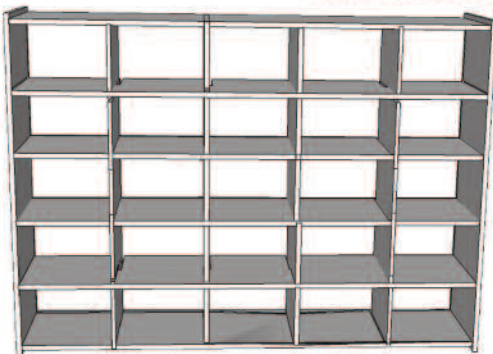

Step 13: Tighten down all screws until snug. DO NOT DRILL. DO NOT OVER TIGHTEN. Rotate unit so that it rests on **bottom** piece and edges of **side** pieces. Assembly is now complete.

Step 9: Insert edges of each **shelf** divider into remaining mortises of **top** and **bottom** pieces, so that notches intersect with those of **shelf** pieces. Insert hex screws into each of (4) pre-drilled holes in **top** piece and (4) pre-drilled holes in **bottom** piece and tighten down halfway

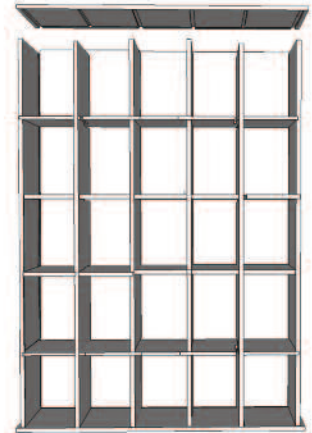

Step 12: Position remaining **side** piece so that edges of assembled pieces rest firmly in back grooves and mortises of **side** piece. Insert hex screws into each of (8) pre-drilled holes of **side** piece and tighten down halfway.