


ASSEMBLY INSTRUCTION

430 - P36 ASPIRE WALL PANEL



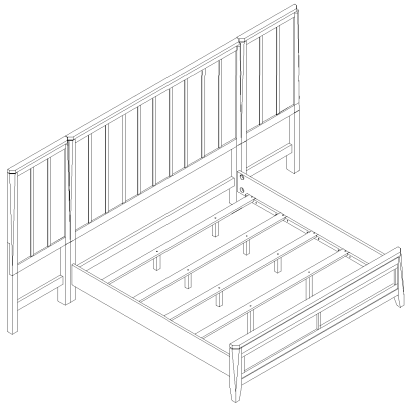


4) Assembly is completed.

IMPORTANT NOTES :

- . Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children.

Mounting Block

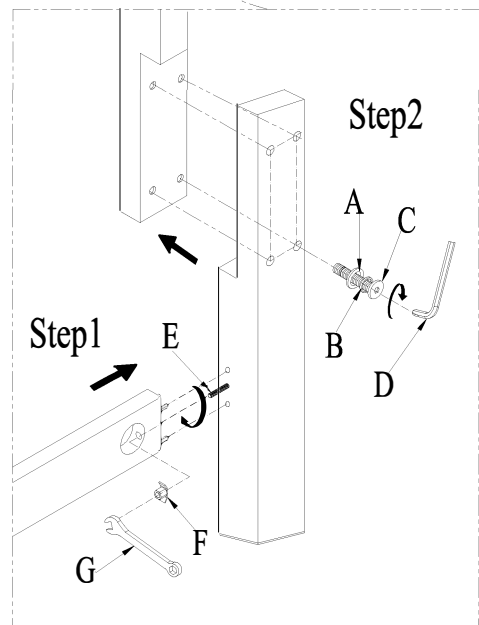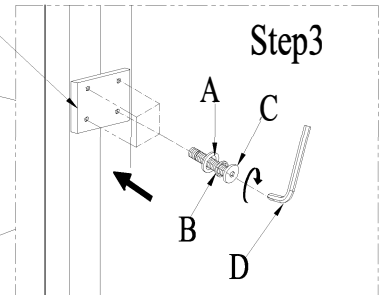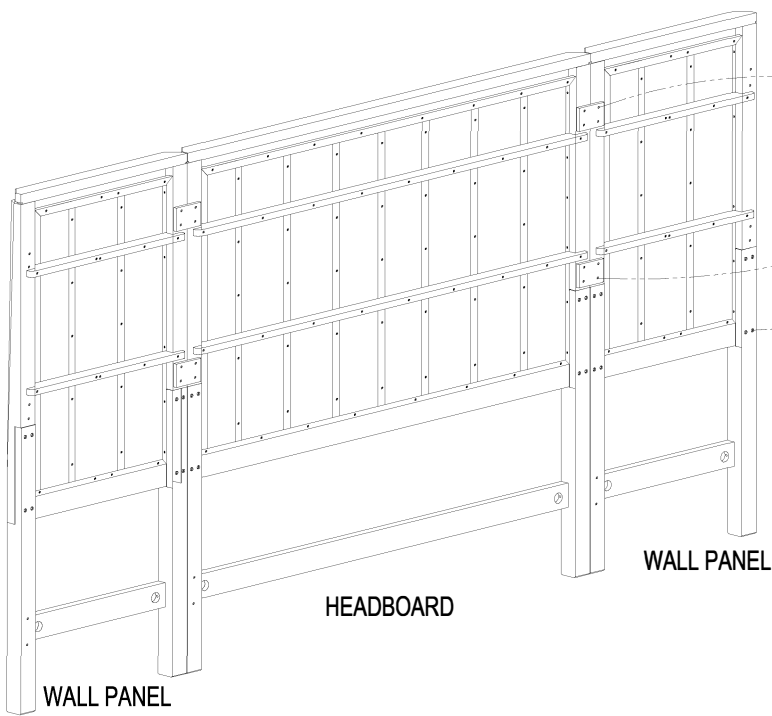

NO.	Dimension	Shape	Quantity
A	Flat Washer Ø5/16"*19mm		32pcs
B	Lock Washer Ø5/16"		32pcs
C	Bolt 5/16"*45mm		32pcs
D	Allen Key 4mm		1pc
E	Thread Rod 5/16"*88mm		4pcs
F	Curved Slotted Washer 5/16"		4pcs
G	Wrench 12mm		1pc